


6.1 Removing and installing the 2-Glass door

6.1.1 Removing the 2-Glass door

1. Open the door fully.



2. Lock both hinges on the left and right using the locking pin [00634525].

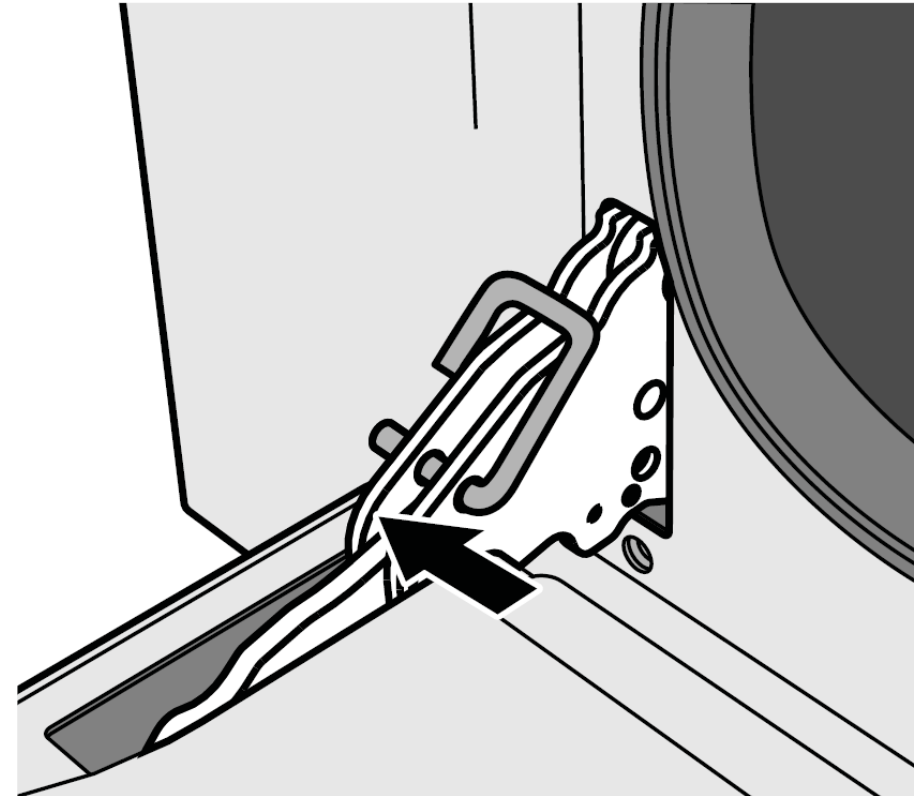


The locking pins must be fully inserted into the holes in the hinges.

3. Tilt the door (30 °)



4. Pull the door outward.




 View of the disassembled door.




5. Place the door on a soft surface to avoid scratches.


Repair

6. Lift the lower part of the inner glass releasing it from the hooks.

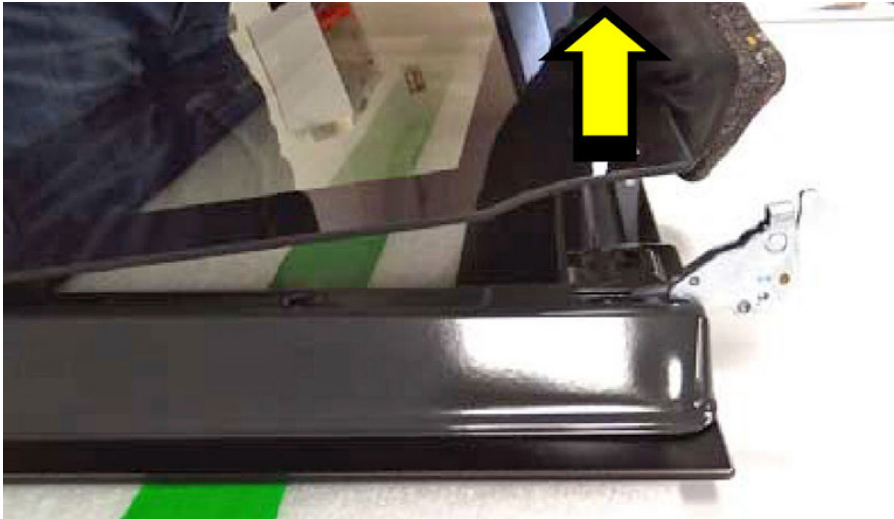


7. Lift also the upper part.

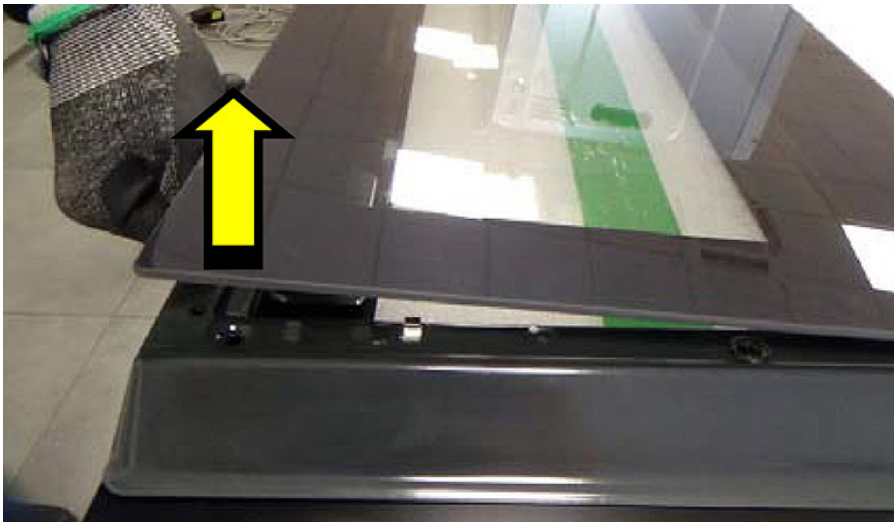

 Now it is possible to access inside the door.


8. Unscrew the two screws, which hold the handle.

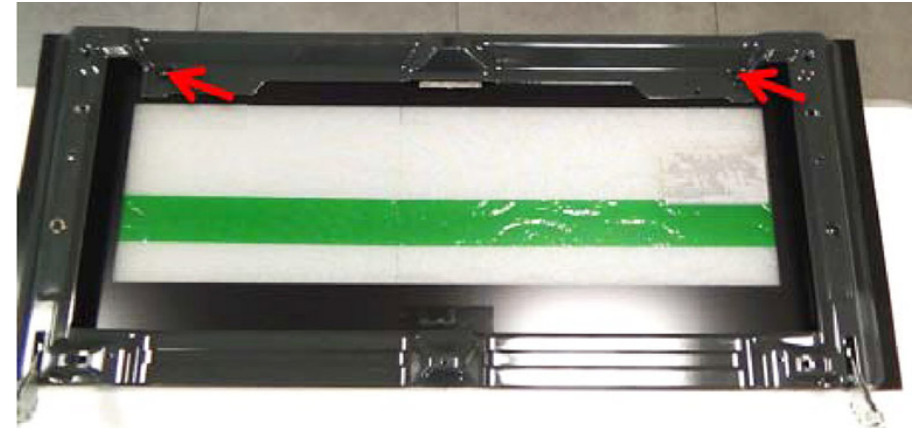

9. Remove the handle.




10. Unscrew the three screws at the bottom of the counter door.

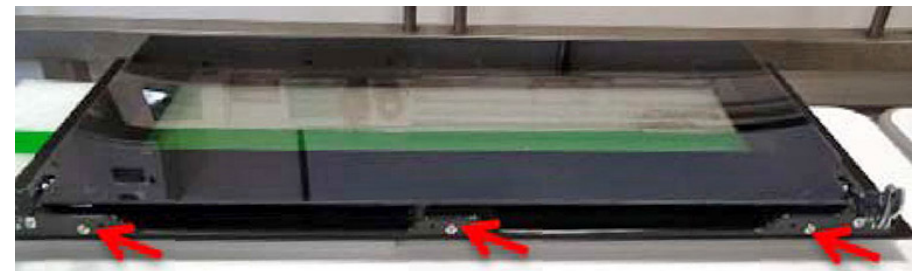

11. Lift the bottom of the counter door.




12. Remove the counter door outward and then up.

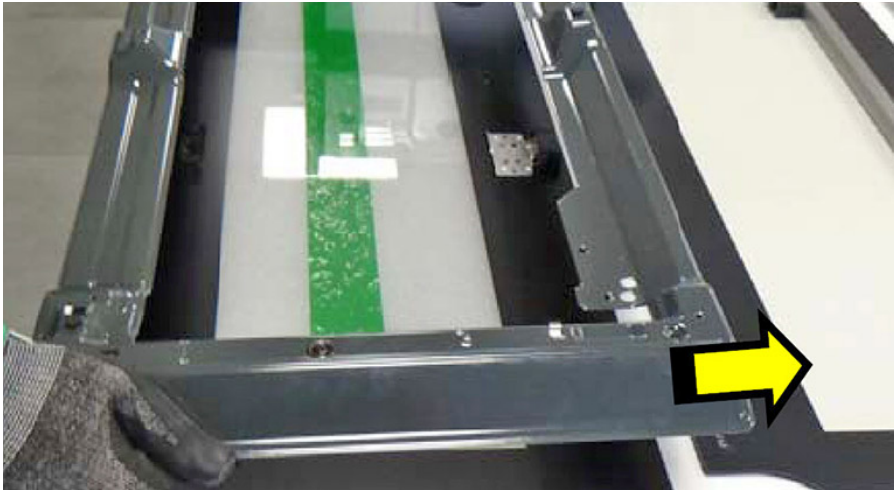

13. Unscrew the screw at the bottom of the hinge.



14. Unscrew the screw at the upper side of the hinge.

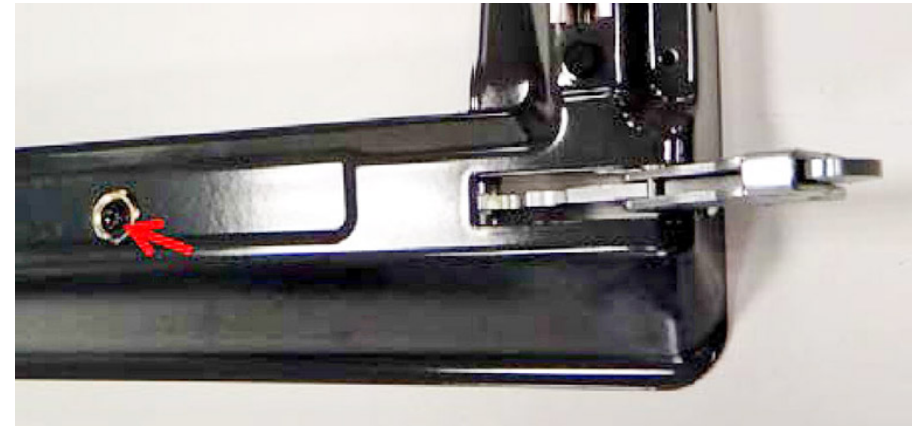

15. Remove the hinge from the door.

6.1.2 Installing the 2-Glass door

- ▶ Reassemble the 2-Glass door in reverse order.