


## 12.4 Removal of the right-hand side panel gives access to:

- The motor capacitor
  - The starting capacitor
  - The hot air circulation fan
  - The cold air circulation fan
  - The drum rotation motor
  - The drive belt tensioner
  - The belt tensioner spring
  - The NTC sensor
- Remove the work top (as previously described).
  - Remove of the right-hand side panel, unscrewing the screw that secures it to the crossbar.
  - When re-assembling the side panel, place the screws in their original position again, otherwise the continuity of the earth circuit will be broken.
  - Unscrew the screws which secure the side panel to rear panel.
  - Lift and remove it.

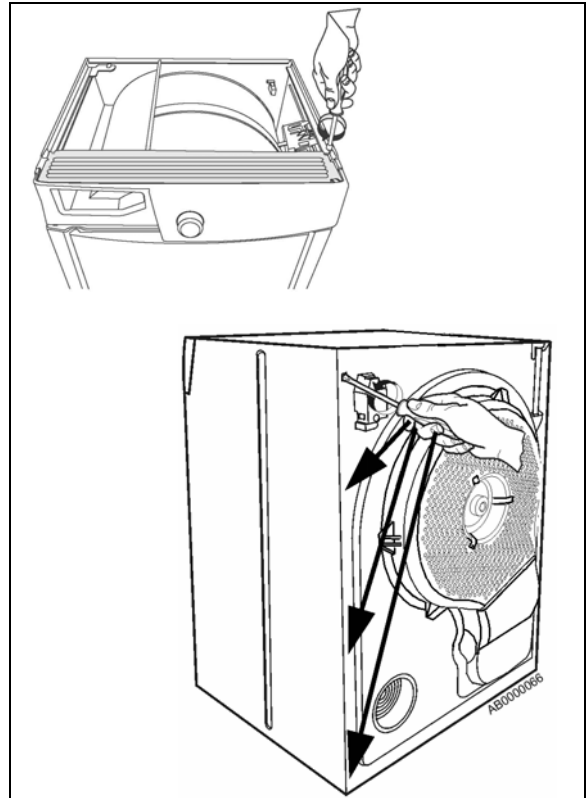

### 12.4.1 Condensatore motore

Detach the connectors, release the anchor tab and remove the capacitor.

