





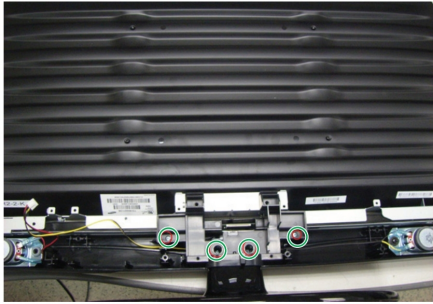



3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LE32C35*** LCD TV.


⚠ WARNING: This LCD TV contains electrostatically sensitive devices. Use caution when handling these components.

3-1. Disassembly and Reassembly

- ⚠ Cautions:**
1. Disconnect the LCD TV from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description	Screws
1. Place the TV face down on cushioned table. Remove 8 screws from the back cover.		 6002-001294 (M4, L16, Tapping)
2. Lift up the rear cover. Remove the 3 screws of main board and 4 screws of IP board.		 6003-001188 (M4, L10, TAPTYPE)
3. Remove 4 screw.		 6003-001188 (M4, L10, TAPTYPE)
4. Remove 6 screws.		 6002-001294 (M4, L16, Tapping)

3. Disassembly and Reassembly

Description	Picture Description	Screws
5. Lift up the panel.		

※ Reassembly procedures are in the reverse order of disassembly procedures.