


# JVC

## SERVICE MANUAL

COMPACT COMPONENT SYSTEM

# CA-MXJ55R / CA-MXJ530R

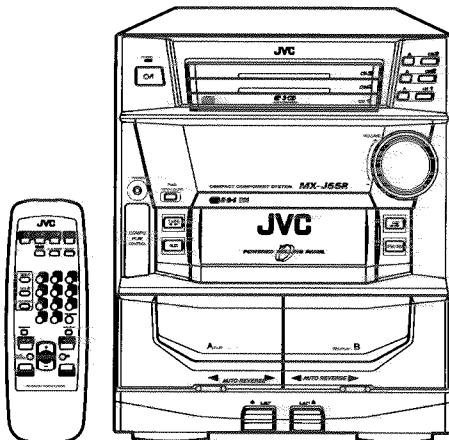

This Illustration is CA-MXJ55R

**Area Suffix(CA-MXJ55R)**

- B ----- U.K.  
 E -- Continental Europe  
 EN ---- Northern Europe  
 EV ----- Eastern Europe  
 EE ----- Russian Europe

**Area Suffix(CA-MXJ530R)**

- B ----- U.K.  
 E -- Continental Europe  
 EN ---- Northern Europe  
 EV ----- Eastern Europe

**Each difference point**

Model	Color
CA-MXJ55R	Light silver
CA-MXJ530R	Light silver + Gray

**Contents**

Safety Precautions -----	1-2	Maintenance of laser pickup -----	2-36
Important for laser products -----	1-3	Replacement of laser pickup -----	2-36
Instructions -----	1-4	Adjustment method -----	2-37
Description of major ICs -----	2-1	Diagnosis which uses extension wire method -----	2-41
Internal connection of FL display tube ---	2-14	Block diagram -----	2-42
Disassembly method -----	2-16	Standard schematic diagrams -----	2-43
Flow of functional operation until TOC read -----	2-35	Printed circuit boards -----	2-53
		Parts List -----	3-1~27


## Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)
 

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock. Do not use a line isolation transformer during this check.

  - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.)
  - Alternate check method
 

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a  $1,500\Omega$  10W resistor paralleled by a  $0.15\mu F$  AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now reverse the plug in the AC outlet and repeat each measurement voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

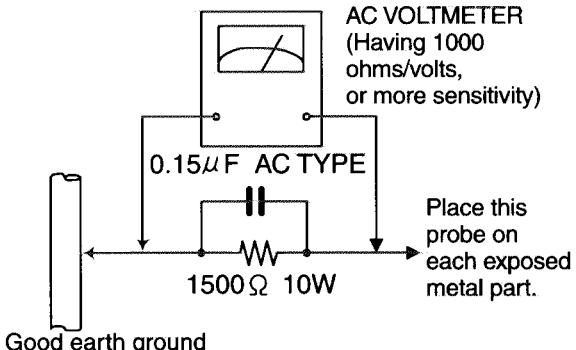

## Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

**⚠ CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of performing repair of this system.

# Important for laser products

## 1.CLASS 1 LASER PRODUCT

**2.DANGER :** Invisible laser radiation when open and inter

lock failed or defeated. Avoid direct exposure to beam.

**3.CAUTION :** There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.

**4.CAUTION :** The compact disc player uses invisible laserradiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

**VARNING :** Osynlig laserstrålning är denna del är öppnad och spårren är urkopplad. Betrakta ej strålen.

**VARO :** Avattaessa ja suojalukitus ohitettaessa olet alittiina näkymättömälle lasersäteilylle. Älä katso sääteeseen.

**5.CAUTION : If** safety switches malfunction, the laser is able to function.

**6.CAUTION :** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**⚠ CAUTION** Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.

**ADVARSEL :** Usynlig laserstråling ved åbning , når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

**ADVARSEL :** Usynlig laserstråling ved åpning,når sikkerhetsbryteren er avslott. unngå utsettelse for stråling.

## REPRODUCTION AND POSITION OF LABELS

### WARNING LABEL



DANGER : Invisible laser radiation when open and interlock or defeated.  
AVOID DIRECT EXPOSURE TO BEAM... (e)

VARO : Avattaessa ja suojalukitus ohitettaessa olet alittiina näkymättömälle lasersäteilylle. Älä katso sääteeseen... (d)

VARNING : Osynlig laserstrålning är denna del är öppnad och spårren är urkopplad. Betrakta ej strålen. (s)

ADVARSEL :Usynlig laserstråling ved åbning , når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling. (f)

CLASS 1  
LASER PRODUCT

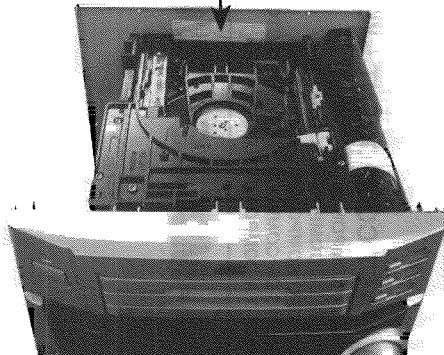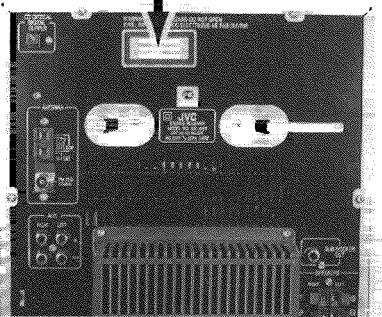

## Instructions (MX-J50)

Warnings, Cautions and Others / Warnings, Achtung und sonstige Hinweise /Mises en garde, précautions et indications diverses /Waarschuwingen, voorzorgen en andere mededelingen/Avisos, precauciones y otras notas / Avvertenze e precauzioni da osservare

**IMPORTANT for the U.K.**  
DO NOT cut off the mains plug from the equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a suitable socket, then obtain an appropriate safety approved extension lead or consult your dealer.  
**BE SURE** to replace the fuse only with an identical approved type, as originally fitted.  
If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.  
If this product is not supplied fitted with a mains plug then follow the instructions given below:  
**IMPORTANT:**  
DO NOT make any connection to the terminal which is marked with the letter E, or by the safety earth symbol or coloured green or green-and-yellow.  
The wires in the mains lead on this product are coloured in accordance with the following code :  
Blue : Neutral  
Brown : Live  
As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:  
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.  
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.  
**IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.**



**Per l'Italia:**  
"Si dichiara che questo prodotto di marca JVC è conforme alle prescrizioni del Decreto Ministeriale n. 548 del 28/08/95 pubblicato sulla Gazzetta Ufficiale della Repubblica Italiana n. 301 del 28/12/95."



**COMPACT COMPONENT SYSTEM**  
KOMPAKT-KOMPONENTEN-SYSTEM  
SÉCURISÉE DE COMPOSANTS COMPACT  
KOMPACTA KOMPONENTEN-SYSTEEM  
SISTEMAS DE COMPONENTES COMPACTOS  
IMPIANTO A COMPONENTI COMPATTO

**CA-MXJ55R/CA-MXJ530R**

COMPACT  
DISC  
DIGITAL AUDIO  
CD-R/W EOW

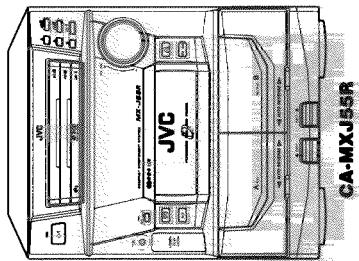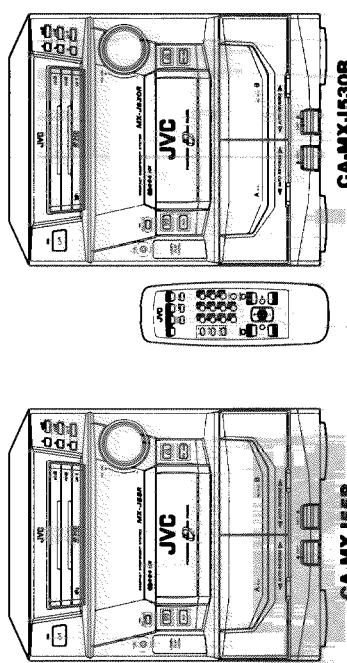

**INSTRUCTIONS**  
**BEDIENUNGSANLEITUNG**  
**MANUEL D'INSTRUCTIONS**  
**GEbruIKSAANWIJZING**  
**MANUAL DE INSTRUCCIONES**  
**ISTRUZIONI**

For Customer Use:  
Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.  
Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

GVT0012-006A  
[E]



## Introduction



English

IMPORTANT FOR LASER PRODUCTS/WICHTIGER HINWEIS FÜR LASER-PRODUKTE/IMPORTANT POUR LES PRODUITS LASER/BELANGRIKKE INFORMATIE VOOR LASERPRODUKTEN/IMPORTANTE PARA LOS PRODUCTOS LASER/IMPORTANTE PERI PRODOTTI LASER

### REPRODUCTION OF LABELS/ANBRINGUNGSHOERDE FÜR LASER-PRODUKTE/REPRODUCTION DES STICKETTES/VERKLARING VAN DE LABELS/REPRODUCTION DE ETIQUETTE AS/REPRODUZIONE DELLE ETICHETTE

- (1) CLASSIFICATION LABEL, PLACED ON REAR ENCLOSURE (2) WARNING LABEL, PLACED INSIDE THE UNIT
- (1) KLASSEFICATIONSETIKETTE AN DER RUECKSEITE (2) WARNAUFSATZ ETIKETTE IM GEÄTENNERNEN
- (1) ETIQUETTE DE CLASSEIFICATION, PLACÉE A L'ARRIERE DU COFFRET (2) ETIQUETTE DAVERTISSEMENT PLACÉE À L'INTERIEUR DE LAPPAREIL
- (1) KLASSIFIKAATIELABEL, OP DE ACHTERZIJDE VAN HET APPARAAT (2) WAARSCHUWINGSLABEL, IN HET APPARAAT
- (1) ETIQUETA DE CLASIFICACIÓN, PEGADA EN EL INTERIOR DE LA UNIDAD (2) ETIQUETA DE ADVERTENCIA, PEGADA EN EL INTERIOR DE LA UNIDAD
- (1) ETICHETTA DI CLASIFICAZIONE, SITUATA ALL'INTERNO DELLA PARTE POSTERIORI DELLA CAJA (2) ETICHETTA DI AVVERTENZA, SITUATA ALL'INTERNO DELLA PARTE POSTERIORE DELLA PARTE POSTERIORE



CLASS 1  
LASER  
PRODUCT

**We would like to thank you for purchasing one of our JVC products.**  
**Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.**

### About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the unit. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the unit.
- If operation using the remote control is different from that using the unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the unit, setting the volume, changing the sound effects, and others, which are explained in the section "Common Operations" on pages 9 to 11.
- The following marks are used in this manual:

- Gives you warnings and cautions to prevent damage or risk of fire/electric shock.  
Also gives you information which is not good for obtaining the best possible performance from the unit.
- Gives you information and hints you had better know.  


1. PRODUCT LASER KLASSE 1
  2. GEVAARLIJK! Onzichtbare laserstraling wanneer open en de bewerking aan de achterkant van uitgeschakeld is. Voorkom het drinken blootstaan aan de straling.
  3. VOORZICHTIG! De bovenkant niet openen. Blauwvin niet loslaai bevinden zich geen deuren die gebukt te repareren onder de buiten omstandigheden over aan bewerkende werknemers.
1. LASER-PRODUCT KLASSE 1
  2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
  3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt kein elektrisches Gerät im Inneren des Gehäuses.
1. PRODUKT LASER KLASSE 1
  2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
  3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

1. PRODUKT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Das Gerät enthält keinen elektrischen Antrieb im Inneren des Gehäuses.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



### Moisture condensation

- Moisture may condense on the lens inside the unit in the following cases:
  - After starting heating in the room
  - In a damp room
  - If the unit is brought directly from a cold to a warm place
  - Should this occur, the unit may malfunction. In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

- Should any metallic object or liquid fall into the unit, unplug the unit and consult your dealer before operating any further.
- If you are not going to operate the unit for an extended period of time, unplug the AC power cord from the wall outlet.



If anything goes wrong, unplug the AC power cord and consult your dealer.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.

1. PRODUCT LASER KLASSE 1
2. GEFAHR! Unschichtbare Laserstrahlung bei Öffnung und fehlender oder beschädigter Spire. Kontakt mit dem Strahl vermeiden!
3. ACHTUNG! Das Gehäuse nicht öffnen. Es gibt keine reparierbaren Teile im Inneren des Gehäuses.


## Contents



## Location of the Buttons and Controls


<b>Location of the Buttons and Controls</b>	3
Front Panel	4
Remote Control	5
<b>Getting Started</b>	6
Unpacking	6
Putting the Batteries into the Remote Control	6
Connecting Antennas	6
Connecting Speakers	7
Connecting Other Equipment	8
<b>Common Operations</b>	9
Setting the Clock	9
Tuning On the Power and Selecting the Sources	9
Adjusting the Volume	10
Reinforcing the Bass Sound	10
Selecting the Sound Modes	10
Creating Your Own Sound Mode — Manual Mode	11
<b>Listening to FM and AM (MW/LW) Broadcasts</b>	12
Tuning in a Station	12
Presetting Stations	12
Tuning in a Preset Station	12
<b>Receiving FM Stations with RDS</b>	13
Changing the RDS Information	13
Searching for Programs by PTY Codes (PTY Search)	13
Switching to a Program Type of Your Choice Temporarily	14
<b>Playing Back CDs</b>	15
Loading CDs	15
Playing Back the Entire Discs	15
Continuous Play	15
Basic CD Operations	15
Programming the Playing Order of the Tracks — Program Play	16
Playing at Random — Random Play	17
Repeating Tracks or CDs — Repeat Play	17
Prohibiting Disc Ejection — Tray Lock	17
<b>Playing Back Tapes</b>	18
Playing a Tape	18
Locating the Beginning of a Song — Music Scan	18
<b>Recording</b>	19
Recording Tapes on Deck B	19
Dubbing Tapes	20
CD Direct Recording	20
Auto Edit Recording	21
<b>Using the Timers</b>	22
Using Daily Timer	22
Using Recording Timer	23
Using Sleep Timer	24
Timer Priority	24
Additional Information	25
Maintenance	25
<b>Troubleshooting</b>	26
Specifications	26

Become familiar with the buttons and controls on your unit.

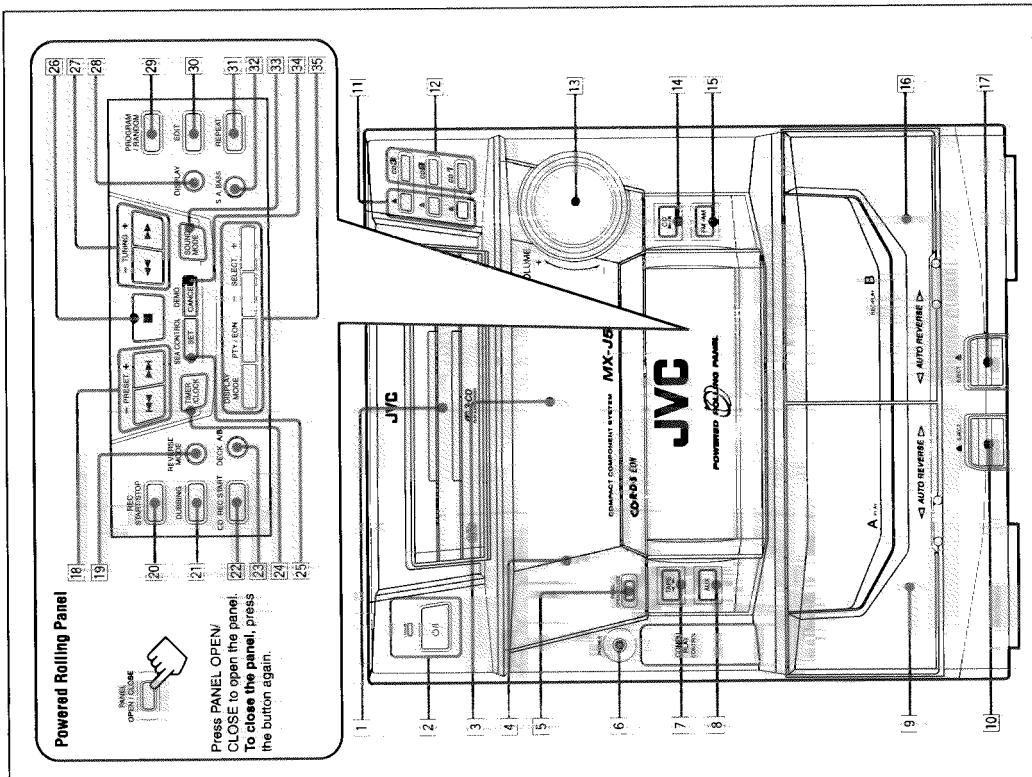



Continued

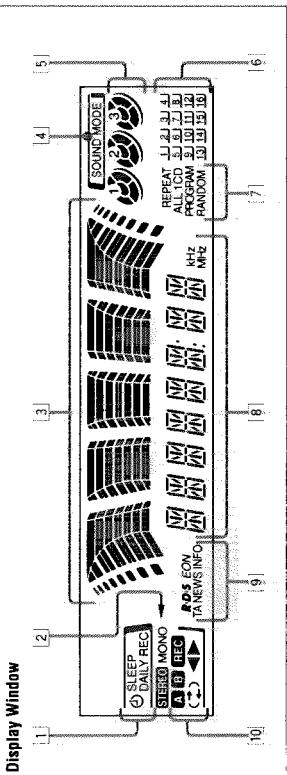

See pages in the parentheses for details.


### Powered Rolling Panel

- [1] PRESET -/+ buttons (12)
  - ◀ ▶ (reverse search/forward search) buttons
- [2] CTPA (play/pause) button and lamp (15)
  - Pressing this button also turns on the unit.
- [3] FM/AM button and lamp (12)
  - Pressing this button also turns on the unit.
- [4] SOUND MODE button (10)
  - Deck B cassette holder (19)
- [5] EJECT ▲ button for deck B (19)
  - Pressing one of these buttons also turns on the unit.
- [6] RDS operation buttons (13)
  - DISPLAY MODE, PTY/ON, and SELECT -/+ buttons

### Display Window

- [1] Timer indicators
  - SLEEP, REC, and DAILY indicators
- [2] Tuner operation indicators
  - STEREO and MONO indicators
- [3] Audio level indicator
- [4] SEA Sound Effect Amplifier pattern indicator
- [5] SOUND MODE indicator
- [6] Disc indicators
  - Shows the source name, frequency, etc.
- [7] CD track number indicators
  - REPEAT (ALL/1/CD1), PROGRAM, and RANDOM indicators
- [8] Main display
  - Shows the source name, frequency, etc.
- [9] RDS operation indicators
  - RDS, EOIN, and TA/NEWS/INFO indicators
- [10] Tape operation indicators
  - A/B (operating deck), EOIN, (↔) (reverse mode), and (↔) (tape direction) indicators

### Remote Control

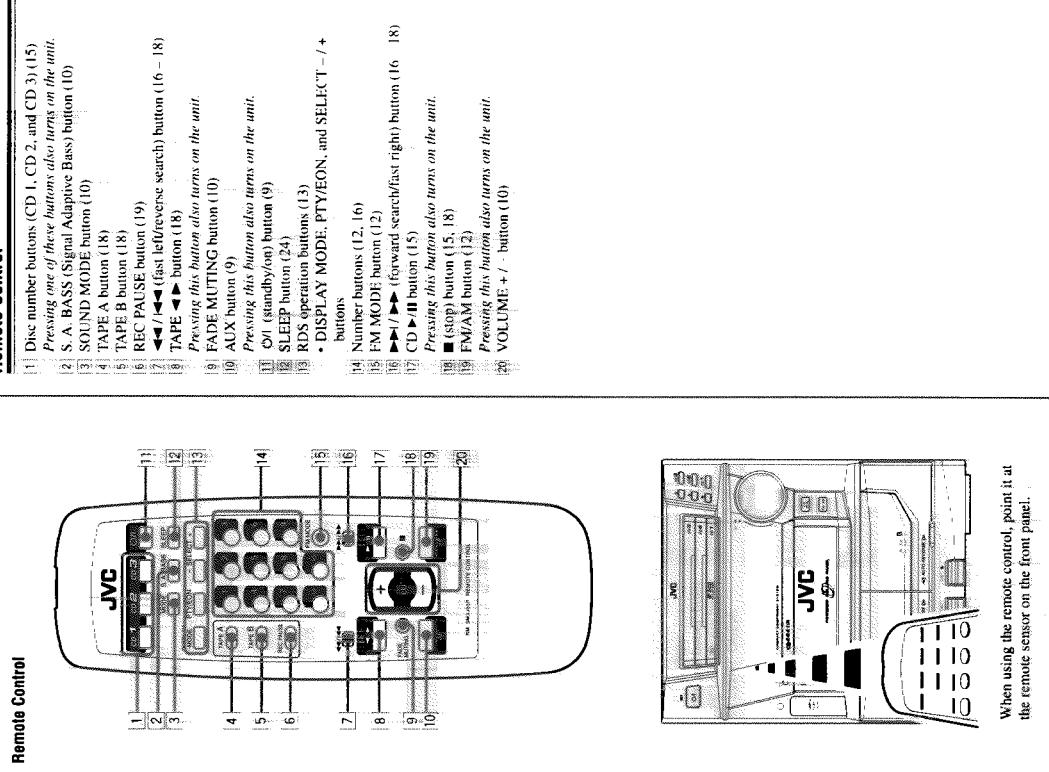

# Getting Started

Continued 1


English

## Connecting Antennas

### AM (MW/LW) antenna


You can connect a pair of front speakers, and one subwoofer.

#### To connect front speakers

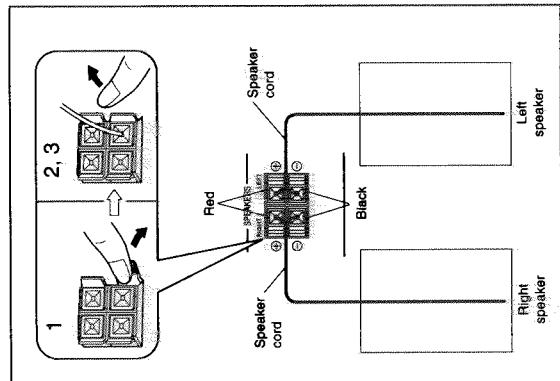


### FM antenna

Vinyl-covered wire  
(not supplied)

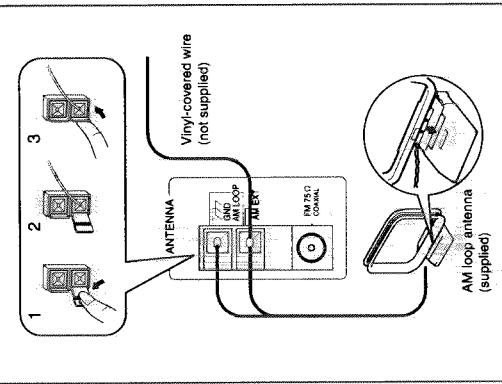

- 1 Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2 Turn the AM loop antenna until you have the best reception.

**To connect an outdoor AM antenna**  
When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. (The AM loop antenna must remain connected.)

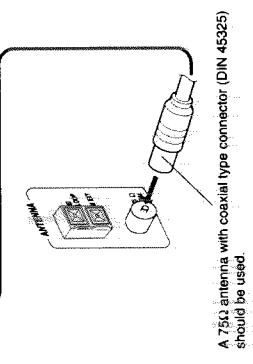

A 75Ω antenna with coaxial type connector (DIN 45325)  
should be used.

## Connecting Speakers

You can connect a pair of front speakers, and one subwoofer.

- 1 Press and hold the clamp of the speaker terminal on the rear of the unit.
- 2 Insert the end of the speaker cord into the terminal.

Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).

#### 3 Release the finger from the clamp.

**IMPORTANT:** Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Unpacking

After unpacking, check to be sure that you have all the following items. The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)

If any is missing, consult your dealer immediately.

## Putting the Batteries Into the Remote Control

Insert the batteries — R6P(SUM.3V)/AA(1.5F) — into the remote control by matching the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.

When the remote control can no longer operate the unit, replace both batteries at the same time.

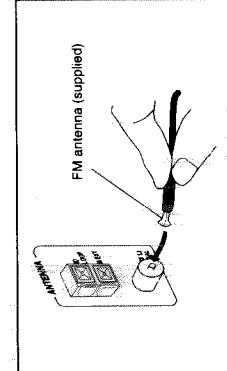


- 1 Attach the FM antenna to the FM 75Ω COAXIAL terminal.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception.

**notes** About the supplied FM antenna  
The FM antenna supplied with this unit can be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

#### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

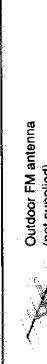

- 1 DO NOT use an old battery together with a new one.
- 2 DO NOT use different types of batteries together.
- 3 DO NOT expose batteries to heat or flame.
- 4 DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, it will be damaged from battery leakage.


## Putting the Batteries Into the Remote Control

After unpacking, check to be sure that you have all the following items. The number in the parentheses indicates the quantity of the pieces supplied.

## Connecting Speakers

You can connect a pair of front speakers, and one subwoofer.

#### To connect front speakers

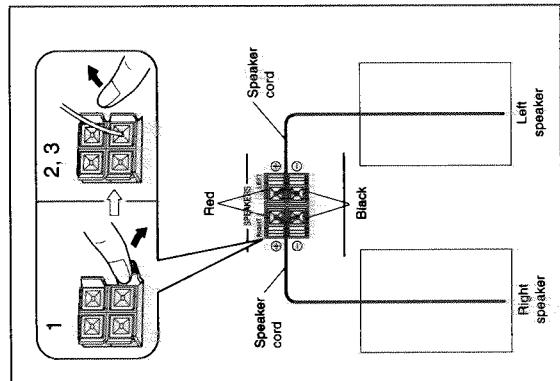

- 1 Press and hold the clamp of the speaker terminal on the rear of the unit.
- 2 Insert the end of the speaker cord into the terminal.

Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).


#### 3 Release the finger from the clamp.

**IMPORTANT:** Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Common Operations

### To connect audio equipment with an optical digital input terminal

By connecting a subwoofer, you can enhance the bass.  
You can record CD sound onto the connected digital equipment.

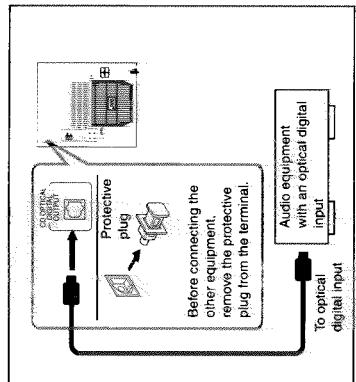

Connect the input jack of a powered subwoofer to the SUB WOOFER OUT jack, using a monaural audio cord (not supplied).


### Connecting Other Equipment

You can connect both analog and digital equipment.

- DO NOT connect any equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

### To connect an analog component

Be sure to connect audio cords correctly. White plugs are for left audio signals, and red ones for right audio signals.

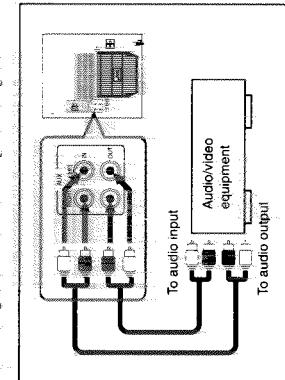

By using audio cords (not supplied), connect:

- Between the audio input jacks on the other equipment and ALIX OUT jacks. For recording on the other equipment.
- Between the audio output jacks on the other equipment and ALIX IN jacks. For playing the other equipment.

### Setting the Clock

Before operating the unit any further, first set the clock built in the unit.

#### 1 Press PANEL OPEN/CLOSE.

The unit is turned on and the Powered Rolling Panel opens automatically.

#### 2 Press TIMER/CLOCK.

The hour digits start flashing on the display.


#### 3 Press ↩ or ↪ to adjust the hour, then press SET.

If you want to correct the hour after pressing SET, press CANCEL. The hour digits start flashing again.

#### 4 Press ↩ or ↪ to adjust the minute, then press SET.

If you want to correct the minute after pressing SET, press CANCEL. The hour digits start flashing again.

### NOW, you can plug in the unit and other connected equipment FINALLY!

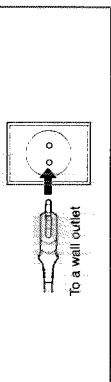

When connecting the AC power cord into a wall outlet, the unit automatically starts display demonstration.

To stop the display demonstration, press any button on the unit or the remote control.

To start the display demonstration manually  
Press and hold DEMO for more than 2 seconds.

To stop the demonstration, press any button.

### Turning On the Power and Selecting the Sources

When you press the play button for a particular source (FM/AM, CD ▶, AUX, and TAPE ▶), the unit turns on, and the Powered Rolling Panel opens automatically (and the unit starts playing the source if it is ready — COMP/PLAY CONTROL).

To listen to the FM/AM (MW/LW) broadcasts, press FM/AM. (See pages 12 – 14.)

To play back CDs, press CD ▶ (See pages 15 – 17.)

To play back tapes, press TAPE ▶. (See page 18.)

To select the external equipment as the source, press AUX.

To turn on the unit without playing, press ON/OFF.

so that the STANDBY lamp goes off.

The Powered Rolling Panel opens automatically.

To turn off the unit (on standby), press ON/OFF again so that the STANDBY lamp lights up.

The Powered Rolling Panel also closes.

A little power is always consumed even while the unit is on standby.

To switch off the power supply completely, unplug the AC power cord from the AC outlet.

The Powered Rolling Panel opens automatically.

To turn off the unit (on standby), press ON/OFF again so that the STANDBY lamp lights up.

The Powered Rolling Panel also closes.

A little power is always consumed even while the unit is on standby.

### To check the clock time

Press DISPLAY while playing any source.

Each time you press the button, the source indication and the clock time alternate on the display.

### To adjust the clock again

If you have adjusted the clock before, you need to press TIMER/CLOCK repeatedly until the clock setting mode is selected.

Each time you press the button, the time/clock setting modes change as follows:

**DAILY → ON TIME → REC**

**Canceled → Clock → ON TIME →**

**Setting**

(One hour steps, fast, slow)

**notes**

If there is a power failure

The clock loses the setting and is reset to "0:00."

You need to set the clock again.



Continued

### Adjusting the Volume

You can adjust the volume level only while the unit is turned on.

Turn VOLUME clockwise to increase the volume or counterclockwise to decrease it.

**For private listening**

When using the remote control, press VOLUME + to increase the volume or press VOLUME - to decrease it.

**DO NOT turn off (on standby) the unit with the volume set to an extremely high level; otherwise, a sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the unit or start playing any source next time.**

**REMEMBER:** You cannot adjust the volume level while the unit is on standby.

### Reinforcing the Bass Sound


The Signal Adaptive Bass function provided for this unit can enhance the bass sound while listening to any source at low volume.

You can use this function only for playback.

To turn on the function, press S.A. BASS repeatedly until "SA-BASS1" or "SA-BASS2" appears on the display.

**SA - BASS1 / SA-BASS2**

The S.A. BASS lamp (the button itself) also lights up. Each time you press the button, the Signal Adaptive Bass level applied to the playback sound changes as follows:

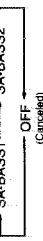

When you select "SA-BASS2," the bass sound level is enhanced much more than when you select "SA-BASS1." While playing back some sources, the level difference between "SA-BASS1" and "SA-BASS2" may not be distinct.

To turn off the function, press the button repeatedly until "OFF" appears on the display.

**If you want to check the Signal Adaptive Bass level currently selected**

While the S.A. BASS lamp is lit, press S.A. BASS once so that the current level appears for a while.

### Selecting the Sound Modes

You can select one of the 6 preset sound modes (3 surround modes and 3 SEA - Sound Effect Amplifier - modes). The sound modes can be applied only to playback sounds, and cannot be used for recording.

To select the sound modes, press SOUND MODE until the sound mode you want appears on the display. The SOUND MODE indicator also lights up on the display.

- Each time you press the button, the sound modes change as follows:



### 2 Adjust the SEA pattern.

Surround modes \*:

D CLUB: Increases resonance and bass.

HALL: Adds depth and brilliance to the sound.

STADIUM: Adds clarity and spreads the sound, like in an outdoor stadium.

SEA modes:

ROCK: Boosts low and high frequency. Good for acoustic music.

POP: Good for vocal music.

CLASSIC: Good for classical music.

Manual modes:

MANUAL 1/2/3: Your individual mode stored in memory.


See "Creating Your Own Sound Mode" — **SOUND MODE**.

OFF: Cancels the sound mode.

\* Surround elements are added to the SEA elements to create a being-there feeling in your room.

When one of these modes is selected, the SOUND MODE indicator lights up as — **SOUND MODE**

### 3 Press SEA CONTROL again.

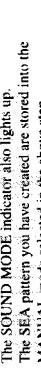

1) Press < or > to select the frequency range to adjust (LOW, MID, HIGH).

2) Press < or > to adjust the level (-3 to +3) of the selected frequency range.

3) Repeat steps 1) and 2) to adjust the level of the other frequency ranges.

### 4 Press < or > to select one of the MANUAL 1, 2, and 3 modes into which you want to store the SEA pattern.

### 5 Press SEA CONTROL again.



### Creating Your Own Sound Mode — Manual Mode

#### Music

You can change SEA pattern to suit your preference. These changed settings can be stored in the MANUAL 1, 2, and 3 modes.


• There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

• If you want to add the surround elements in your SEA pattern, select one of the surround modes (D CLUB, HALL, or STADIUM) before starting the procedure below.

#### Online unit ONLY

1 Press and hold SEA CONTROL until "SEA CONT" appears on the display.

"SEA CONT" appears on the display.

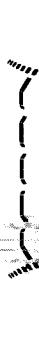

The SOUND MODE indicator also lights up. The SEA pattern you have created are stored into the MANUAL mode selected in the above step.

**To use your own sound mode**

Select MANUAL 1, 2, or 3 mode when using the sound modes. See "Selecting the Sound Modes" on page 10.

Current level appears.

## Listening to FM and AM (MW/LW) Broadcasts

### Tuning in a Station

**On the unit ONLY:**

**1 Press FM/AM.**

The unit automatically turns on and tunes in the previously tuned station (either FM or AM - MW/LW). The "Powered Rolling Panel" automatically opens.

- Each time you press the button, the band alternates between FM and AM (MW/LW).

**2 Press and hold TUNING - / + for more than 1 second.**

The unit starts searching for stations and stops when a station of sufficient signal strength is tuned in.

- If a program is broadcast in stereo, the STEREO indicator lights up.

**To stop during searching, press TUNING - / +.**

When you unplug the AC power cord or if a power failure occurs, the frequency changes step by step.

The frequency changes step by step.

**To change the FM reception mode**

When an FM stereo broadcast is hard to receive or noisy, press FM MODE on the remote control so that the MONO indicator lights up on the display.

Reception improves.

**To restore the stereo effect, press FM MODE again so that the MONO indicator goes off.**

In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

**2 Press SET.**

**SET**

**3 Press PRESET - / + to select a preset number.**

**P-** **P+**

**4 Press SET again.**

**SET**

**5 TUNE**

**TUNE**

**E**

## Receiving FM Stations with RDS

### Searching for Programs by PTY Codes (PTY Search)

One of the advantages of RDS is that you can locate a particular kind of program by specifying the PTY codes. For details on the PTY codes, see "Additional Information" on page 25.

**To search for a program using the PTY codes**  
REMEMBER you must preset FM RDS stations to use the EON function. If it has not yet been done, see page 12.

There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

**1 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**2 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**3 Press PTY/EON once again.**

While searching, "SEARCH" and the selected PTY code alternate on the display.

The unit searches 30 preset FM stations, stops when it finds the one you have selected ("FOUND" appears), and tunes in that station.

- If no program is found, "NOT" and "FOUND" alternately appear on the display and the unit returns to the last received station.

**To stop searching any time during the process**  
Press PTY/EON while searching.

English

### Tuning in a Preset Station

#### On the unit ONLY:

**1 Press FM/AM.**

The unit automatically turns on and tunes in the previously tuned station (either FM or AM - MW/LW). The "Powered Rolling Panel" automatically opens.

- Each time you press the button, the band alternates between FM and AM (MW/LW).

**2 Select a preset number.**

**P-** **P+**

**3 Press PRESET - / +.**

**PRESET**

**4 On the remote control:**

**Press the number buttons.**

For preset number 5, press 5.

For preset number 15, press +10, then 5.

For preset number 20, press +10, then 10.

For preset number 25, press +10, then 5.

**5 Tune in the station you want to preset.**

\* See "Tuning in a Station" above.

**2 Press SET.**

**SET**

**3 Press PRESET - / + to select a preset number.**

**P-** **P+**

**4 Press SET again.**

**SET**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

**5 TUNE**

**TUNE**

**E**

**2 Press PTY/EON until "PTY" and "SELECT" alternately appears on the display.**

**PTY** **EON**

**3 Press SELECT - / + until the PTY code you want appears on the display.**

**SELECT**

**4 Press PTY/EON once again.**

**PTY** **EON**

## Playing Back CDs



English

### Switching to a Program type of Your Choice Temporarily

By receiving EON data sent by FM RDS stations, the EON function allows the unit to switch temporarily to a broadcast program of your choice (TA, NEWS, and INFO) from a different station.

The EON function only works when you are listening to a preset FM RDS stations providing EON data.

\* The EON indicator lights while receiving a station with EON data.

#### To activate the EON function

REMEMBER you must preset FM RDS stations to use the EON function. If not yet done, see page 12.

\* There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

#### 1 Press PTY/EON until "EON" and "SELECT" alternately appear on the display.

\* Each time you press the button, RDS operation mode changes as follows:



#### 2 Press SELECT -/+ until the EON data type you want appears on the display.

The selected EON data type indicator also

\* Each time you press the button, the EON data types change as follows:



\* Each time you press the button, the EON data types change as follows:

TA: Traffic announcement  
NEWS: News  
INFO: Program the purpose of which is to impart advice in the widest sense.

OFF: The EON function is canceled. The EON data type indicator (TA, NEWS, INFO) goes off.

#### 3 Press PTY/EON once again.

The EON data type indicator stops flashing and remains lit.  
Now, the EON function is activated. See "How the EON function actually works."

### Loading CDs

#### Playing Back the Entire Discs — Continuous Play

You can play CDs continuously.

##### 1 Load CDs.

3) you want to load a CD onto. The unit automatically turns on and the disc tray comes out. The Powered Rolling Panel also opens automatically.

##### 2 Place a disc correctly on the circle of the disc tray, with its label side up.



• When using a CD single (8 cm), place it on the inner circle of the disc tray.

##### 3 Press the same ▲ you have pressed in step 1.

The disc tray closes, and the corresponding disc number indicator (CD 1 to CD 3) lights up on the display.

##### 4 Repeat steps 1 to 3 to place other CDs.

**note** When loading more than one CD continuously When you press ▲ for the next tray you want to place another CD onto, the first disc tray automatically closes and then the next tray comes out.

**note** About the disc Indicators Each disc indicator corresponds to the disc tray of the same number.

### More about the EON function

EON data sent from some stations may not be compatible with this unit. In this case, the EON function may not work correctly.

\* While listening to a program tuned in by the EON function, the station does not change even if another network station starts broadcasting a program of the same EON data.

\* The EON function is canceled when you change the source in CD, TAPE, or AUX, while it is temporarily canceled when you change the source to AM.

### Press PTY/EON once again.

The EON data type indicator stops flashing and remains lit.  
Now, the EON function is activated. See "How the EON function actually works."

#### Playing Back the Entire Discs — Continuous Play

You can play CDs continuously.

##### 1 Load CDs.

3) you want to load a CD onto. The unit automatically turns on and the disc tray comes out. The Powered Rolling Panel also opens automatically.

##### 2 Press one of the disc number buttons (CD 1, CD 2, and CD 3) for the disc you want to play.

CD play starts from the first track of the selected disc.



Tracks of the currently playing disc

Elapsed playing time

Track number

Pressing CD ▲ instead of the disc number buttons starts playing back if a CD is on the trays.

##### To stop during play, press ■.

To remove the disc, press ▲ for the corresponding disc tray.



CD playback sequence

When CDs are readied on the disc trays, they are played in one of the following sequences:  
• When CD 1 is pressed: CD 1 => CD 2 => CD 3 (then stops)  
• When CD 2 is pressed: CD 2 => CD 3 => CD 1 (then stops)  
• When CD 3 is pressed: CD 3 => CD 1 => CD 2 (then stops)  
• When only 2 CDs are readied, they are played in the same order, but the disc tray without a CD is skipped.

### Basic CD Operations

While playing a CD, you can do the following operations.

##### To exchange CDs during playback of another

Press ▲ corresponding to a CD, not playing or selected currently, to eject and exchange the CD.  
• When you exchange CDs during play, the current play will not stop until all CDs you have exchanged are played.

##### To stop play for a moment

Press CD ▲. While pausing, the elapsed playing time flashes on the display.

##### To resume play, press CD ▲ again.

CD icon with a note symbol.



English

Continued 1

**To locate a particular point in a track**

- During play, press and hold  $\blacktriangleleft$  or  $\triangleright$ .
- $\blacktriangleleft$ : Fast reverses the disc.
- $\triangleright$ : Fast forwards the disc.

When using the remote control, press and hold  $\blacktriangleleft$  /  $\blacktriangleleft$  or  $\triangleright$  /  $\triangleright$ .

**To go to another track**  
Press  $\blacktriangleleft$  or  $\triangleright$  repeatedly before or during playback.

$\blacktriangleleft$ : Goes back to the beginning of the current or previous tracks.

$\triangleright$ : Skips to the beginning of the next or succeeding tracks.

When using the remote control, press  $\blacktriangleleft$  /  $\blacktriangleleft$  or  $\triangleright$  /  $\triangleright$  before playing.

**notes** If you press and hold  $\blacktriangleleft$  /  $\blacktriangleleft$  (or  $\triangleright$  /  $\triangleright$ ) before playing, you can change the tracks continuously.

**To go to another track directly using the number buttons**

Pressing the number button(s) before or during play allows you to start playing the track number you want.

Ex.: For track number 5, press 5.

For track number 15, press +10, then 5.

For track number 20, press +10, then 10.

For track number 32, press +10, +10, +10, then 2.

**notes** You can arrange the order in which the tracks play before you start playing. You can program up to 32 tracks.

• To use Repeat play (see page 17) for Program play, press REPEAT after starting Program play.

**Programming the Playing Order of the Tracks  
—Program Play**

You can program the order in which the tracks play before you start playing. You can program up to 32 tracks.

• To use Repeat play (see page 17) for Program play, press REPEAT after starting Program play.

**1 Load CDs.**

• If the current playing source is not the CD player, press CD  $\blacktriangleright$  /  $\blacksquare$ , then  $\blacksquare$  before going to the next step.

**2 Press PROGRAM/RANDOM  
repeatedly until "PROGRAM" appears on the display.**

The tracks are played in the order you have programmed.

**3 Press CD  $\blacktriangleright$  /  $\blacksquare$ .**

**notes** If a program has been stored in memory, the program is called up.

• Random play also stops when one of the disc trays is opened.

**To check the program contents**

Before playing, you can check the program contents by pressing  $\blacktriangleleft$  /  $\blacktriangleleft$  or  $\triangleright$  /  $\triangleright$  on the remote control.

$\blacktriangleleft$  /  $\blacktriangleleft$ : Shows the programmed tracks in the programmed order.

$\triangleright$  /  $\triangleright$ : Shows them in the reverse order.

**To modify the program**

Before play, you can erase the programmed tracks shown on the display by pressing CANCEL.

• Each time you press the button, the programmed track shown on the display is erased from the program.

**To add tracks in the program before play**, simply select the track numbers you want to add by following step 4 of the programming procedure on page 16.

**To erase the entire program before or after play**, press ■.

"PROGRAM" appears on the display.

• Ejecting a CD will also erase the track numbers programmed from the ejected CD.

**notes** If you try to program a 3rd step

"FULL..." will appear on the display.

**notes** If your entry is ignored

You have tried to program a track from an empty tray, or a track number that does not exist on the CD (for example, selecting track 14 on a CD that only has 12 tracks). Such entries are ignored.

**Playing at Random — Random Play**

The tracks of all loaded CDs will play at random.

• To use Repeat play for Random play, press REPEAT after starting Random play.

**1 Prepare CDs.**

• If the current playing source is not the CD player, press CD  $\blacktriangleright$  /  $\blacksquare$ , then  $\blacksquare$  before going to the next step.

**2 Press PROGRAM/RANDOM  
repeatedly until "RANDOM" appears on the display.**

The tracks are played at random.

• To cancel Repeat play, press REPEAT again.

**3 Press CD  $\blacktriangleright$  /  $\blacksquare$ .**

**notes** If you try to select CDs

"LOCKED" appears to inform you that the Tray Lock is in use.

• If a program has been stored in memory, the program is called up.

• Random play also stops when one of the disc trays is opened.

**To exit from Random play mode, press PROGRAM/RANDOM**

repeatedly again before or after play so that the unit enters another play mode.

**notes** Even if you press  $\blacktriangleleft$  /  $\blacktriangleleft$  or  $\triangleright$  /  $\triangleright$  on the remote control, you cannot go back to the previous tracks during Random play.


• If you press  $\blacktriangleleft$  /  $\blacktriangleleft$  or  $\triangleright$  /  $\triangleright$  on the remote control, you can go to next random tracks.

**Repeating Tracks or CDs — Repeat Play**

You can have all the CDs, the program or the individual track currently playing repeat as many times as you like.

To repeat play, press REPEAT during or before playing. To use Repeat play for Program play and Random play, press the button after starting playback.

• Each time you press the button, Repeat play mode changes as follows, and the following indicator lights up on the display:

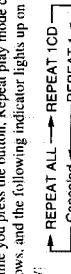

**REPEAT ALL** → REPEAT 1 CD → REPEAT 1 TRACK

(Continuous play)  
Repeats all the tracks, on all the CDs (continuously or at random), or all the tracks in the program.

**REPEAT 1 CD\***: Repeats all the tracks on one CD.  
**REPEAT 1**: Repeats one track on one CD.  
\* REPEAT 1 CD is not used for Program play and Random play.

To cancel Repeat play, press REPEAT repeatedly until the REPEAT indicator (REPEAT ALL, REPEAT 1 CD, or REPEAT 1) goes off from the display.

• Repeat play is also canceled when you select Program play or Random play.

**Prohibiting Disc Ejection — Tray Lock**

You can prohibit CD ejection from the unit and can lock discs.

• This operation is possible only using the buttons on the unit.

To prohibit disc ejection, press  $\blacktriangleup$  for any disc tray while holding  $\blacksquare$  (if there is any disc tray opened, close it first.) "LOCKED" appears for a while, and the loaded CDs are locked.

To cancel the prohibition and unlock the CDs, press  $\blacktriangleup$  for any disc tray while holding  $\blacksquare$ . "UNLOCKED" appears for a while, and the loaded CDs are unlocked.

**notes** If you try to eject CDs

"LOCKED" appears to inform you that the Tray Lock is in use.

## Playing Back Tapes



You can play back type I, type II, and type IV tapes without changing any settings.

### To play both sides repeatedly — Reverse Mode

Reverse Mode works for both decks at the same time. When it is in use, the tape automatically reverses at the end of a side and the unit starts playing the other side of the tape, and repeats this same process.

**To use Reverse Mode,** press REVERSE MODE so that the Reverse Mode indicator on the display lights up like this —

**To cancel Reverse Mode,** press the button again so that the Reverse Mode indicator on the display lights up like this —

**When Reverse Mode is on with cassettes in both decks**  
After the reverse (◀) side of the tape finishes playing, the tape in the other deck starts playing.

→ ←

→ ←

→ ←

### Locating the Beginning of a Song — Music Scan

You can use Music Scan to locate the beginning of a song. Music Scan searches for blank portions that usually separate recorded songs, then plays the next song.

### To find the beginning of the current song

During play, press ▶▶ (◀◀ or ▶▶ or ▶▶◀◀ or ▶▶◀◀◀◀ on the remote control) in the opposite direction to the tape play starts flashing slowly and quickly alternately.

The tape direction indicator of the opposite direction to the tape play starts flashing slowly and quickly alternately.

Searching stops automatically at the beginning of the current song, and the current song starts automatically.

### To find the beginning of the next song

During play, press ▶▶ (◀◀ or ▶▶ or ▶▶◀◀ or ▶▶◀◀◀◀ on the remote control) in the same direction as the tape play. The tape direction indicator of the same direction as the tape play starts flashing slowly and quickly alternately.

Searching stops automatically at the beginning of the next song, and the next song starts automatically.

### Music Scan works by detecting a 4-second long blank

between each song, so it will not work well in the following cases:


- No blank at the beginning of a song.
- No often caused by much use of poor quality dubbing which fills the blank.
- Long, very soft passages or pauses in a song.

### To demagnetize the heads

Turn oil of the unit, and use a head demagnetizer (available at electronics and record shops).

The use of the  $\frac{1}{2}$  or thinner tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch-rollers and the capstans.

## Recording

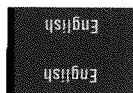


You can play back type I, type II, and type IV tapes without changing any settings.

### Playing Back a Tape

**1 Press EJECT (▲) for the deck you want to use.**



**2 Put a cassette in, with the exposed part of the tape down.**

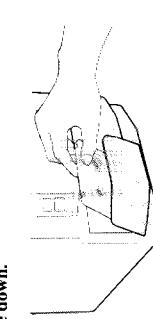

**3 Close the cassette holder gently.**

If you put cassettes in both decks A and B, the last deck you have put a cassette into is selected.

**To operate the other deck,** press DECK A/B (or TAPE A or TAPE B on the remote control).

**4 Press TAPE ▶▶.**

The tape play starts and the tape direction indicator (◀▶) starts flashing slowly to indicate the tape running direction.

• Each time you press the button, the tape direction changes.

▶ : plays the front side.  
◀ : plays the reverse side.

When the tape plays to the end, the deck automatically stops if the Reverse Mode is not on. (See "To play both sides repeatedly — Reverse Mode.")

**To stop during play, press ■.**

**To operate the other deck,** press DECK A/B (or TAPE A or TAPE B on the remote control), then TAPE ▶▶.


**To fast wind to the left or to the right,** press ▶▶ (◀◀ or ▶▶ or ▶▶◀◀ or ▶▶◀◀◀◀ on the remote control) while the tape is not running.

The tape direction indicator (◀▶) starts flashing quickly on the display.

**To remove the cassette,** press ▲ EJECT for deck A or EJECT ▲ for deck B.

### Recording Tapes on Deck B.

**1 Press EJECT ▲ for the deck B.**

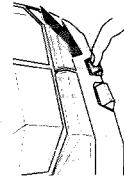

**2 Put in a recordable cassette, with the exposed part of the tape down.**

**3 Close the cassette holder gently.**

**4 Check the tape direction of deck B.**

• If the tape direction is not correct, press TAPE ▶▶ twice then □ to change the tape direction.

**5 Start playing the source — FM, AM\*, CD player, deck A, or auxiliary equipment connected to AUX jacks.**

• When the source is CD, you can also use CD Direct Recording (see page 24) and Auto Edit Recording (see page 21).

• When the source is deck A, you can also use the dubbing method. (See "Dubbing Tapes" on page 20.)

• See "To record an AM (MW/LW) station - Rear Cut" on page 20.

**6 Start recording.**

**On the unit:**

**Press REC START/STOP.**

The indicator lights up on the display and recording starts.

**On the remote control:**

1) Press REC PAUSE.

The indicator starts flashing on the display.


2) Press TAPE ▶▶.

The indicator stops flashing and remains lit, and recording starts.

**To stop during recording, press REC START/STOP again (or □ on the remote control).**

— 19 —

Continued 1

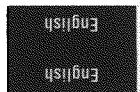**CD Direct Recording**

To stop recording temporarily (except when the playback source is deck A), press REC PAUSE on the remote control.

To resume recording, press TAPE  $\blacktriangleleft$ .

To remove the cassette, press EJECT  $\blacktriangle$  for deck B.

**To record on both sides — Reverse Mode**

Press REVERSE MODE so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

When using the Reverse Mode for recording,

start recording in the forward ( $\blacktriangleright$ ) direction first. Otherwise, recording will stop when recording is done only on one side (reverse) of the tape.

To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

**To record an AM (MW/LW) station — Beat Cut**

While recording an AM (MW/LW) broadcast, beats may be heard (which are never heard when listening to the broadcast without recording it).

If this occurs, press PROGRAM/RANDOM repeatedly, while recording, until the beats are reduced.

Each time you press the button, the display changes to show the following:

CUT1 — CUT2 — CUT3 — CUT4

To record on both sides — Reverse Mode

Press REVERSE MODE so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

When using the Reverse Mode for CD Direct Recording, start recording in the forward ( $\blacktriangleright$ ) direction first. When the tape reaches its end while recording a song in the forward direction ( $\blacktriangleright$ ), the last song will be recorded at the beginning of the reverse side ( $\blacktriangleleft$ ).

If you start recording on the reverse side ( $\blacktriangleleft$ ), recording will stop when recording is done only on one side (reverse) of the tape.

To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

**1 Press TAPE  $\blacktriangleleft$ , then ■.**

**2 Put the source cassette in deck A, and a recordable cassette into deck B.**

• Put the cassettes in both decks so that the tapes will run in the forward ( $\blacktriangleright$ ) direction.

**3 Press DUBBING.**

Dubbing starts.

To stop during dubbing, press ■.

To remove the cassette, press EJECT  $\blacktriangle$  for deck A, and EJECT  $\blacktriangle$  for deck B.

**To record on both sides — Reverse Mode**

Press REVERSE MODE so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up as —  $\leftrightarrow$ .

**Auto Edit Recording**

By using Auto Edit Recording, you can record the CD tracks to fit the tape. Auto Edit Recording makes a program by selecting the CD tracks in numerical order. However, to prevent the end of the last track on the front side from being cut off, the last track is selected so as to fit on the remaining tape length.

**On the unit ONLY:**

**1 Place a disc correctly on the circle of the disc tray, with its label side up.**

• If the current playing source is not the CD player, press CD  $\blacktriangleright$  (■), then ■ before going to the next step.

**2 Place a disc correctly on the circle of the disc tray, with its label side up.**

**3 Press one of the disc number buttons (CD 1 to CD 3) to select the disc, then ■.**

• CD REC appears, and the REC indicator lights up on the display.

Deck B starts recording and the CD player starts playing.

When the recording is done, "CD REC FINISHED" appears on the display, and the CD player and deck B stop.

**4 Press CD REC START.**

"CD REC" appears, and the REC indicator lights up on the display.

Deck B starts recording and the CD player starts playing.

When the recording is done, "CD REC FINISHED" appears on the display, and the CD player and deck B stop.

To stop during CD Direct Recording, press ■.

To remove the cassette, press EJECT  $\blacktriangle$  for deck B.

**3 Press the disc number button (CD 1 to CD 3) for the disc you want to record from.**

**4 Press EDIT.**

The optimum tape length for the disc appears.

To change the tape length manually

Press PROGRAM/RANDOM before or after play. (The unit enters Program, Random, or Continuous Play mode.)

OR

Press REC START/STOP. No 4-second blank portion is created on the recorded tape.

**5 Press SET.**

Tracks to be recorded on the reverse side (SIDE-B) appear.

• Each time you press the button, the tracks to be recorded on the front side (SIDE-A) and on the reverse side (SIDE-B) alternate.

**5 Put a recordable cassette of appropriate length into deck B.**

**6 Press REVERSE MODE so that the Reverse Mode indicator lights up as  $\leftrightarrow$ .**

• Without turning on the Reverse Mode ( $\leftrightarrow$ ), recording will stop when the front side of the tape is recorded.

**7 Press CD REC START.**

The REC indicator lights up on the display.

Deck B starts recording then, about 10 second later, the CD player starts playing.

When the recording is done, "CD REC FINISHED" appears on the display, and the CD player and deck B stop.

• If a tape has not been rewound, deck B will rewind the tape before it starts recording.

**To stop during Auto Edit Recording**

• Press ■ so that a 4-second blank portion is created on the recorded tape. (Remember a 4-second blank is important when using Music Scan - see page 18.)

OR

• Press REC START/STOP. No 4-second blank portion is created on the recorded tape.

To cancel Auto Edit Recording

• Press PROGRAM/RANDOM before or after play. (The unit enters Program, Random, or Continuous Play mode.)

OR

• Press REC START/STOP. To remove the cassette, press EJECT  $\blacktriangle$  for deck B.

## Using the Timers

Continued 1

There are three timers available — Recording Timer, Daily Timer, and Sleep Timer.

Before using the timers, you need to set the clock built in the unit. (See page 9.)

### Using Daily Timer

With Daily Timer, you can wake to your favorite music or radio program.

#### How Daily Timer actually works

The unit automatically turns on, set the volume level to the preset level, and starts playing the specified source when the on-time comes (the  $\ominus$  indicator flashes just before the on-time, and continues flashing while the timer is operating). Then, when the off-time comes ("OFF" flashes just before the off-time), the unit automatically turns off (stands by). The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- If you have made a mistake while setting timer, press CANCEL. (However, this does not always work. If CANCEL does not work, press TIMER/CLOCK repeatedly and start from step 1 again.)

### On the unit ONLY:

#### "DAILY" appears on the display.

The DAILY indicator also starts flashing on the display. Each time you press the button, the timer setting mode changes as follows:



Each time you press the button, the timer setting mode changes as follows:

- Each time you press the button, the timer setting mode changes as follows:
  - DAILY → ON TIME → REC
  - Canceled → Clock → ON TIME → setting
- "ON TIME" appears for 2 seconds, then the unit enters on-time setting mode.

#### 2 Press TIMER/CLOCK again.

"ON TIME" appears for 2 seconds, then the unit enters on-time setting mode.



- 22 -

English

### 3 Set the on-time you want the unit to turn on.

- 1) Press  $\blacktriangleleft$  or  $\triangleright$  to set the hour, then press SET.
- 2) Press  $\blacktriangleleft$  or  $\triangleright$  to set the minute, then press SET.

"OFF/TIME" appears for 2 seconds, then the unit enters off-time setting mode.

### 4 Set the off-time you want the unit to turn off (on standby).

- 1) Press  $\blacktriangleleft$  or  $\triangleright$  to set the hour, then press SET.
- 2) Press  $\blacktriangleleft$  or  $\triangleright$  to set the minute, then press SET.

The unit enters source selecting mode.

### 5 Press $\blacktriangleleft$ or $\triangleright$ to select the source to play, then press SET.

- Each time you press  $\blacktriangleleft$  or  $\triangleright$ , the source changes as follows:



TUNER FM: tunes into a specified preset FM station.  $\rightarrow$  go to step 6.

TUNER AM: tunes into a specified preset AM (MW/LW) station.  $\rightarrow$  go to step 6.

- CD  $\rightarrow$  plays a disc from a specified track of a specified disc.  $\rightarrow$  go to step 6.

• Make sure there is a CD on the selected disc number, tray plays a tape in deck A or B.  $\rightarrow$  go to step 7.

• Make sure that a tape is in the deck whose deck indicator (A or B) is lit on the display.

• Make sure that the tape direction is correct.

plays an external source.  $\rightarrow$  go to step 7.

• To use this setting, the external component has to be equipped with the timer function.

### 6 When selecting "CD" — "

- 1) Press  $\blacktriangleleft$  or  $\triangleright$  to select the disc number, then press SET.
- 2) Press  $\blacktriangleleft$  or  $\triangleright$  to set the track number, then press SET.

The unit enters volume setting mode.

### 7 Press $\blacktriangleleft$ or $\triangleright$ to set the volume level.

- You can select the volume level from among four levels. If you select "VOL - - -", the volume is set to the last level when the unit has been turned off.

The unit enters volume setting mode.

### 8 Press SET to complete the Daily Timer setting.

The DAILY indicator stops flashing and

remains lit. The settings you have done are shown on the display in sequence.

### 9 Press $\ominus$ to turn off the unit (on standby) if you have set the Daily Timer with the unit turned on.

To turn on or off Daily Timer after its setting is done

#### 1 Press $\ominus$ to turn off the unit (on standby) if you have set the Daily Timer with the unit turned on.

#### 2 To turn off the Daily Timer, press CANCEL.

The DAILY indicator goes off from the display. The Daily Timer is canceled, but the setting for the Daily Timer remains in memory.

#### To turn on the Daily Timer, press SET.

The DAILY indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.

## Additional Information


**Description of the PTY codes:**


<b>FINANCE:</b>	Stock Market reports, commerce, trading etc.
<b>CHILDREN:</b>	Programs targeted at a young audience.
<b>SOCIAL:</b>	Programs about sociology, history, geography, psychology and society.
<b>RELIGION:</b>	Religious programs.
<b>PHONE IN:</b>	Involving members of the public expressing their views either by phone or at a public forum.
<b>TRAVEL:</b>	Travel information.
<b>LEISURE:</b>	Programs about recreational activities.
<b>JAZZ:</b>	Jazz music.
<b>COUNTRY:</b>	Songs which originate from, or continue the musical tradition of the American Southern States.
<b>NATIONAL:</b>	Current popular music of the nation or region in that country's language.
<b>OLDIES:</b>	Music from the so-called "golden age" of popular music.
<b>FOLK M:</b>	Music which has its roots in the musical culture of a particular nation.
<b>DOCUMENT:</b>	Program concerning factual matters, presented in an investigative style.
<b>SCIENCE:</b>	Programs about natural sciences and technology.
<b>VARIETY:</b>	Used for many speech-based programs like quizzes, panel games and personality interviews.
<b>EDUCATE:</b>	Educational programs.
<b>Drama:</b>	All radio plays and serials.
<b>CULTURE:</b>	Programs concerning any aspect of national or regional culture, including language, theatre, etc.
<b>MUSIC:</b>	Commercial music of current popular appeal.
<b>POP M:</b>	Rock music.
<b>ROCK M:</b>	Rock music.
<b>M.O.R. M:</b>	Current contemporary music considered to be "easy-listening".
<b>LIGHT M:</b>	Instrumental music, and vocal or choral works.
<b>CLASSICS:</b>	Performances of major orchestral works, symphonies, chamber music, etc.
<b>OTHER M:</b>	Music not fitting into any of the other categories.
<b>WEATHER:</b>	Weather reports and forecasts.



To get the best performance of the unit, keep your discs, tapes, and mechanism clean.

**Handling cassette tapes**

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape:
  - In dusty places
  - In direct sunlight or heat
  - In moist areas
  - Near a magnet

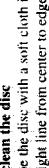

<b>English</b>	<b>English</b>
----------------	----------------

<b>English</b>	<b>English</b>
----------------	----------------

**Timer Priority**

Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are examples.

**Recording Timer has priority over Daily Timer and Sleep Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

**Recording Timer**      **Daily Timer**

6:00 6:30 7:00 7:30

Recording Timer      Daily Timer

6:00 6:30 7:00 7:30

Recording Timer      Sleep Timer

6:00 6:30 7:00 7:30

— does not work

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

**Using Sleep Timer**

With Sleep Timer, you can fall asleep to music. You can set Sleep Timer when the unit is turned on.

- Press **◀▶** or **◀▶** to set the hour, then press SET.
- Press **◀▶** or **◀▶** to set the minute, then press SET.

"OFF TIME" appears for 2 seconds, then the unit enters off-time setting mode.

**5 Set the off-time you want the unit to turn off (on standby).**

- Press **◀▶** or **◀▶** to set the hour, then press SET.
- Press **◀▶** or **◀▶** to set the minute, then press SET.

The unit enters preset station selecting mode.

**6 Select the preset station.**

- Press **◀▶** or **◀▶** to select the band ("TUNER FM" or "TUNER AM"), then press SET.
- Press **◀▶** or **◀▶** to select a preset channel number, then press SET.

The REC indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence.

**7 Press **Off** to turn off the unit (on standby) if necessary.**

**Note:** If you want to listen to another source while recording, without stopping it, you cannot change the source.

**To turn on or off Recording Timer after its setting is done**

- Press **TIMER/CLOCK** repeatedly until "REC" appears on the display.
- To turn off the Recording Timer, press CANCEL.

The REC indicator goes off from the display. The Recording Timer is canceled, but the setting for the Recording Timer remains in memory.

**To turn on the Recording Timer, press SET.**

The REC indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.

## Troubleshooting

If you are having a problem with your unit, check this list for a possible solution before calling for service. If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Cause	Action
No sound is heard.	Connections are incorrect or loose.	Check all connections and make corrections. (See pages 6 to 8.)
Hard to listen to broadcasts because of noise.	<ul style="list-style-type: none"> <li>Antennas are disconnected.</li> <li>The AM loop antenna is too close to the unit.</li> <li>The FM antenna is not properly extended and positioned.</li> </ul>	<ul style="list-style-type: none"> <li>Reconnect the antennas correctly and securely.</li> <li>Change the position and direction of the AM loop antenna.</li> <li>Extend the FM antenna at the best position.</li> </ul>
The disc sound is discontinuous.	<ul style="list-style-type: none"> <li>The disc is scratched or dirty.</li> <li>The AC power cord is not plugged in.</li> <li>Trays are locked.</li> </ul>	<ul style="list-style-type: none"> <li>Clean or replace the disc. (See page 25.)</li> <li>Plug the AC power cord.</li> <li>Unlock the trays. (See page 17.)</li> </ul>
The disc does not play.	The disc is placed upside down.	Place the disc with the label side up.
The cassette holders cannot be opened.	Power supply from the AC power cord has been cut off while the tape was running.	Turn on the unit.
Impossible to record.	Small tabs on the back of the cassette are removed.	Cover the holes with adhesive tape.
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Unplug the AC power cord and then plug it back in.
Unable to operate the unit from the remote control unit.	<ul style="list-style-type: none"> <li>The path between the remote control unit and the remote sensor on the unit is blocked.</li> <li>The batteries are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Remove the obstruction.</li> <li>Replace the batteries.</li> </ul>

## Specifications

### Amplifier

**Output Power**  
75 watts per channel, min. RMS, both channels driven into 6 ohms  
at 1 kHz with no more than 0.9% total harmonic distortion.

**Audio input sensitivity/impedance (at 1 kHz)**  
AUX: 400 mV/20 kohms

**Audio output level**

AUX: 270 mV

Digital output: CD OPTICAL, DIGITAL OUTPUT  
Signal wave length: 660 nm

Speakers/impedance: 6 - 16 ohms  
Output level: -21 to -15 dBm

**Tuner**

FM tuning range: 87.50 - 108.00 MHz  
AM tuning range: MW: 522 - 1629 kHz  
LW: 144 - 288 kHz

### CD player

CD Capacity: 3 CDs  
Dynamic range: 85 dB  
Signal-to-noise ratio: 90 dB  
Wow and flutter: Immeasurable

### Cassette deck

Frequency response  
Normal (type I): 50 - 14,000 Hz  
CrO<sub>2</sub> (type II): 50 - 14,000 Hz  
Metal (type IV): 50 - 14,000 Hz (only for playback)

Wow and flutter:  
0.15% (WRMS)

### General

Power requirement: AC 230 V √, 50 Hz  
Power consumption: 100 watts (in operation)  
14 watts (in standby)  
Dimensions (approx.): 265.5 x 315 x 34 mm (W/H/D)  
(10 1/2" x 12 1/4" x 1 3/8" in.)  
Mass (approx.): 9.4 kg (20.7 lbs)

### Supplied accessories

See page 6.


**CA-MXJ55R/CA-MXJ530R**

**<<MEMO>>**

## Description of major ICs

### ■ BA3835S (IC542):SPI BPF

#### 1. Block Diagrams

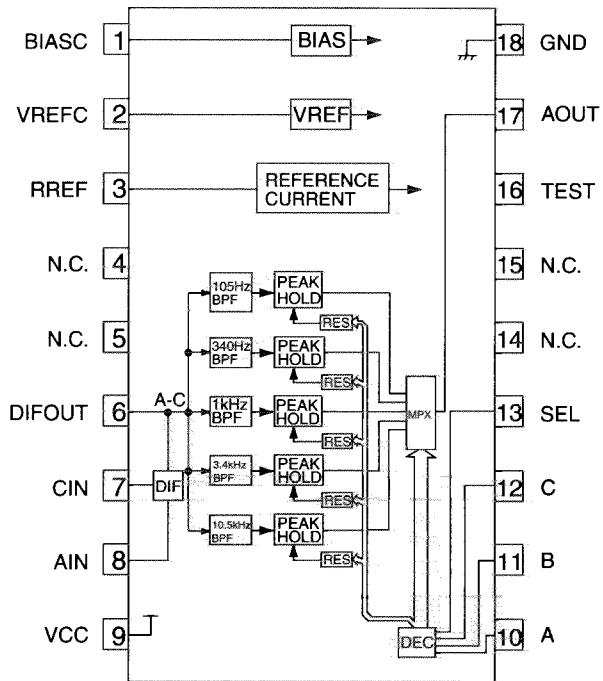

#### 2. Pin Function


No.	Symbol	I/O	Function
1	BIASC	-	Decoupling condenser connection terminal.
2	VREFC	-	Decoupling condenser connection terminal.
3	RREF	-	Reference resistance connection terminal.
4	NC	-	Non connect.
5	NC	-	Connected to GND of audio system through a condenser.
6	DIF OUT	-	Non connect.
7	CIN	-	Connected to GND of audio system through a condenser.
8	AIN	I	Inputs the audio signal through a condenser.
9	VCC	-	Power supply terminal.
10	SPI-A	O	Output selection control terminal.
11	SPI-B	O	Output selection control terminal.
12	SPI-C	O	Output selection control terminal.
13	SPICS	O	Output selection control terminal.
14	NC	-	Non connect.
15	NC	-	Non connect.
16	TEST	-	Connected to GND upon normal use.
17	AOUT	O	Multi-plexor output terminal.
18	GND	-	Connect to GND.

**■ AN8806SB (IC601) : RF&Servo AMP**

## 1.Terminal Layout

PD	1	36	PDAC
LD	2	35	PDBD
LDON	3	34	PDF
LDP	4	33	PDE
VCC	5	32	PDER
RF-	6	31	PDFR
RF OUT	7	30	TBAL
RF IN	8	29	FBAL
C.AGC	9	28	EF-
ARF	10	27	EF OUT
C.ENV	11	26	TE-
C.EA	12	25	TE OUT
CS BDO	13	24	CROSS
BDO	14	23	TE BPF
CS BRT	15	22	VDET
OFTR	16	21	LD OFF
/NRFDET	17	20	VREF
GND	18	19	ENV

## 2.Block Diagram

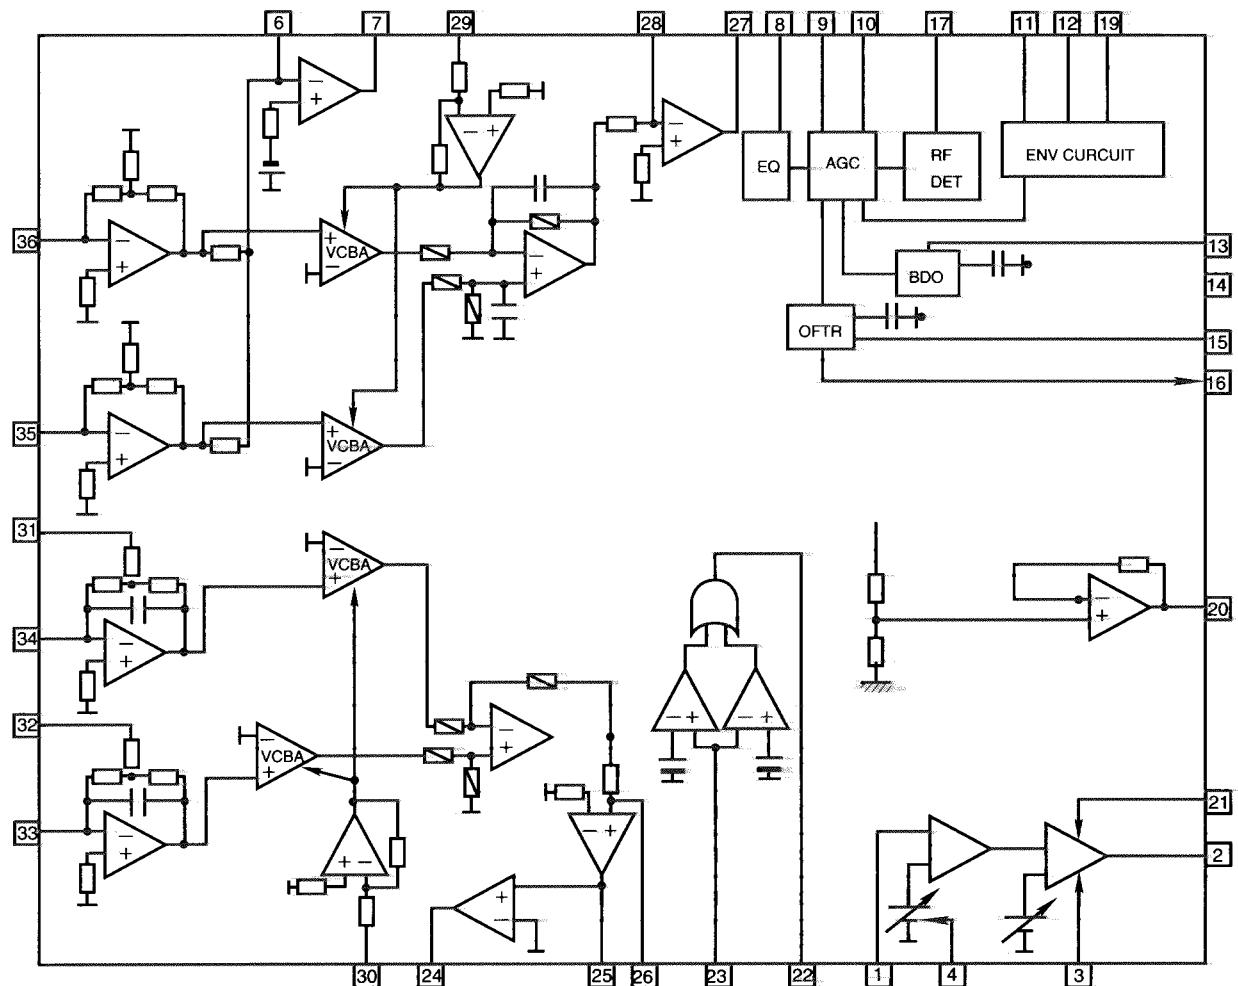

## 3. Functions

Pin No.	Symbol	I/O	Functions and operations
1	PD	I	APC amp input terminal
2	LD	O	APC amp output terminal
3	LD ON	I	APC ON/OFF control terminal
4	LDP	--	Connect to ground
5	VCC	--	Power supply
6	RF-	I	Inverse input pin for RF amp
7	RF OUT	O	RFamp output
8	RF IN	I	RF input
9	C.AGC	I/O	Connecting pin of AGC loop filter
10	ARF	O	RF output
11	C.ENV	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
12	C.EA	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
13	CS BDO	I/O	A capacitor is connected to detect the lower envelope of RF signal
14	BDO	O	BDO output pin
15	CS BRT	I/O	A capacitor is connected to detect the lower envelope of RF signal
16	OFTR	O	Of-track status signal output
17	/NRFDET	O	RF detection signal output
18	GND	--	Ground
19	ENV	O	Envelope output
20	VREF	O	Reference voltage output
21	LD OFF	--	Connect to ground
22	VDET	O	Vibration detection signal output
23	TE BPF	I	Input pin of tracking error through BPF
24	CROSS	O	Tracking error cross output
25	TE OUT	O	Tracking error signal output
26	TE-	I	Inverse input pin for tracking error amp
27	FE OUT	O	Output pin of focus error
28	FE-	I	Inverse input pin for focus error amp
29	FBAL	I	Focus balance control
30	TBAL	I	Tracking balance control
31	PDFR	I/O	F I-V amp gain control
32	PDER	I/O	E I-V amp gain control
33	PDF	I	I-V amp input
34	PDE	I	I-V amp input
35	PD BD	I	I-V amp input
36	PD AC	I	I-V amp input

**■ BU1923(IC4) : RDS Detector**


## 1.Terminal Layout

QUAL	1	16	CL
DA	2	15	TS7
VREF	3	14	XO
MUX	4	13	XI
VDD	5	12	VDD
GND	6	11	GND
CIN	7	10	GND
OUT	8	9	GND

## 2.Pin Functiont

Pin No	Symbol	I/O	Function
1	QUAL	--	Non connection
2	DA	O	RDS data output
3	VREF	O	Reference voltage output
4	MUX	I	Multiplex signal input
5	VDD	--	+5Vsupply voltage for analog
6	GND	--	Ground for analog part(0V)
7	CIN	I	Subcarrier outputof reconstruction filter
8	OUT	O	Ground for digital part(0V)
9	GND	--	Ground for digital part(0V)
10	GND	--	Ground for digital part(0V)
11	GND	--	Ground for digital part(0V)
12	VDD	--	+5Vsupply voltage for digital part
13	XI	I	Oscilator input
14	XO	O	Oscilator output
15	TS7	--	Non connection
16	CL	O	RDS clock output

## 3.Block Diagram

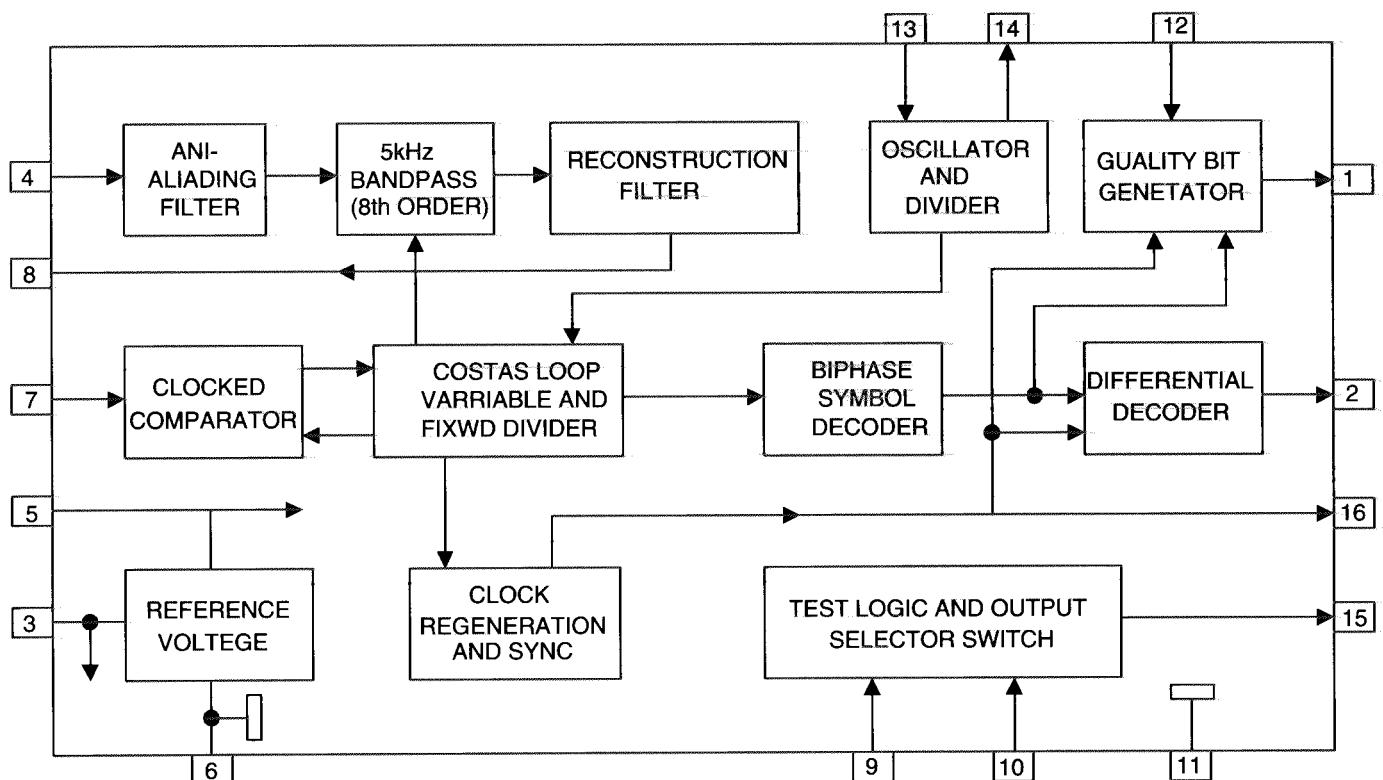


## ■ BU4094BCF(IC304,IC303):SERIAL TO PARALLEL PROT EXTENSION


### 1.Terminal Layout

STROBE	1	16	Vdd
DATA	2	15	OUTPUT ENABLE
CLOCK	3	14	Q5
Q1	4	13	Q6
Q2	5	12	Q7
Q3	6	11	Q8
Q4	7	10	Q's
Vss	8	9	Qs

### 2.Block Diagram

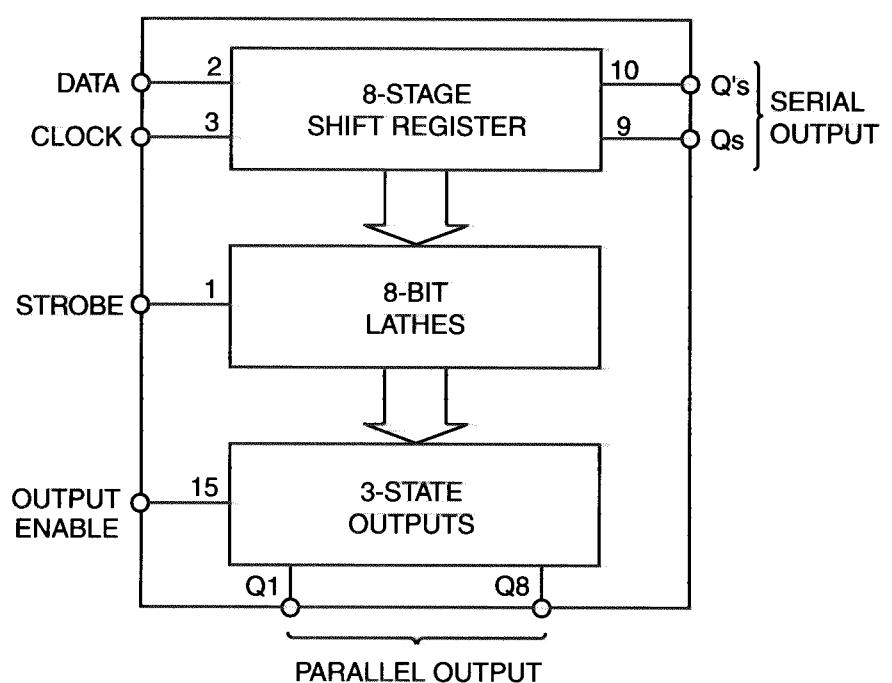


## ■ BA6897FP(IC801):4channel driver

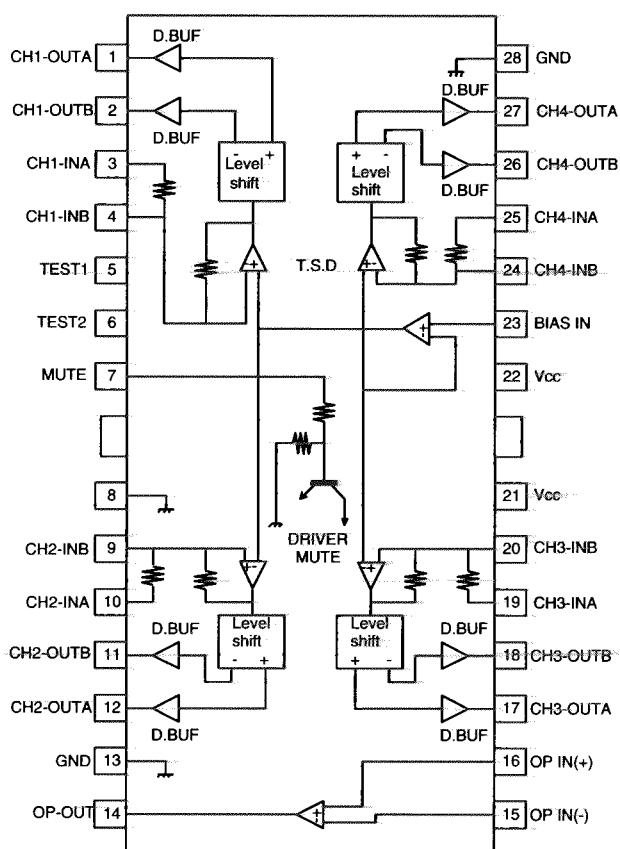

# CA-MXJ55R/CA-MXJ530R

## ■ LA1838(IC1): FM AM IF AMP&detector, FM MPX Decoder

### 1. Block Diagram

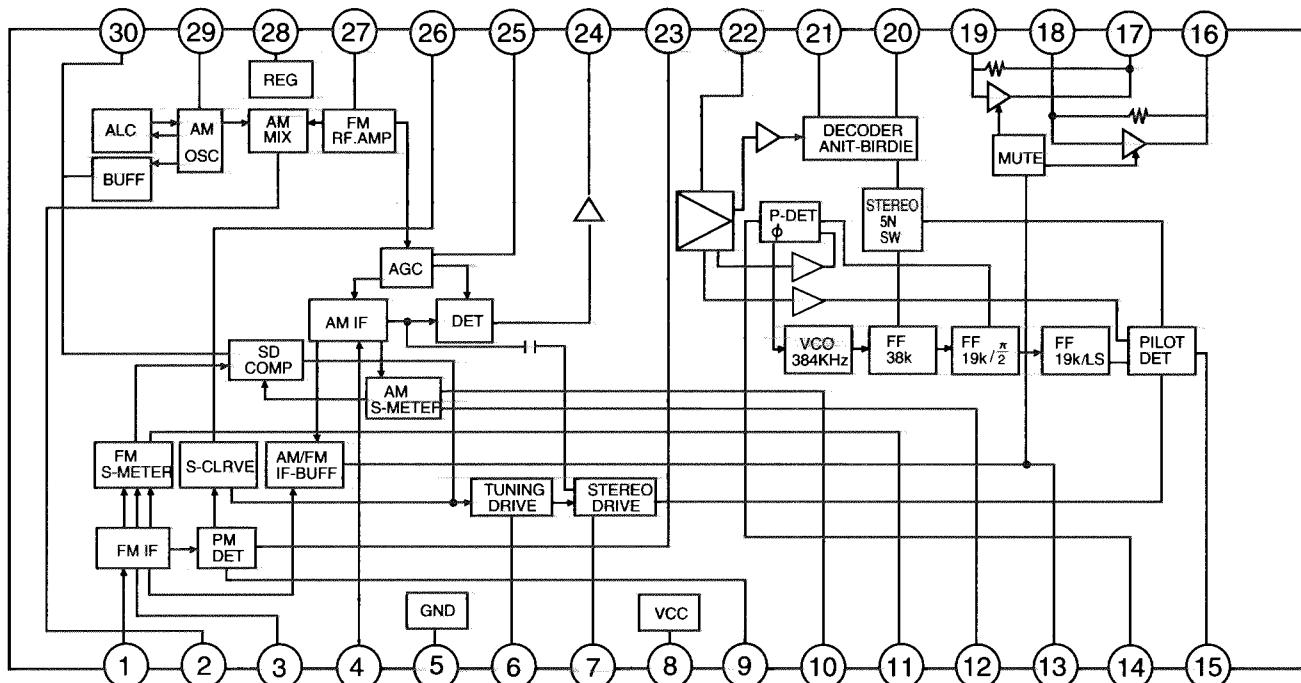

### 3. Pin Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	FM IN	I	This is an input terminal of FM IF signal.	16	L OUT	O	Left channel signal output.
2	AM MIX	O	This is an output terminal for AM mixer.	17	R OUT	O	Right channel signal output.
3	FM IF	I	Bypass of FM IF	18	L IN	I	Input terminal of the Left channel post AMP.
4	AM IF	I	Input of AM IF Signal.	19	R IN	I	Input terminal of the Right channel post AMP.
5	GND	-	This is the device ground terminal.	20	RO	O	Mpx Right channel signal output.
6	TUNED	O	When the set is tuning, this terminal becomes "L".	21	LO	O	Mpx Left channel signal output.
7	STEREO	O	Stereo indicator output. Stereo "L", Mono: "H"	22	IF IN	I	Mpx input terminal
8	VCC	-	This is the power supply terminal.	23	FM OUT	O	FM detection output.
9	FM DET	-	FM detect transformer.	24	AM DET	O	AM detection output.
10	AM SD	-	This is a terminal of AM ceramic filter.	25	AM AGC	I	This is an AGC voltage input terminal for AM
11	FM VSM	O	Adjust FM SD sensitivity.	26	AFC	-	This is an output terminal of voltage for FM-AFC.
12	AM VSM	O	Adjust AM SD sensitivity.	27	AM RF	I	AM RF signal input.
13	MUTE	I/O	When the signal of IF REQ of IC121(LC72131) appear, the signal of FM/AM IF output. //Muting control input.	28	REG	O	Register value between pin 26 and pin 28 besides the frequency width of the input signal.
14	FM/AM	I	Change over the FM/AM input. "H" :FM, "L" : AM	29	AM OSC	-	This is a terminal of AM Local oscillation circuit.
15	MONO/ST	O	Stereo : "H", Mono: "L"	30	OSC BUFFER	O	AM Local oscillation Signal output.

## ■LC72136N(IC2):PLL Frequency Sinesizer

### 1. Layout

	XT	1	22	XT
	FM/AM	2	21	GND
	CE	3	20	LPFOUT
	DI	4	19	LPFIN
CLOCK		5	18	PD
	DO	6	17	VCC
FM/ST/VCO		7	16	FMIN
AM/FM		8	15	AMIN
		9	14	
		10	13	IFCONT
	SDIN	11	12	IFIN

### 2. Block

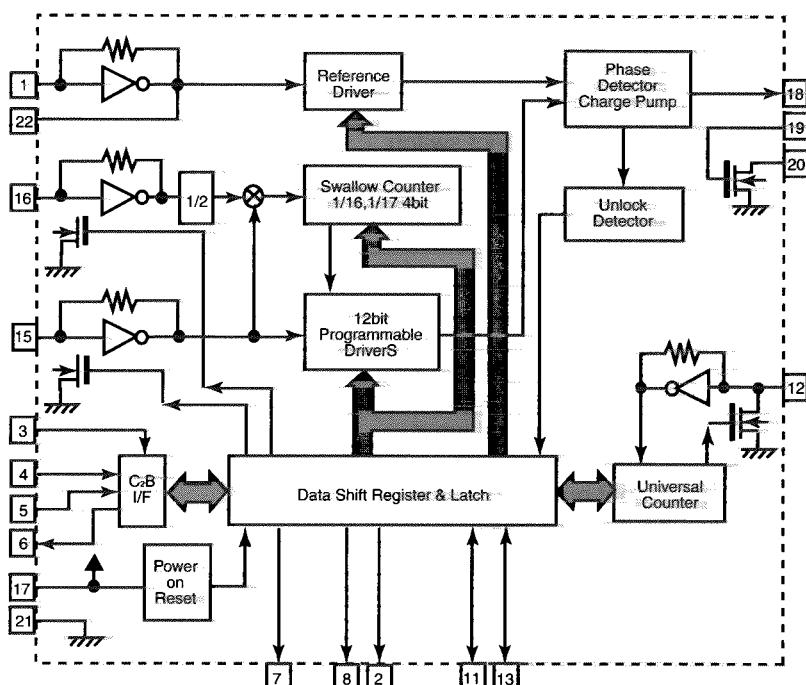

### 3. Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	XT	I	X'tal oscillator connect (75kHz)	12	IFIN	I	IF counter signal input
2	FM/AM	O	LOW:FM mode	13	IFCONT	O	IF signal output
3	CE	I	When data output/input for 4pin(input) and 6pin(output): H	14		-	Not use
4	DI	I	Input for receive the serial data from controller	15	AMIN	I	AM Local OSC signal output
5	CLOCK	I	Sync signal input use	16	FMIN	I	FM Local OSC signal input
6	DO	O	Data output for Controller Output port	17	VCC	-	Power supply(VDD=4.5-5.5V) When power ON:Reset circuit move
7	FM/ST/VCO	O	"Low": MW mode	18	PD	O	PLL charge pump output(H: Local OSC frequency Height than Reference frequency. L: Low Agreement: Height impedance)
8	AM/FM	O	Not use	19	LPFIN	I	Input for active lowpassfilter of PLL
9		-	Not use	20	LPFOUT	O	Output for active lowpassfilter of PLL
10		-	Input/output port	21	GND	-	Connected to GND
11	SDIN	I/O	Data input/output	22	XT	I	X'tal oscillator(75KHz)

## ■ MN101C23DBP3 (IC810) : System controller

Pin No.	Symbol	I/O	Descriptions
1	KCMND	O	VC3 Serial data output
2	MSTAT	I	VC3 Status data input
3	KCLK	I	VC3 Serial clock input
4	DATAOUT	O	SLC/TUNER data output
5	DATAIN	I	SLC/TUNER data input
6	CK	O	SLC/TUNER clock signal output
7	BEAT	O	BEAT Cut signal output of TUNER
8	VDD	-	Power supply +5V
9,10	OSC2,1	I/O	Oscillation terminal (8MHz)
11	VSS	-	Connect to GND
12,13	XI,XO	I/O	Sub clock (32.768kHz)
14	MMOD	-	Connect to GND
15	VREF-	-	Connect to GND
16~19	KEY1~4	I	Key matrix input 1~4
20	SLCKEY1	I	Tape A playback detect switch
21	SLCKEY2	I	Tape B playback detect switch
22	SLCKEY3	I	Tape B playback/recording detect switch
23	SPIDTI	I	SPI data input
24	VREF+	-	Power supply +5V
25	MRDY	I	VC3 ready input
26	RESET	I	Reset signal input
27	PANEL OP	I	Moving panel open detection signal input
28	PANEL CL	I	Moving panel close detection signal input
29	LOAD DET	I	Overload detect signal input
30	MSI	I	MS Detector signal input
31	PROSACK	O	Clock signal output to IC406
32	PROSADA	I	Data input from IC406
33	REMIN	I	Remote control signal input
34	PHOTOA	I	Tape A mechanism running detection signal input
35	PHOTOB	I	Tape B mechanism running detection signal input
36	INH	I	Inhibit signal input
37	RDSCLK	I	Clock signal input from IC4
38	PRT	I	Protector input
39	RDS DATA	I	RDS data input from IC4
40	SPICSB	O	SPI Chip select signal output
41	OSDCLK	-	Not used
42~44	SPIC~A	O	SPI-C~A Data output to IC542
45,46	VOL+/-	I	Volume rotary encoder input (+/-)
47	MPX	I	Stereo detect
48	FVOLDA	O	Front volume data output
49	SLCCE	O	SLC Chip enable signal output to IC303,IC304
50	RVOLDA	O	Rear volume data output
51~59	G9~1	O	FL grid control signal output
60~89	P1~30	O	FL segment control signal output
90	SABCE	O	SA BASS Chip enable signal output
91	PROCE	O	ProLogic Chip enable signal output
92	DSPCE	O	DSP Chip enable signal output
93	EXTCE	O	EXT Chip enable signal output
94	VOLCK	O	Clock signal output to IC401
95	SMUTE	O	System mute control signal output
96	OSDCE	-	Not used
97	POUT	O	Power ON/OFF
98	TUCE	O	TUNER Chip enable signal output
99	VC3RESET	O	VC3 Reset output
100	VPP	-	Power supply

## ■ TA8409S (IC851.IC852.IC853) : Motor Driver

### 1. Block Diagram

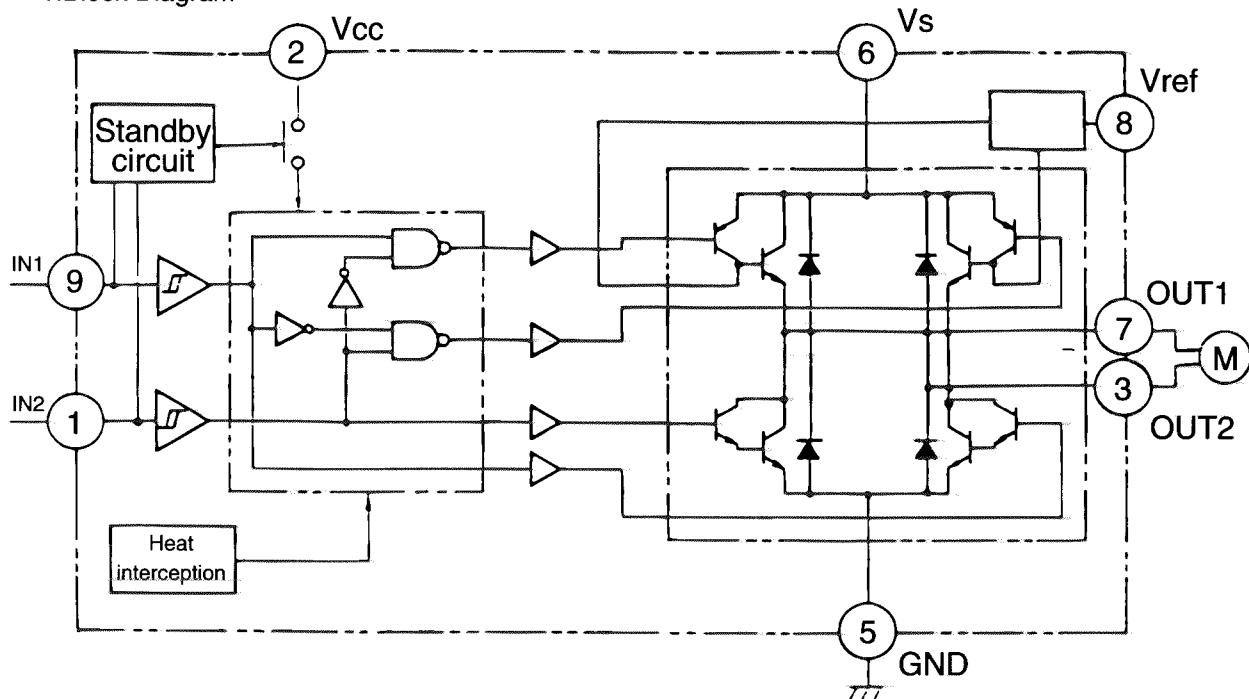


### 2. Function

INPUT		OUTPUT		MODE
IN1	IN2	OUT1	OUT2	MOTOR
0	0	$\infty$	$\infty$	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

## ■ LA2650 (IC406) : SA BASS


### 1. Terminal Layout/Block diagram

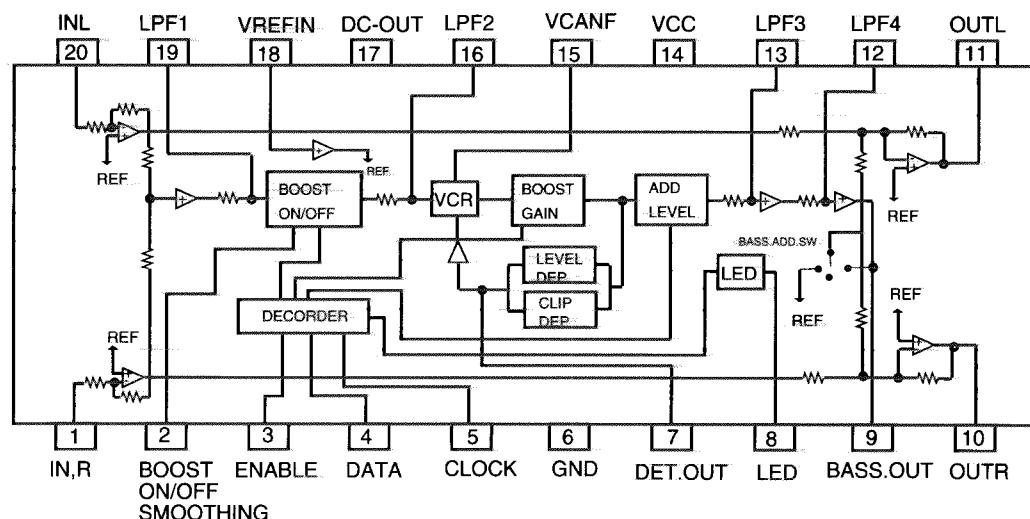


# CA-MXJ55R/CA-MXJ530R

## MN35510(IC651):DIGITAL SERVO&DIGITAL SIGNAL PROCESSER

### 1. Terminal Layout

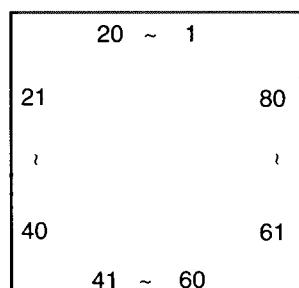

### 2. Block Diagram

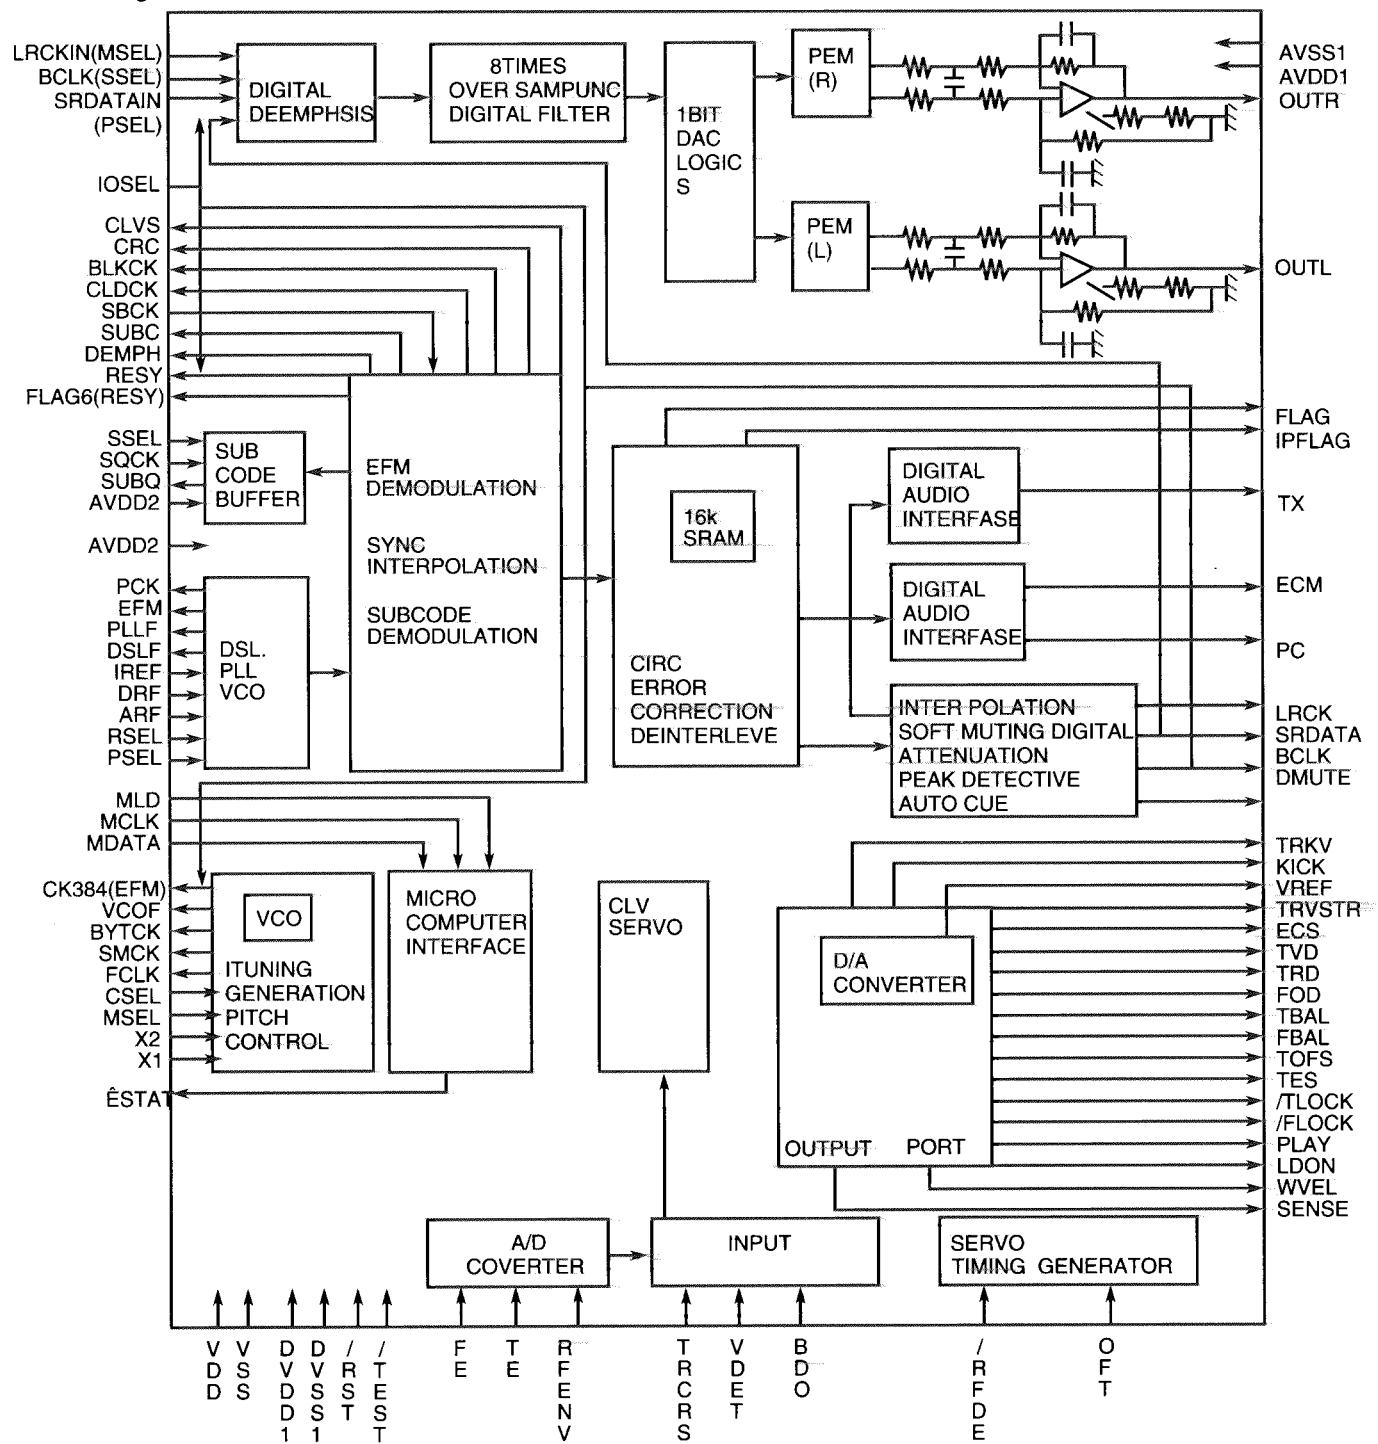

## 3. Description

Pin No.	symbol	I/O	Description	Pin No.	symbol	I/O	Description
1	BCLK	O	Not used	41	TES	O	Tracking error shunt signal output(H:shunt)
2	LRCK	O	Not used	42	PLAY	-	Not used
3	SRDATA	O	Not used	43	WVEL	-	Not used
4	DVDD1	-	Power supply (Digital)	44	ARF	I	RF signal input
5	DVSS1	-	Connected to GND	45	IREF	I	Reference current input pin
6	TX	O	Digital audio interface output	46	DRF	I	Bias pin for DSL
7	MCLK	I	$\mu$ com command clock signal input (Data is latched at signal's rising point)	47	DSLF	I/O	Loop filter pin for DSL
8	MDATA	I	$\mu$ com command data input	48	PLLF	I/O	Loop filter pin for PLL
9	MLD	I	$\mu$ com command load signal input	49	VCOF	-	Not used
10	SENSE	O	Sence signal output	50	AVDD2	-	Power supply(Analog)
11	FLOCK	O	Focus lock signal output Active :Low	51	AVSS2	-	Connected to GND(Analog)
12	TLOCK	O	Tracking lock signal output Active :Low	52	EFM	-	Not used
13	BLKCK	O	sub-code·block·clock signal output	53	PCK	-	Not used
14	SQCK	I	Outside clock for sub-code Q resister input	54	PDO	-	Not used
15	SUBQ	O	Sub-code Q -code output	55	SUBC	-	Not used
16	DMUTE	-	Connected to GND	56	SBCK	-	Not used
17	STATUS	O	Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	57	VSS	-	Connected to GND(for X'tal oscillation circuit)
18	RST	I	Reset signal input (L:Reset)	58	X1	I	Input of 16.9344MHz X'tal oscillation circuit
19	SMCK	-	Not used	59	X2	O	Output of X'tal oscillation circuit
20	PMCK	-	Not used	60	VDD	-	Power supply(for X'tal cscillation circuit)
21	TRV	O	Traverse enforced output	61	BYTCK	-	Not used
22	TVD	O	Traverse drive output	62	CLDCK	-	Not used
23	PC	-	Not used	63	FLAG	-	Not used
24	ECM	O	Spindle motor drive signal (Enforced mode output) 3-State	64	IPPLAG	-	Not used
25	ECS	O	Spindle motor drive signal (Servo error signal output)	65	FLAG	-	Not used
26	KICK	O	Kick pulse output	66	CLVS	-	Not used
27	TRD	O	Tracking drive output	67	CRC	-	Not used
28	FOD	O	Focus drive output	68	DEMPH	-	Not used
29	VREF	I	Reference voltage input pin for D/A output block (TVD,FOD,FBA,TBAL)	69	RESY	-	Not used
30	FBAL	O	Focus Balance adjust signal output	70	IOSEL	-	pull up
31	TBAL	O	Tracking Balance adjust signal output	71	TEST	-	pull up
32	FE	I	Focus error signal input(Analog input)	72	AVDD1	-	Power supply(Digital)
33	TE	I	Tracking error signal input(Analog input)	73	OUT L	O	Lch audio output
34	RF ENV	I	RF envelope signal input(Analog input)	74	AVSS1	-	Connected to GND
35	VDET	I	Vibration detect signal input(H:detect)	75	OUT R	O	Rch audio output
36	OFT	I	Off track signal input(H:off track)	76	RSEL	-	pull up
37	TRCRS	I	Track cross signal input	77	CSEL	-	Connected to GND
38	RFDET	I	RF detect signal input(L:detect)	78	PSEL	-	Connected to GND
39	BDO	I	BDO input pin(L:detect)	79	MSEL	-	Connected to GND
40	LDON	O	Laser ON signal output(H:on)	80	SSEL	-	Pull up


# CA-MXJ55R/CA-MXJ530R

## ■NJU3711D(IC854) : Mute & Rolling panel motor control

### 1.Terminal Layout

DOROP	1	14	VDD
DORCL	2	13	CONTB
AUXMUTE	3	12	CONTA
VSS	4	11	CLR
TU+B	5	10	STB
PBMUTE	6	9	CLK
ECHO	7	8	DATA

### 2.Block Diagram

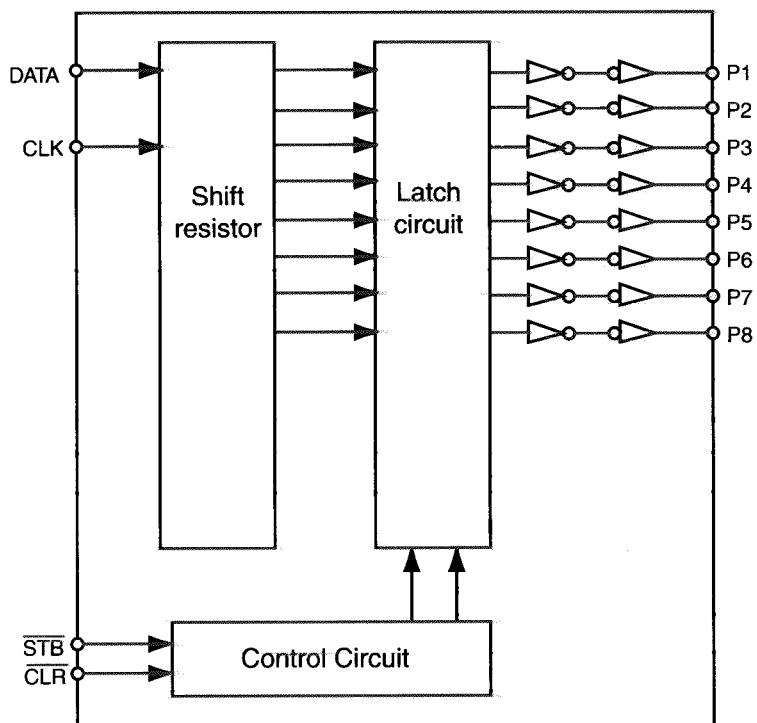

### 3.Pin Function


PIN No.	I/O	Symbol	Function
1~3	O	DOROP/DORCL/AUXMUTE	Parallel conversion data output terminal.
4	-	VSS	Connect to GND.
5~7	O	TU+B/PBMUTE/ECHO	Parallel conversion data output terminal.
8	I	DATA	Serial data input terminal.
9	I	CLK	Clock signal input terminal.
10	I	STB	Strobe signal input terminal.
11	I	CLR	Clear signal input terminal.
12.13	O	CONTA/CONTB	Parallel conversion data output terminal
14	-	VDD	Power supply.

## ■ NJU3714D(IC811) : L.E.D.Driver

### 1.Terminal Layout

RELAY2	1	20	VDD
RELAY1	2	19	CD
DISC1	3	18	TAPE
DISC2	4	17	FM/AM
VSS	5	16	AUX
DISC3	6	15	VSS
SABASS	7	14	CLR
DSPRESET	8	13	STB
SO	9	12	CLK
	10	11	DATA

### 2.Block Diagram

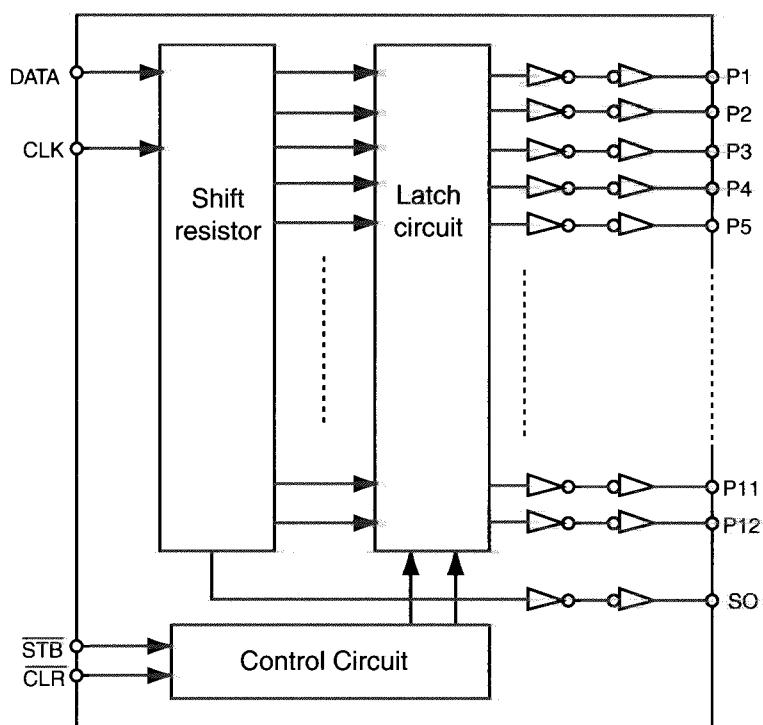


### 3.Pin Function

PIN No.	I/O	Symbol	Function
1~4	O	RELAY1.2/DISC1.2	Parallel conversion data output terminal.
5	-	VSS	Connect to GND.
6~9	O	DISC3/SABASS/DSPRESET	Parallel conversion data output terminal.
10	O	SO	Serial data output terminal.
11	I	DATA	Serial data input terminal.
12	I	CLK	Clock signal input terminal.
13	I	STB	Strobe signal input terminal.
14	I	CLR	Clear signal input terminal.
15	-	VSS	Connect to GND.
16~19	O	AUX/FM/AM/TAPE/CD	Parallel conversion data output terminal
20	-	VDD	Power supply.

## **Internal connections for FL display tube**

■ QLF0059-001 (FL801)

## 1.Grid assignment

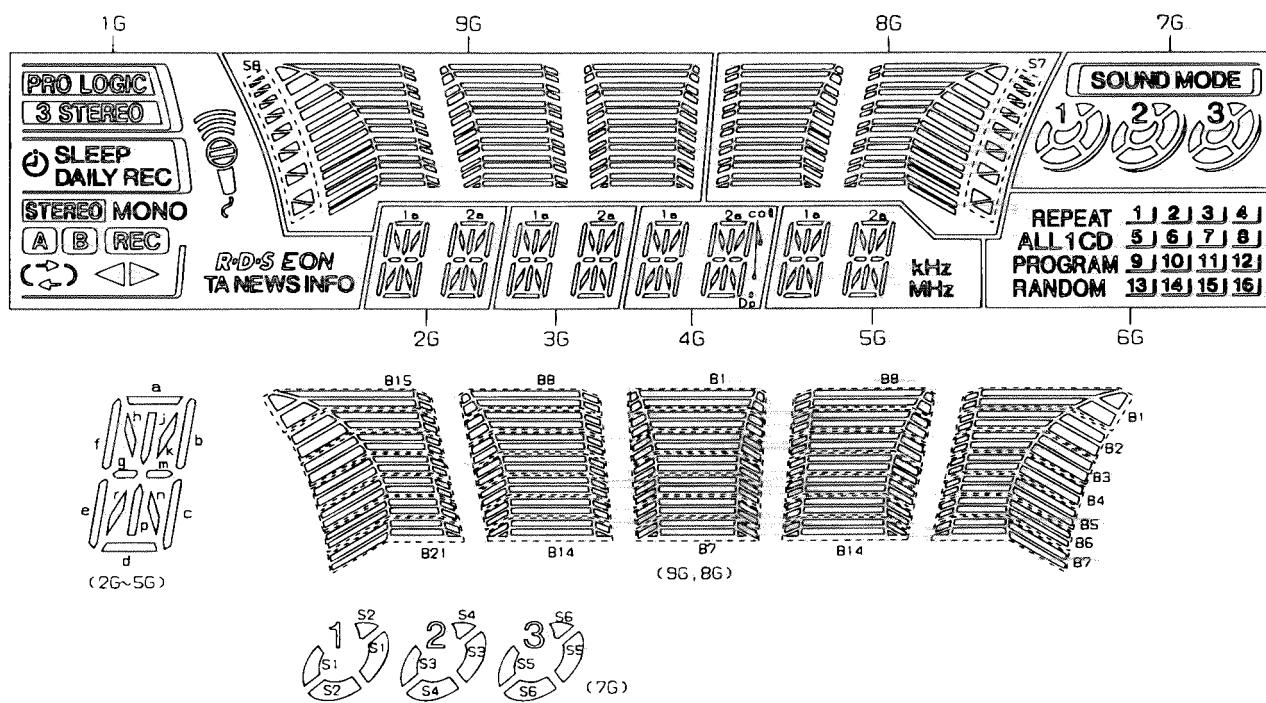

## 2. Pin connection

## 3.Anode connection

	1G	2G,3G	4G	5G	6G	7G	8G	9G
P1		2a	2a	2a	-		S7	S8
P2	<b>PRO LOGIC</b>	2h	2h	2h	-	<b>SOUND MODE</b>	B1	B1
P3	<b>3 STEREO</b>	2j	2j	2j	<b>REPEAT</b>	<b>1</b>	B2	B2
P4	<b>SLEEP</b>	2k	2k	2k	<b>ALL</b>	S1	B3	B3
P5	<b>DAILY</b>	2b	2b	2b	(ALL) <b>1</b>	S2	B4	B4
P6	<b>REC</b>	2f	2f	2f	<b>CD</b>	(1)	B5	B5
P7		2m	2m	2m	<b>PROGRAM</b>	(1)	B6	B6
P8		2g	2g	2g	<b>RANDOM</b>	<b>2</b>	B7	B7
P9		2c	2c	2c	<b>1</b>	S3	-	-
P10	<b>STEREO</b>	2e	2e	2e	<b>2</b>	S4	-	-
P11	<b>MONO</b>	2r	2r	2r	<b>3</b>	(2)	-	-
P12	<b>A</b>	2p	2p	2p	<b>4</b>	(2)	-	-
P13	<b>B</b>	2n	2n	2n	<b>5</b>	<b>3</b>	-	-
P14	<b>REC</b>	2d	2d	2d	<b>6</b>	S5	-	-
P15		-	col	<b>KHZ</b>	<b>7</b>	S6	-	-
P16		-	Dp	<b>MHZ</b>	<b>8</b>	(3)	-	-
P17		1a	1a	1a	<b>9</b>	(3)	B8	B8
P18		1h	1h	1h	<b>10</b>	-	B9	B9
P19		1j	1j	1j	<b>11</b>	-	B10	B10
P20	<b>RDS</b>	1k	1k	1k	<b>12</b>	-	B11	B11
P21	<b>EON</b>	1b	1b	1b	<b>13</b>	-	B12	B12
P22	<b>TA</b>	1f	1f	1f	<b>14</b>	-	B13	B13
P23	<b>NEWS</b>	1m	1m	1m	<b>15</b>	-	B14	B14
P24	<b>INFO</b>	1g	1g	1g	<b>16</b>	-	-	B15
P25	-	1c	1c	1c	-	-	-	B16
P26	-	1e	1e	1e	-	-	-	B17
P27	-	1r	1r	1r	-	-	-	B18
P28	-	1p	1p	1p	-	-	-	B19
P29	-	1n	1n	1n	-	-	-	B20
P30	-	1d	1d	1d	-	-	-	B21

## Disassembly method

### < Main body >

#### ■ Removing the Metal Cover (See Fig.1 to 3)

1. Remove the six A screws attaching the metal cover on the back of the body.
2. Remove the two B screws attaching the metal cover on both sides of the body.
3. Lift the metal cover on the back of the body and remove it from the body.

CAUTION: DO NOT break the front panel tab fitted to the metal cover.

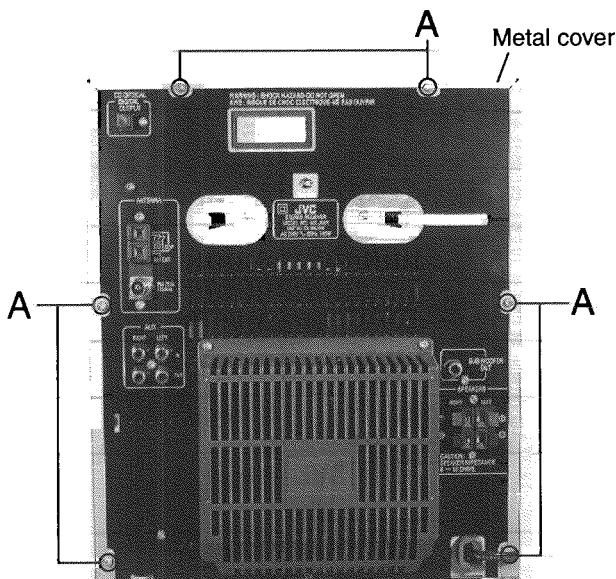


Fig.1

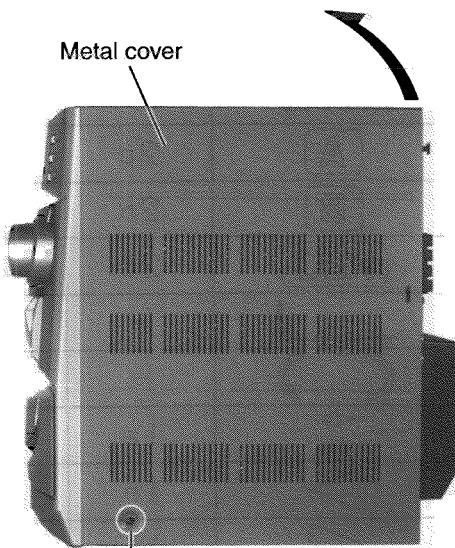


Fig.2

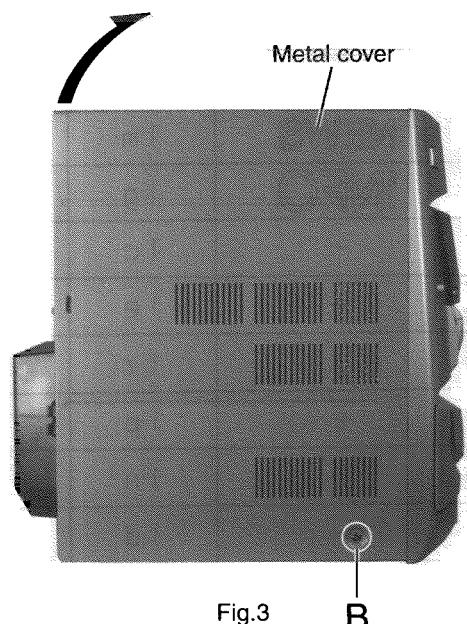


Fig.3

**■ Removing the CD Changer Mechanism Assembly  
(See Fig.4 to 6)**

- Prior to performing the following procedure, remove the metal cover.
1. Disconnect the connector CN410 of the card wire connecting the CD changer mechanism board to the main board.
  2. Remove the two C screws on the upper side of the CD changer assembly and the two D screws on the back of the rear panel.
  3. Remove the plastic rivet attaching the main board.
  4. Lift and remove the CD changer mechanism assembly on the back of the body while pulling the rear panel and the front panel assembly.
- \* To prevent damage to the CD fitting, be sure to pull the rear panel and the front panel assembly enough to remove the CD changer mechanism.

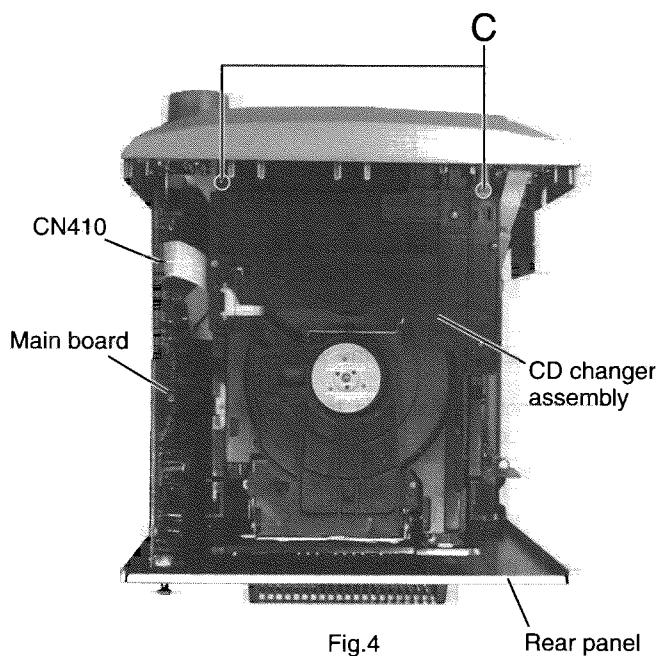


Fig.4

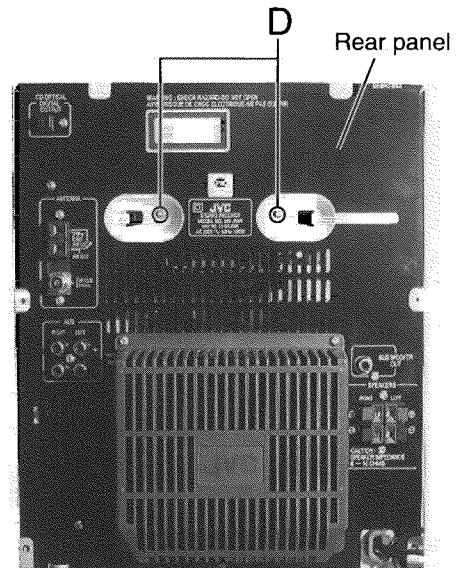


Fig.5

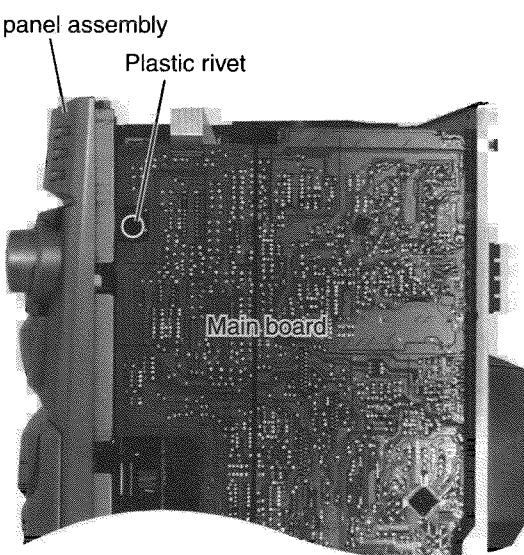


Fig.6

< Front Assembly >

■ Removing the Front Panel Assembly

(See Fig.7 to 9)

- Prior to performing the following procedure, remove the metal cover and CD changer mechanism assembly.
- Disconnect the card wires from connector CN411, CN412 and CN413 on the main board.
  - It is easy for the previous extraction of POLAR board from CN420 to remove the wire.
  - Disconnect the flat wire from connector CN703 on the amplifier board.
  - Remove the four E screws attaching the front panel assembly on the bottom of the body.
  - Release the two joints(a) and (b) on the lower left and right sides of the body using a screwdriver, and remove the front panel assembly toward the front.

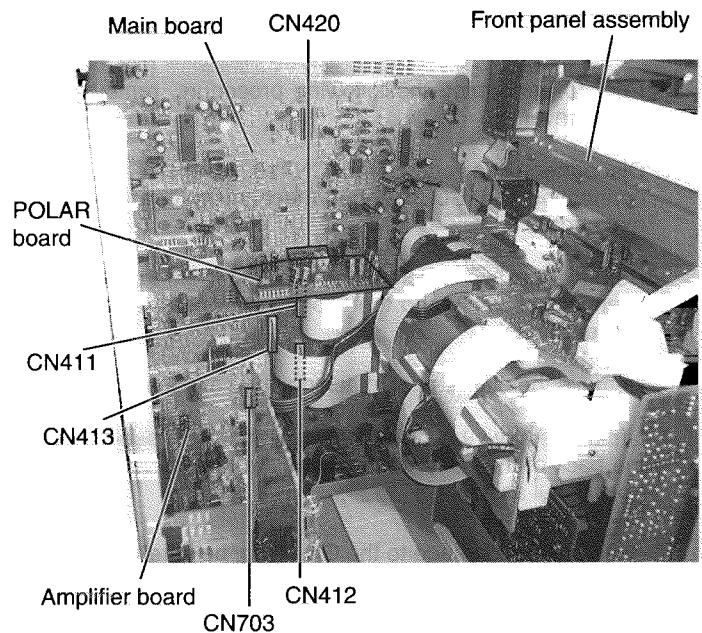


Fig.7

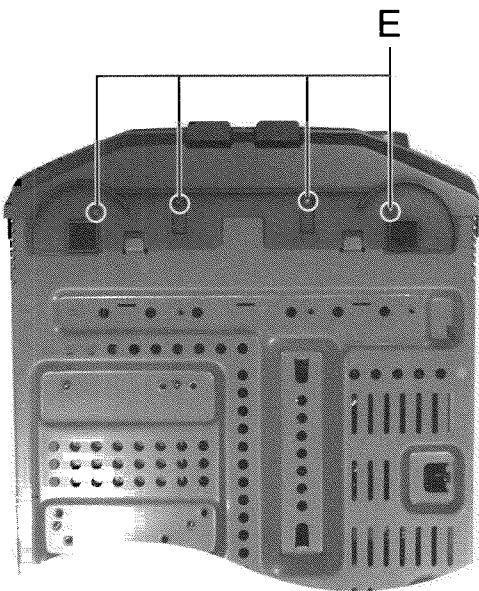


Fig.8

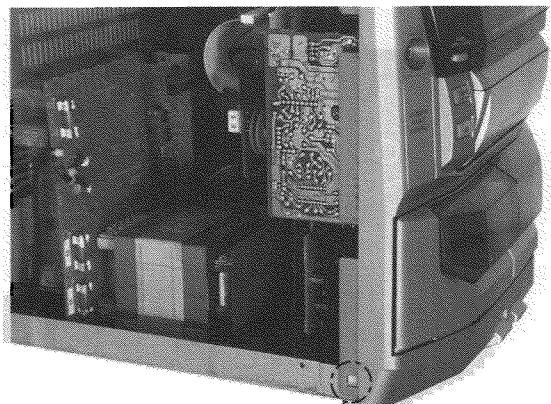


Fig.9a

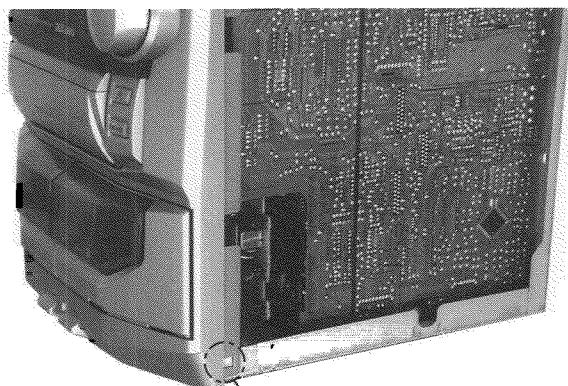


Fig.9b

### ■ Removing the Rolling panel Panel assembly (See Fig.10 and 11)

1. Disconnect the card wires from connector CN817, CN812, CN951 and CN816 on the upper system control & FL board and on the rolling panel assembly on the reverse side of the front panel assembly.
2. Disconnect the card wire from connector CN859 on the relay board on the back of the rolling panel assembly.
3. Remove the six F screws attaching the stay bracket.
4. Remove the four G screws attaching the rolling panel assembly.

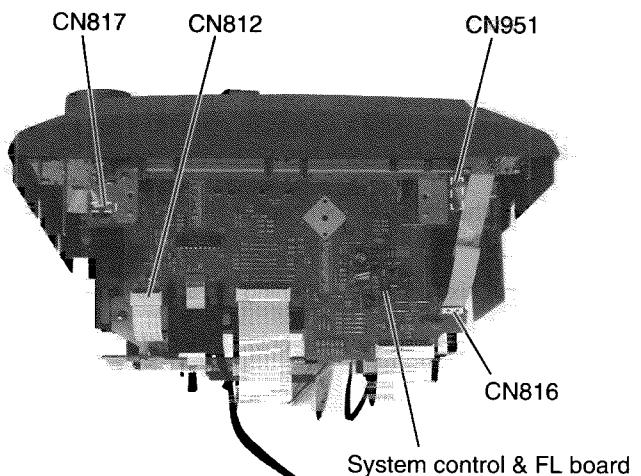


Fig.10

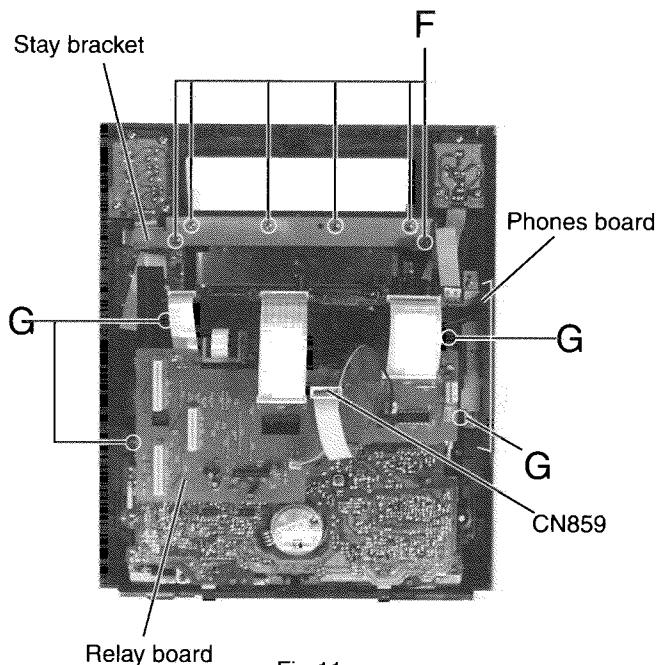


Fig.11

### ■ Removing the Cassette Mechanism Assembly (See Fig.12)

- Prior to performing the following procedure, remove the rolling panel assembly.
1. Remove the four H screws and four H1 screws attaching the cassette mechanism assembly.

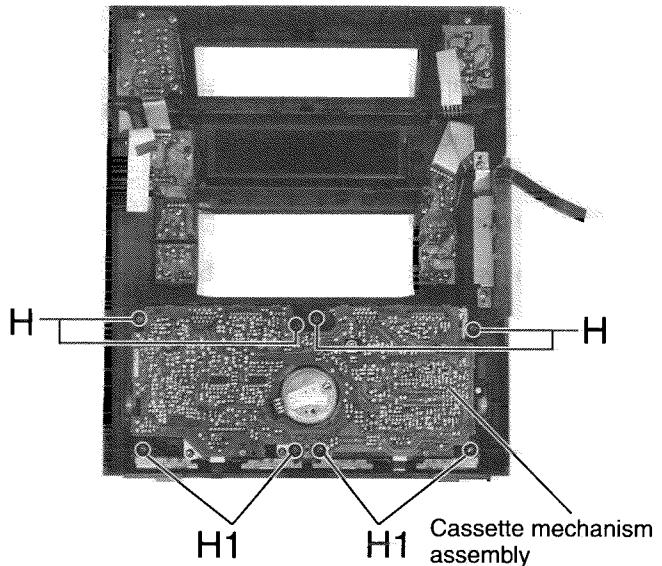


Fig.12

**■ Removing the System Control & FL Board**  
(See Fig.13 and 14)

1. Disconnect the card wires and flat wires from connector CN812, CN817, CN816, CN951, CN813, CN810 and CN811 on the system control & FL board respectively.
2. Disconnect the flat wire from connector D851 on the relay board.
3. Remove the six F screws attaching the stay bracket.
4. Remove the two I screws attaching the system control & FL board.

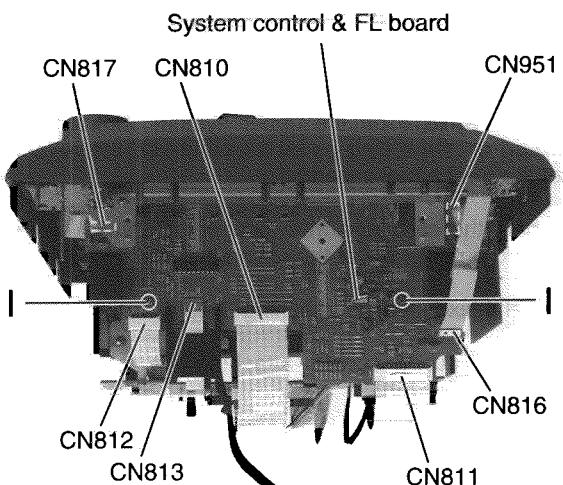


Fig.13

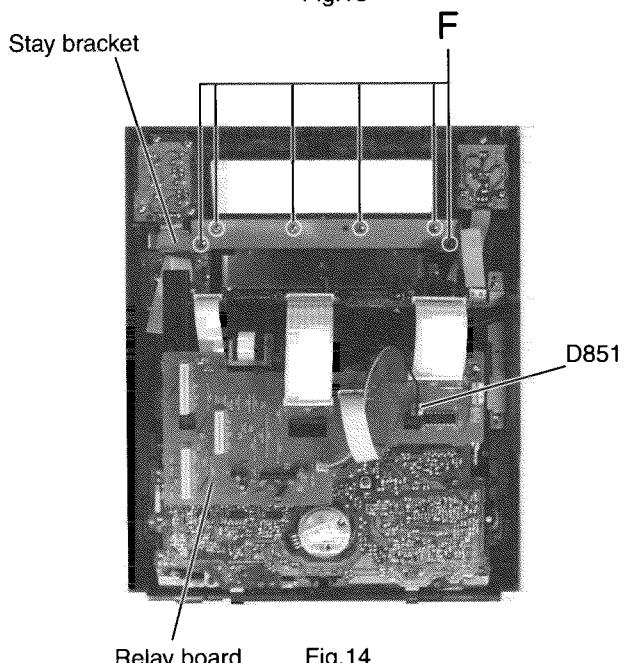


Fig.14

**■ Removing the Relay Board** (See Fig.15)

1. Disconnect the card wires, the 2P harness and the flat wires from connector CN856, CN857, CN859, CN863, and D851 on the relay board respectively.
2. Remove the one screw J attaching the relay board.
3. Release the five c tabs fitted to the relay board.

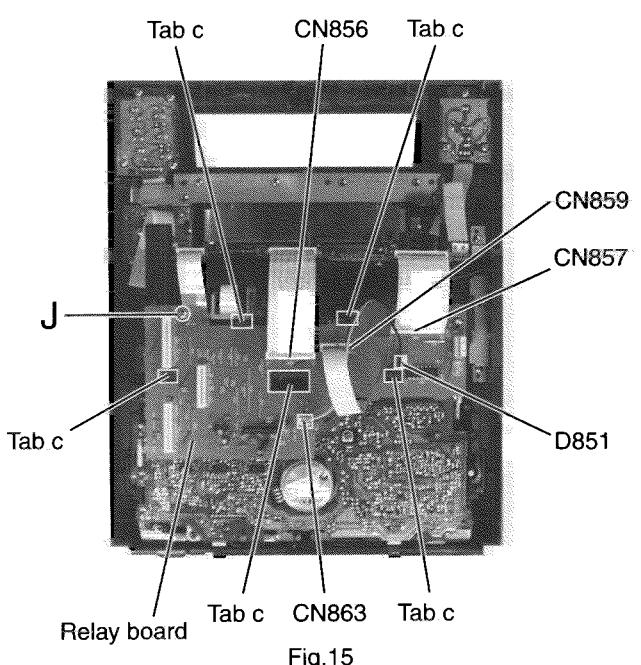


Fig.15

**■ Removing Each Board of the Front Panel Assembly (See Fig.16 and 17)**

1. Disconnect the flat wire from connector CN816 on the system control & FL board on top of the rolling panel assembly.
2. Remove the three K screws attaching the power switch board.
3. Remove the two L screws attaching the phones board together with bracket.
  - \* Remove the flat wire extending from the phones board through the slit of the rolling panel assembly.
4. Remove the four M screws attaching the CD eject board and unsolder the flat wire.
  - Remove the rolling panel assembly.
5. Pull out the volume knob and nut toward the front.
6. Remove the two N screws attaching the volume board and unsolder the flat wire.
7. Remove the three O screws attaching the function board 1 and unsolder the flat wire.
8. Remove the four P screws attaching the function board 2.

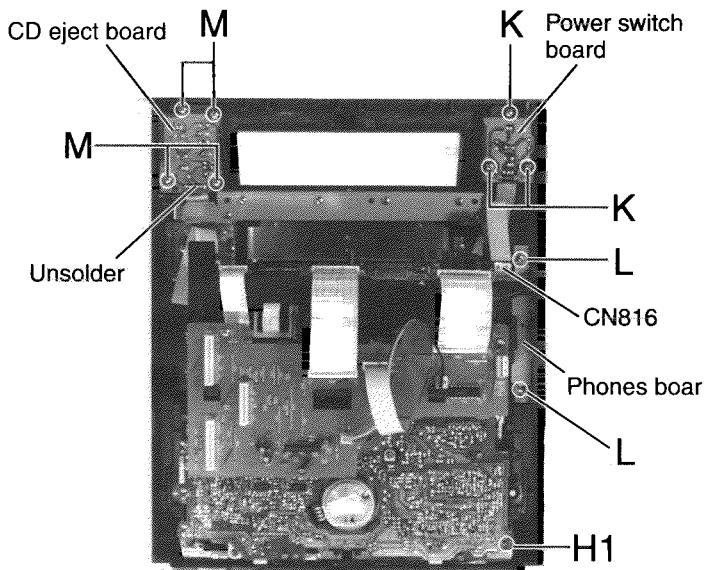


Fig.16

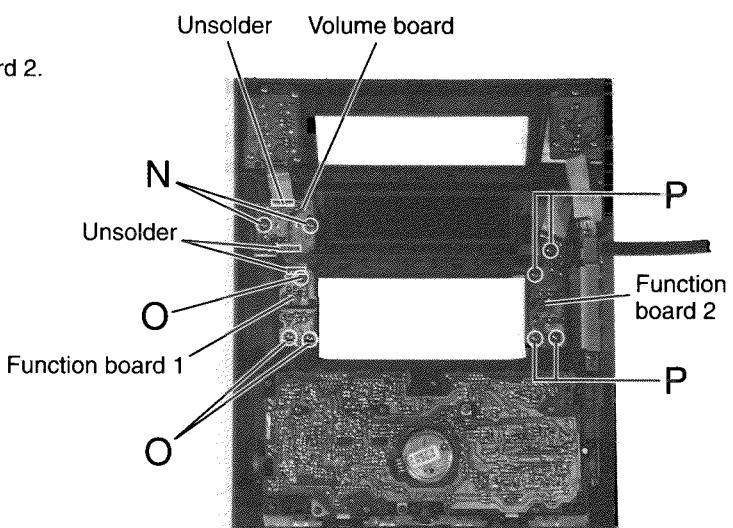


Fig.17

### < Rear Panel Assembly >

- Prior to performing the following procedure, remove the metal cover and the CD changer mechanism assembly.
- The following procedure can be performed even if the front panel assembly is attached.

### ■ Removing the Rear Cover (See Fig.18)

- Remove the two Q screws attaching the rear cover on the back of the body.

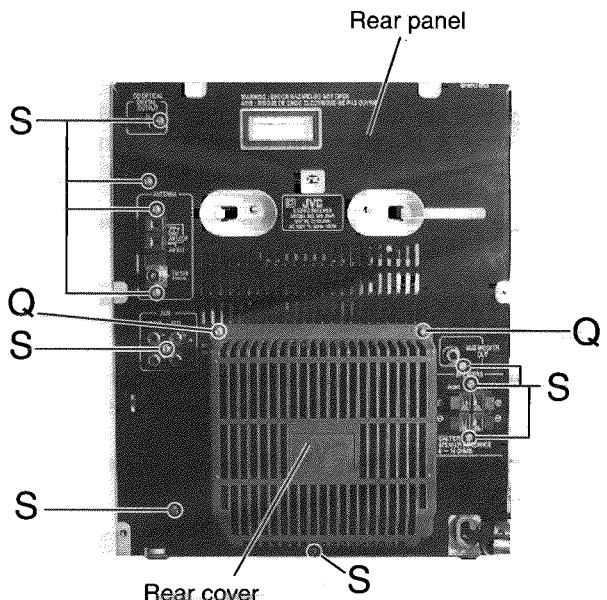


Fig.18

### ■ Removing the Rear Panel (See Fig.18 to 21)

- Prior to performing the following procedure, remove the rear cover.

  - Remove the four R screws attaching the heat sink and the rear panel.
  - Remove the ten S screws attaching the rear panel.
  - Release the two joints(d) and (e) on the lower part of the rear panel using a screwdriver, and remove the rear panel toward the rear side.

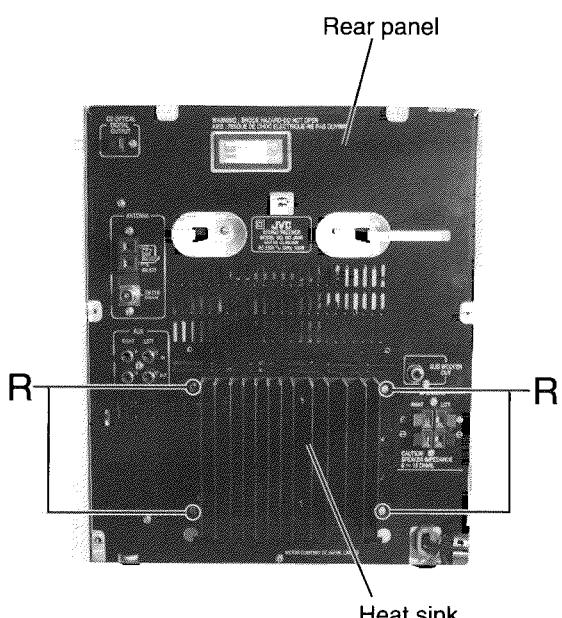


Fig.19

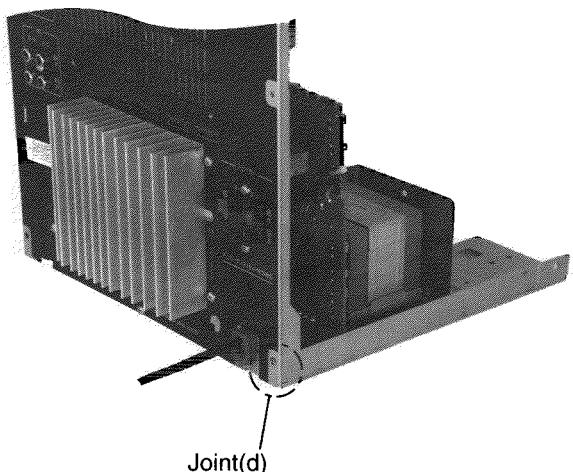


Fig.20

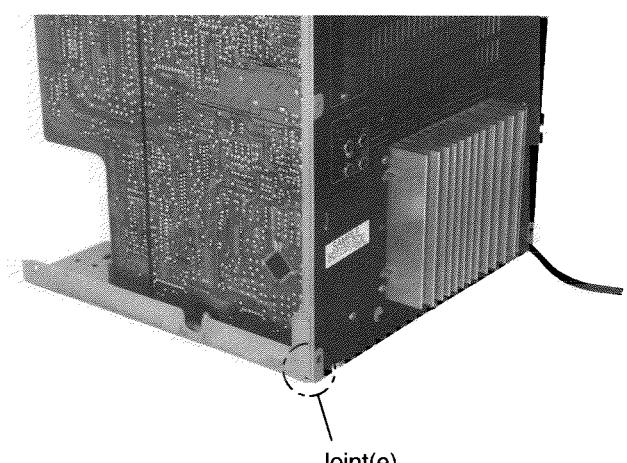


Fig.21

### ■ Removing the Main Board (See Fig.22 and 23)

- Prior to performing the following procedure, remove the metal cover, the CD changer mechanism assembly and the rear panel.
- Disconnect the card wires from connector CN411, CN412 and CN413 on the main board and the flat wire from connector CN415.
  - \* It is easy for the previous extraction of POLAR board from CN420 to remove the wire.
  - Remove the screw T attaching the main board on the right side of the body.
  - Disconnect connector CN416 and CN417 under the main board, and remove the main board upward.

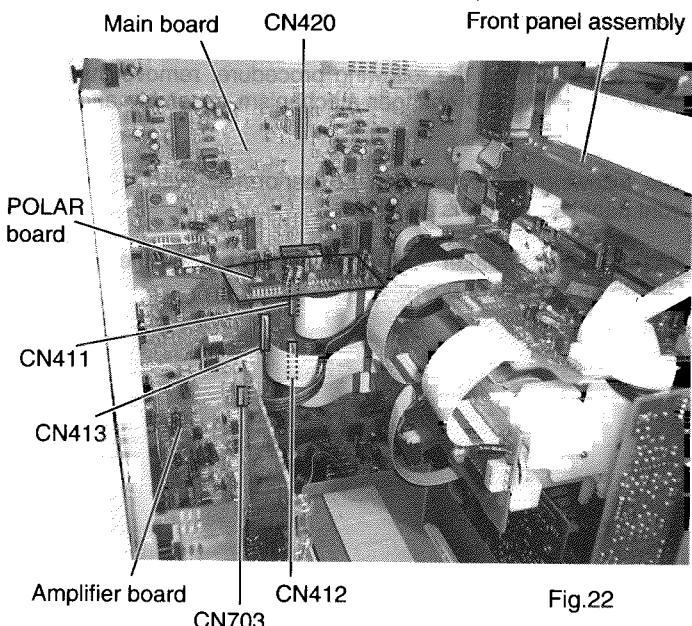


Fig.22

### ■ Removing the Rated Voltage Board and Power Amplifier Board (See Fig.22, 24 and 25)

- Prior to performing the following procedure, remove the metal cover, the CD changer mechanism assembly and the rear panel.
  - The following procedure can be performed even if the front panel assembly is attached.
- Disconnect the flat wire from connector CN703 on the power amplifier board.
  - Disconnect the flat wire from connector CN415 on the main board.
  - Pull out the rated voltage board and the power amplifier board upward from connector CN102 and CN103 on the power board respectively.
  - Remove the two U screws and two V screws attaching the heat sink together with the heat sink bracket.

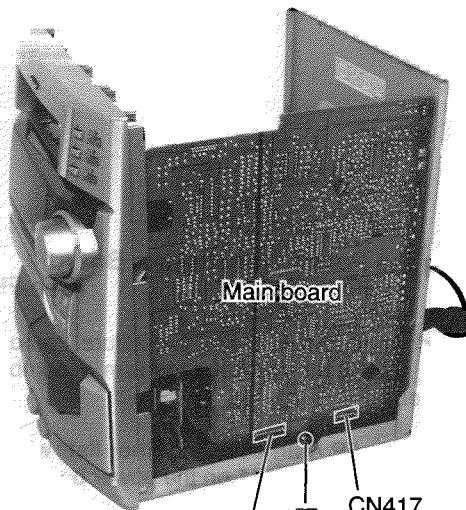


Fig.23

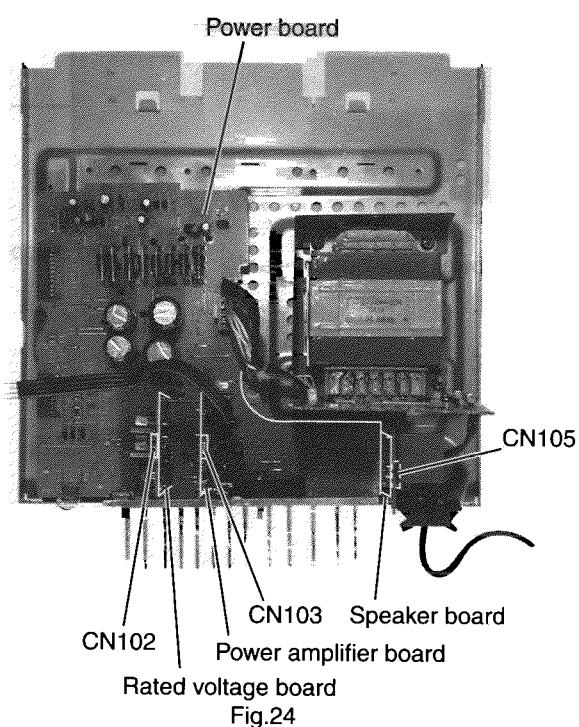


Fig.24

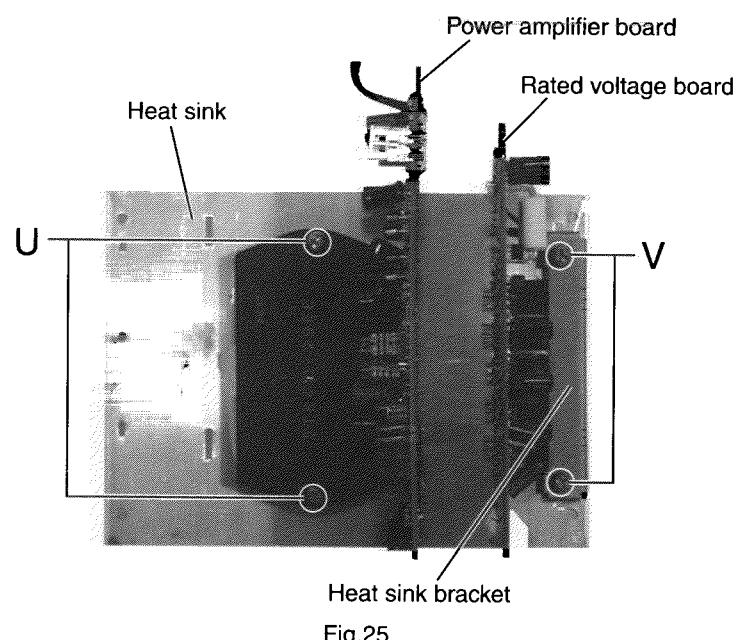


Fig.25

**■ Removing the Speaker Board (See Fig.24)**

- Prior to performing the following procedure, remove the metal cover, the CD changer mechanism assembly and the rear panel.
  - The following procedure can be performed even if the front panel assembly is attached.
- Pull out the speaker board upward from connector CN105 on the power board.

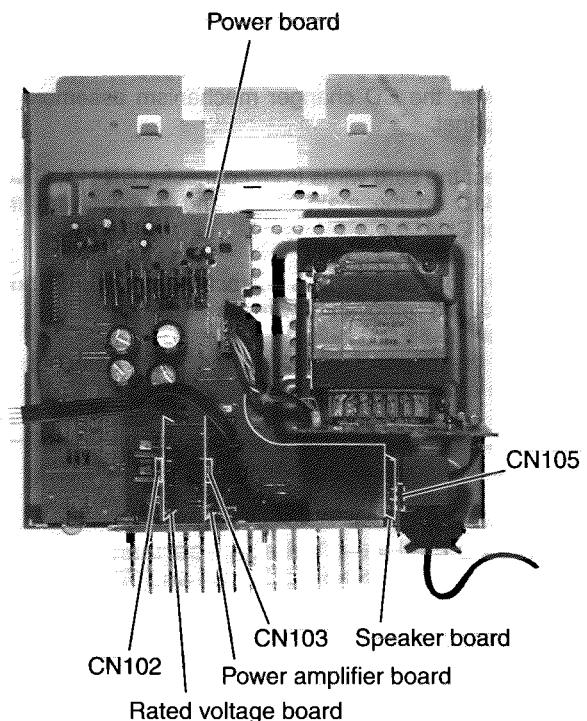


Fig.24

**■ Removing the Power Transformer Board  
(See Fig.26)**

- Prior to performing the following procedure, remove the metal cover, the CD changer mechanism assembly and the rear panel.
- Disconnect the 5P harness and the flat wire from connector CN109 and CN111 on the power board.
  - Remove the four W screws attaching the power transformer assembly.
  - Push the cord stopper upward to remove it.

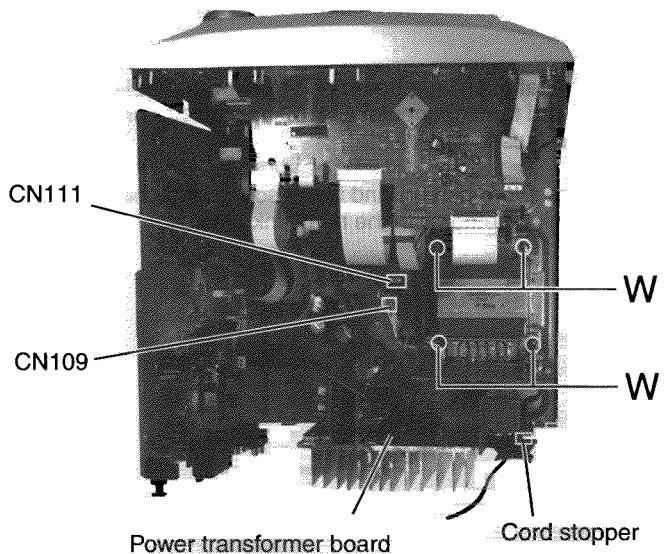


Fig.26

### ■ Removing the rolling Panel Assembly (See Fig.27)

1. Remove the two X screws attaching the rolling panel assembly.
2. Remove the rolling panel assembly while pulling outward the left and right hooks attaching the rolling panel assembly.

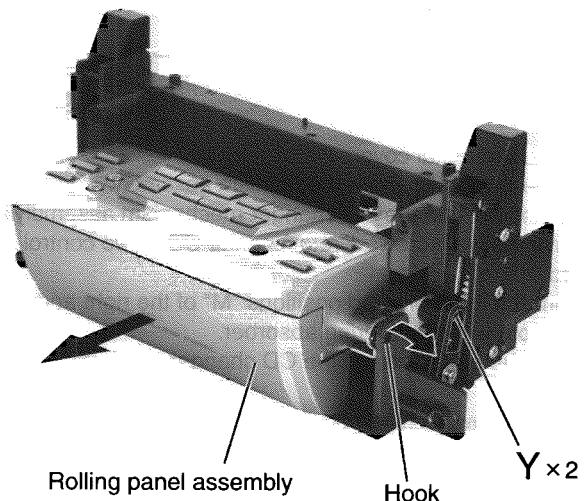


Fig.27

### ■ Removing the operation switch Board (See Fig.28 and 29)

1. Remove the six Y screws attaching the cover and the bracket.
2. Release the two f tabs fitted to the bracket, and pull out the left and right panel holders.
3. Remove the two Z screws attaching the operation switch board.

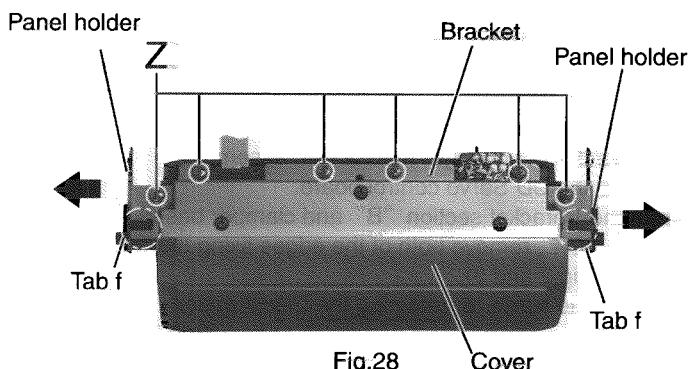


Fig.28

### ■ Removing the Drive Motor (See Fig.30 and 31)

1. Remove the two A screws and the two B screw attaching
2. Pull out the gear shaft "a" upward.
3. Remove the motor belt.

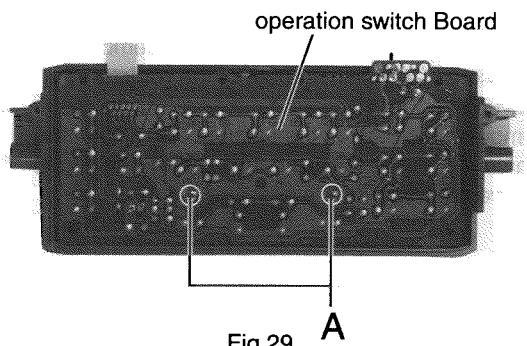


Fig.29

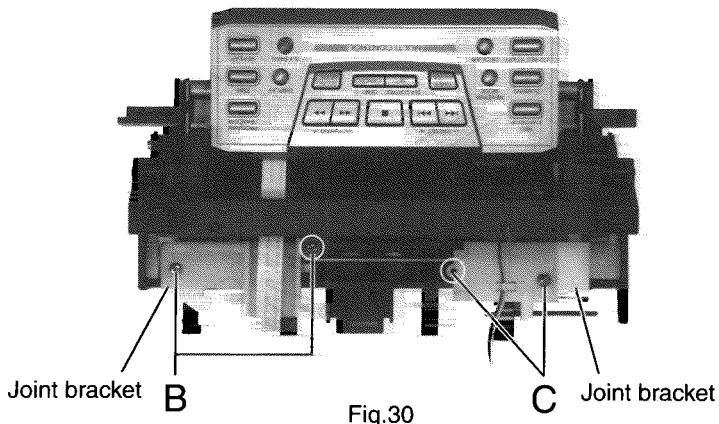


Fig.30

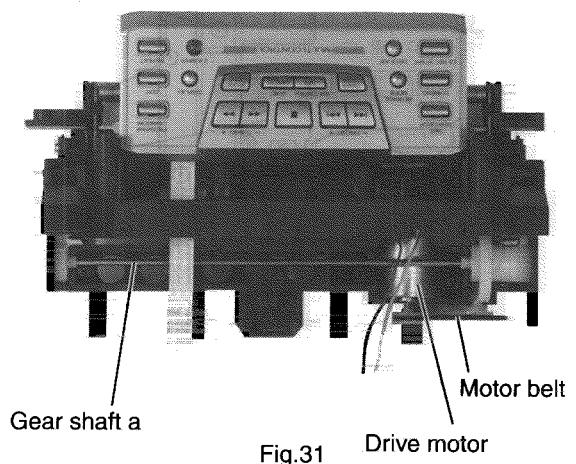


Fig.31

# CA-MXJ55R/CA-MXJ530R

«CD Changer Mechanism Type:VC3 Section»

## ■ Removing the CD Servo control board (See Fig.1)

1. Remove the metal cover.
2. Remove the CD changer mechanism assembly.
3. From bottom side the CD changer mechanism assembly, remove the two screws 1 retaining the CD servo control board.
4. Absorb the four soldered positions "M" of the right and left motors with a soldering absorber.
5. Pull out the earth wire on the CD changer mechanism assembly.
6. The two screws A is removed and C.B.holder is detached.
7. Disconnect the connector CN854 on the CD servo control board.
8. Disconnect the card wire CN601 and the connector CN801 on the CD servo control board.

## ■ Removing the CD tray assembly (See Fig.2~4)

1. Remove the front panel assembly.
2. Remove the CD changer mechanism assembly.
3. Remove the CD Servo control board.
4. From the T.bracket section "B" and clamper base section "C", remove both of the edges fixing the rod(See Fig.2 and 3).
5. Remove the screw 2 retaining the Disc stopper  
(See Fig.3).
6. Remove the three screws 3 retaining the T.bracket  
(See Fig.3).
7. Remove the screws 4 retaining the clamper assembly  
(See Fig.3).
8. From the left side face of the chassis assembly, remove the one screw 5 retaining both of the return spring and lock lever(See Fig. 4).
9. By removing the pawl at the section "D" fixing the return spring, dismount the return spring(See Fig.4).
10. Remove the three lock levers(See Fig.4).

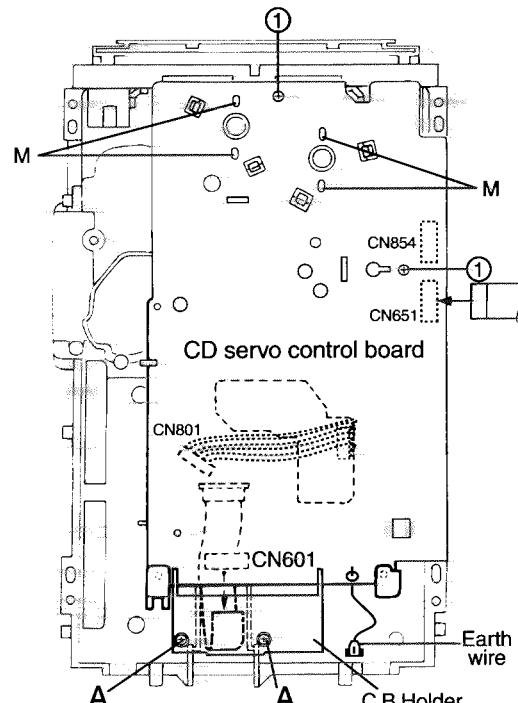


Fig.1

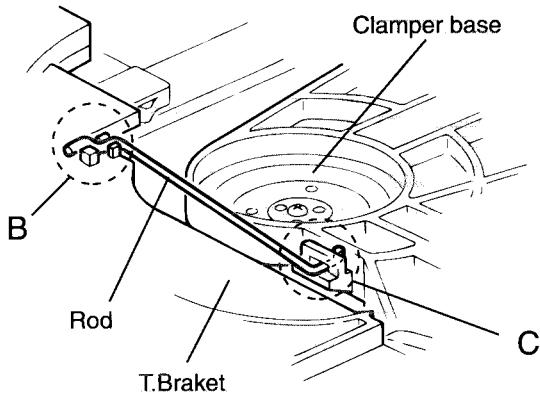


Fig.2

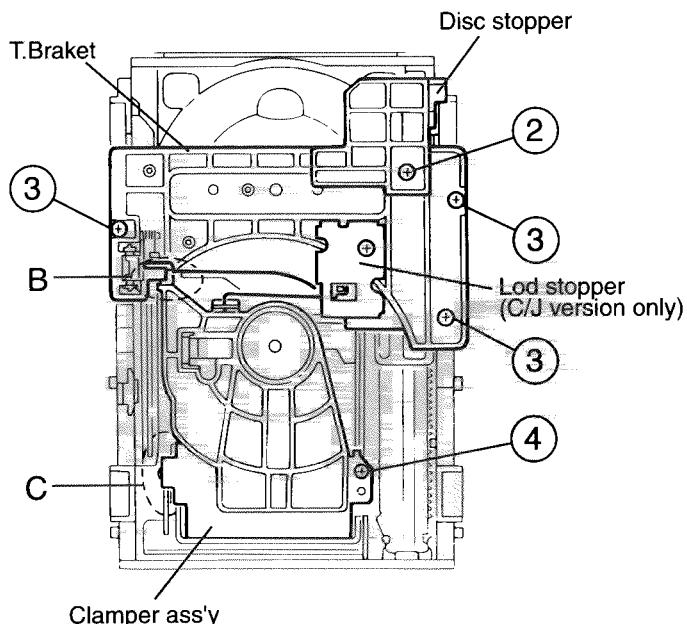


Fig.3

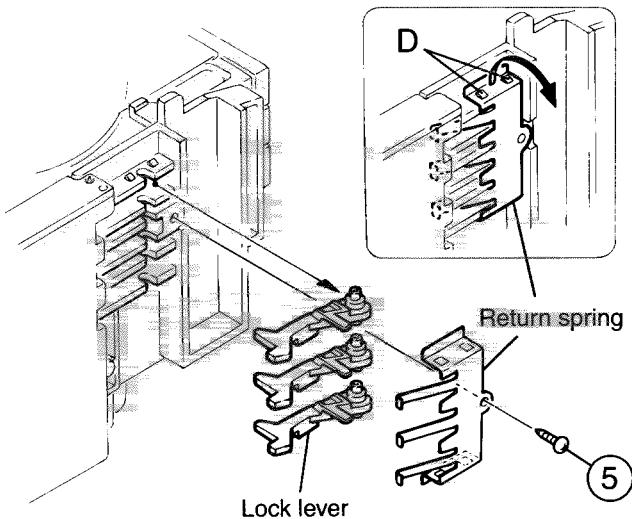


Fig.4

11. Check whether the lifter unit stopper has been caught into the hole at the section "E" of CD tray assembly as shown in Fig.5.
  12. Make sure that the driver unit elevator is positioned as shown in Fig.6 from the second or fifth hole on the left side face of the CD changer mechanism assembly.
- [Caution]** In case the driver unit elevator is not at above position, set the elevator to the position as shown in Fig.7 by manually turning the pulley gear as shown in Fig.8.
13. Manually turn the motor pulley in the clockwise direction until the lifter unit stopper is lowered from the section "E" of CD tray assembly(See Fig.8).
  14. Pull out all of the three stages of CD tray assembly in the arrow direction "F" until these stages stop (See Fig.6).
  15. At the position where the CD tray assembly has stopped, pull out the CD tray assembly while pressing the two pawls "G and G'" on the back side of CD tray assembly(See Fig.9). In this case, it is easy to pull out the assembly when it is pulled out first from the stage CD tray assembly.

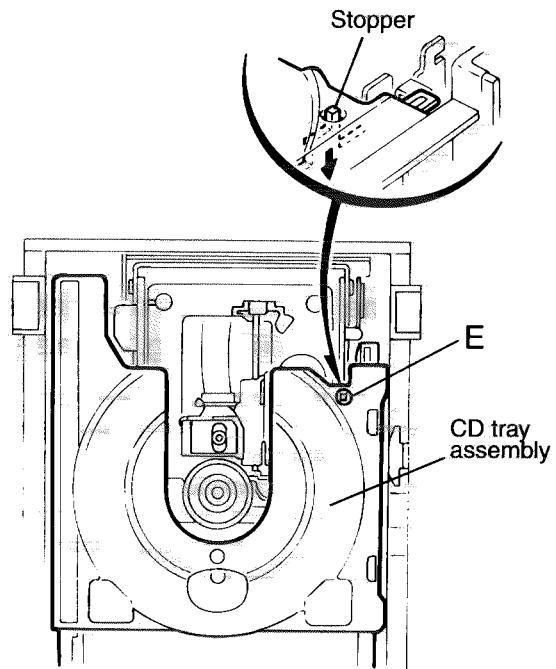


Fig.5

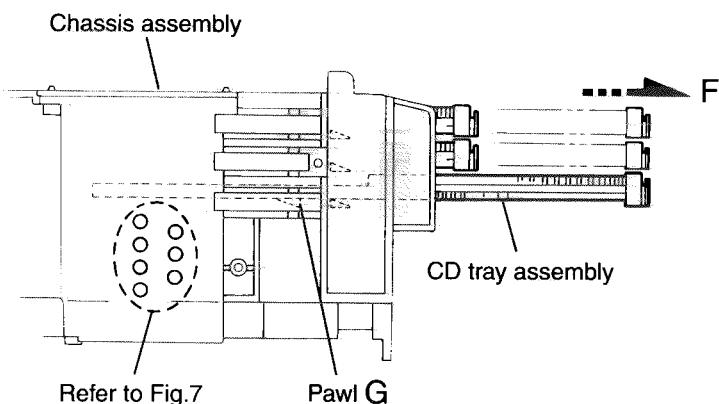


Fig.6

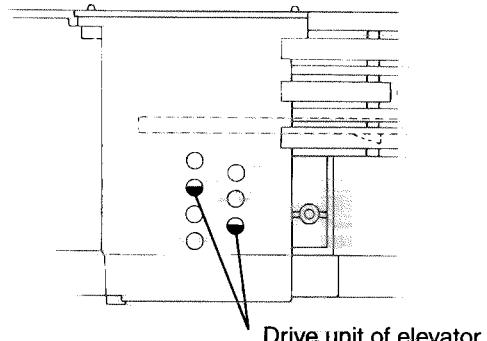


Fig.7

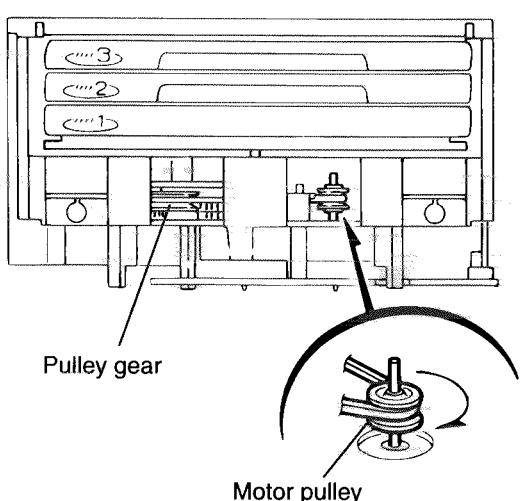


Fig.8

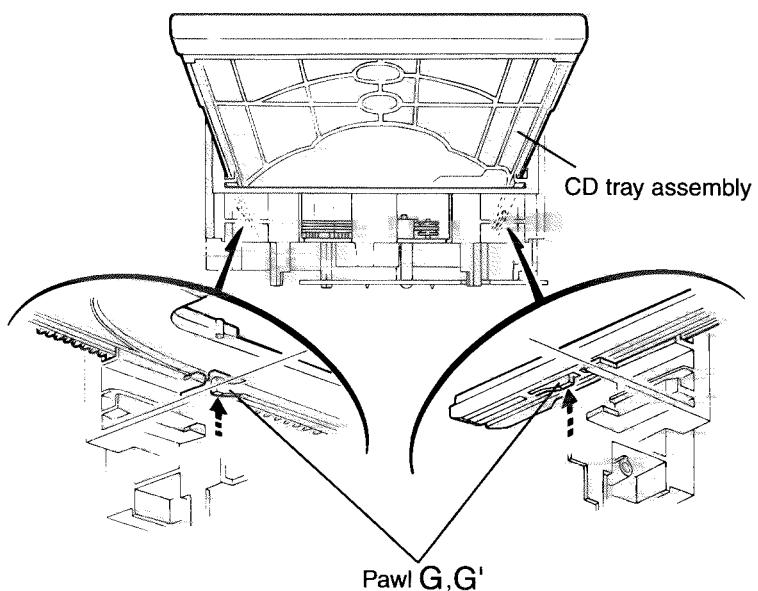


Fig.9

### ■ Removing the CD loading mechanism assembly(See Fig.10)

1. While turning the cams R1 and R2 assembly in the arrow direction "H", align the shaft "I" of the CD loading mechanism assembly to the position shown in Fig.10.
2. Remove the four screws 6 retaining the CD loading mechanism assembly.

### ■ Removing the CD traverse mechanism (See Fig.11 and 12 )

1. For dismounting only the CD traverse mechanism without removing the CD loading mechanism assembly, align the shaft "J" of the CD loading mechanism assembly to the position shown Fig.11 while turning the cam R1 and R2 assembly in the arrow direction "K".
2. By raising the CD loading mechanism assembly in the arrow direction "L", remove the assembly from the lifter unit

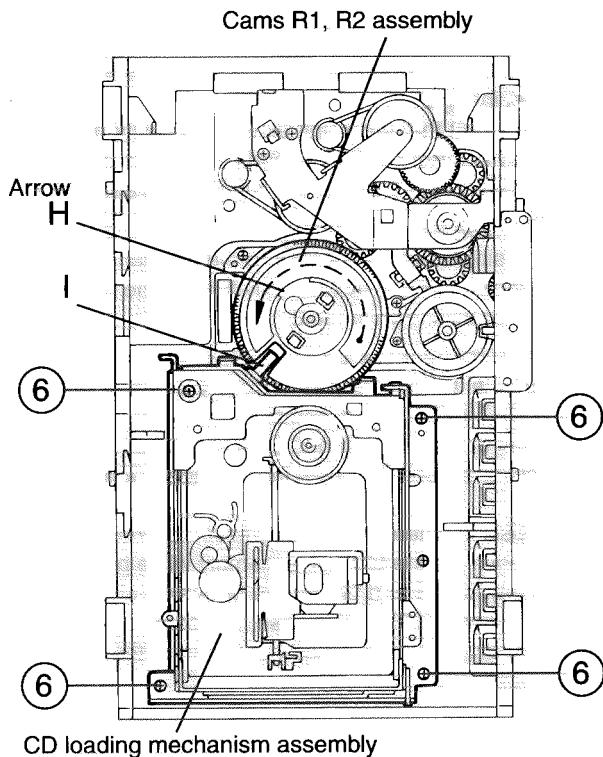


Fig.10

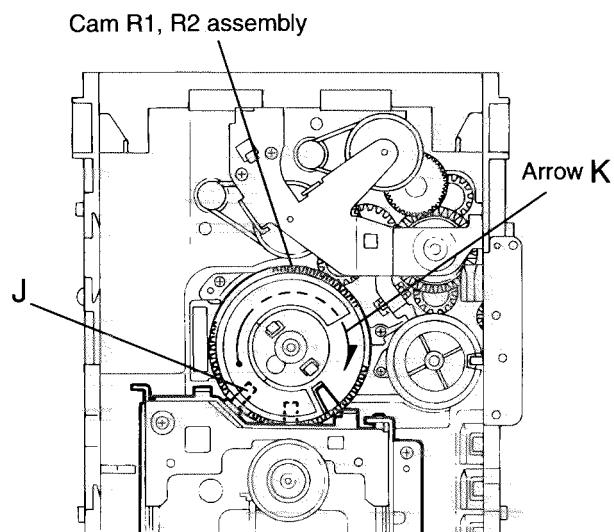


Fig.11

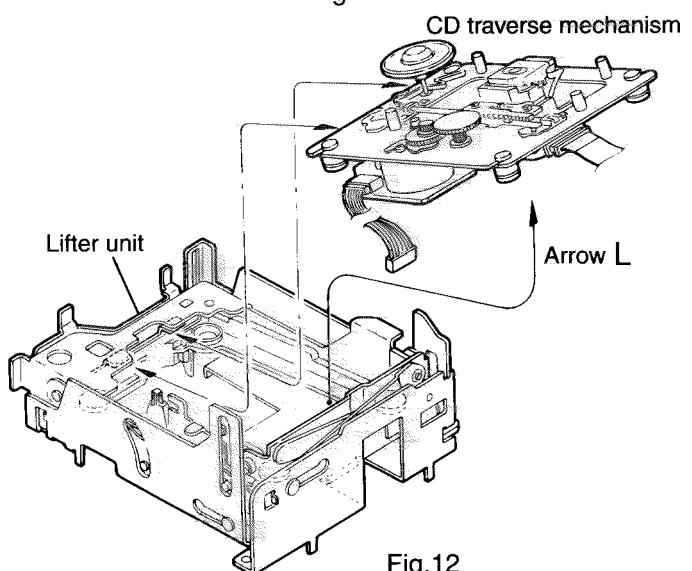


Fig.12

### ■ Removing the CD pick unit (See Fig.13 )

1. Move the cam gear in the arrow direction a . Then, the CD pickup unit will be moved in the arrow direction b .
2. According to the above step, shift the CD pickup unit to the center position.
3. While pressing the stopper retaining the shaft in the arrow direction c , pull out the shaft in the arrow direction d .
4. After dismounting the shaft from the CD pickup unit, remove the CD pickup unit

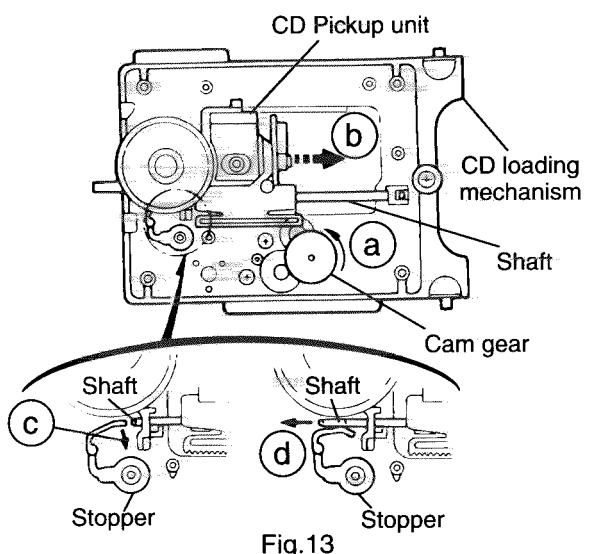


Fig.13

## ■ Removing the cam unit

(See Fig.14 ~17 )

1. Remove the CD loading mechanism assembly.
2. While turning the cam gear L, align the pawl "N" position of the drive unit to the notch position(Fig.16) on the cam gear L.
3. Pull out the drive unit and cylinder gear(See Fig.17).
4. While turning the cam gear L, align the pawl "O" position of the select lever to the notch position(Fig.18) on the cam gear L.
5. Remove the four screws 9 retaining the cam unit(cam gear L and cams R1/R2 assembly)(See Fig.18).

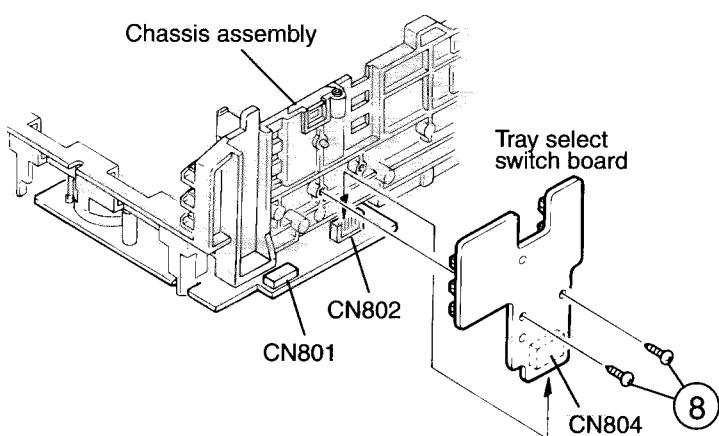


Fig.14

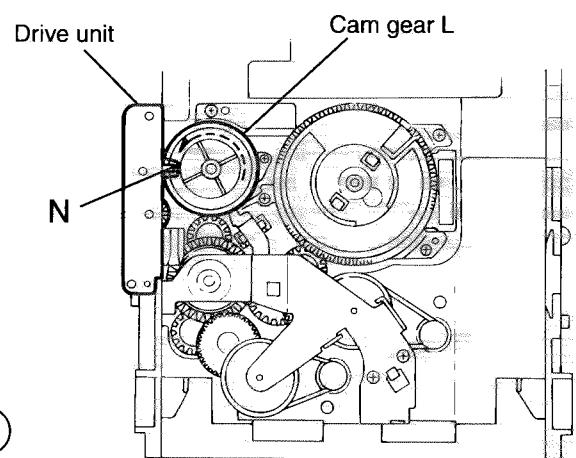


Fig.15

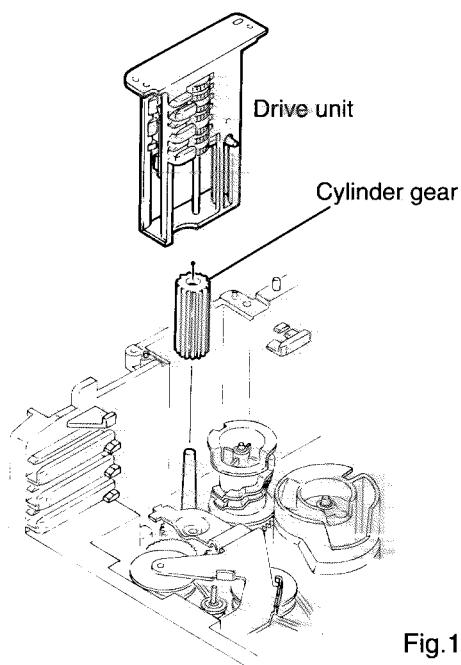


Fig.16

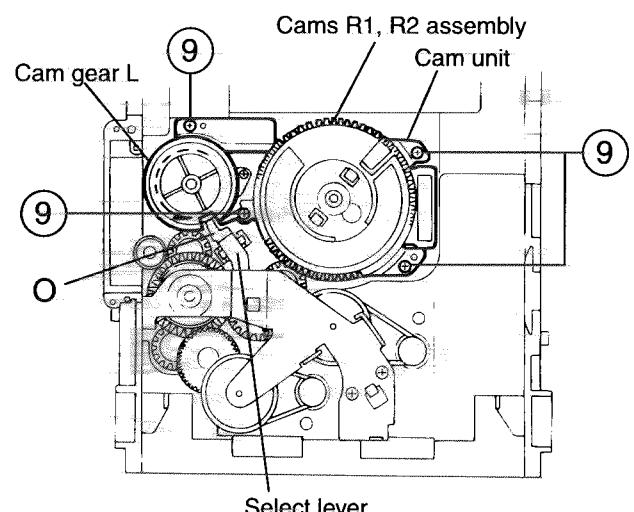


Fig.17

## ■ Removing the actuator motor and belt (See Fig.18~21)

1. Remove the two screws 10 retaining the gear bracket (See Fig.19).
2. While pressing the pawl "P" fixing the gear bracket in the arrow direction, remove the gear bracket (See Fig.19).
3. From the notch "Q section" on the chassis assembly fixing the edge of gear bracket, remove and take out the gear bracket(See Fig. 20).
4. Remove the belts respectively from the right and left actuator motor pulleys and pulley gears(See Fig. 19).
5. After turning over the chassis assembly, remove the actuator motor while spreading the four pawls "R" fixing the right and left actuator motors in the arrow direction(See Fig. 21).

**[Note]** When the chassis assembly is turned over under the conditions wherein the gear bracket and belt have been removed, then the pulley gear as well as the gear, etc. constituting the gear unit can possibly be separated to pieces. In such a case, assemble these parts by referring to the assembly and configuration diagram in Fig. 22.

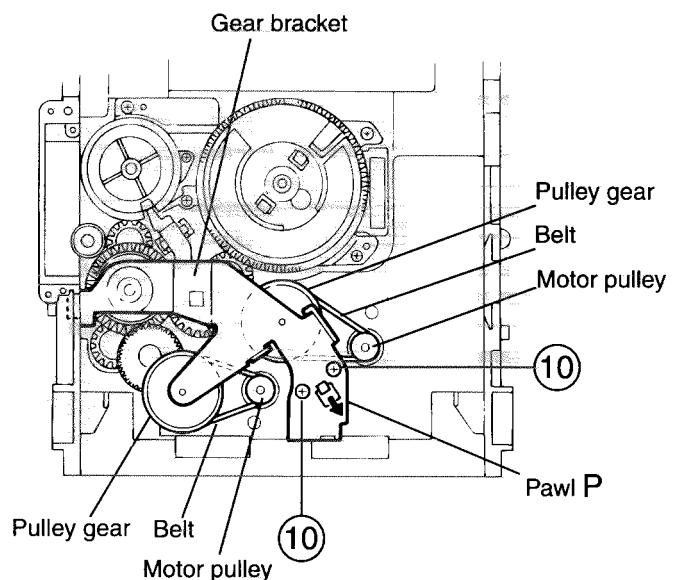


Fig.18

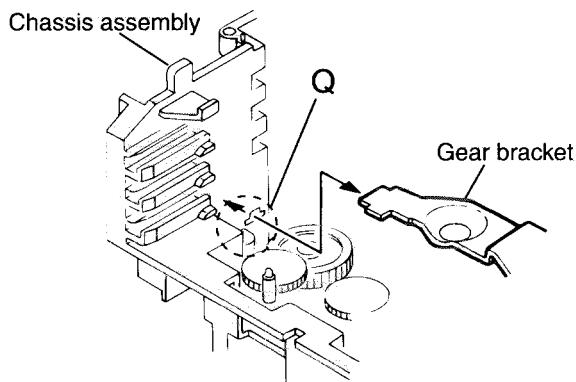


Fig.19

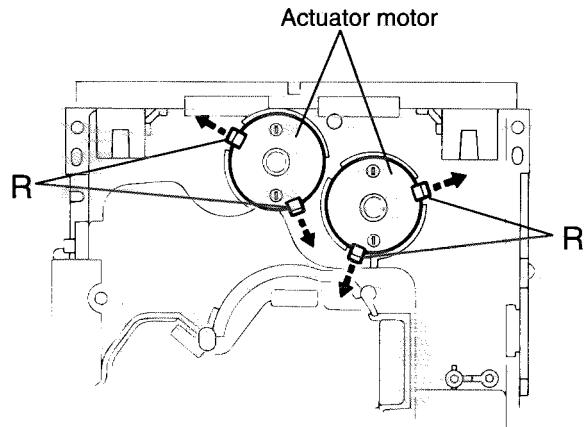


Fig.20

### Assembly and Configuration Diagram

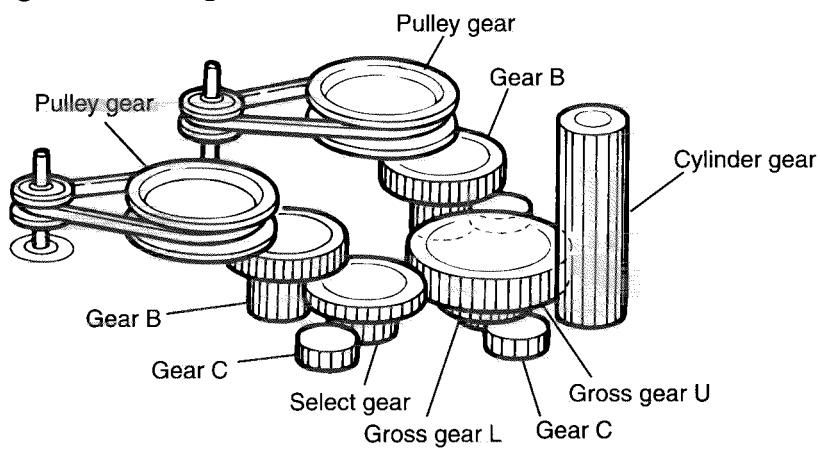


Fig.21

## ■ Removing the cams R1/R2 assembly and cam gear L(See Fig.22)

1. Remove the slit washer fixing the cams R1 and R2 assembly.
2. By removing the two pawls "S" fixing the cam R1, separate R2 from R1.
3. Remove the slit washer fixing the cam gear L.
4. Pull out the cam gear L from the C.G. base assembly.

## ■ Removing the C.G. base assembly (See Fig.22 and 23)

Remove the three screws 11 retaining the C.G. base assembly.

**[Caution]** To reassemble the cylinder gear, etc. with the cam unit (cam gear and cans R1/R2 assembly), gear unit and drive unit, align the position of the pawl "N" on the drive unit to that of the notch on the cam gear L. Then, make sure that the gear unit is engaged by turning the cam gear L (See Fig. 24).

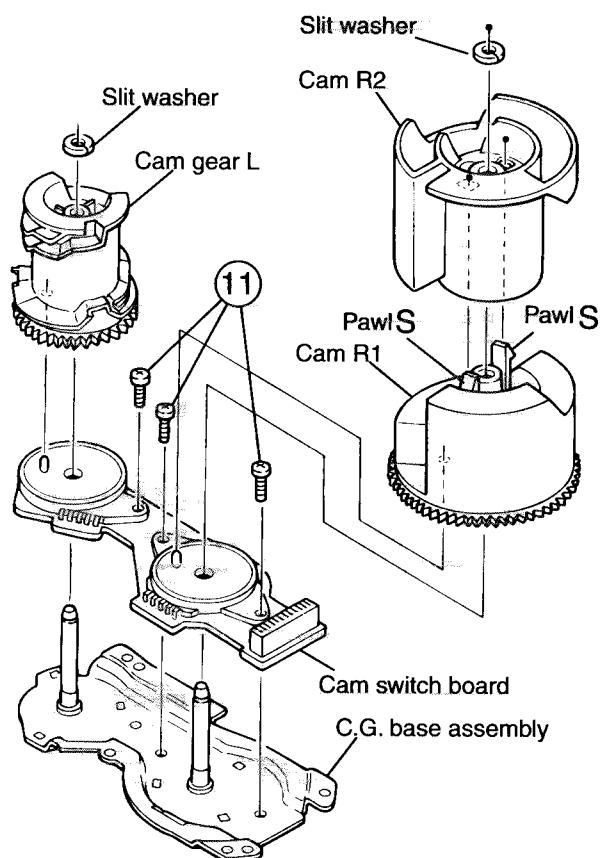


Fig.22



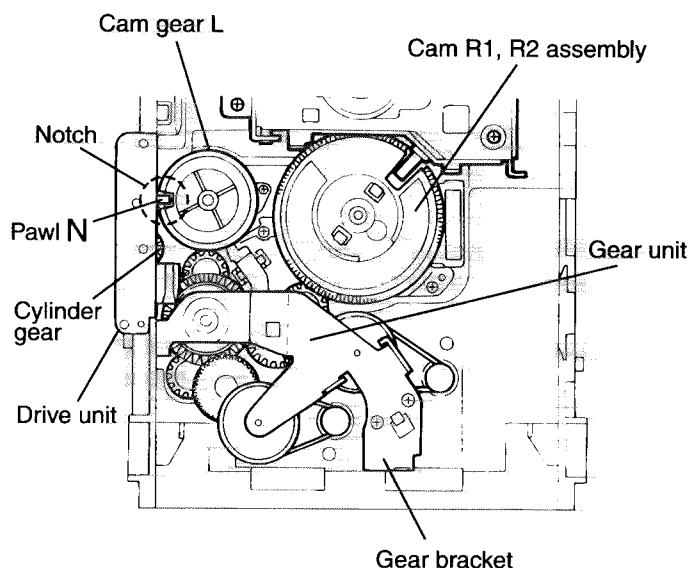


Fig.23

## < Cassette Mechanism Section >


### ■ Removing the Playback, Recording and Eraser Heads

1. While shifting the trigger arms seen on the right side of the head mount in the arrow direction, turn the flywheel R in counterclockwise direction until the head mount has gone out with a click (See Fig 1).
2. When the flywheel R is rotated in counterclockwise direction, the playback head will be turned in counterclockwise direction from the position in Fig 2 to that in Fig 3.
3. At this position, disconnect the flexible P.C.board (outgoing from the playback head) from the connector CN301 on the head amp. and mechanism control P.C. board.
4. After dismounting the FPC holder, remove the flexible P.C.board.
5. Remove the flexible P.C.board from the chassis base.
6. Remove the spring "a" from behind the playback head.
7. Loosen the reversing azimuth screw retaining the playback head.
8. Take out the playback head from the front of the head mount.
9. The recording and eraser heads should also be removed similarly according to Steps 1~8 above.

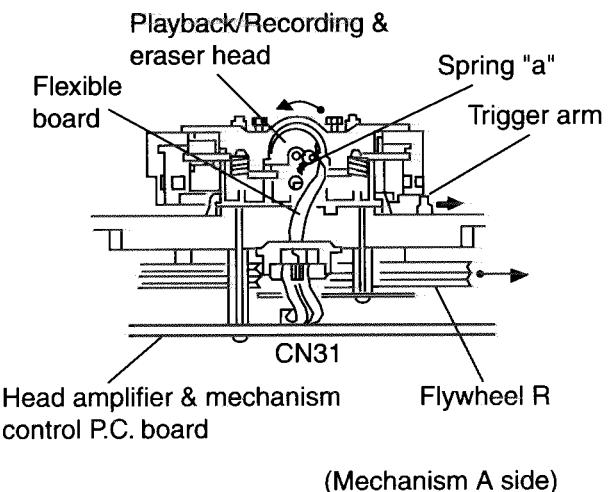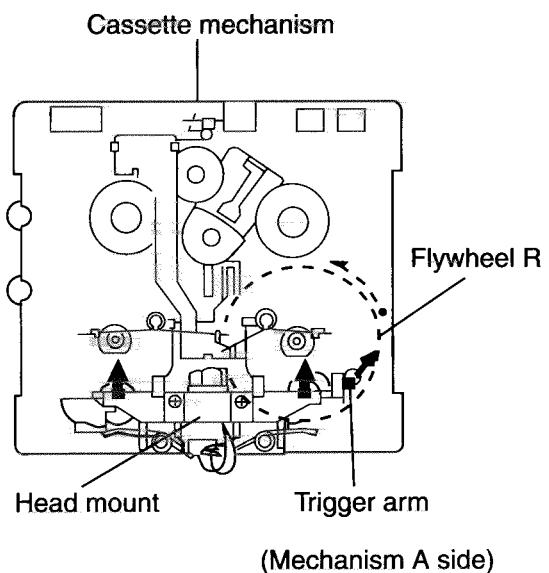


### ● Reassembling the Playback, Recording and Eraser Heads

1. Reassemble the playback head from the front of the head mount to the position as shown in Fig 3.
2. Fix the reversing azimuth screw.
3. Set the spring a from behind the playback head.
4. Attach the flexible P.C.board to the chassis base, and fix it with the FPC holder as shown in Fig 3.
5. The recording and eraser heads should also be reassembled similarly according to Steps 1~4 above.

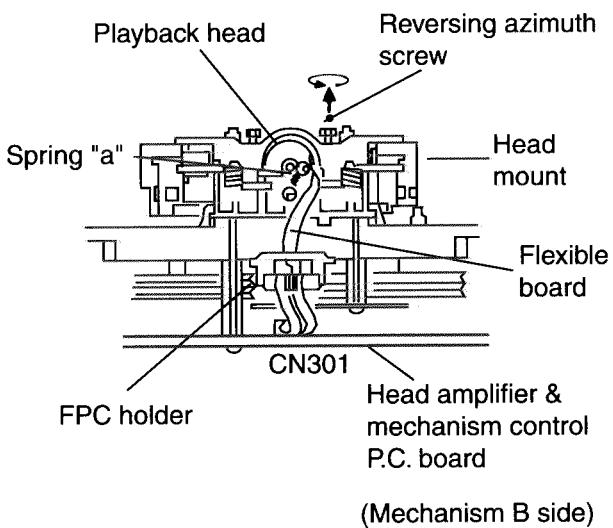

## ■ Removing the head Amp.and Mechanism Control P.C.Board (See Fig 4)




1. Remove the cassette mechanism assembly.
2. After turning over the cassette mechanism assembly, remove the five screws "A" retaining the head amp. and mechanism control P.C. board
3. Disconnect the connectors CN303 and CN304 on the P.C. Board and the connectors CN1 on both the right and left side reel pulse P.C. Boards.
4. When necessary, remove the 4pin parallel wire soldered to the main motor

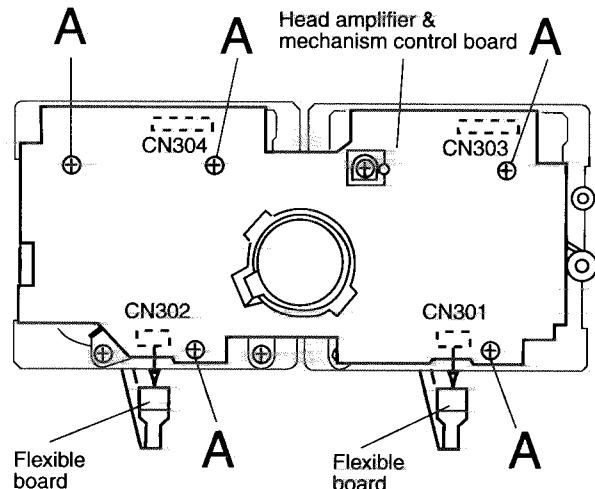

## ■ Removing the Capstan Motor Assembly


1. Remove the six screws "B" retaining capstan motor assembly (See Fig 5).
2. While raising the capstan motor, remove the capstan belts A and B respectively from the motor pulley (See Fig 6).

**Caution 1:** Be sure to handle the capstan belts so carefully that these belts will not be stained by grease and other foreign matter. Moreover, these belts should be hand while referring to the capstan belt hanging method.

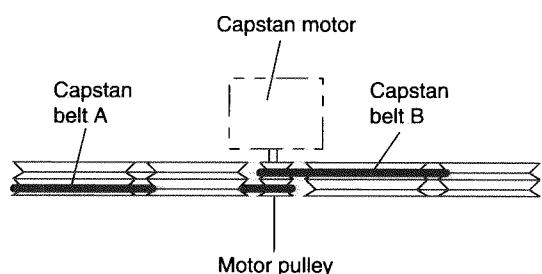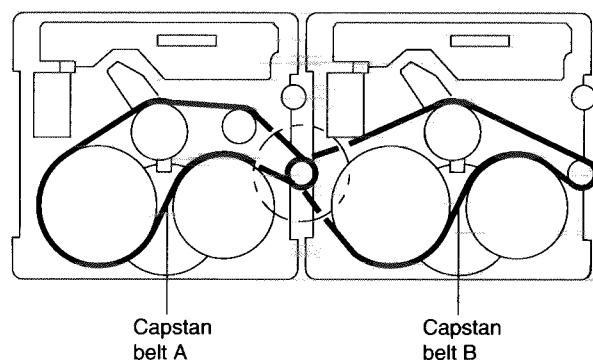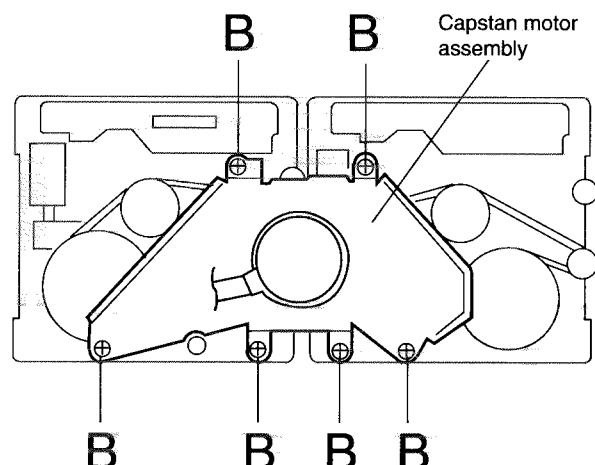



### ■ Removing the Capstan Motor (See Fig 8)

From the joint bracket, remove the two screws "C" retaining the capstan motor.

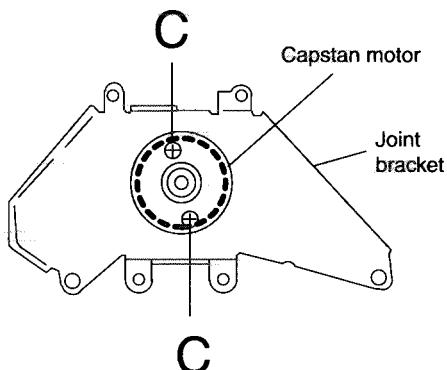


### ■ Removing the Flywheel (See Fig 9.10)

1. Remove the head amp. and mechanism control P.C.Board.
2. Remove the capstan motor assembly.
3. After turning over the cassette mechanism, remove the slit washers "a" and "b" fixing the capstan shafts R and L, and pull out the flywheels R and L respectively from behind the cassette mechanism.

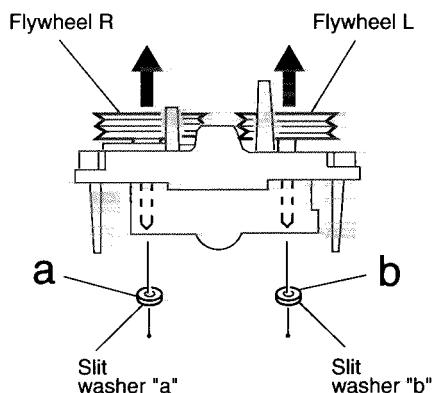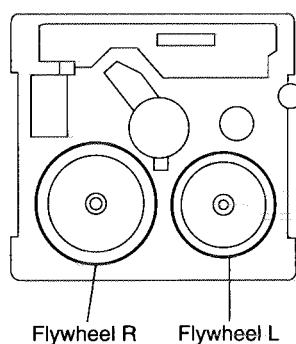


### ■ Removing the Reel Pulse P.C.Board and Solenoid (See Fig 11)

1. Remove the five pawls (c,d,e,f,g) retaining the reel pulse P.C.Board.
2. From the surface of the reel pulse P.C.Board parts, remove the two pawls "h" and "i" retaining the solenoid.

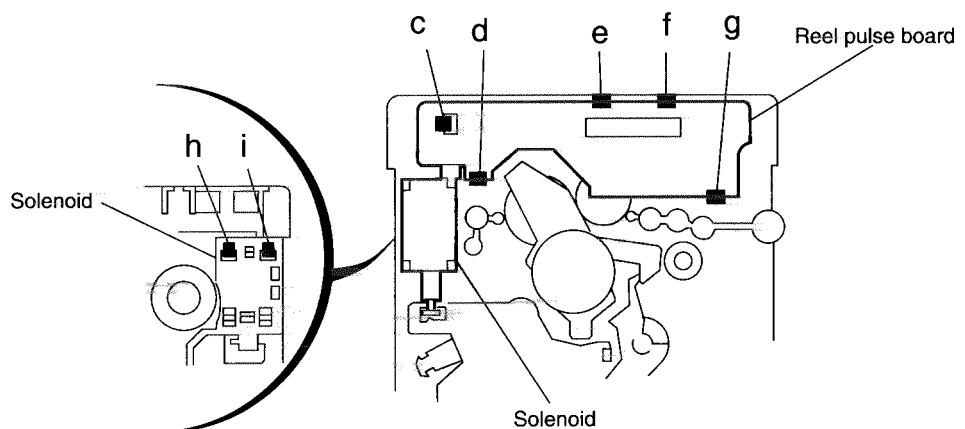

## Flow of functional operation until TOC read

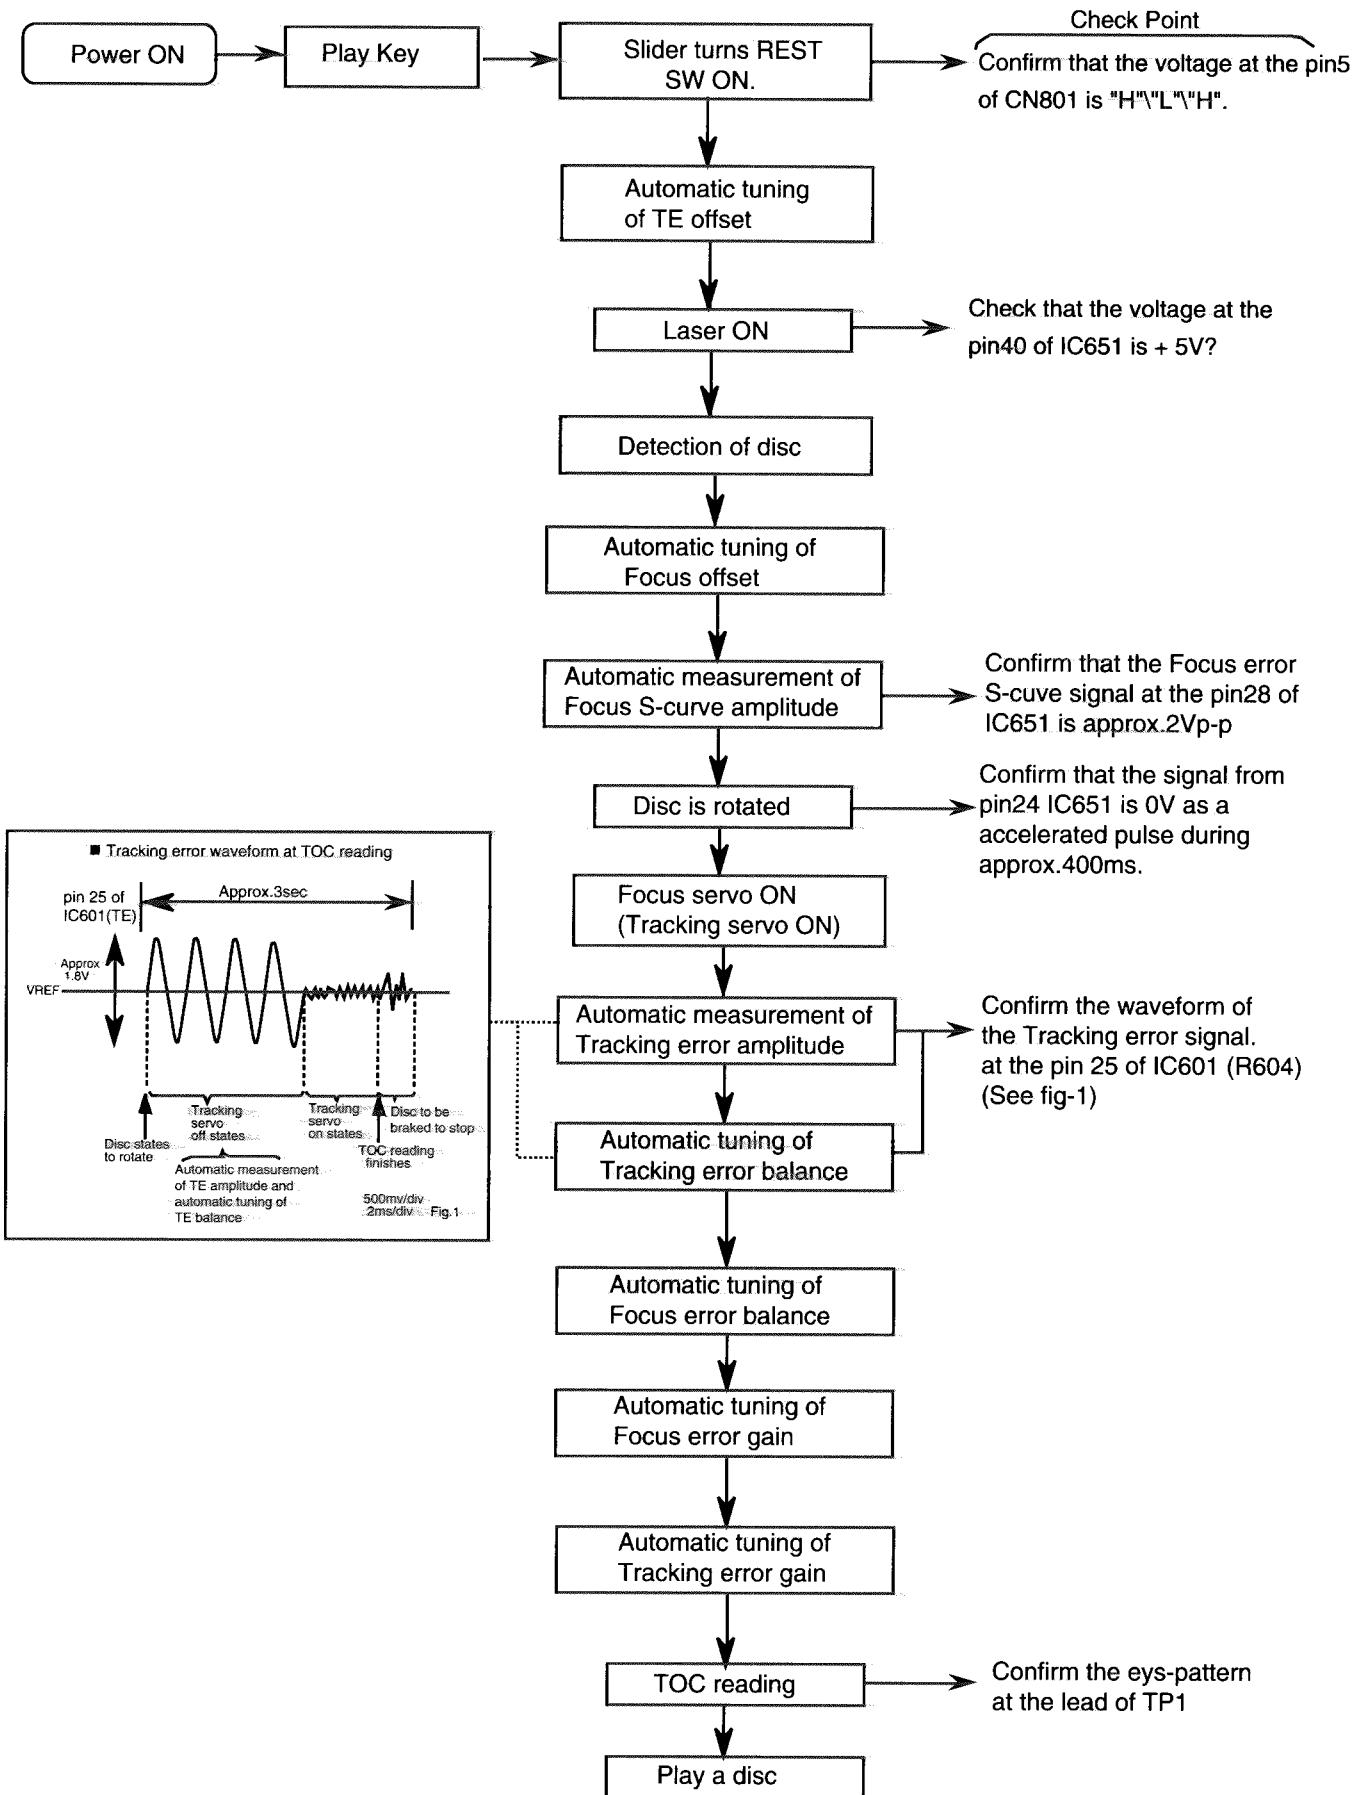


**Maintenance of laser pickup****(1) Cleaning the pick up lens**

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

**(2) Life of the laser diode**

When the life of the laser diode has expired, the following symptoms will appear.

- (1) The level of RF output (EFM output:amplitude of eye pattern) will below.

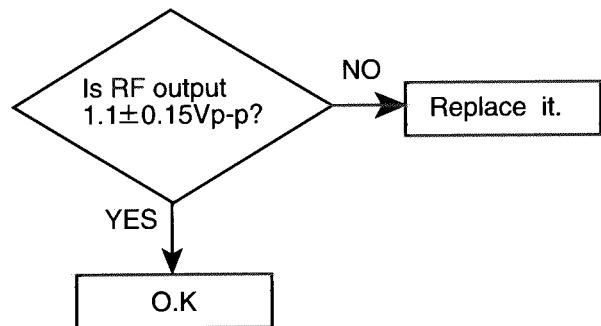**Replacement of laser pickup**

Turn off the power switch and, disconnect the power cord from the ac outlet.

Replace the pickup with a normal one.(Refer to "Pickup Removal" on the previous page)

Plug the power cord in, and turn the power on. At this time, check that the laser emits for about 3seconds and the objective lens moves up and down.  
Note: Do not observe the laser beam directly.

Play a disc.

Check the eye-pattern at TP1.

Finish.

- (3) Semi-fixed resistor on the APC PC board The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.  
If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.  
If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

# Adjustment method

## Measurement Instruments Required for Adjustment

1. Low frequency oscillator,  
This oscillator should have a capacity to output 0dBs to  $600\Omega$  at an oscillation frequency of 50Hz-20kHz.
2. Attenuator impedance :  $600\Omega$
3. Electronic voltmeter
4. Frequency counter
5. Wow flutter meter
6. Test tape  
VTT712 : For Tape speed and wow flutter ( 3kHz)  
VTT724 : For Reference level (1kHz)  
TMT7036 : For Head angle(10kHz),Play back frequency characteristics(1kHz),and dubbing frequency characteristics(63,1,10kHz)  
Because of frequency-mixed tape with 63,1k,10k and 14kHz(250nWb/m -24dB).  
Use this tape together with a filter.
7. Blank tape  
TAPE I : AC-225, TAPE II : AC-514
8. Torque gauge : For play and back tension  
Forward ; TW2111A, Reverse ; TW2121A  
Fast Forward and Rewind ; TW2231A
9. Test disc  
: CTS-1000(12cm),GRG-1211(8cm)
10. Jitter meter

## Measurement Conditions

Power supply voltage  
AC230V : (50Hz)

### Measurement

output terminal : Speaker out  
:TP101(Mesuring for TUNER/DECK/CD)  
:Dummy load 6 ohm

### Radio input signal

AM modulation frequency : 400Hz

Modulation factor : 30%

FM modulation frequency : 400Hz

Frequency displacement : 22.5kHz

### Frequency Range

AM 522kHz~1629kHz

LW 144kHz~288kHz

FM 87.5MHz~108MHz except Ver.EE  
65~74/87.5~108MHz only Ver.EE

### Standard measurement positions of volume and switch

Power : Standby (Light STANDBY Indicator)

SA-Bass : OFF

Sound mode : OFF

Main VOL. : 0 Minimum


Travers mecha set position : Disc 1

### Precautions for Measurement


1. Apply 30pF and  $33k\Omega$  to the IF sweeper output side and  $0.082\mu F$  and  $100k\Omega$  in series to the sweeper input side.
2. The IF sweeper output level should be made as low as possible within the adjustable range.
3. Since the IF sweeper is a fixed device, there is no need to adjust this sweeper.
4. Since a ceramic oscillator is used, there is no need to perform any MPX adjustment.
5. Since a fixed coil is used, there is no need to adjust the FM tracking.
6. The input and output earth systems are separated.  
In case of simultaneously measuring the voltage in both of the input and output systems with an electronic voltmeter for two channels, therefore, the earth should be connected particularly.
7. In the case of BTL connection amplifier, the minus terminal of speaker is not for earthing. Therefore, be sure not to connect any other earth terminal to this terminal. This system is of an OTL system.

## ■Arrangement of Adjusting Positions


Cassette mechanism section (Mechanism A section)

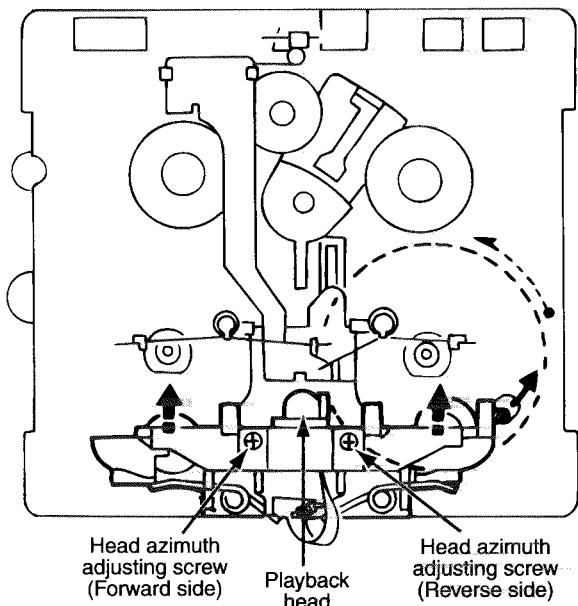

Cassette mechanism section (Back side)

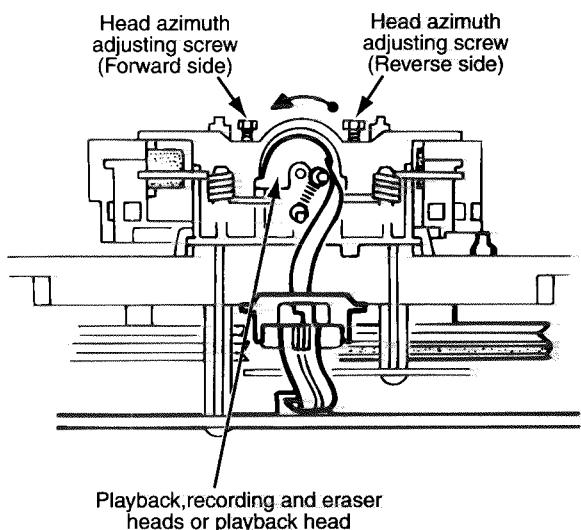

Cassette Mechanism Unit Section

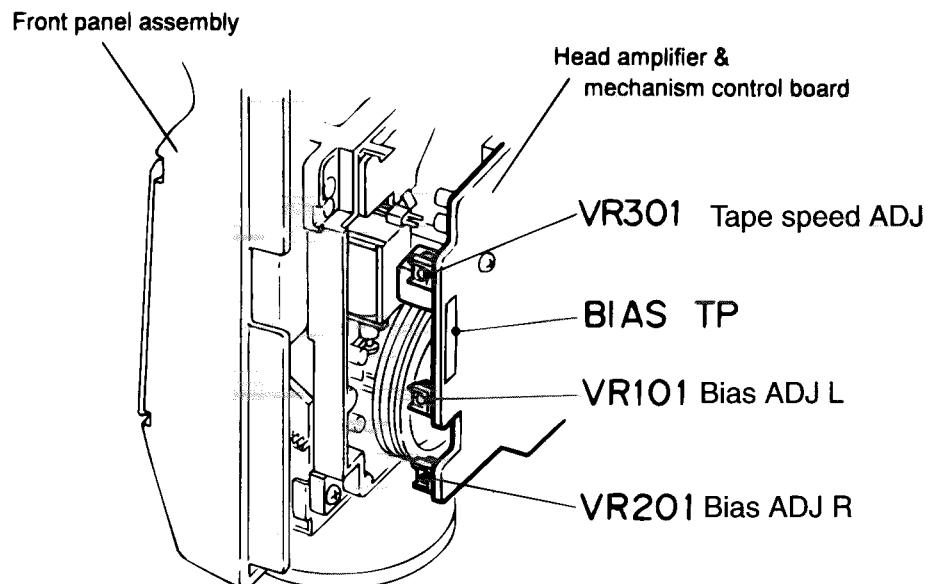

## ■ Tape Recorder Section

Items	Measurement conditions	Measurement method	Standard values	Adjusting positions
Confirmation of head angle	Test tape :TMT7036(10kHz) Measurement output terminal :Speaker terminal Speaker R (Load resistor:3Ω) :Headphone terminal	1.Playback the test tape TMT7036(10kHz). 2.With the playback mechanism or recording & playback mechanism, adjust the head azimuth screw so that the forward and reverse output levels become maximum. After adjustment, lock the head azimuth at least by half a turn. 3.In either case, this adjustment should be performed in both the forward and reverse directions with the head azimuth screw.	Maximum output	Adjust the head azimuth screw only when the head has been changed.
Confirmation of tape speed	Test tape :VTT712(3kHz) or TMT7036(3kHz) Measurement output terminal :Headphone terminal	<Constant speed> Adjust VR301 so that the frequency counter reading becomes $3,000\text{Hz} \pm 60\text{Hz}$ when playing back the test tape VTT712(3kHz) with the playback mechanism or playback and recording mechanism after ending forward winding of the tape.	Tape speed of decks (A and B) : $3,000\text{Hz} \pm 60\text{Hz}$	VR301

## ■ Reference Values for Confirmation items

Items	Measurement conditions	Measurement method	Standard values	Adjusting positions
Double tape speed	Test tape :TMT7036(10kHz) Measurement output terminal :Speaker terminal Speaker R (Load resistance:3Ω) measurement output terminal :Headphone terminal	After setting to the double speed motor, confirm that the frequency counter reading becomes $4,800+400/-300\text{Hz}$ when the test tape VTT712 (3kHz) has been play back with the playback mechanism.	$4,800+400/-300\text{Hz}$	Playback mechanism side
Difference between the forward and reverse speed. P.mecha and R/P mecha speed		When the test tape VTT712(3kHz) has been played back with the playback mechanism or recording and playback mechanism at the beginning of forward winding, the frequency counter reading of the difference between both of the mechanisms should be 6.0Hz or less.	60Hz or less	Both the playback and recording & playback mechanism
Wow & flutter	Test tape :TMT7036(10kHz) Measurement output terminal :Headphone terminal	When the test tape VTT712(3kHz) has been played back with the playback mechanism or recording and playback mechanism at the beginning of forward winding the frequency counter reading of wow & flutter should be 0.25% or less(WRMS).	with in 0.25% JIS(WTD)	Both the playback and recording & playback mechanism

## ■ Electrical Performance

Items	Measurement conditions	Measurement method	Standard values	Adjusting positions
Adjustment of recording bias current (Reference value)	*Mode : Forward or reverse mode *Recording mode *Test tape :AC-514 and AC-225 Measurement output terminal :Both recording and headphone terminals	1.With the recording and playback mechanism, load the test tapes(AC-514 to TYP II and AC-225 to TYP I ),and set the mechanism to the recording and pausing conditions in advance. 2.After connecting $100\Omega$ in series to the recorder head,measure the bias current with a valve voltmeter at both of the terminals. 3.After resetting the [PAUSE] mode,start recording. At this time,adjust VR101 for LcH and VR201 for RcH so that the recording bias current values become $4.0\mu A$ (TYP I ) and $4.20\mu A$ (TYP II ).	AC-225 :4.20 $\mu A$ AC-514 :4.0 $\mu A$	LcH :VR101 RcH :VR201
Adjustment of recording and playback frequency characteristics	Reference frequency :1kHz and 10kHz (REF:-20dB) Test tape :TYP II AC-514 Measurement input terminal :OSC IN	1.With the recording and playback mechanism,load the test tape(AC-514 to TYP II ),and set the mechanism to the recording and pausing condition in advance. 2.While repetitively inputting the reference frequency signal of 1kHz and 10kHz from OSC IN, record and playback the test tape. 3.While recording and playing back the test tape in TYP II ,adjust VR101 for LcH and VR201 for RcH so that the output deviation between 1kHz and 10kHz becomes $-1dB \pm 2dB$ .	Output deviation between 1kHz and 10kHz :-1dB $\pm 2dB$	LcH :VR101 RcH :VR201


## ■ Reference Values for Electrical Function Confirmation Items

Items	Measurement conditions	Measurement method	Standard values	Adjusting positions
Recording bias frequency	*Recording and playback side forward or reverse *Test tape :TYP II AC-514 *Measurement terminal BIAS TP on P.C.board	1.While changing over to and from BIAS 1 and 2, confirm that the frequency is changed. 2.With the recording and playback mechanism. load the test tape (AC-514 to TYP II ),and set the mechanism to the recording and pausing conditions in advance. 3.Confirm that the BIAS TP frequency on the P.C.board is $100kHz \pm 6kHz$ .	100kHz +9kHz -7kHz	
Eraser current (Reference value)	*Recording and playback side forward or reverse *Recording mode *Test tape :AC-514 and AC-225 Measurement terminal Both of the eraser head	1.With the recording and playback mechanism, load the test tapes(AC-514 to TYP II and AC-225 to TYP I ),and set the mechanism to the recording and pausing condition in advance. 2.After setting to the recording conditions,connect $1M\Omega$ in series to the eraser head on the recording and playback mechanism side,and measure the eraser current from both of the eraser terminal.	TYP II :120mA TYP I :75mA	

## Diagnosis which uses extension wire method


### CD Changer mechanism

1. Remove the top cover and CD changer mechanism.
2. The extension wire "A" is connected with CN651 and CN410.

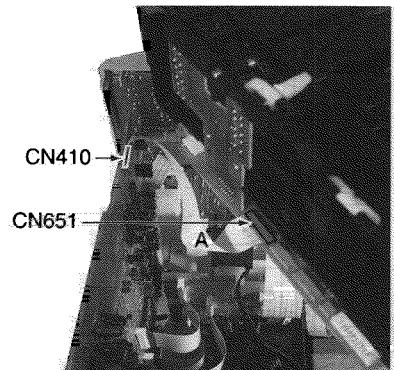




### System control P.C.board

1. Remove the top cover and CD changer mechanism.
2. Remove the front panel assembly.
3. Disconnect the card wire "B", "C", "D".
4. The 1pin wire is removed from D851
5. Six screws "E" are removed, and the bracket is removed.
6. Two screws "F" on the system control P.C.board are removed, and the system control P.C.board is knocked down forward.
7. The flat wire "G" is connected with CN703 on the Power AMP.P.C.board while remove flat wire "G" from the hook, and extended.
8. Two extension wires "H" are connected with CN860, CN412, and CN862, CN411 respectively.
9. The extension wire "I" is connected with CN861 and CN413.
10. The extension wire "J" is connected with CN856 and CN810.
11. The extension wire "K" is connected with CN857 and CN811.
12. The extension wire "L" is connected with CN306 and CN812.

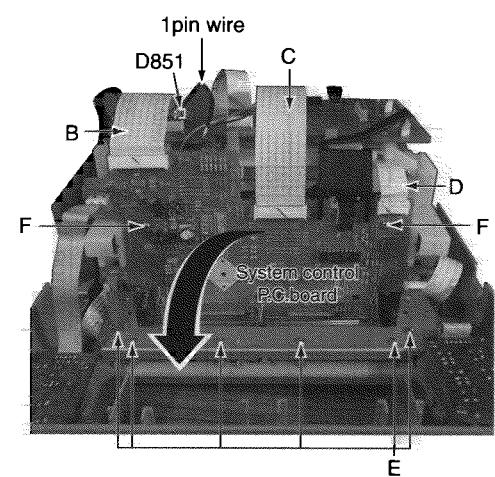


### Extension wire parts No.

A : VWF1019-45TTA  
 H : QUQ412-2140CJ  
 I : QUQ412-1738CJ  
 J : QUQ412-2120CJ  
 K : VWF1223-30TTB  
 L : VWF1211-28TTB

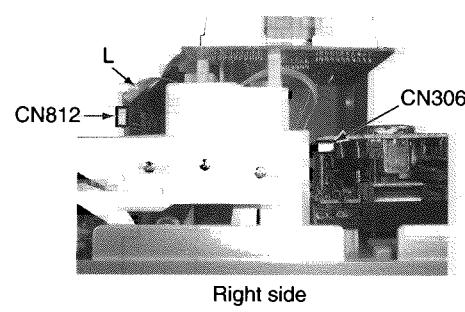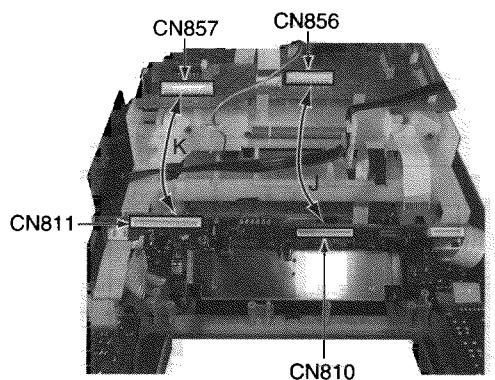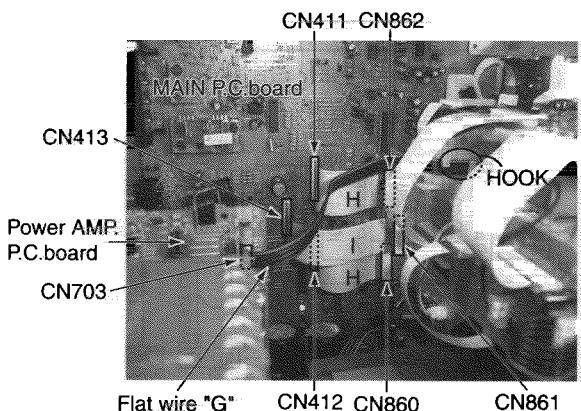

# Block diagram

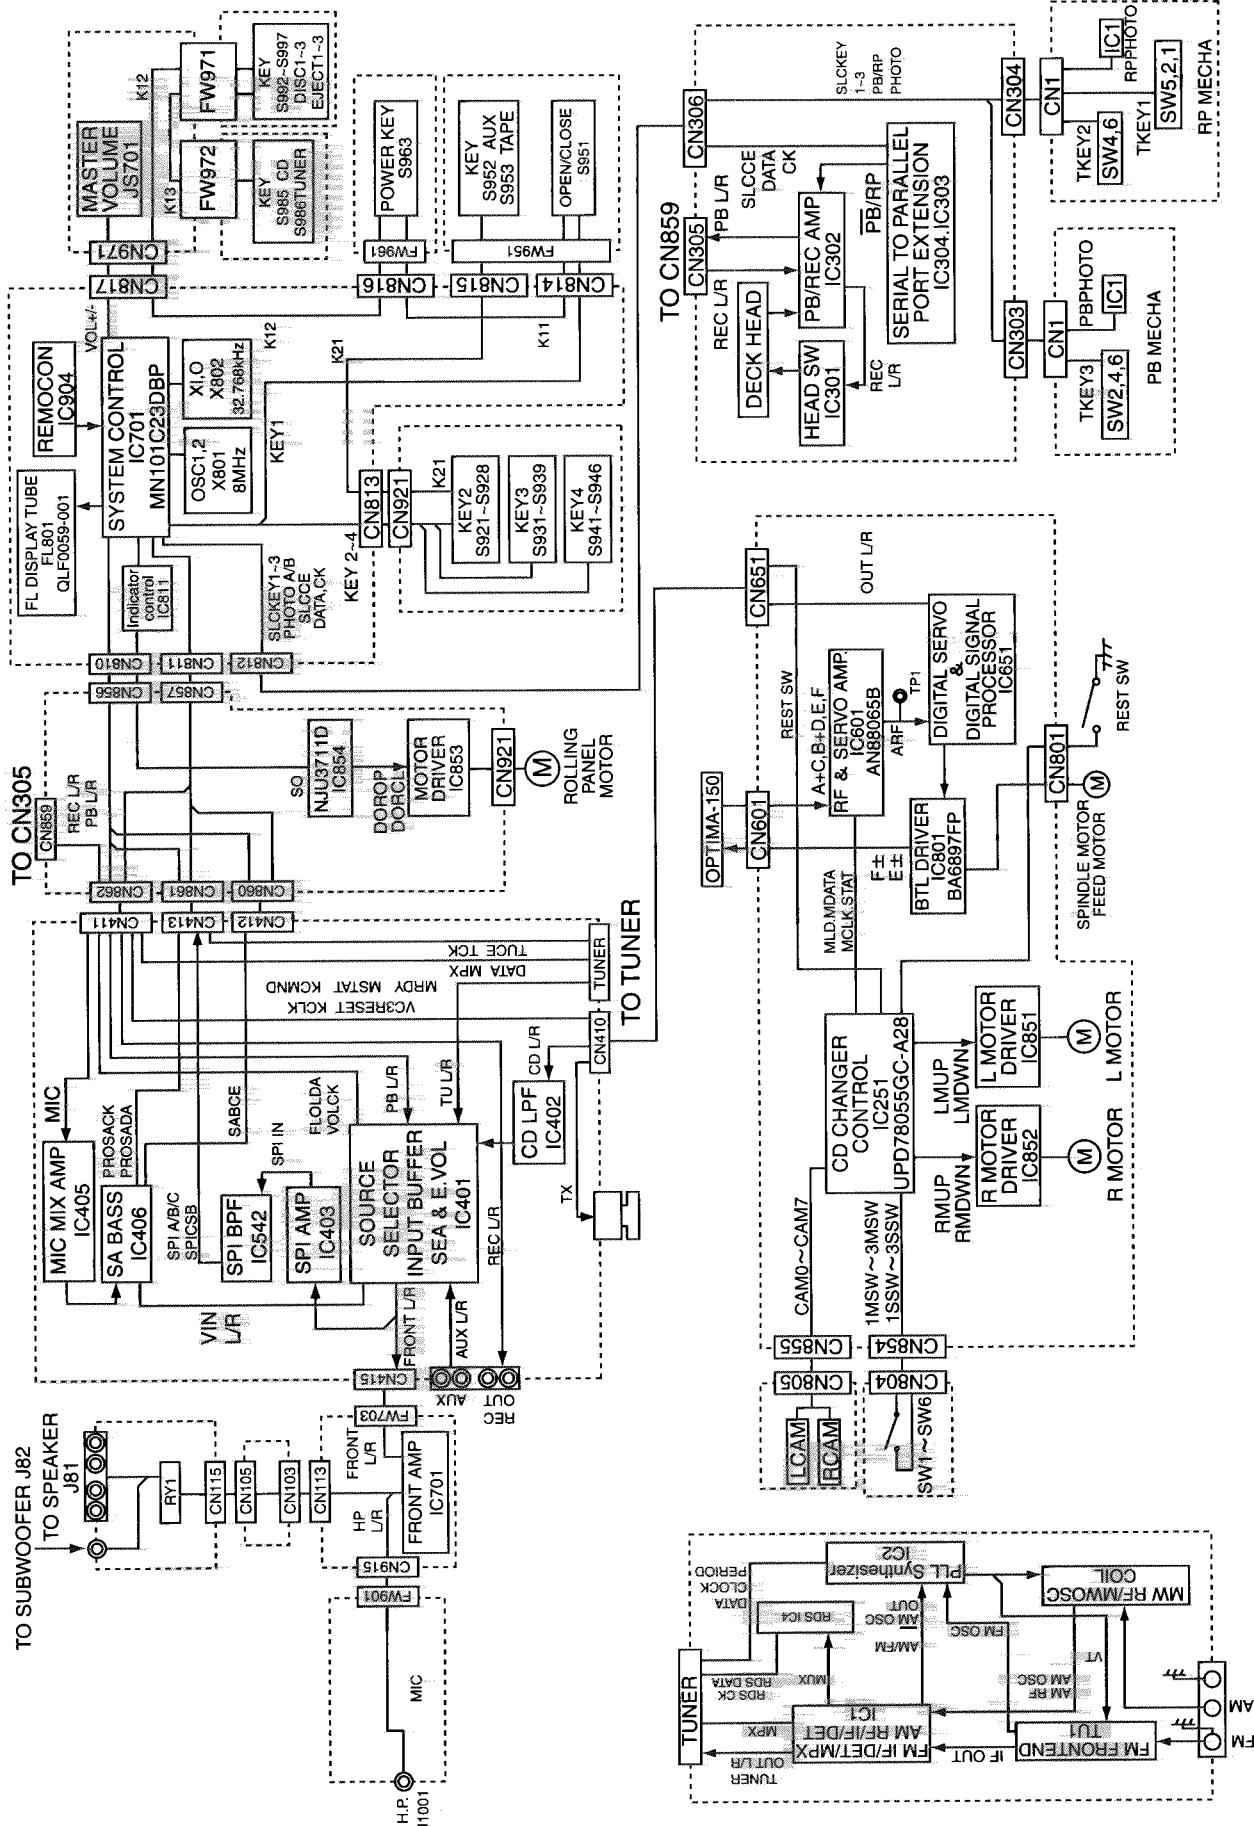





# Schematic Diagrams

## ■ Power Transformer Section


POWER SUPPLY BLOCK

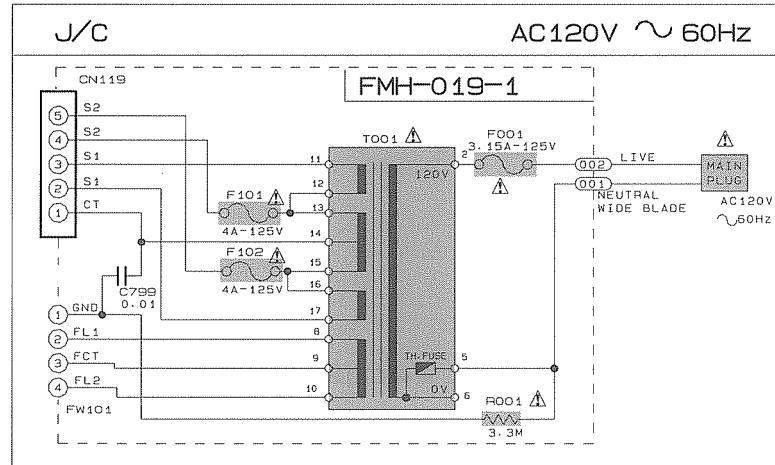


POWER SUPPLY BLOCK

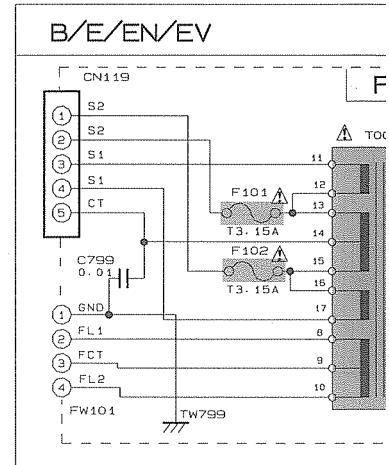


POWER SUPPLY BLOCK

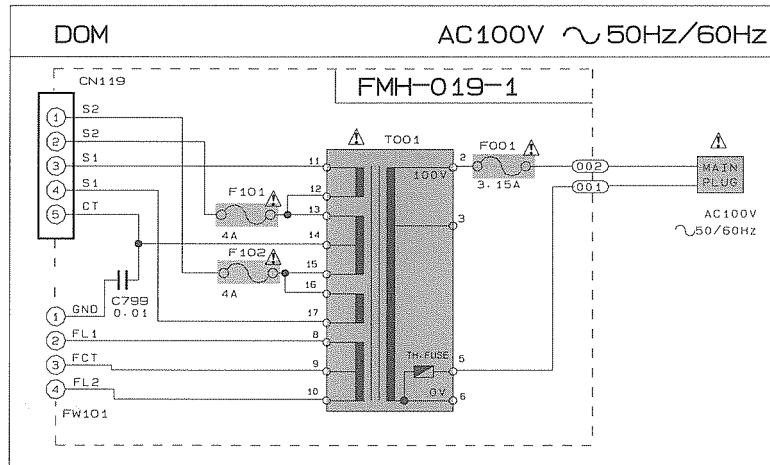

POWER SUPPLY BLOCK

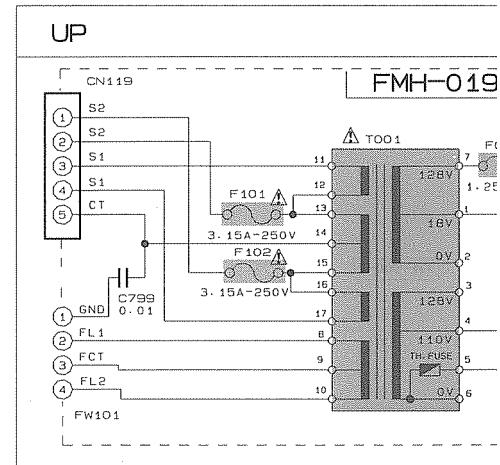

POWER SUPPLY BLOCK

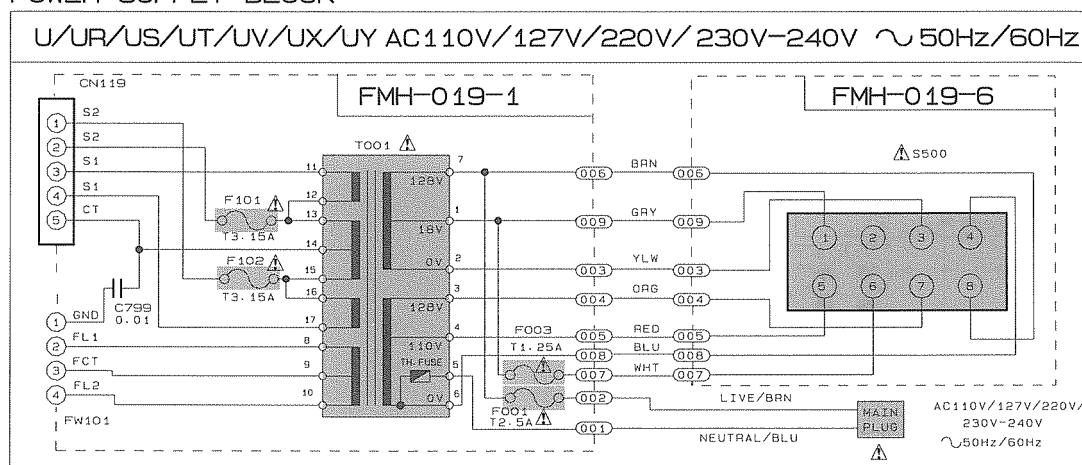

SHEET NUMBER	N T
1/11	MX-J50/C, CA-MXJ55R/MX-
2/11	MX-J50/C, CA-MXJ55R/MX-
3/11	MX-J50/C, CA-MXJ55R/MX-
4/11	MX-J50/MX-J
5/11	CA-MXJ55R/C
6/11	MX-J5
7/11	MX-J5
8/11	MX-J50/C, CA-MXJ55R/MX-
9/11	MX-J5
10/11	MX-J50/C, CA-MXJ55R/MX-
11/11	MX-J50/C, CA-MXJ55R/MX-


NOTES: MARK [\*] IS  
DETAILS ARE

A | B | C | D | E


OK

## POWER SUPPLY BLOCK

AC230V ~50Hz

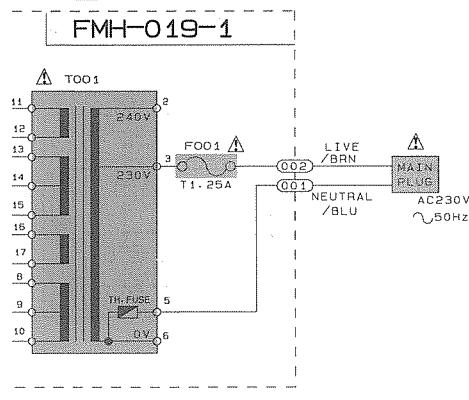


AC240V ~50Hz

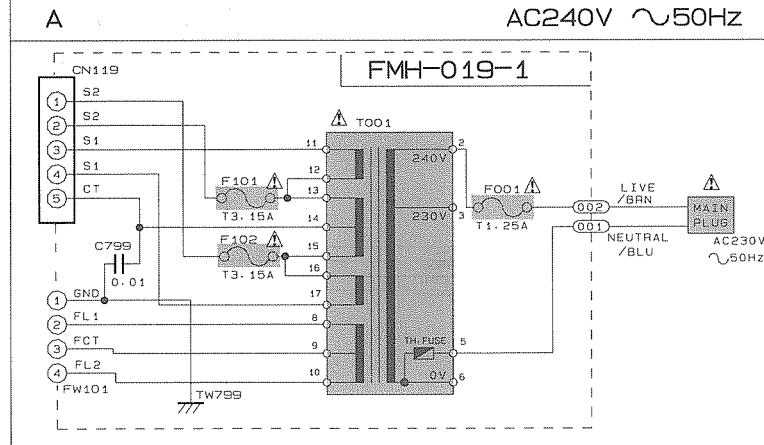


## POWER SUPPLY BLOCK

AC220V ~50Hz

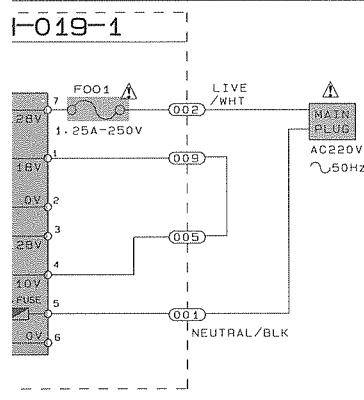

AC230V ~50Hz

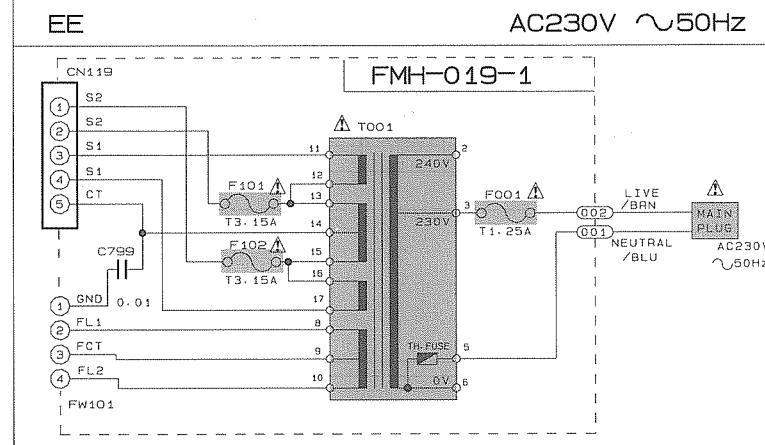

MODEL NUMBERS TO BE APPLIED	CIRCUITS DESCRIPTION
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. PRIMARY WITH MAINS TRANSFORMER
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. DC REGULATORS/AUDIO OUTPUT
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. EXTERNAL INPUT. SOURCE SELECTOR SWITCH
J50/MX-J56/CA-MXJ50	. TUNER RF/IF/FM MULTIPLEX (ONLY FOR J. C. U. UP. UR. US. UT. UV. UX. UY. A. DOM)
MXJ55R/CA-MXJ530R	. TUNER RF/IF/FM MULTIPLEX (ONLY FOR B. E. EN. EVI)
MX-J55R	. TUNER RF/IF/FM MULTIPLEX (ONLY FOR EE)
MX-J55R	. POLAR STEREO MULTIPLEX (ONLY FOR EE)
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. FL DISPLAY. SYSTEM CONTROL LSI. USER CONTROL KEYS
MX-J50	. MIC AMP. ECHO CIRCUIT (ONLY FOR U/UP/UR/US/UT/UV/UX/UY)
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. TAPE DECK MECHANISM CONTROL . TAPE CIRCUITS SUCH AS PRE-AMP AND BIAS
MX-J50/CA-MXJ50/MX-J56 J55R/MX-J55R/CA-MXJ530R	. CD SERVO AND CD SYSTEM CONTROL . CO CHANGER MECHANISM CONTROL

< [\*] IS TO SHOW DEVIATION IN VERSIONS.  
ALLS ARE EXPLAINED NEAR THE MARK.

MODEL:  
MX-J50/CA-MXJ50/CA-MXJ55R  
CA-MXJ530R/MX-J55R/MX-J56

SHEET  
1 / 11

Parts are safety assurance parts.  
When replacing those parts make sure to use the specified one.

E


F

G


H

I

## ■ Power Amplifier & Regulator Section

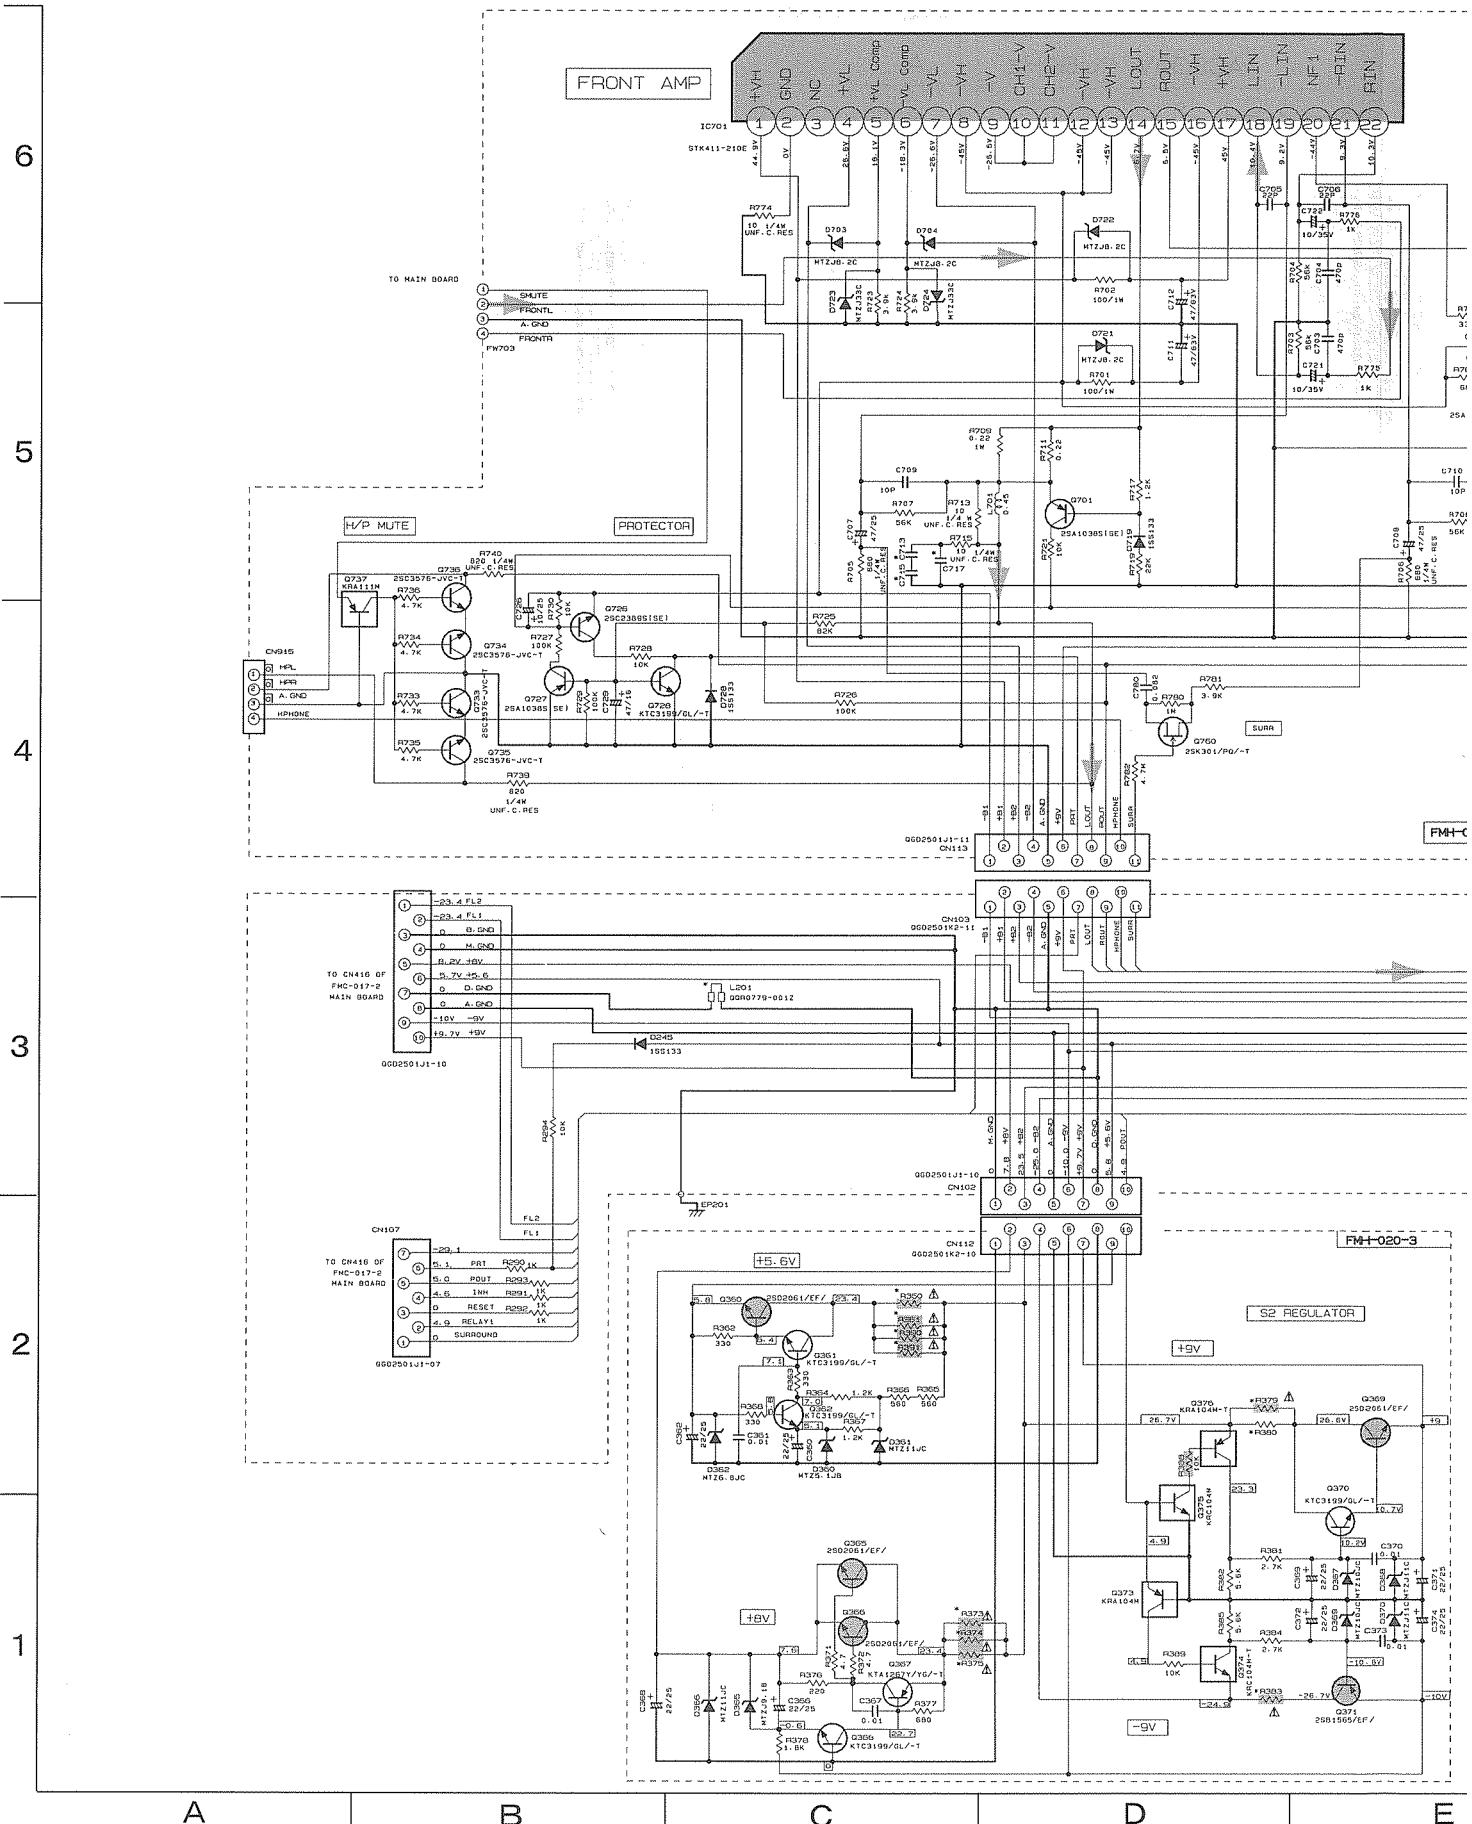

# CA-MXJ55R/CA-MXJ530R

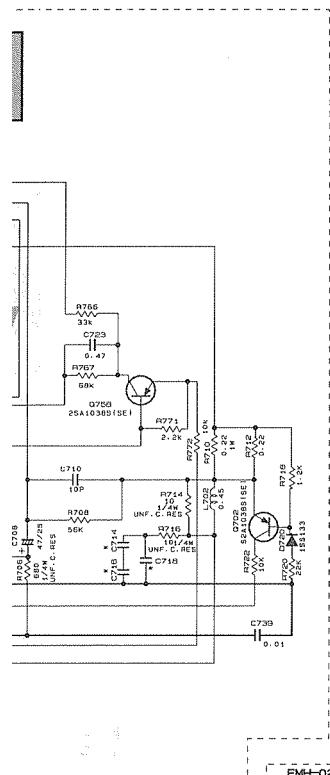


\* MARK

	MX-J50	CA-MX-J530	MX-J50	MX-J55	CA-MXJ530R	CA-MXJ50
	B/E/EN/EV	J	C	E	B/E/EN/EV	DH
C233	0.20 (A: 0.01)	0.01	0.01	0.01	0.01	0.01
C715-714	0.1	0.1	NONE	0.1	0.1	NONE
C715-716	0.1	0.1	NONE	0.1	0.1	NONE
C717-718	NONE	NONE	0.1	NONE	NONE	0.1
A392	NONE	NONE	USED	NONE	NONE	NONE
T4002	USED	NONE	USED	USED	USED	USED
L201	B205 (A: USED)	USED	B205	B205	B205	B205
R373	221W1 F-RES	221W1 F-RES	NONE	221W1 F-RES	221W1 F-RES	221W1 F-RES
R374	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES
R375	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES	221W1 F-RES
R379	SHORT	SHORT	221W1 F-RES	221W1 F-RES	SHORT	SHORT
R390	NONE	NONE	221W1 F-RES	221W1 F-RES	NONE	NONE
R393	SHORT	SHORT	151W1 F-RES	SHORT	SHORT	SHORT
R395	2-211W1F-RES	2-211W1F-RES	NONE	2-211W1F-RES	2-211W1F-RES	2-211W1F-RES
R396	2-211W1F-RES	2-211W1F-RES	NONE	2-211W1F-RES	2-211W1F-RES	2-211W1F-RES
R397	NONE	NONE	221W1 F-RES	NONE	NONE	NONE
R398	NONE	NONE	221W1 F-RES	NONE	NONE	NONE
R399	NONE	NONE	221W1 F-RES	NONE	NONE	NONE
R400	NONE	NONE	221W1 F-RES	NONE	NONE	NONE

FMI-020-2

FMI-020-4


RELAY-CONTROL

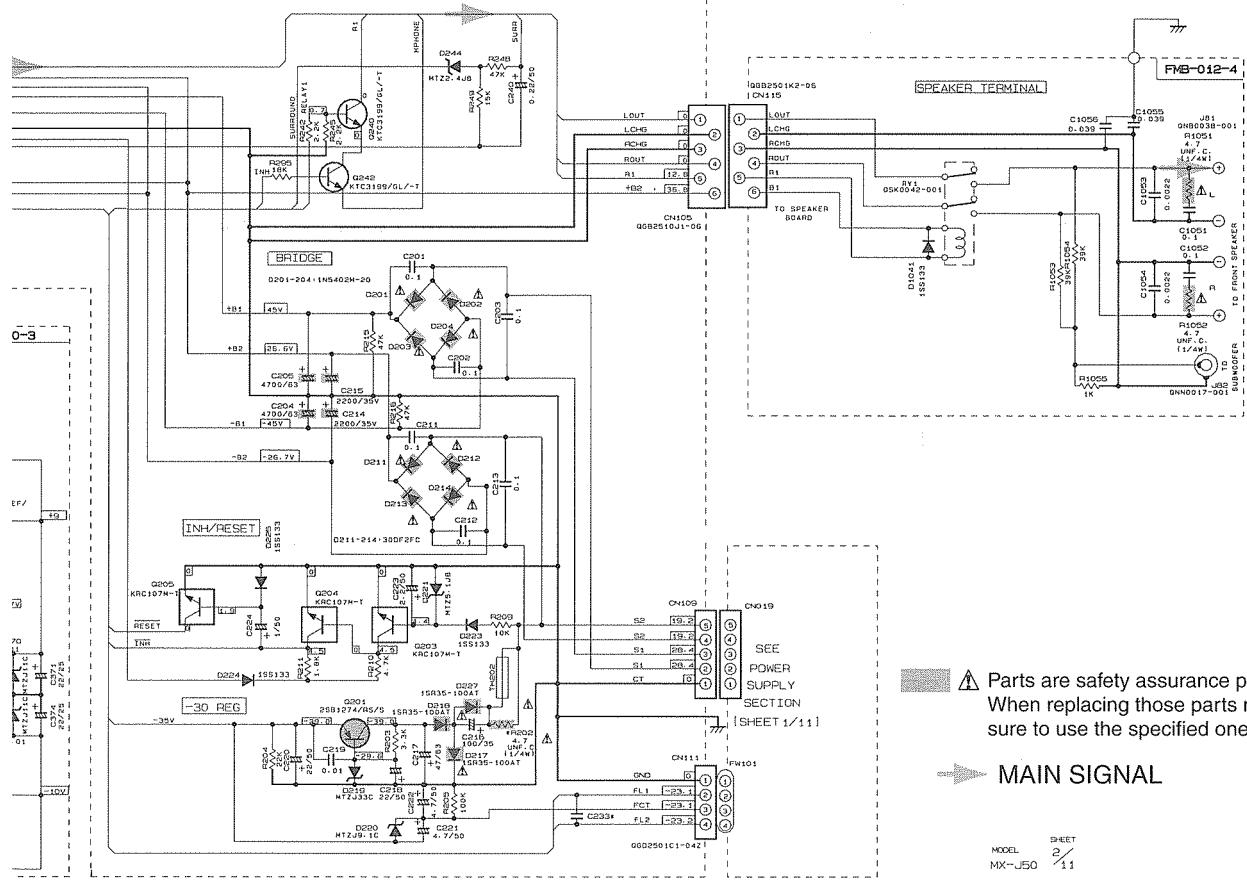

⚠ Parts are safety assurance parts.  
When replacing those parts make  
sure to use the specified one.

MAIN SIGNAL

## Function & Main Amplifier Section

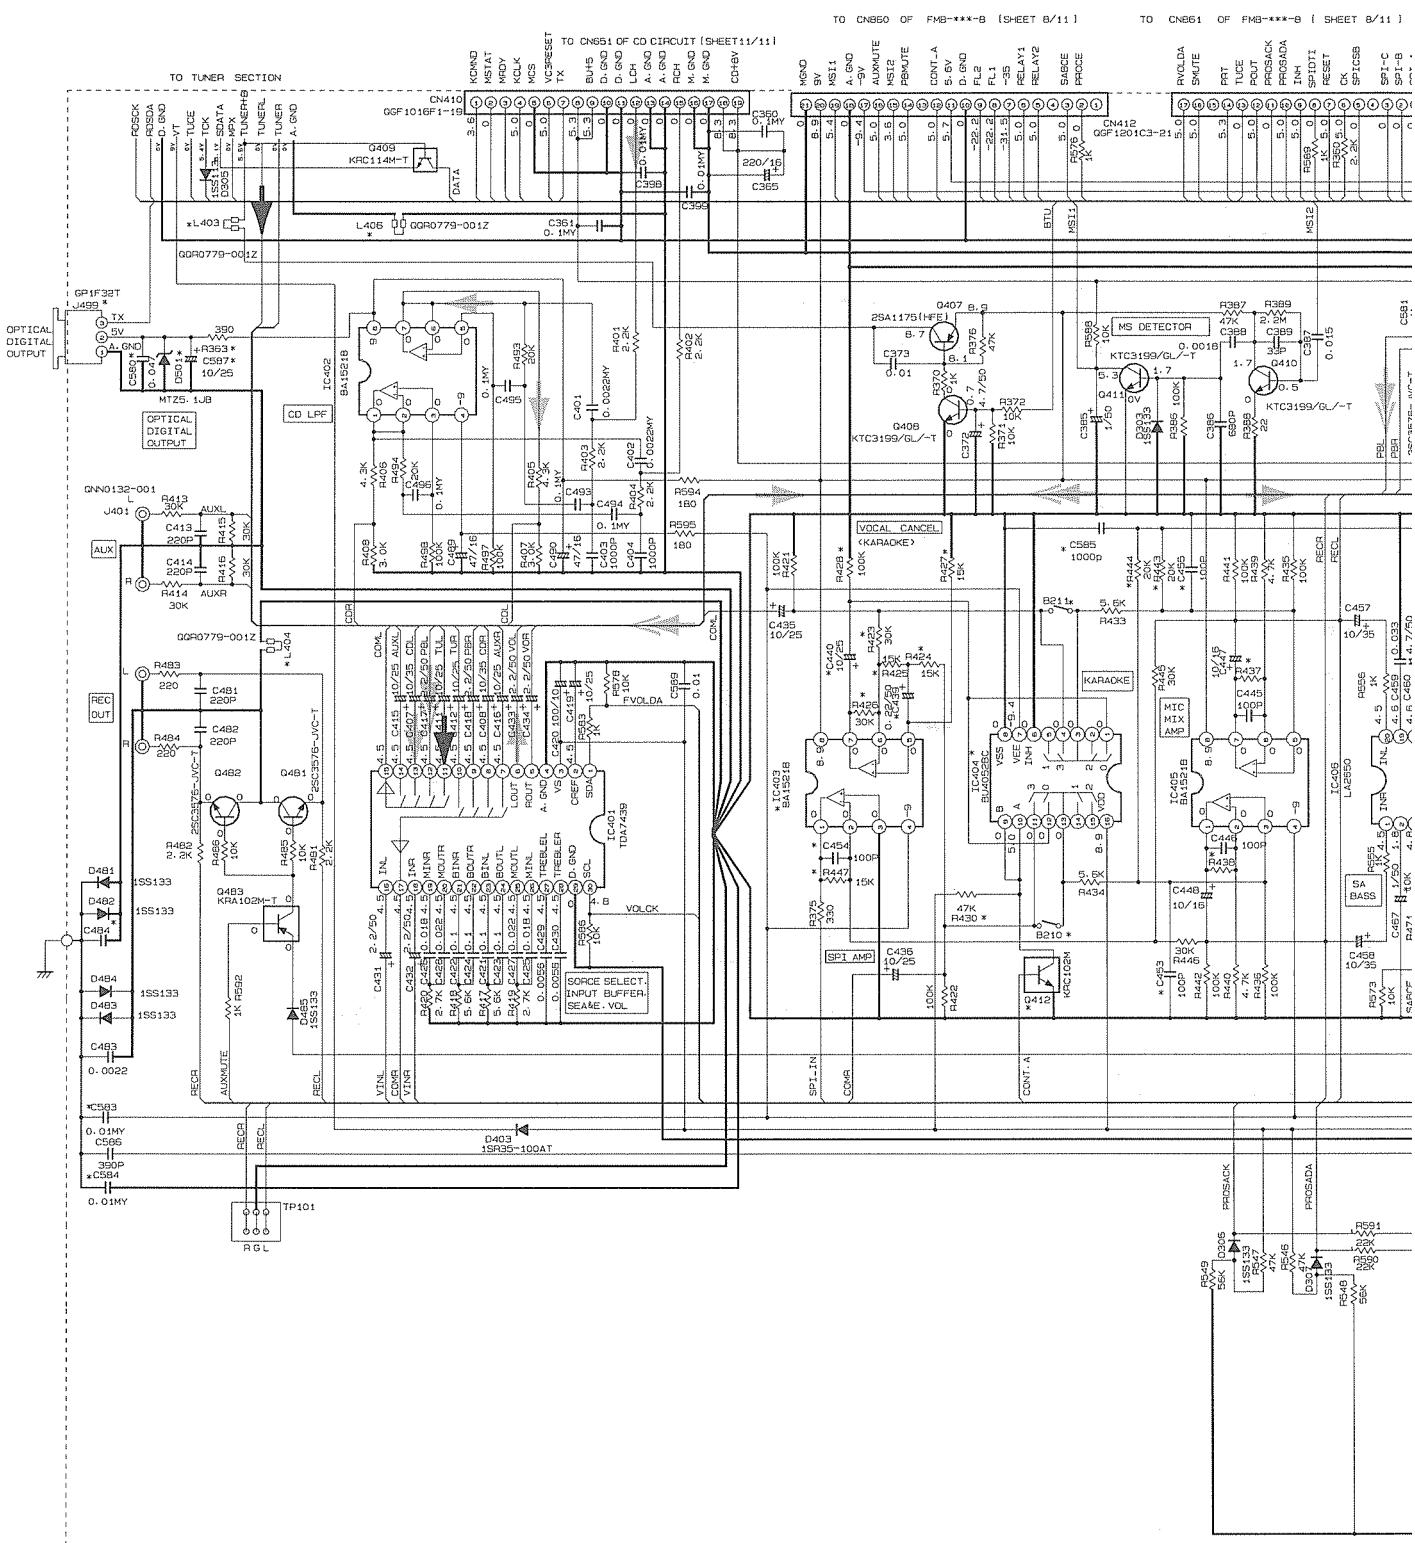


A

B

C

D

E

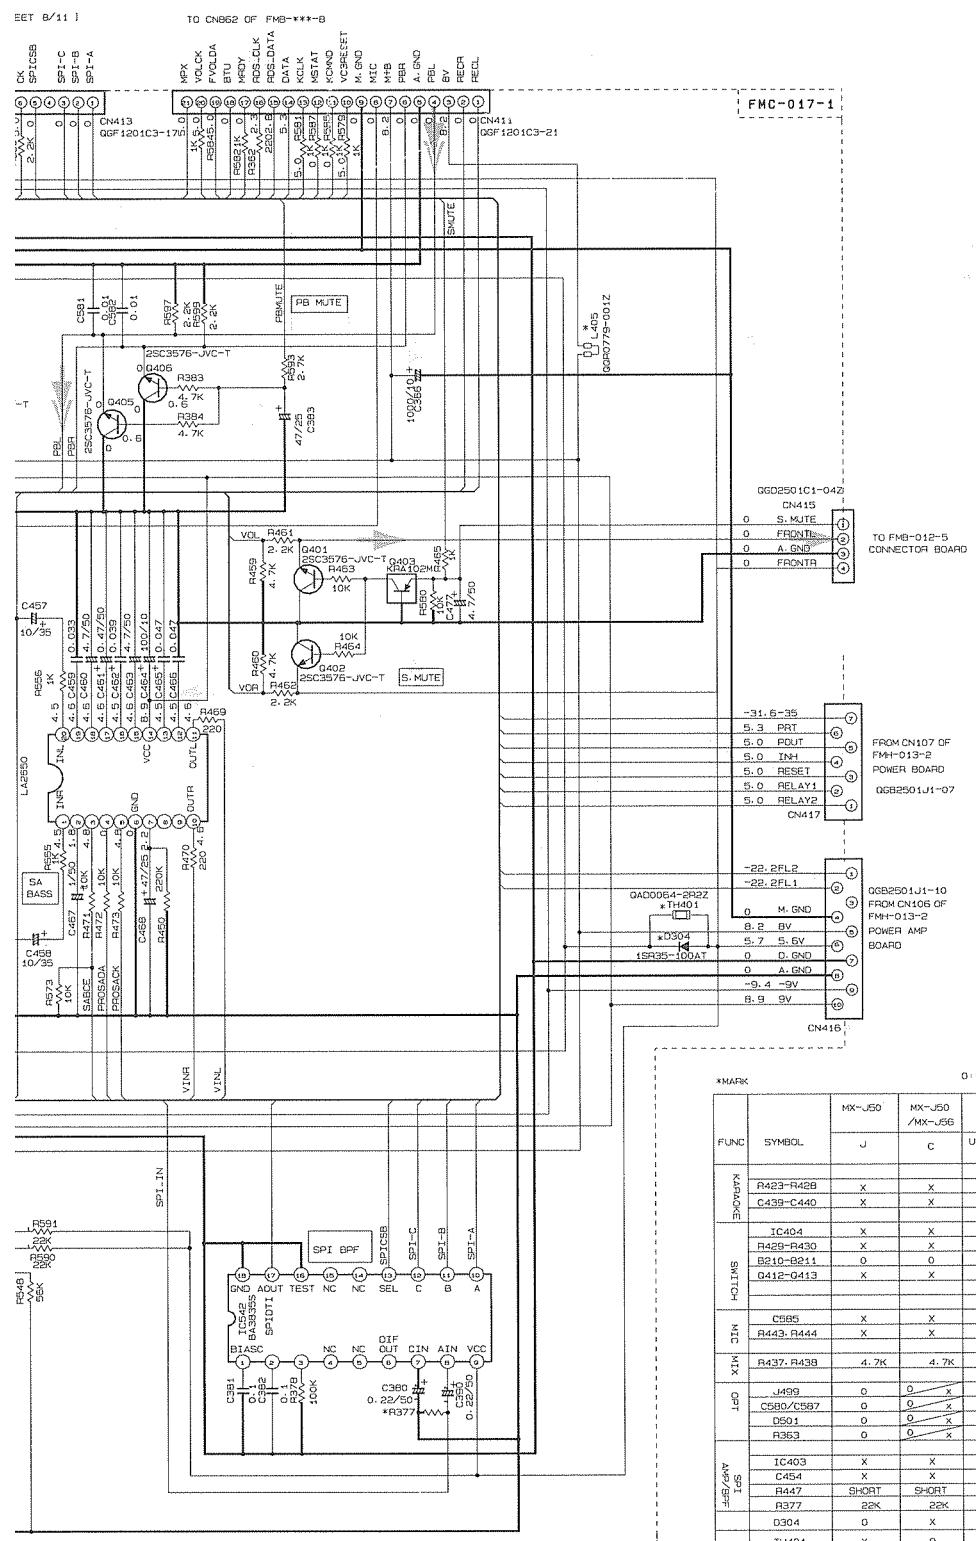

CD / MAIN SIGNAL

## ► TUNER SIGNAL

TAPE P.B. SIGNAL

MODEL MX-J56

MODEL MX-J50

MODEL MX-J55R


CA-MXJS  
MODEL CA-MXJS

MODEL CA-MXJE

三  
一

		Q: USED X: NONE									
FUND	SYMBOL	MX-J50	MX-J50 /MX-J66	MX-J50	MX-J50	CA-MXJ530R /CA-MXJ55R		MX-J55R		CA-MXJ50	
		J	C	U-US-UP UT-UB	A	B-E-N-EV	EE	DM			
SINTRICHE	R423-R428	X	X	O	X	X	X	X	X	X	
	C439-C440	X	X	O	X	X	X	X	X	X	
	IC404	X	X	O	X	X	X	X	X	X	
	R429-R430	X	X	O	X	X	X	X	X	X	
	B210-B211	O	O	X	O	O	O	O	O	O	
	G412-G413	X	X	O	X	X	X	X	X	X	
	C595	X	X	O	X	X	X	X	X	X	
	R443-R444	X	X	O	X	X	X	X	X	X	
	R437-R438	4.7K	4.7K	5.8K	4.7K	4.7K	4.7K	4.7K	4.7K	4.7K	
	J499	O	O	X	O	O	O	O	O	O	
TET	C580/C587	O	O	X	O	O	O	O	O	O	
	D501	O	O	X	O	O	O	O	O	O	
	R363	O	O	X	O	O	O	O	O	O	
	IC403	X	X	O	X	X	X	X	X	X	
	C454	X	X	O	X	X	X	X	X	X	
	R447	SHORT	SHORT	O	SHORT	SHORT	SHORT	SHORT	SHORT	SHORT	
	R377	22K	22K	10K	22K	22K	22K	22K	22K	22K	
	D304	O	X	X	X	X	X	X	X	X	
	TH401	X	O	O	O	O	O	O	O	O	
	L406	O	O	O	O	O	O	SHORT	O	O	
ADAMSON	L403	O	O	O	O	O	O	SHORT	O	O	
	L404	SHORT	SHORT	SHORT	O	O	O	SHORT	SHORT	SHORT	
	L405	SHORT	SHORT	SHORT	O	O	O	SHORT	SHORT	SHORT	
	R362	X	X	X	O	O	O	O	X	X	
	C453-C455	X	X	X	O	O	O	X	X	X	
	C484	100P	100P	1000P	0.0022	0.0022	100P	100P	100P	100P	
	C399-C399	O	O	O	O	O	O	X	O	O	
	C583	X	X	X	O	O	O	X	X	X	
	C584	X	X	X	O	O	O	X	X	X	

## ■ TUNER Section (For Ver. B,E,EN,EV)

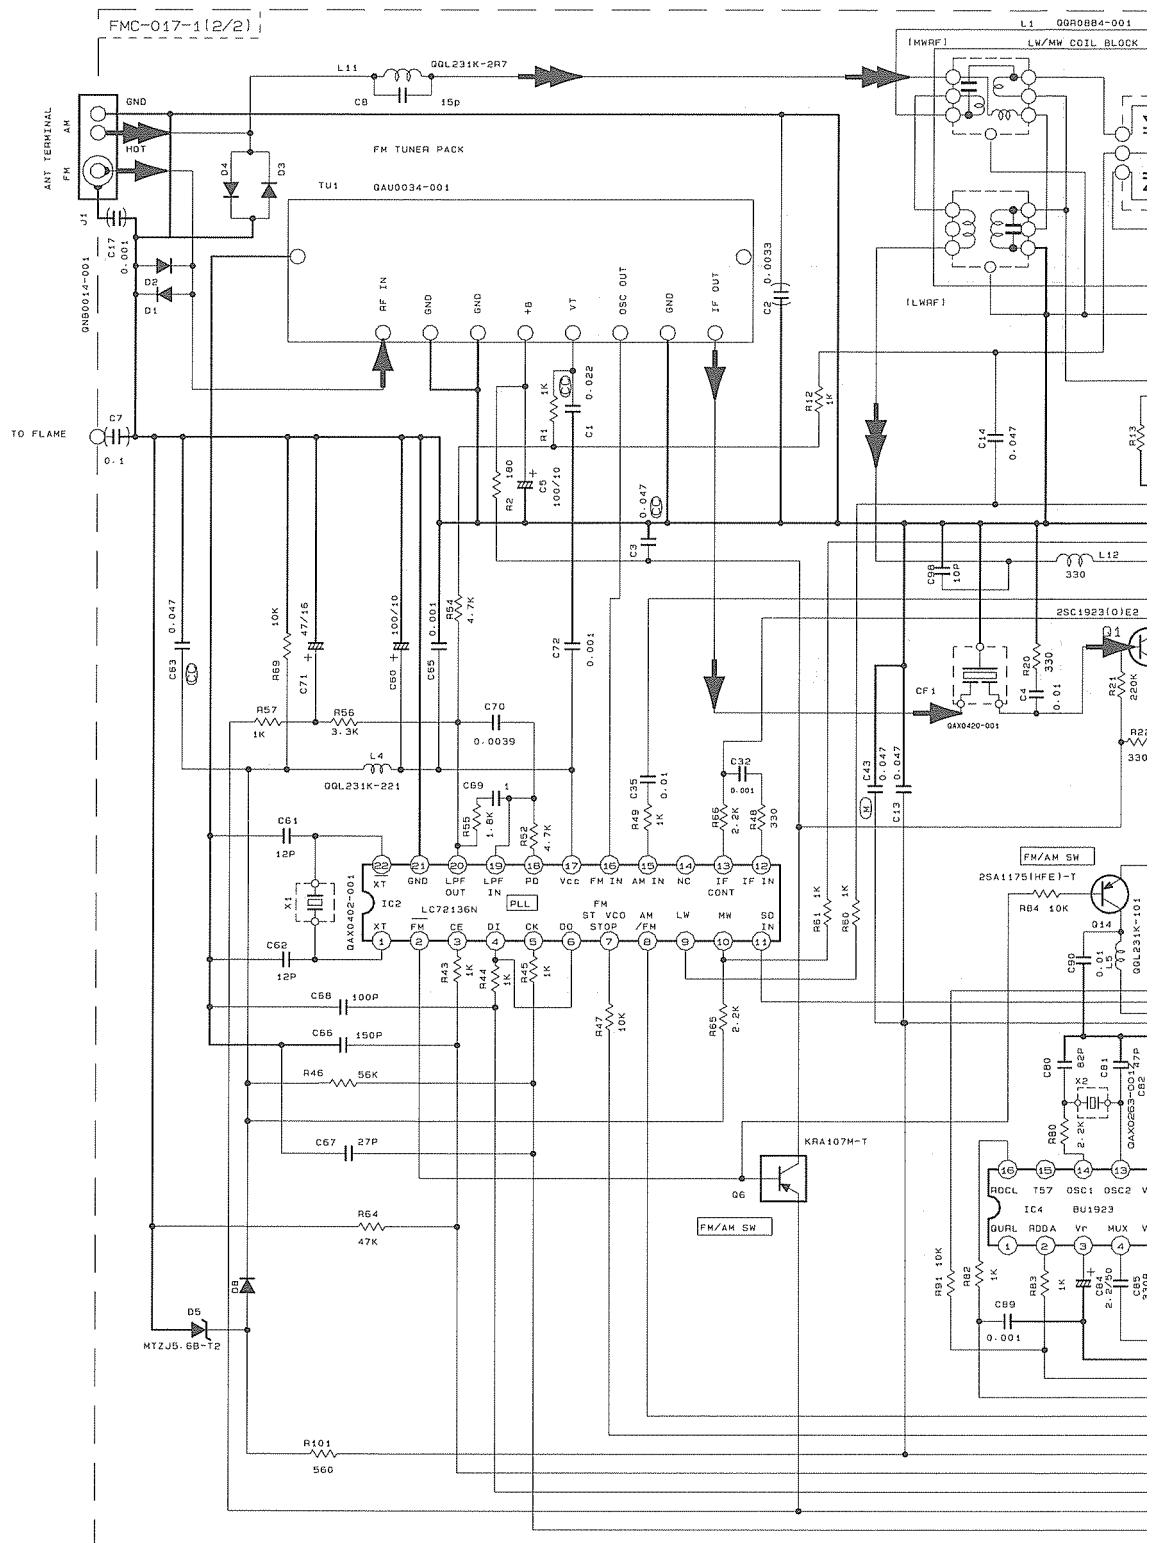

	CONDITION	PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
IC1	FM NO SIGNAL	3.5	9.1	3.5	3.5	0.4	7.0	6.4	9.1	0	1.3	0.3	0.5	0.6	B	B	4.3	4.3	4.3	4.3	3.2	3.2	2.8	3.5	0	0	3.4	3.4	3.6	3.6	
	FM 50dB STEREO	3.5	9.1	3.5	3.5	0	0	0	0.2	9.1	2.3	1.3	4.3	0	0.6	B	B	4.3	4.3	4.3	4.3	3.2	3.2	2.8	3.1	0	0	3.6	3.6	3.6	3.6
	AM NO SIGNAL	3.5	9.1	3.5	3.5	0	9.1	6.4	9.1	2.7	1.3	0	0	0.6	0.1	5.6	4.2	4.2	4.2	4.2	3.2	3.2	2.8	2.9	0.6	0.5	3.5	3.5	3.5	3.5	
IC2	FM NO SIGNAL	2.4	0	0	5.6	4.9	5.6	B	8	3.6	3.8	8.4	0	0	0	0	2.4	4.9	0.7	0.7	7.2	0	2.6								

A

B


G

D

---

E

# CA-MXJ55R/CA-MXJ530R

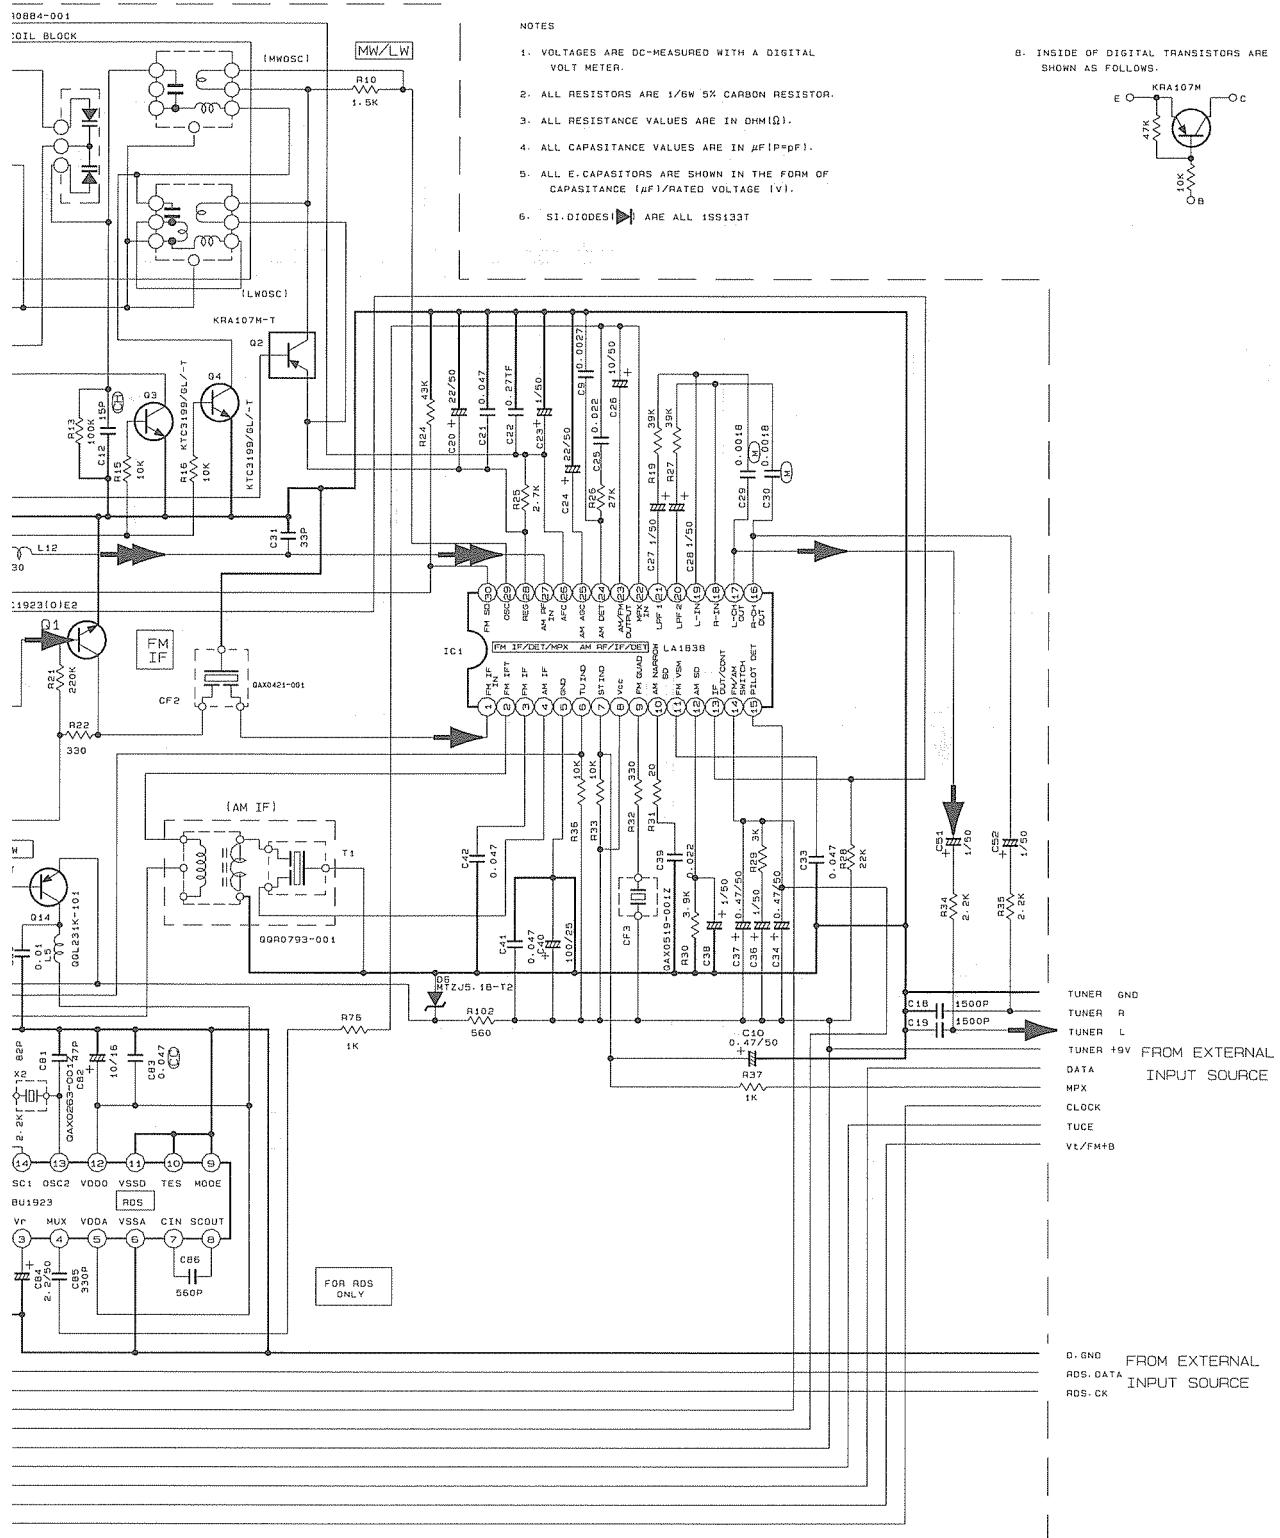

Tr NO.	Q1			Q6					
PIN NO.	E	C	B	E	C	B			
FM 87.5MHz NO SIGNAL	0	7.4	0.8	8.4	8.3	0			
AM 522kHz NO SIGNAL	0	0	0	8.5	0	8.4			
Tr NO.	Q2			Q3			Q4		
PIN NO.	E	C	B	E	C	B	E	C	B
AM 522kHz NO SIGNAL	3.5	3.5	0.3	0	0	0.7	0	0	0.7
AM 144kHz NO SIGNAL	3.5	3.5	3.5	0	0	0.1	0	0	0.1

B/E/EN/EV  
MODEL CA-MXJ530R  
CA-MXJ55R  
SHEET 11

→ FM/TUNER MAIN SIGNAL  
→ AM SIGNAL

E


F

G


H

I


## ■ TUNER Section (For Ver. EE)

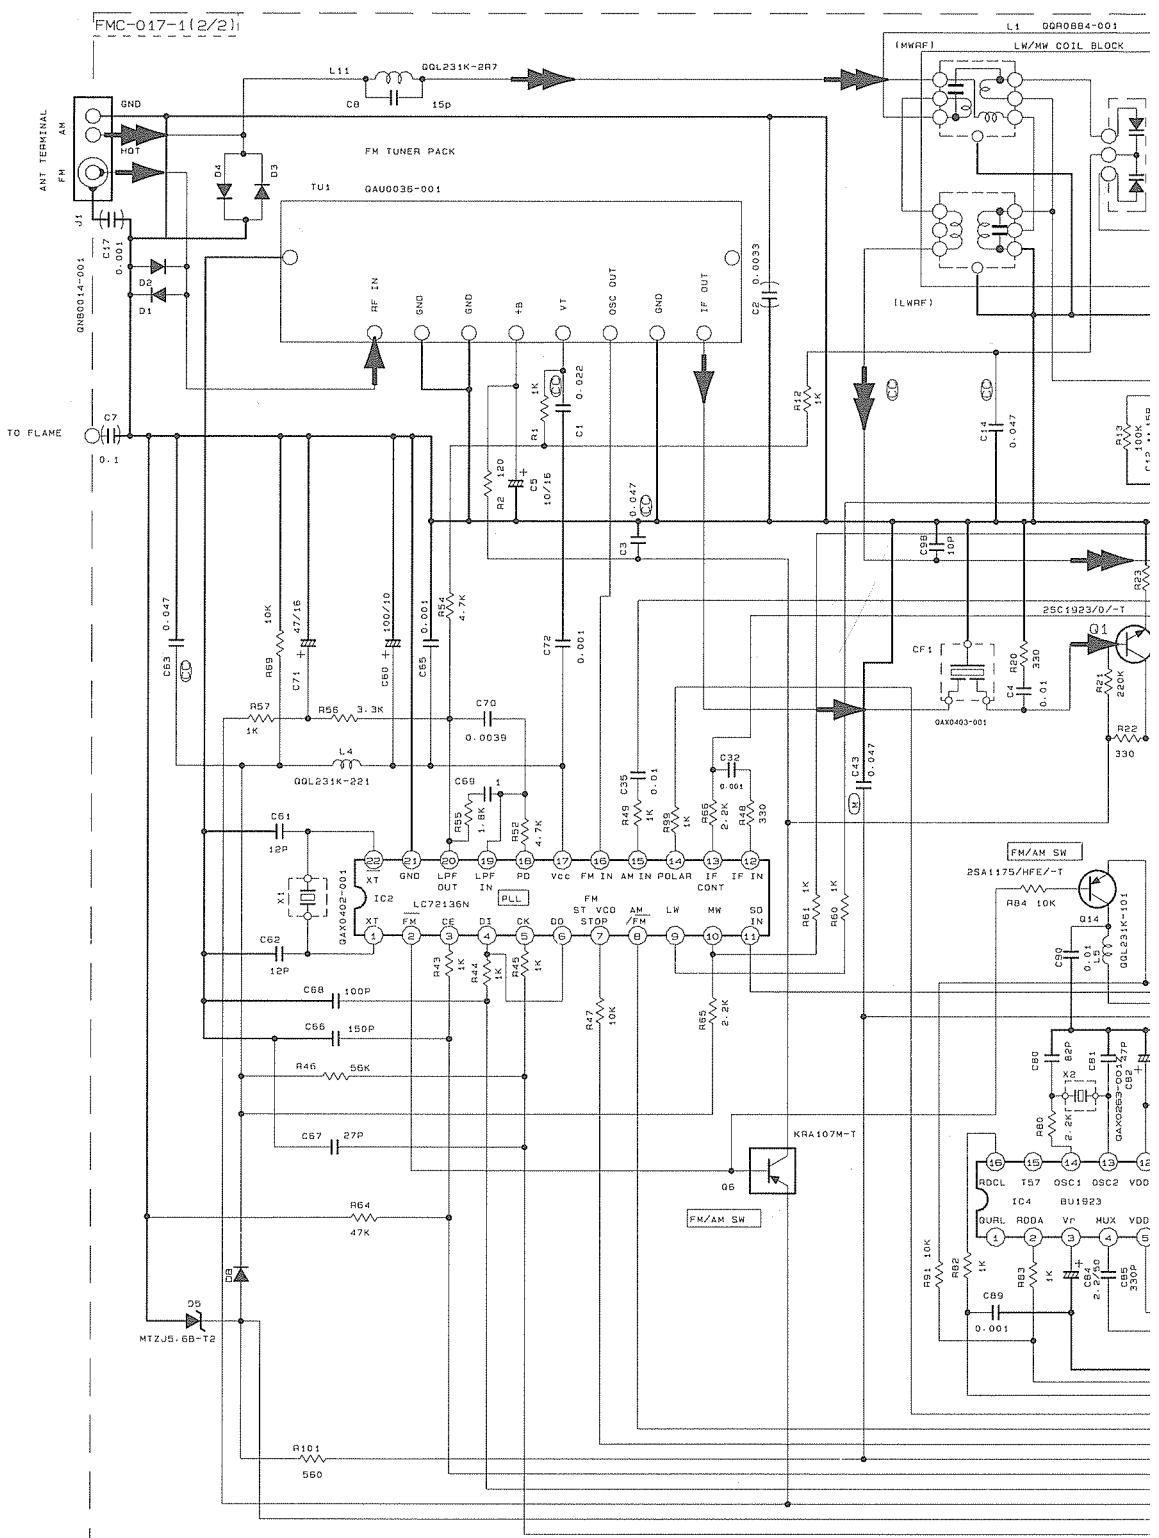

A                    B                    C                    D                    E

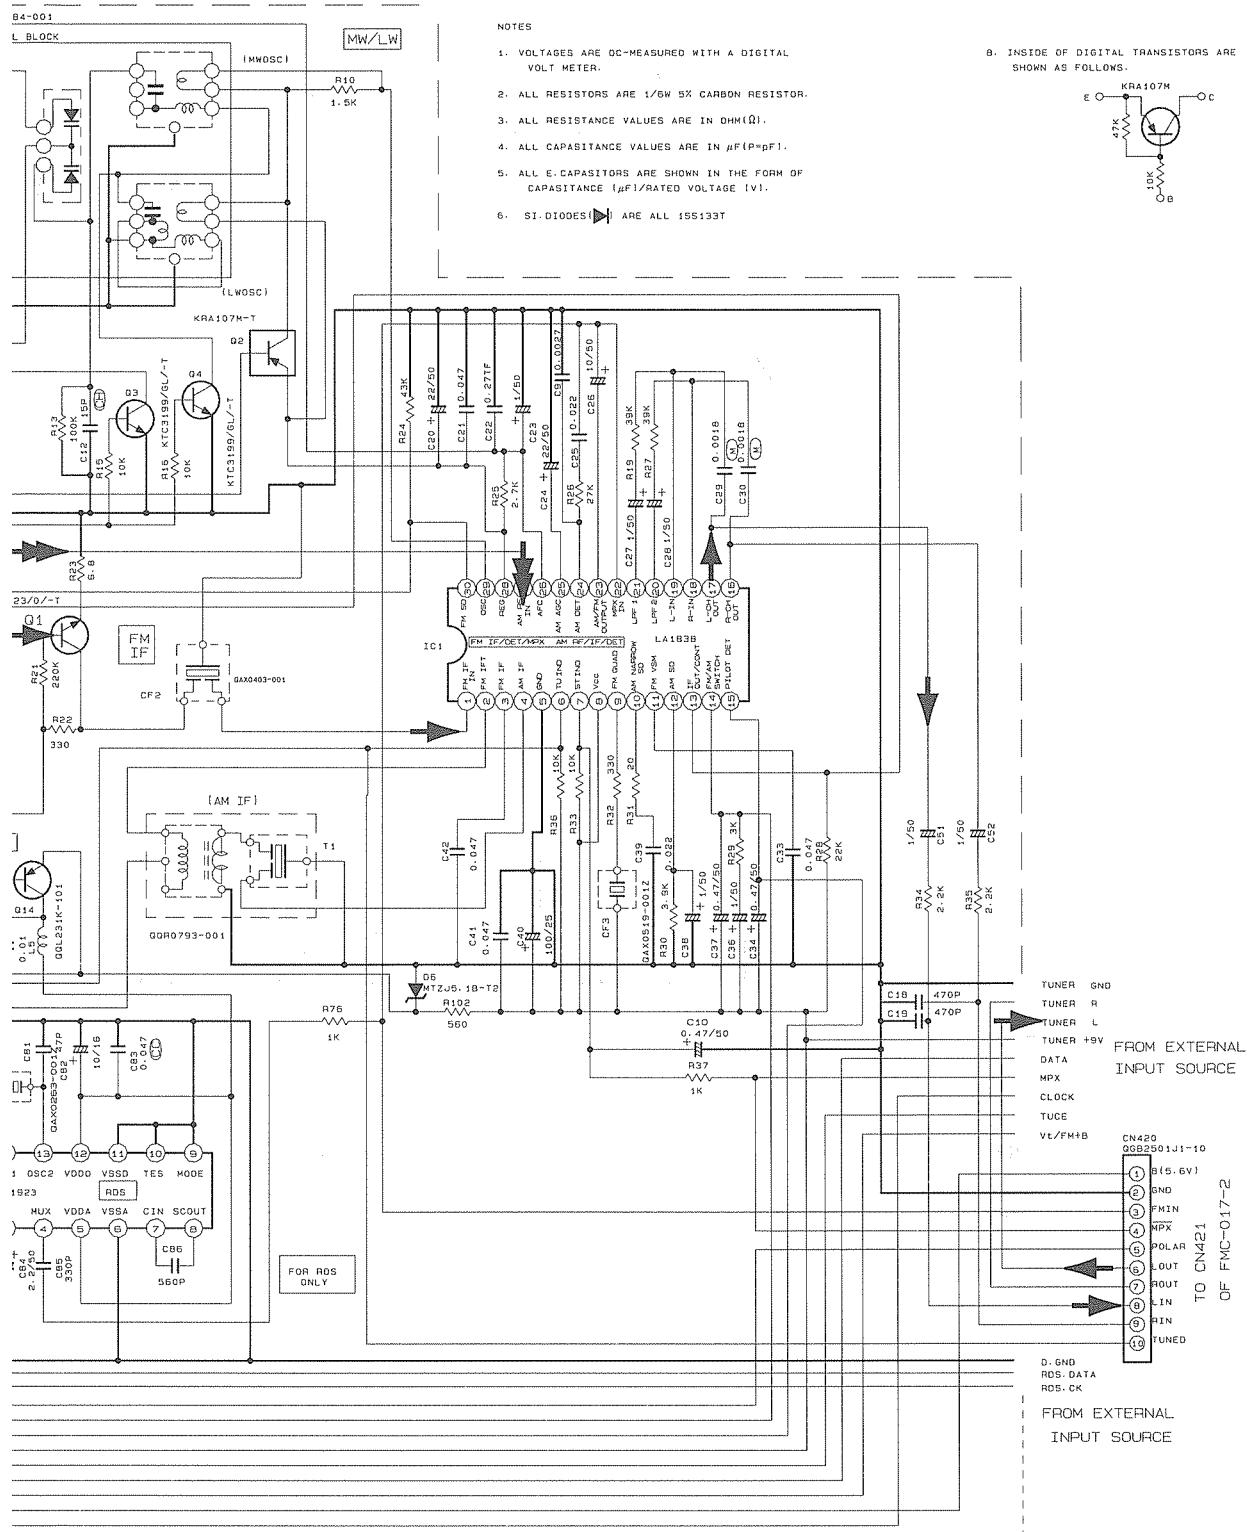


### **POLAR Section (For Ver. EE)**

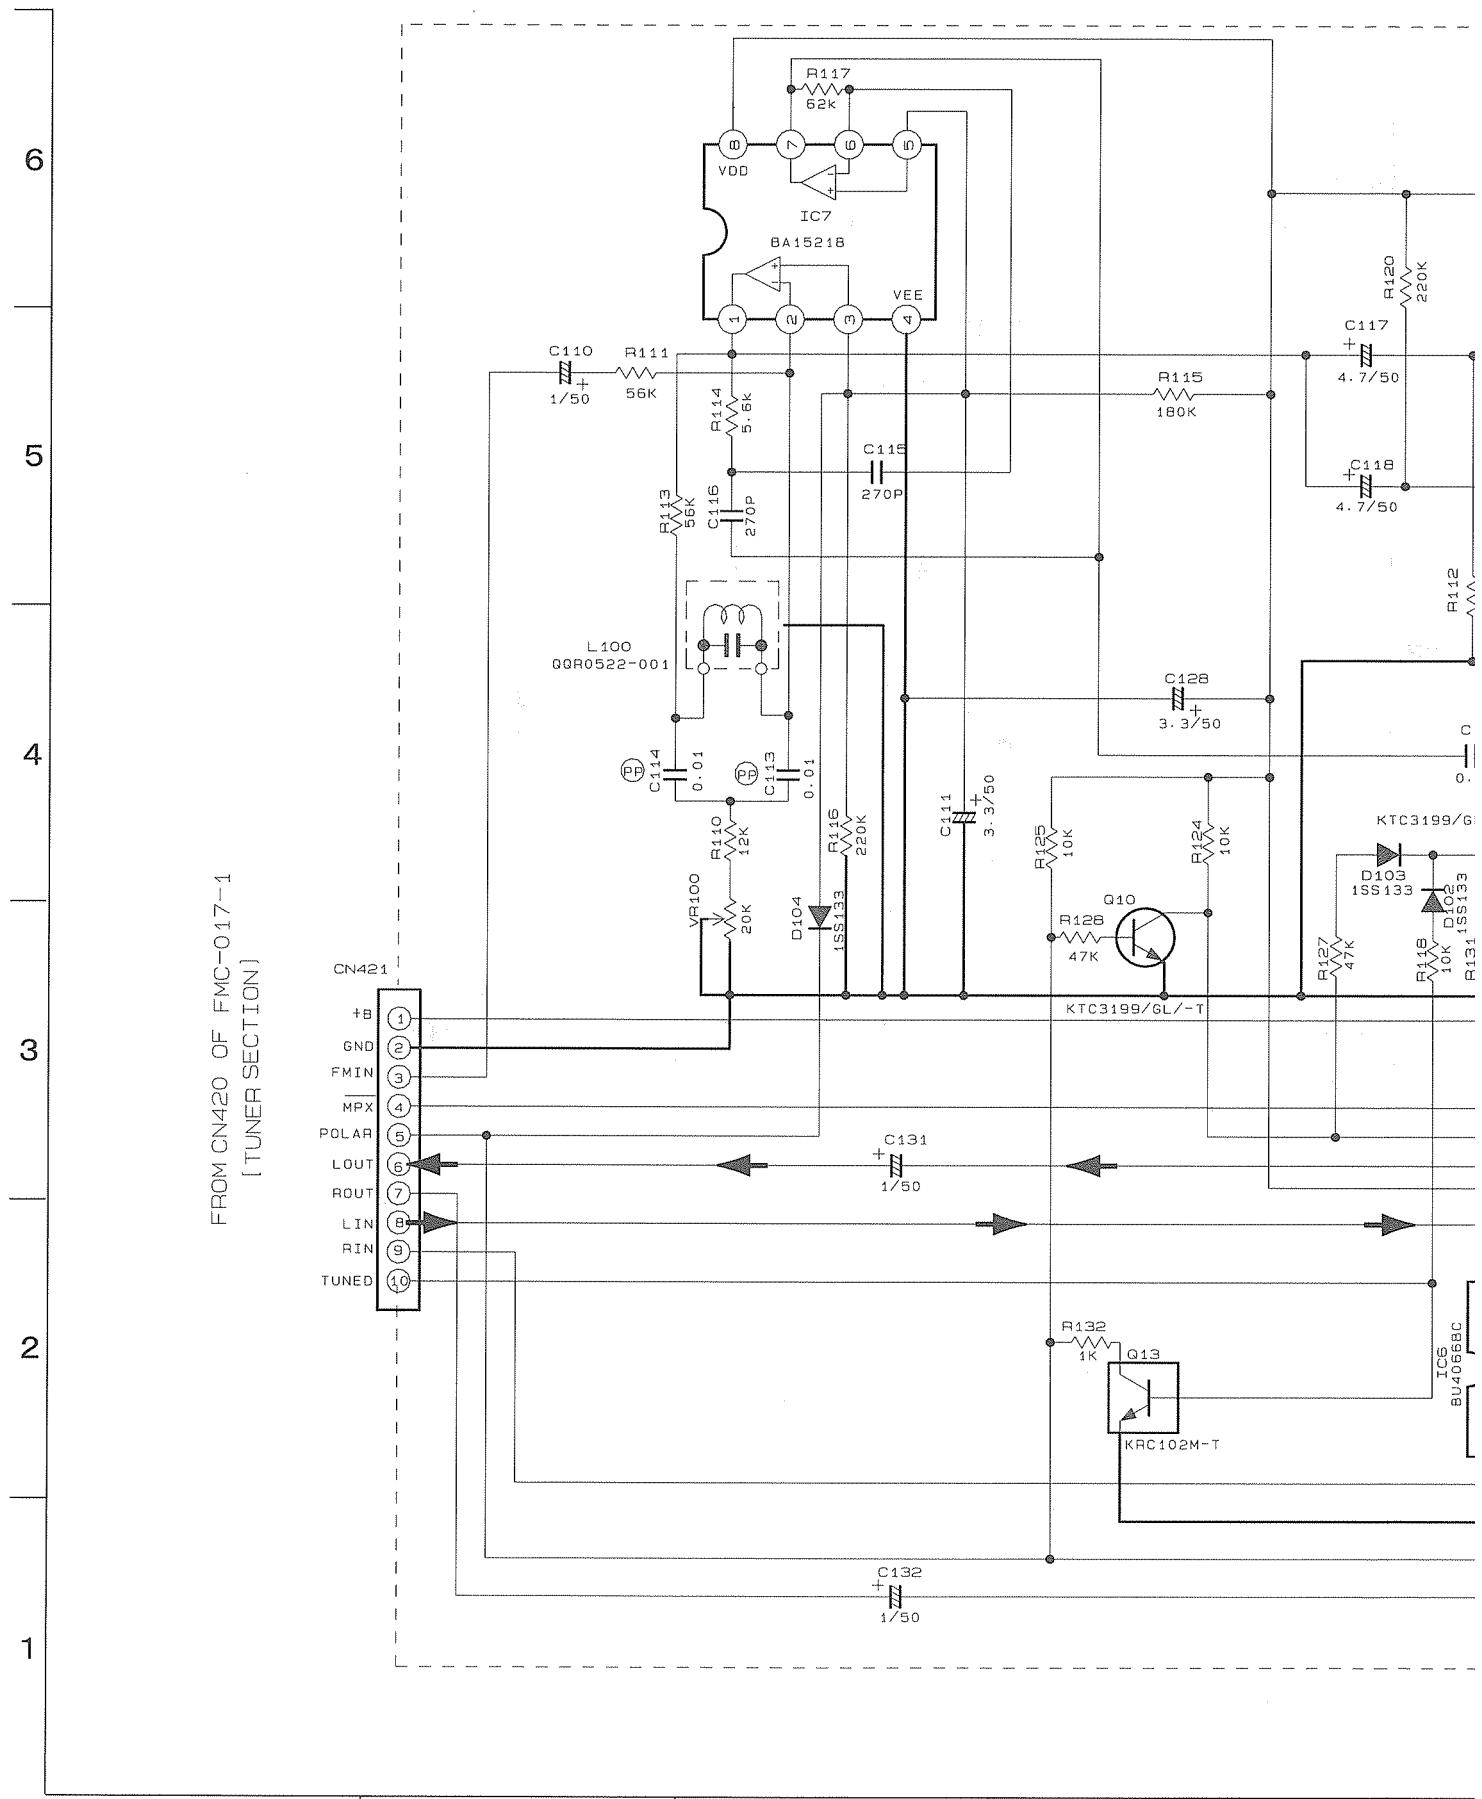

# CA-MXJ55R/CA-MXJ530R


T FMC-017-21

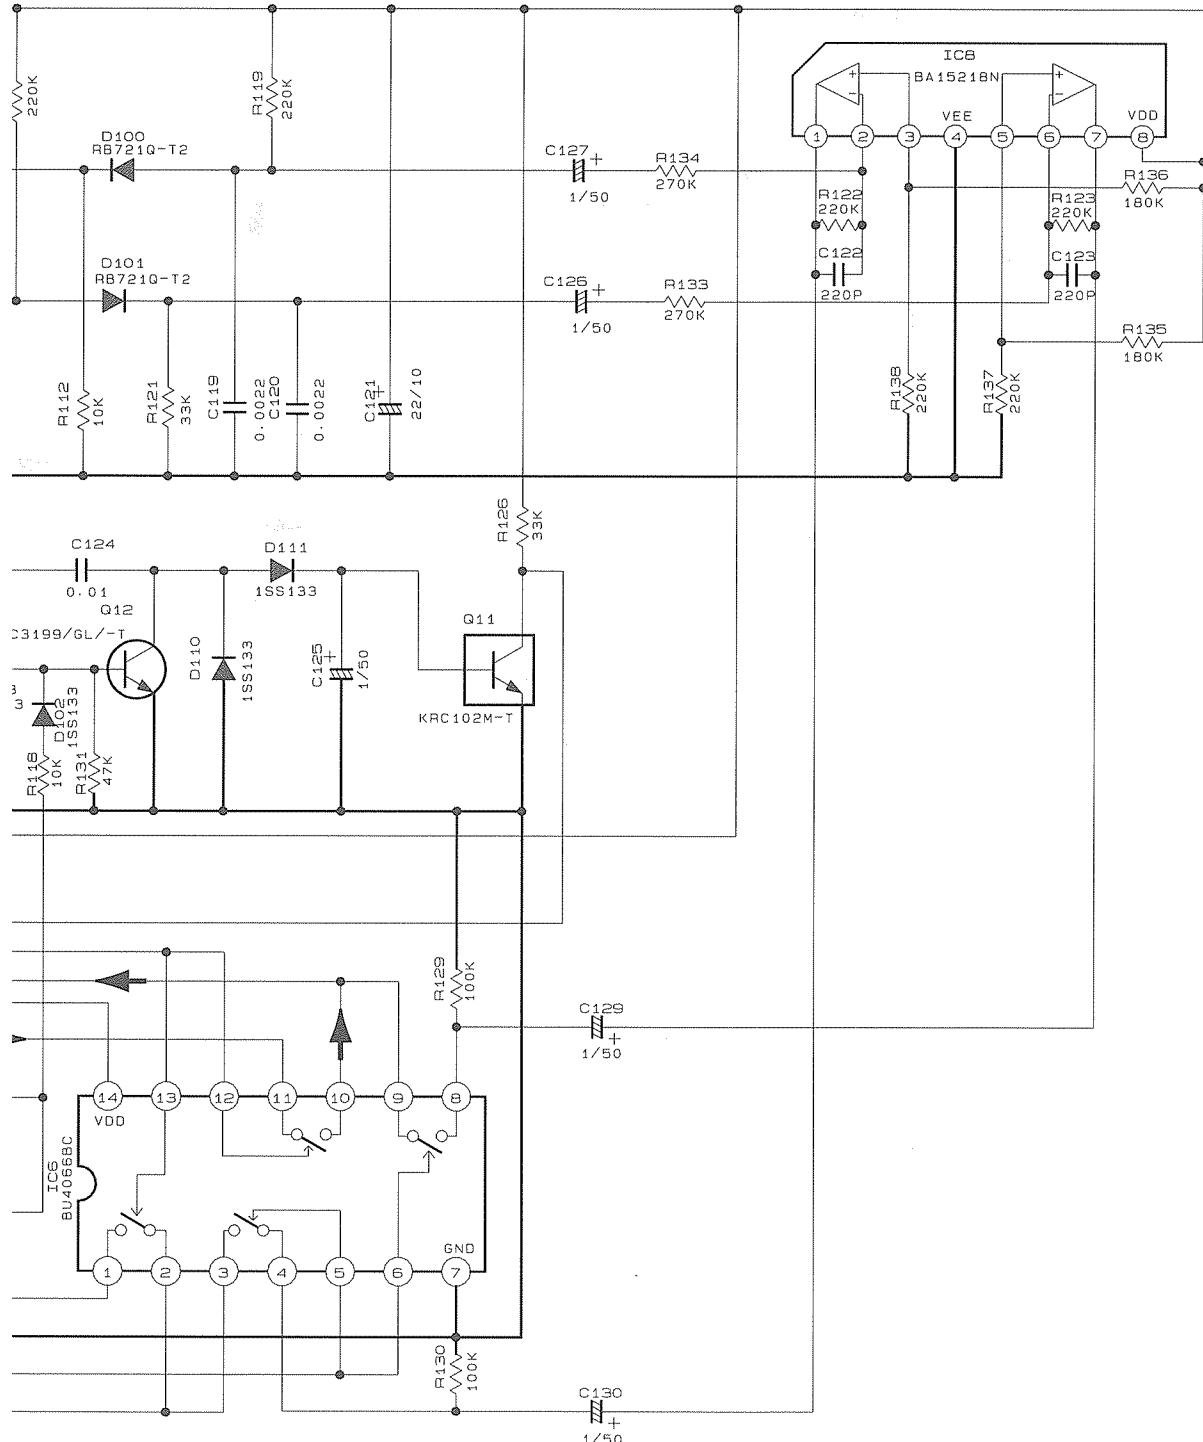

→ TUNER MAIN SIGNAL


EE SHEET  
MX-J55R 7/11

## ■ FL Display & System Controller Section

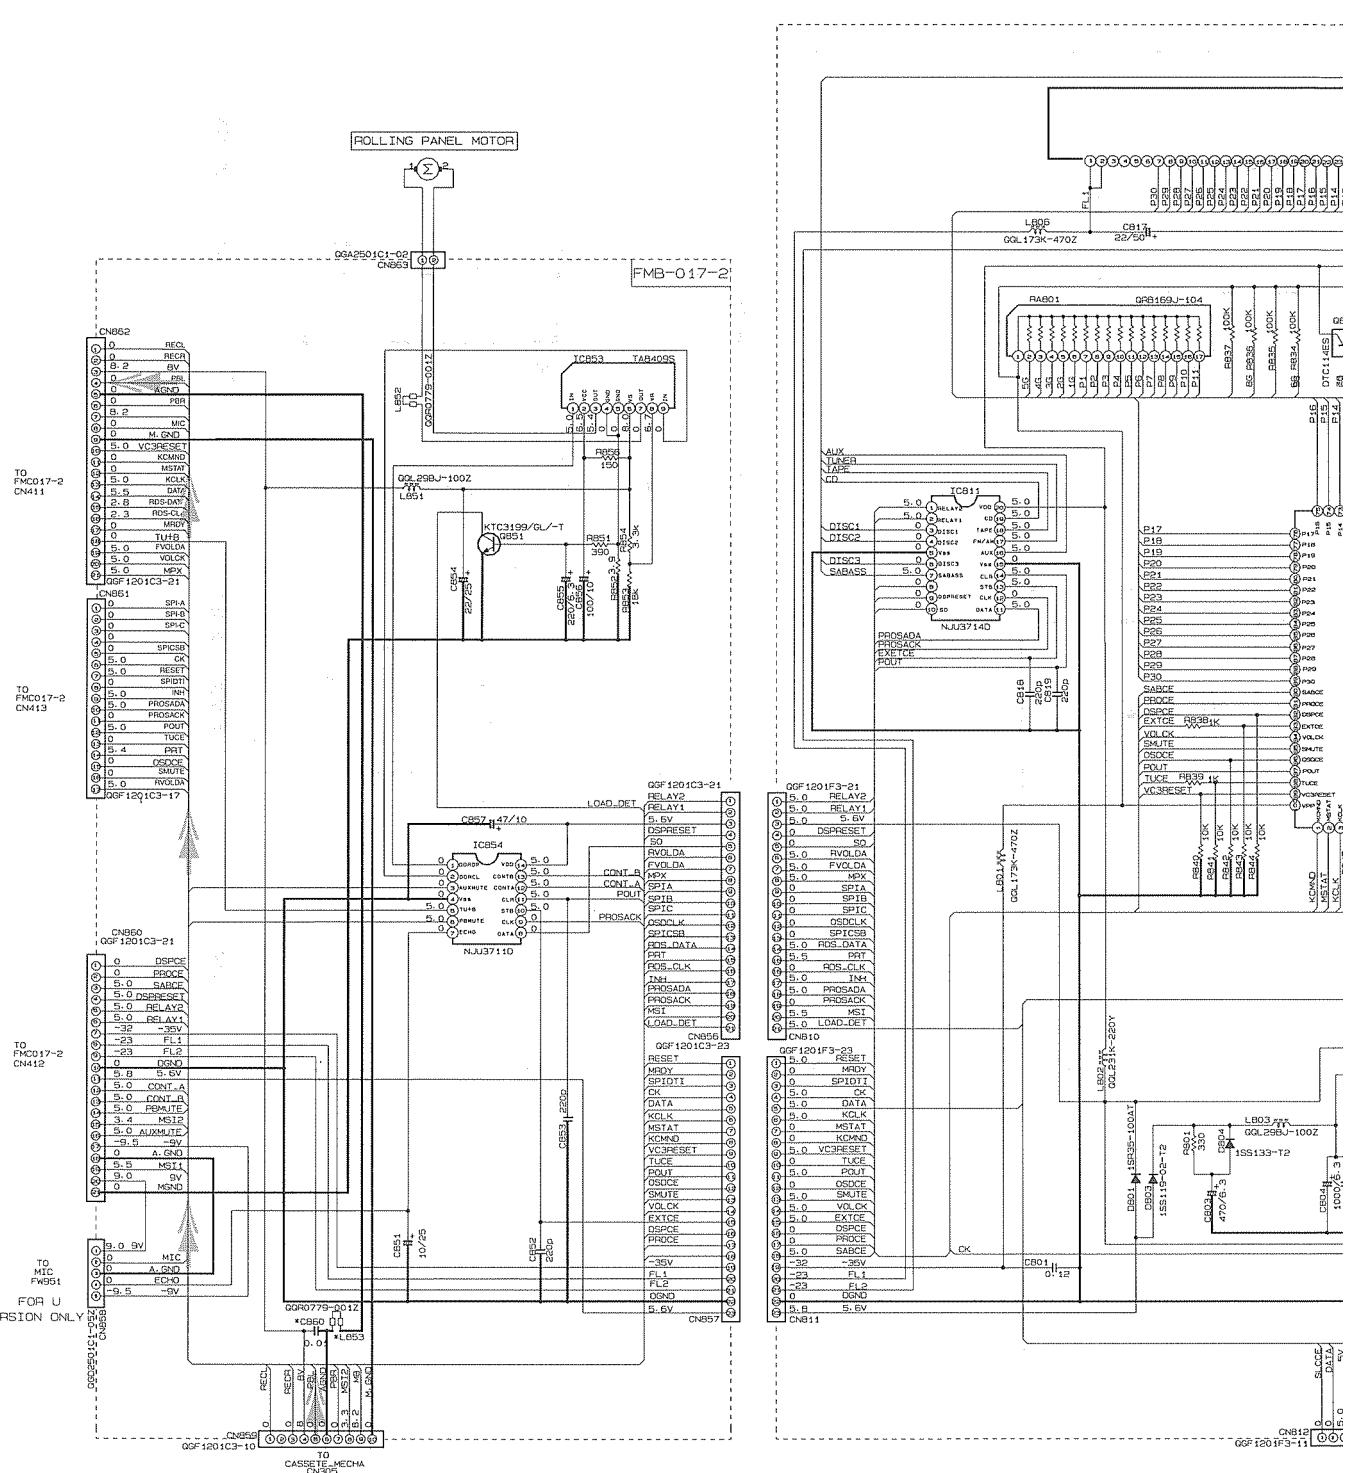

* MARK	MODEL VERSION	J50-SERIES										J70-SERIES										MX			
		MX-J50 MX-J55					MX-J50					CA-MXJ50 CA-MXJ50R		CA-MXJ50H CA-MXJ50R		MX-J70 MX-J75		CA-MCJ70				CA-MKJ75R			
ITEM	J/C	U/UP	US/UT	UV	UR/UY	UX	A	DOM	B/E/EN/EV	EE	J/C	U/UP	US/UT	UV	UR/UY	UX	A	B/E/EN/EV	EE						
S941	X	X			X	X	X	0	0			X		X	X	X	X	0							
S942	X		X		X	X	X	0	0			X		X	X	X	X	0							
S943	X		X		X	X	X	0	0			X		X	X	X	X	0							
S944	X		X		X	X	X	0	0			X		X	X	X	X	0							
R946	56K	56K	X		16K	X	X	56K	X			56K		56K	X	16K	X	56K							
R947	56K	X		X	16K	X	X	56K	X			56K		56K	X	16K	X	56K							
R954	56K	56K	X		X	56K	X	X	56K	X		56K		56K	X	56K	X	56K							
R987	X		X		X	X	X	X	X			X		X	X	X	X	0							
L653	X		X		X	X	0	0	X			X		X	X	X	X	0							
C660	X		X		X	X	0	0	X			X		X	X	X	X	0							

A                    B                    C                    D                    E

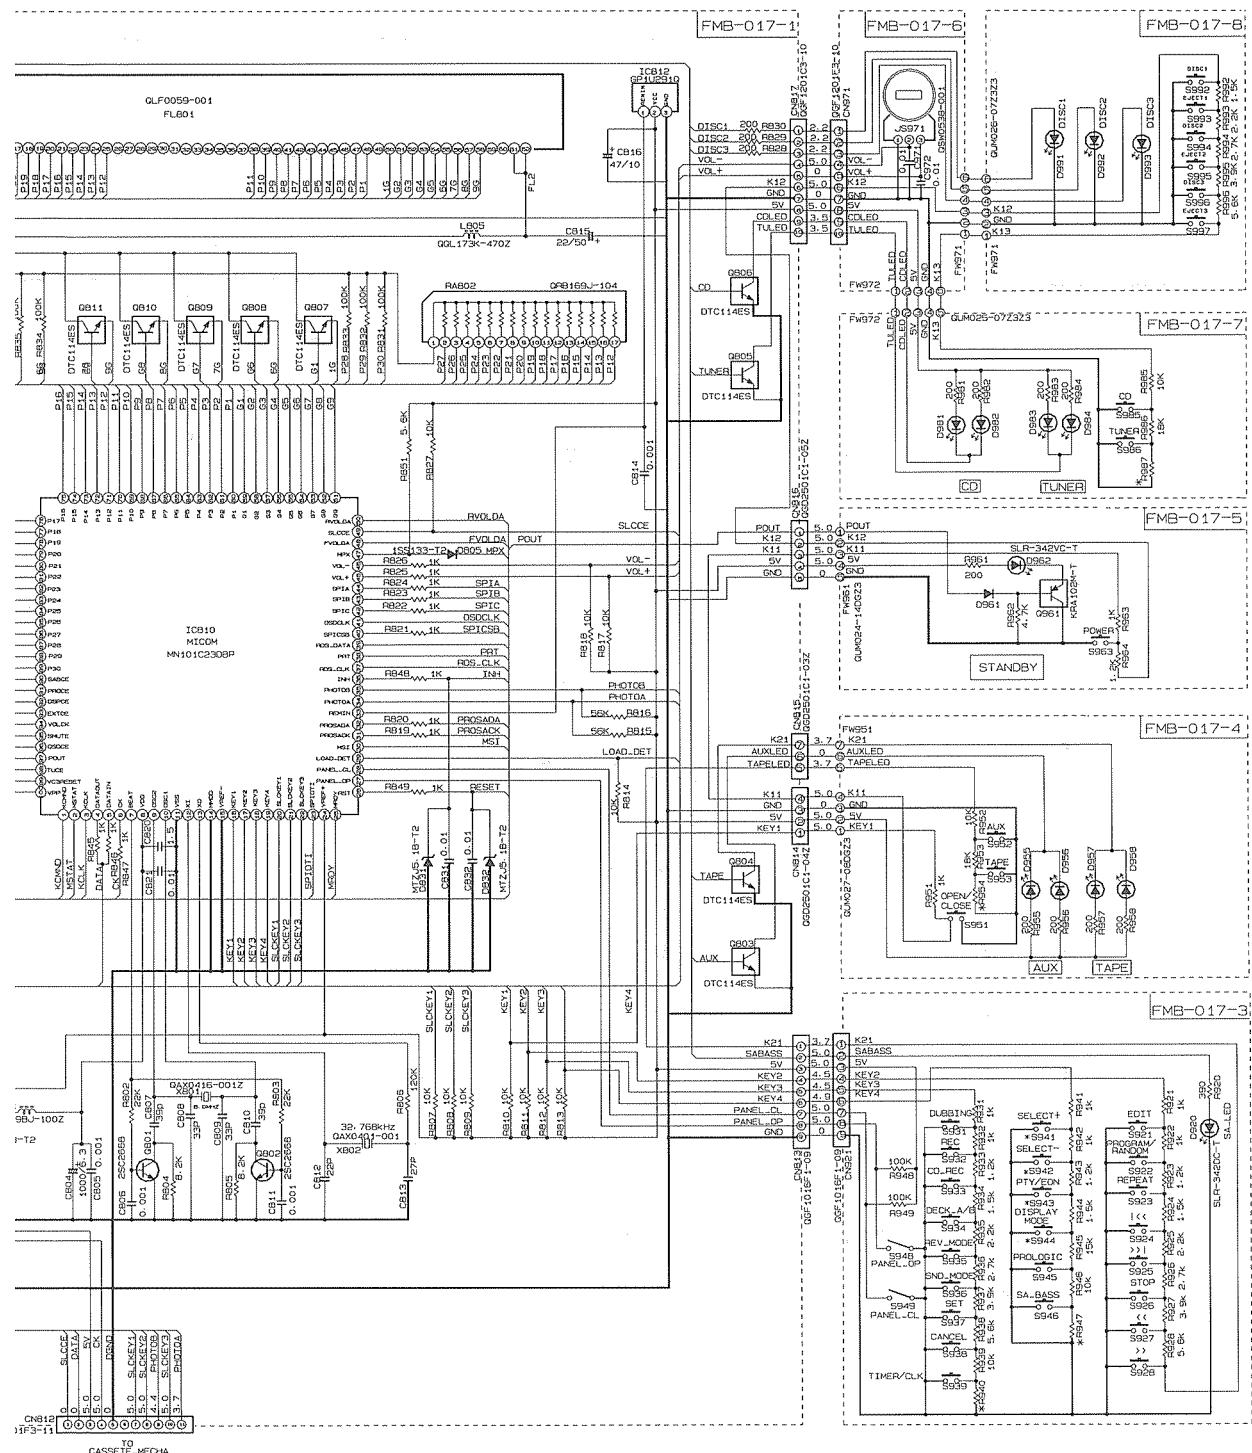


**NOTES**

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL CONDITION ----- TAKE IN MORE
2. UNLESS OTHERWISE SPECIFIED  
RESISTORS ARE  $1\text{K}\Omega$  CARBON RESISTOR.  
ALL RESISTANCE VALUES ARE IN  $\text{M}\Omega$ .  
ALL CAPACITANCE VALUES ARE IN  $\text{nF}$  EXCEPT FOR POLAR CAPACITOR.  
ALL CAPACITANCE VALUES ARE IN  $\text{MF}$ .  
ALL DIODES ARE  $1N4007$ .  
ALL C-DEVICES ARE SHOWN IN THE FORM OF CAPACITANCE ( $\text{MF}$ ) DIVIDED BY VOLTAGE [V].  
ALL GROUNDS ARE  $181199$ .
3. ALL TACT SWITCHES ARE 020406-0012 UNLESS OTHERWISE SPECIFIED


→→ TAPE P.B. SIGNAL

MX-J70 SHEET  
8 / 11

### ■ MIC & Headphone Section

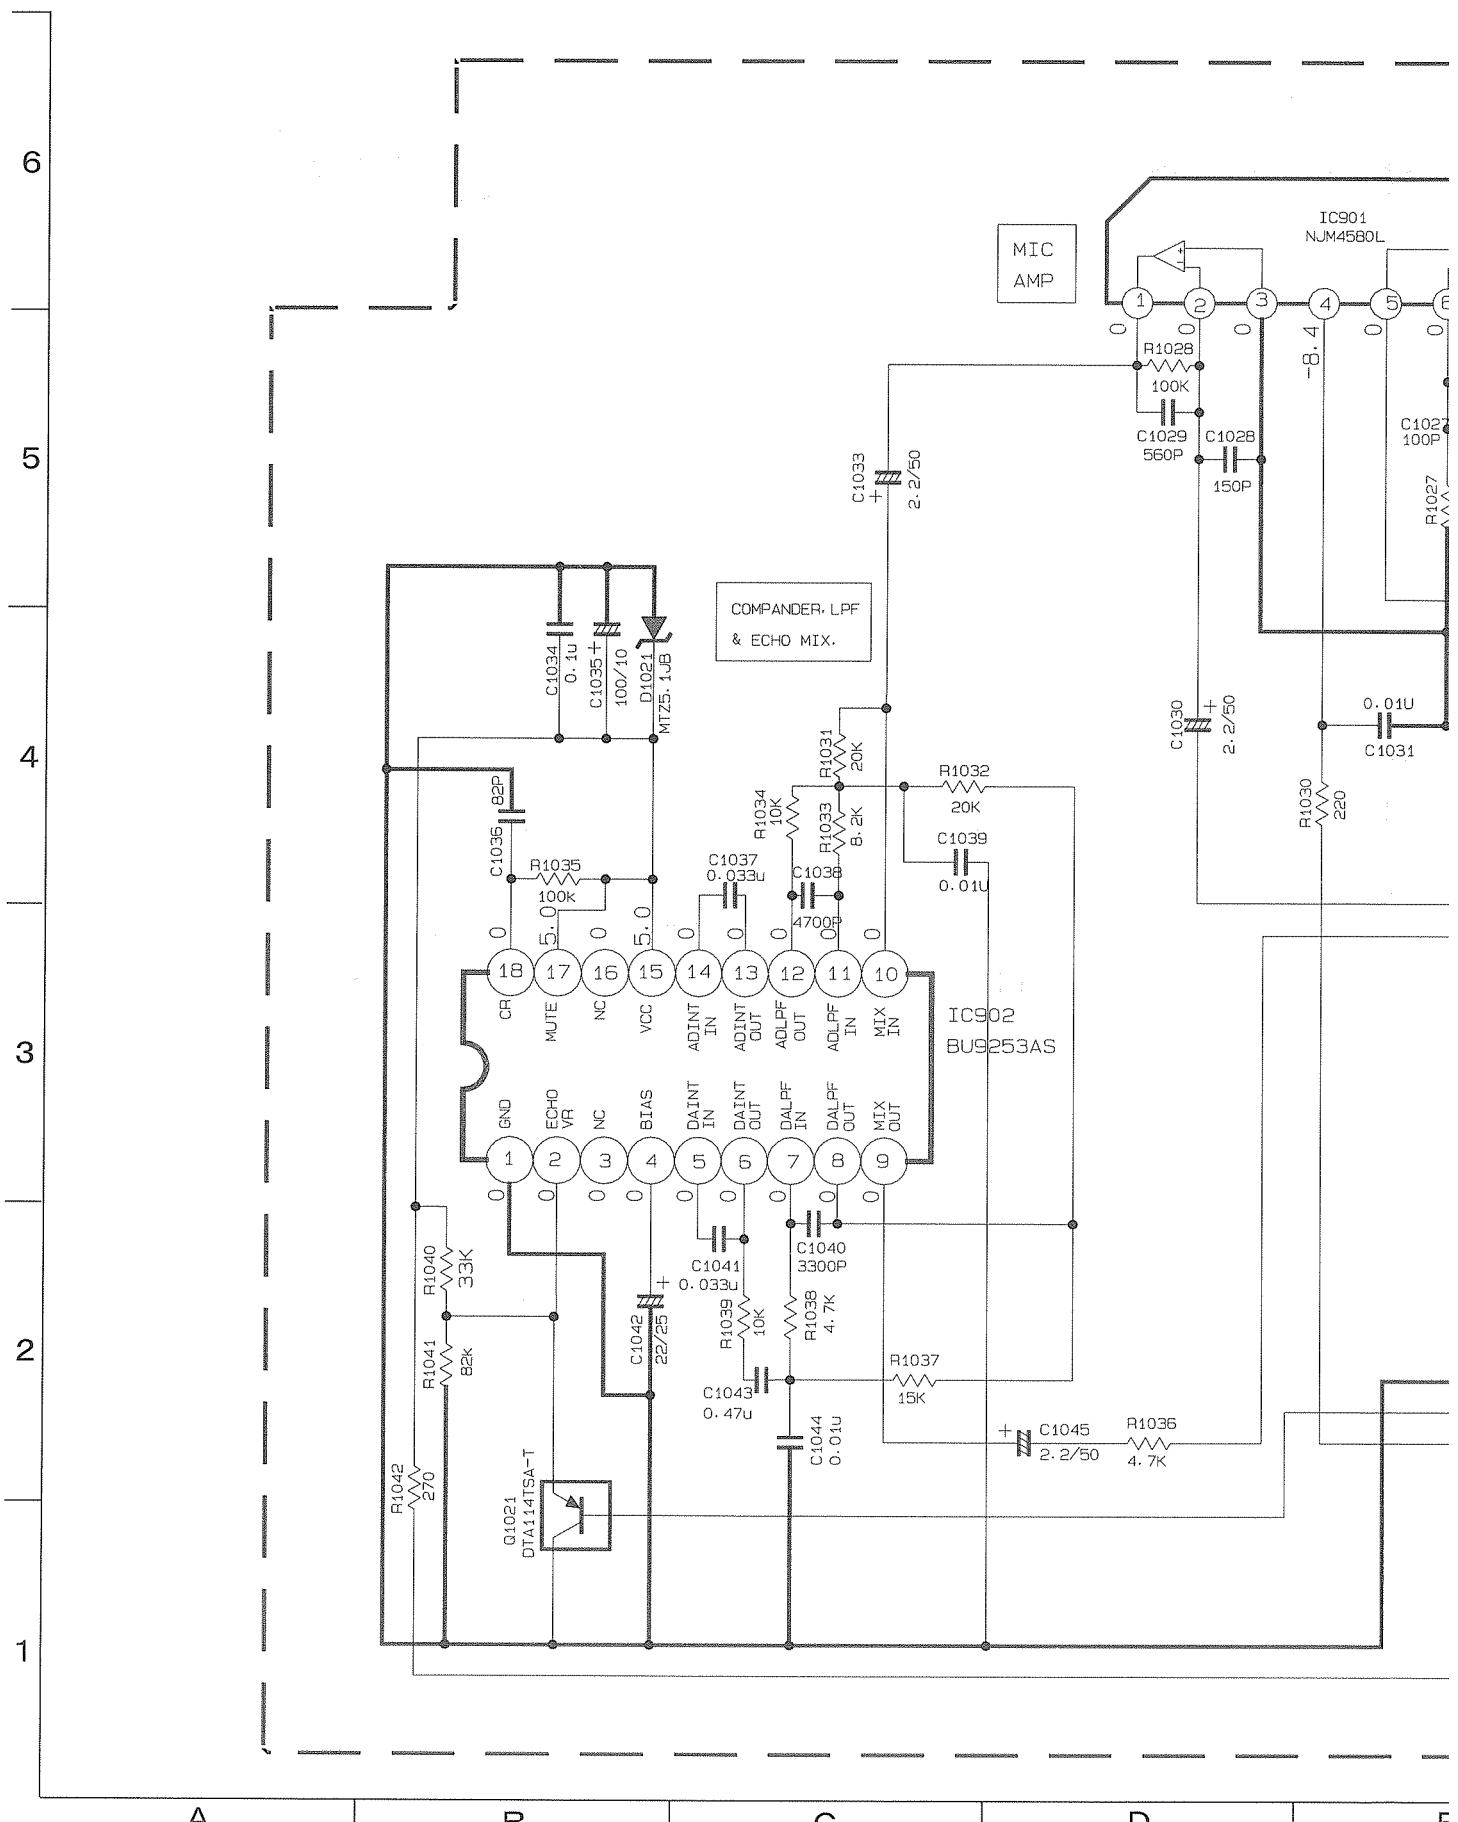

# CA-MXJ55R/CA-MXJ530R

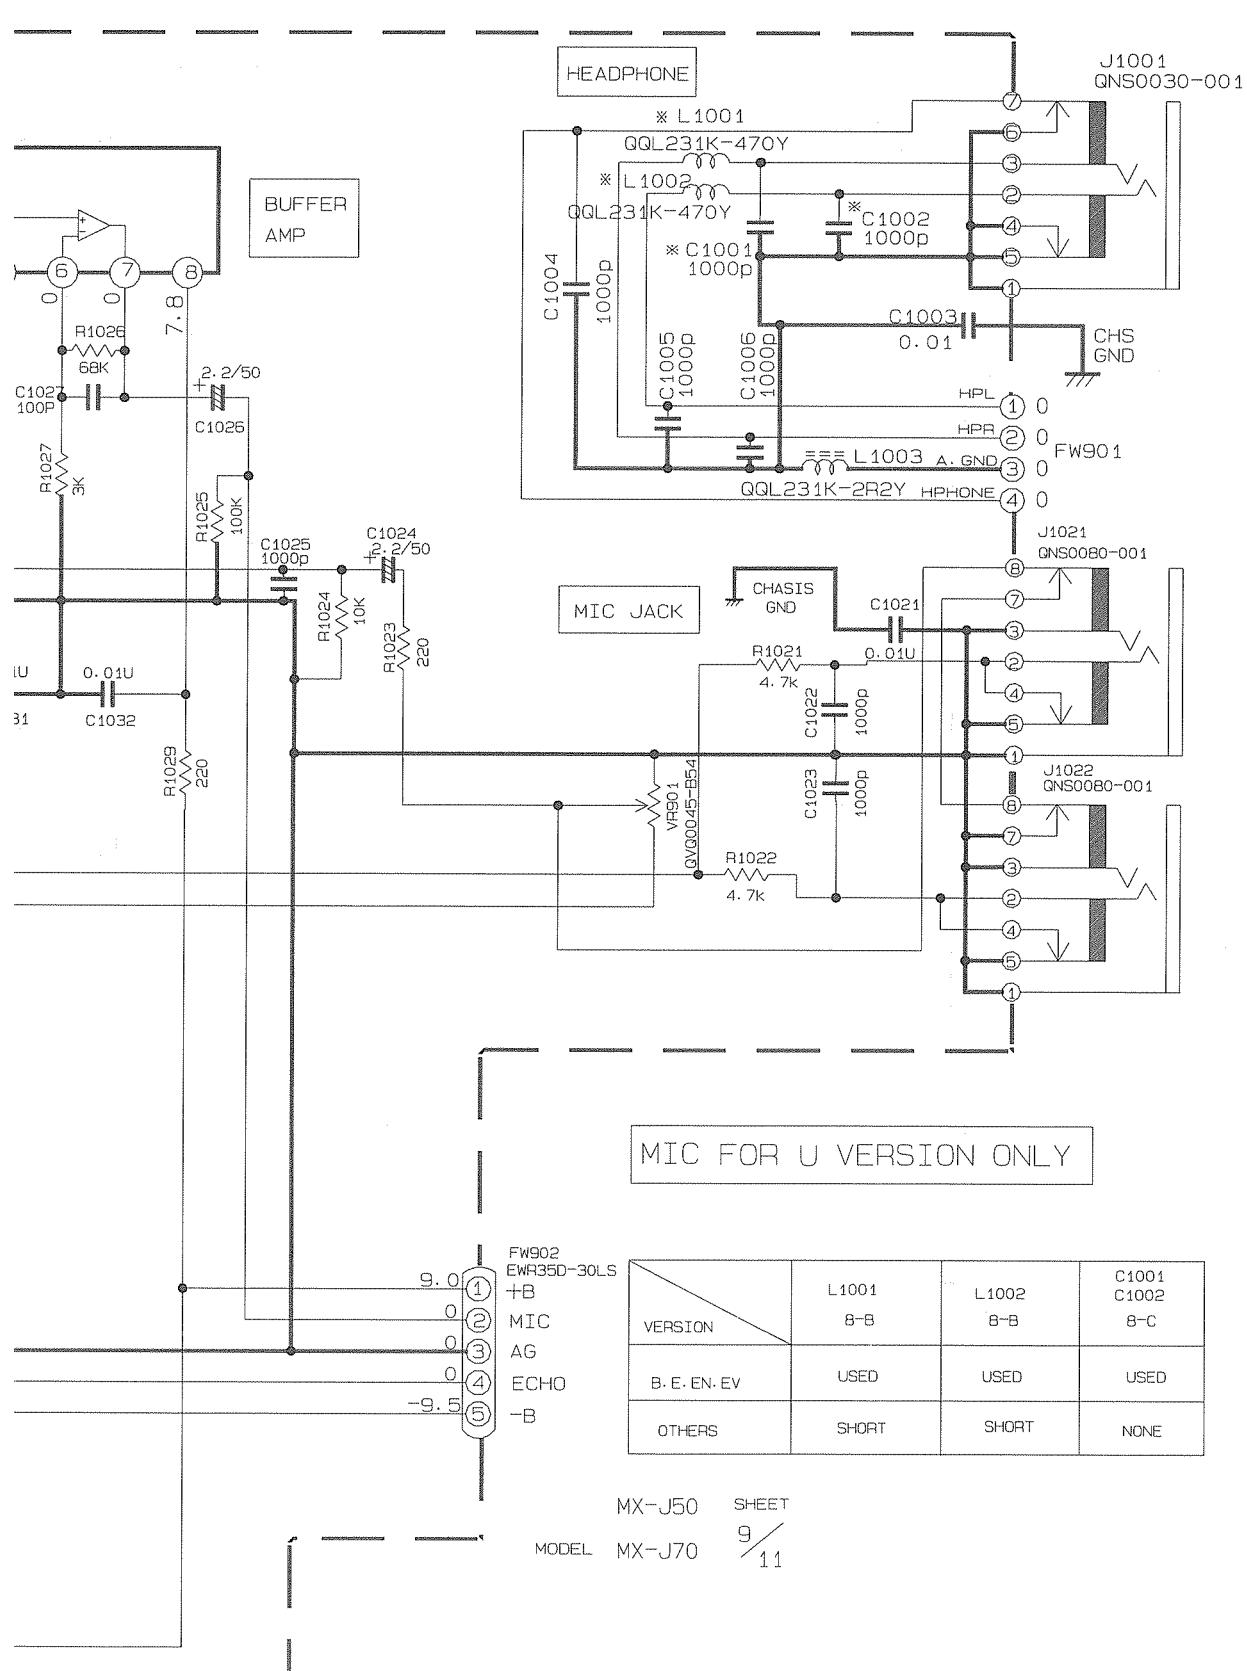

E


F


G

H


I

## ■ CD Servo & CD Mechanism Control Section

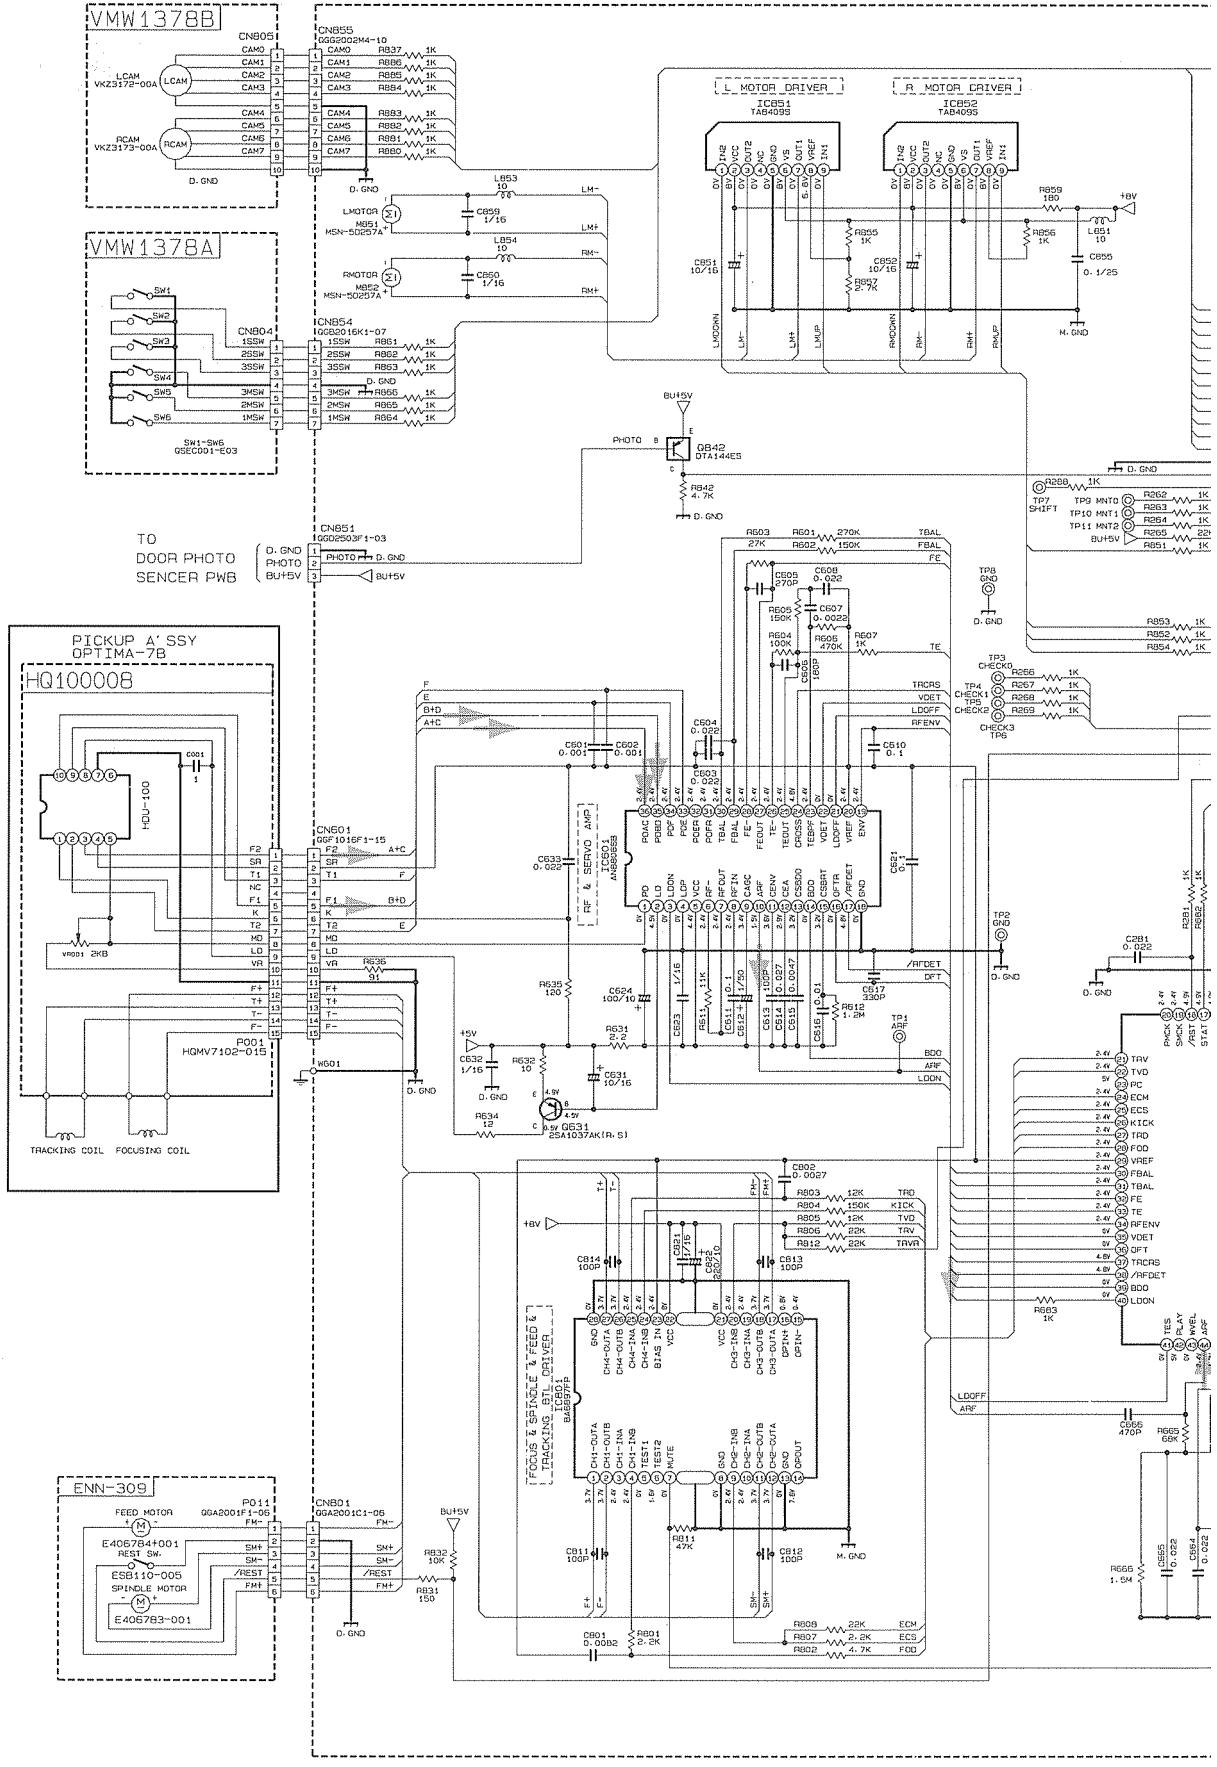

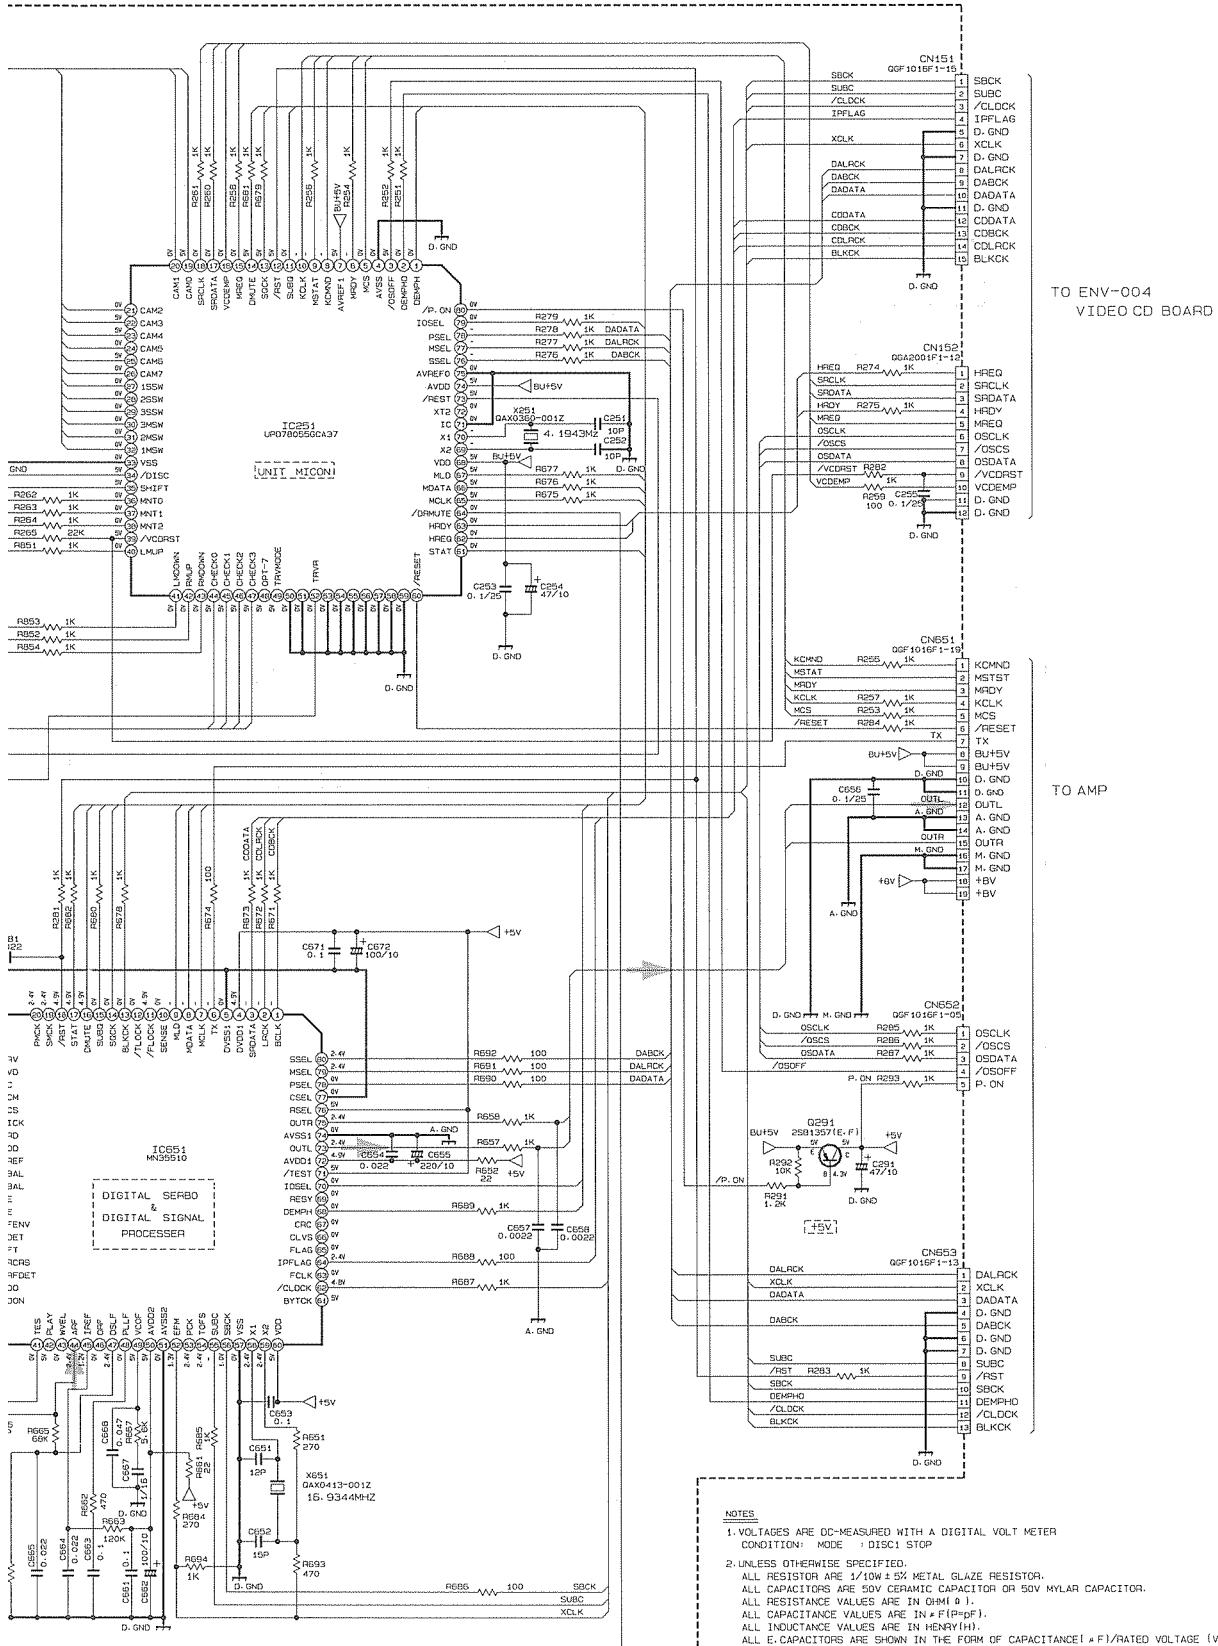


## ■ Head Amplifier & Mechanism Control Section

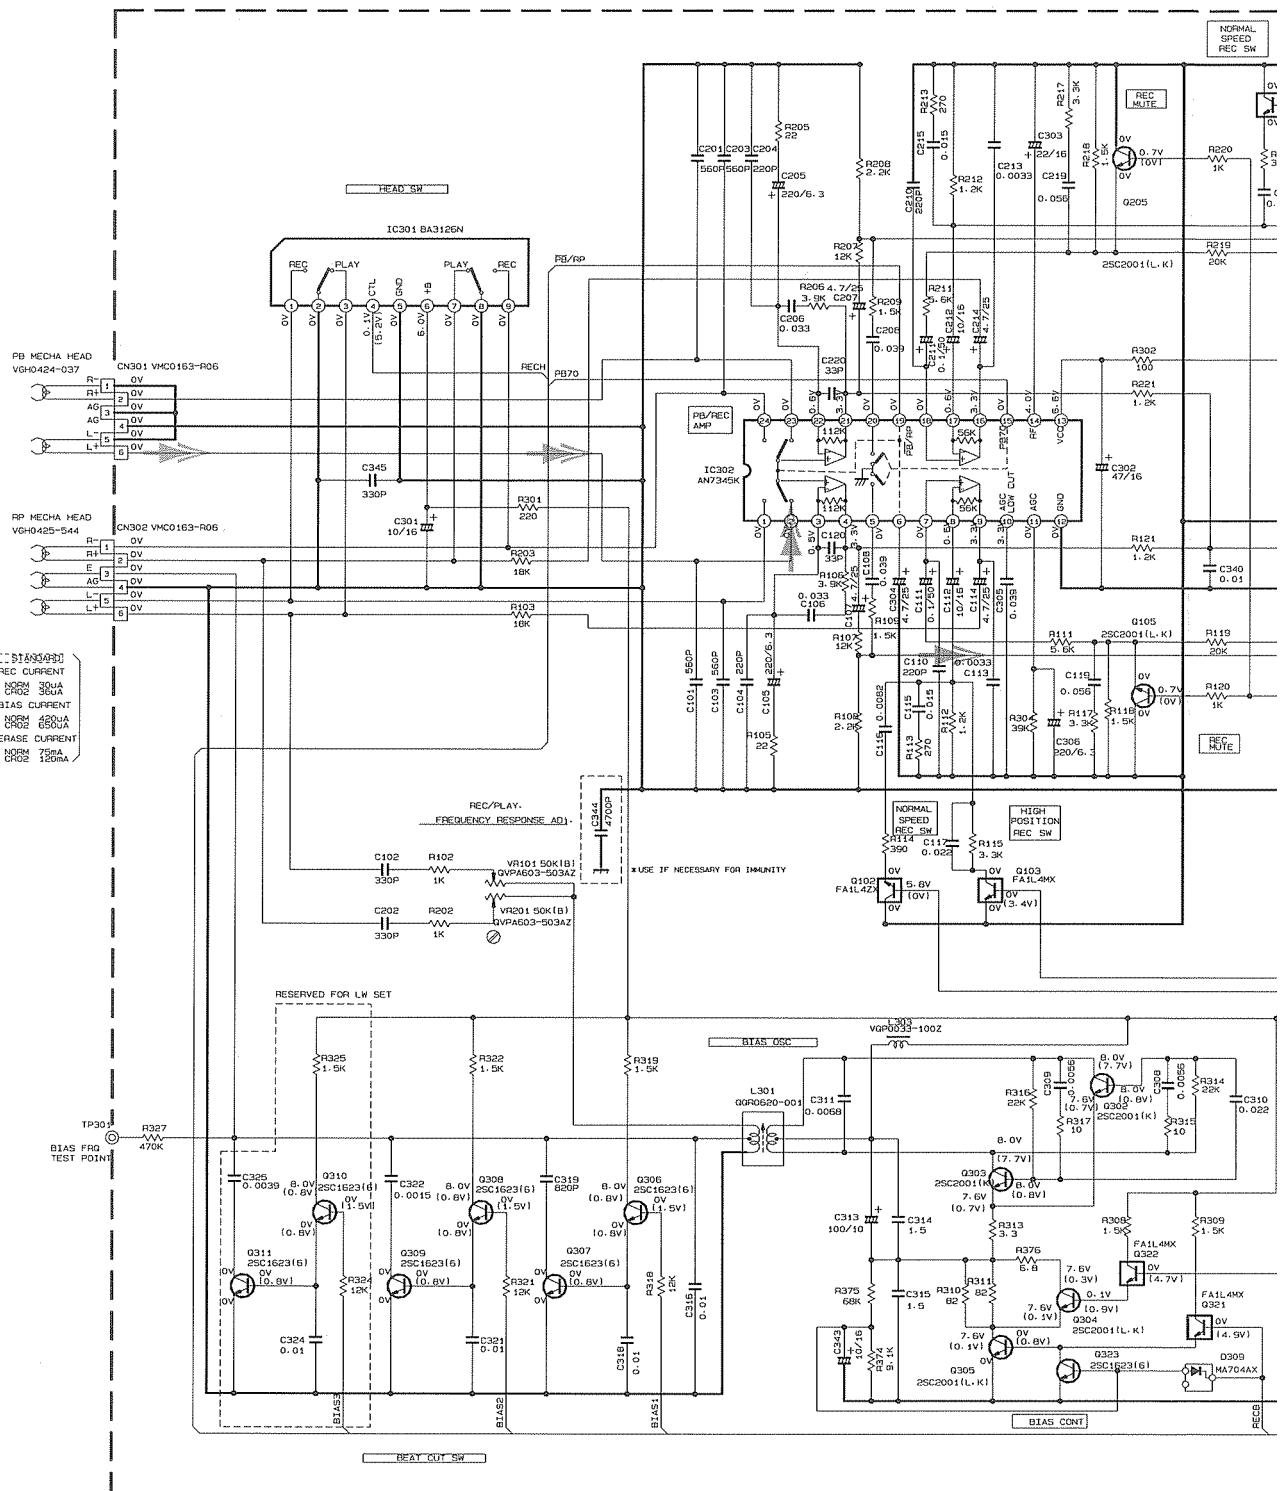

PART-NR	CONSTRUCTION	REF.-NR
FA1L4M		Q317
FA1L4M		Q103/Q203
FA1L4Z		Q102/Q202

A                    B                    C                    D                    E


CA-MXJ55R/CA-MXJ530R

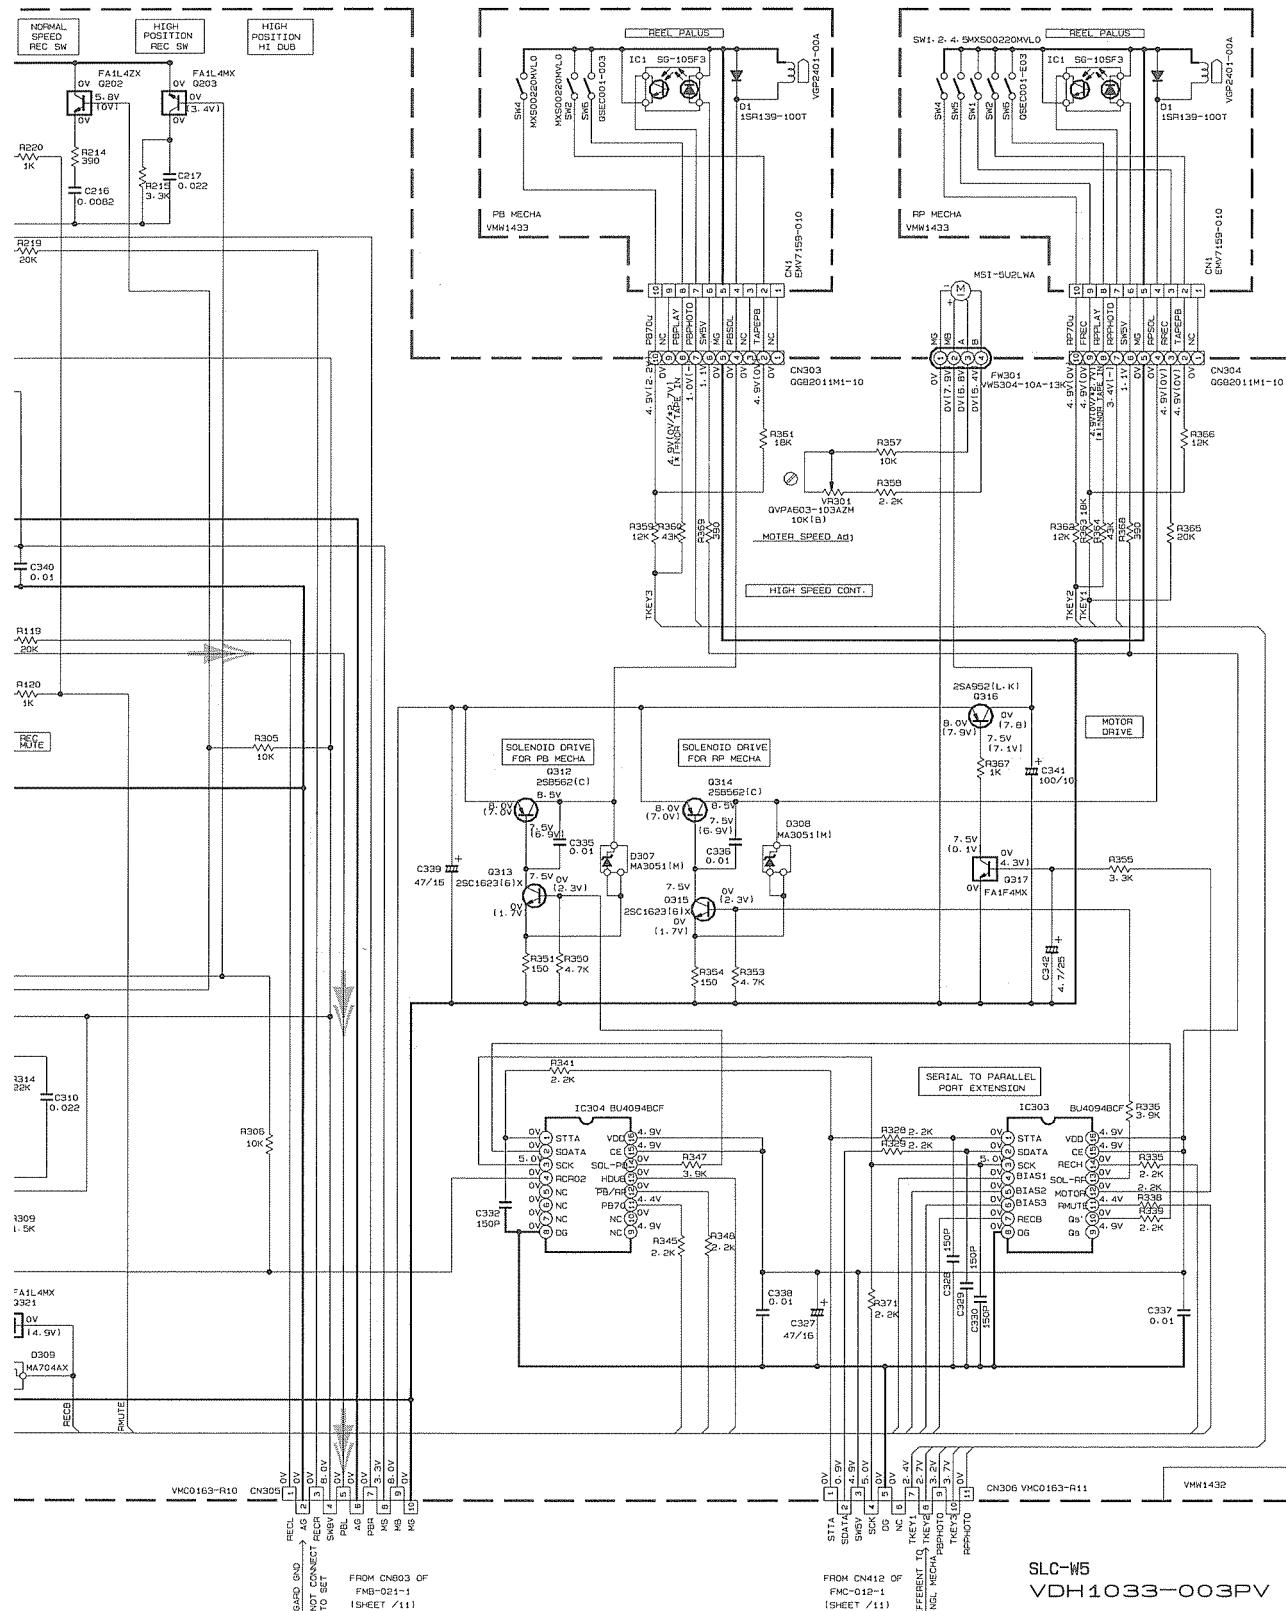

→→ TAPE P.B. SIGNAL

# Printed Circuit Boards

## ■ System Control & Operation Switch Board

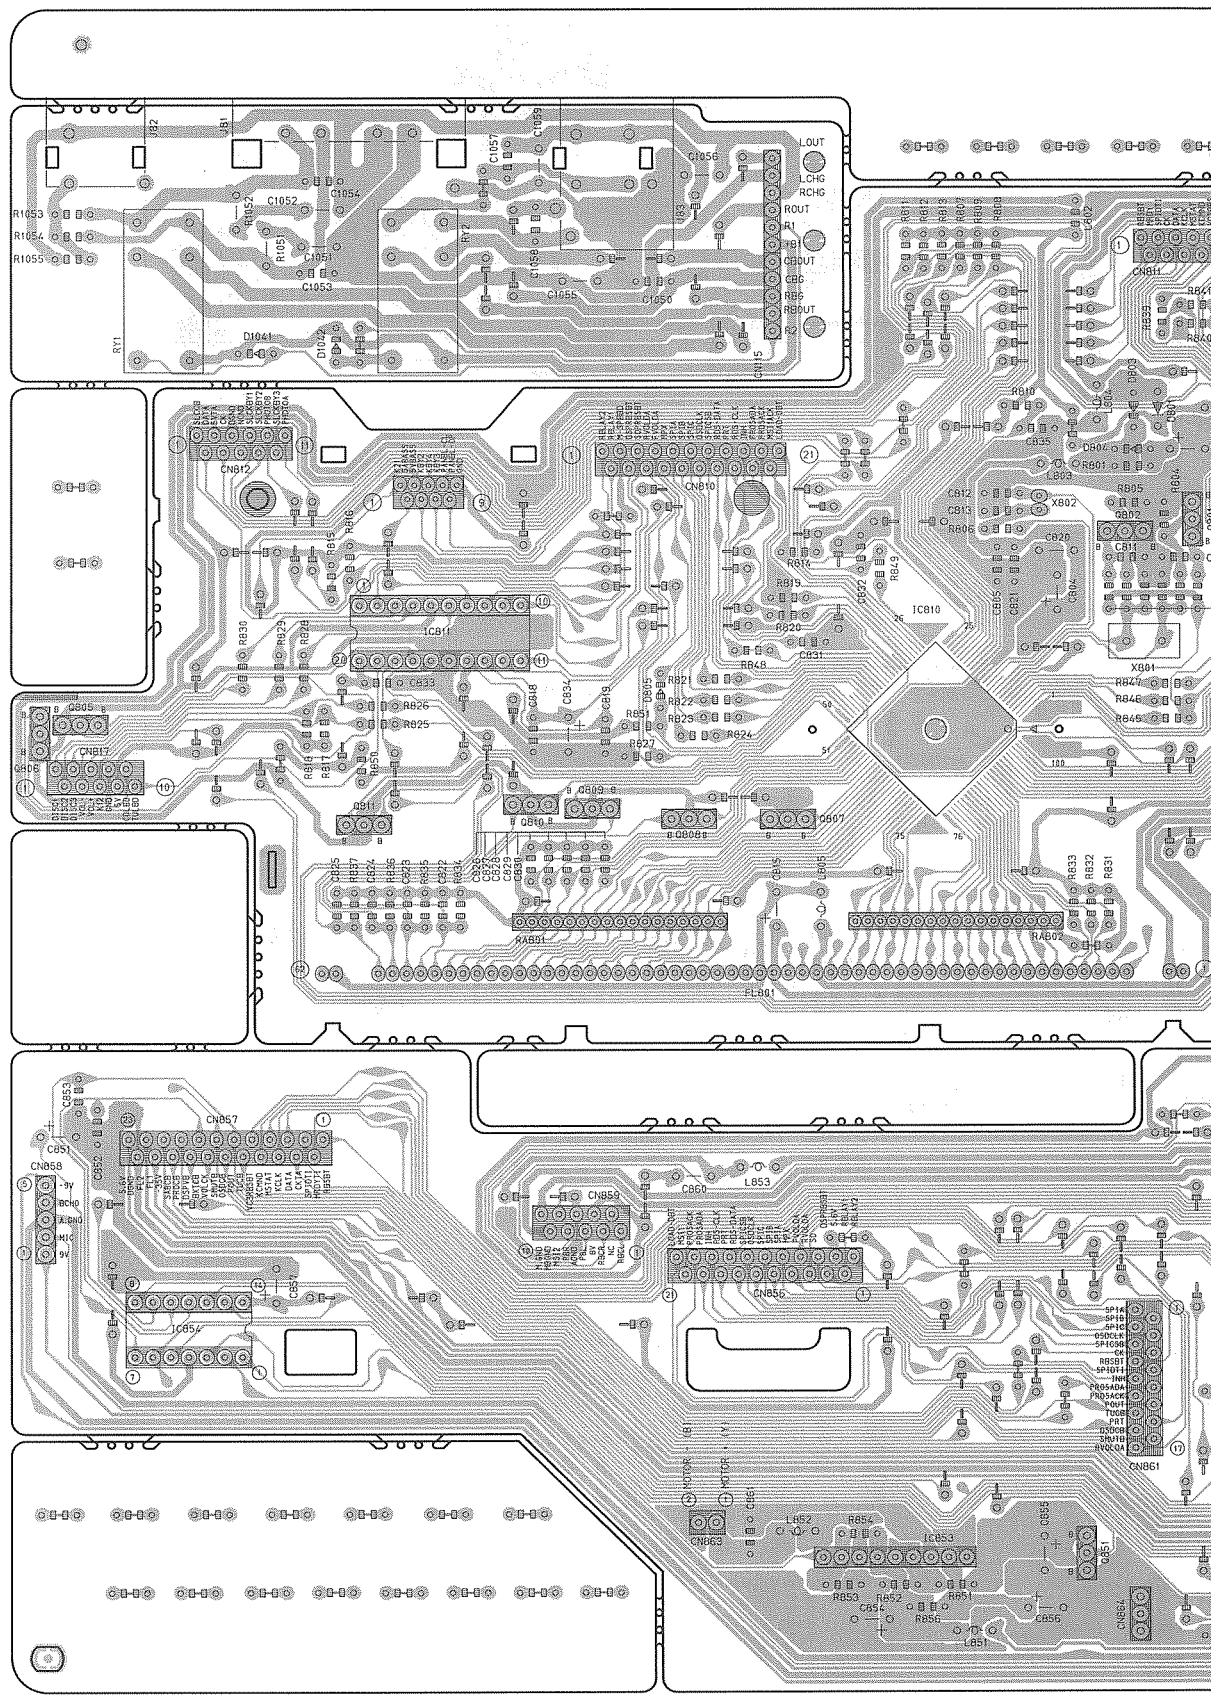


A

B


C

D


E

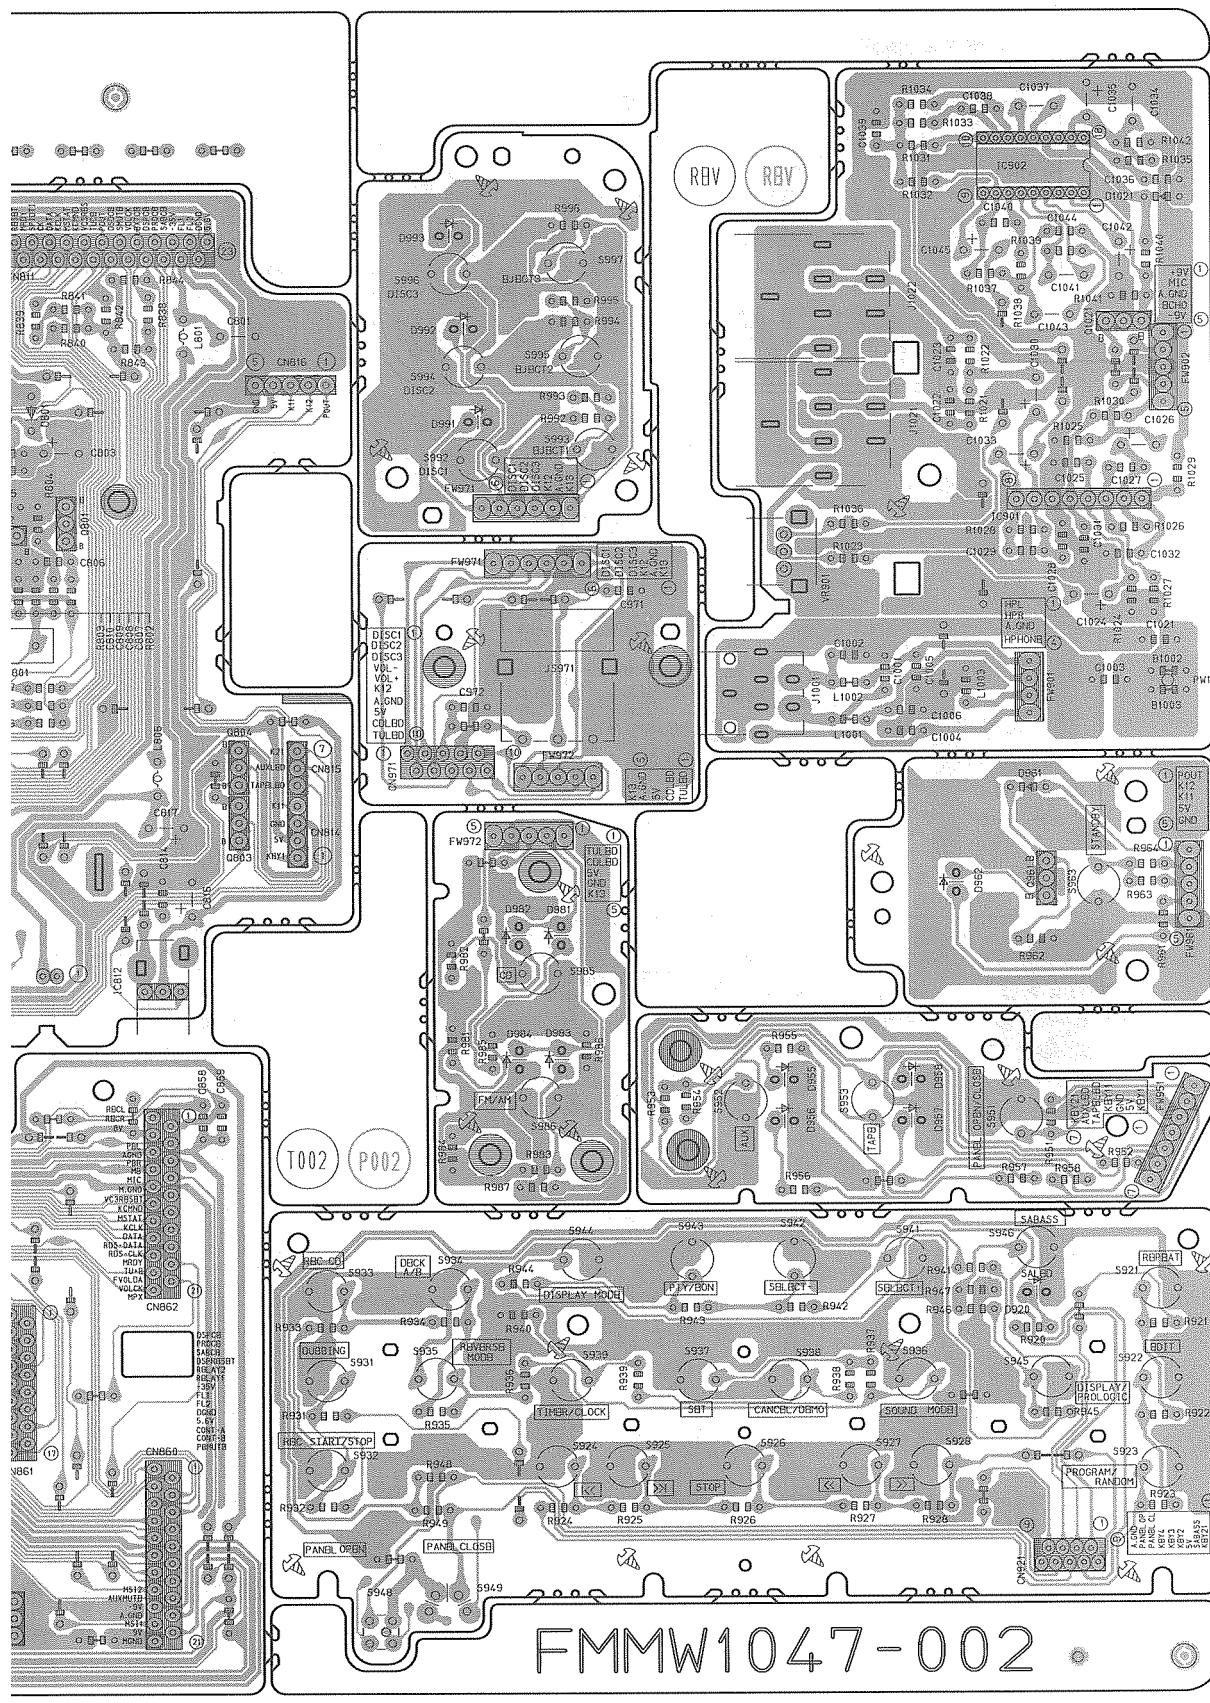


## ■ Function, Tuner, Main Board

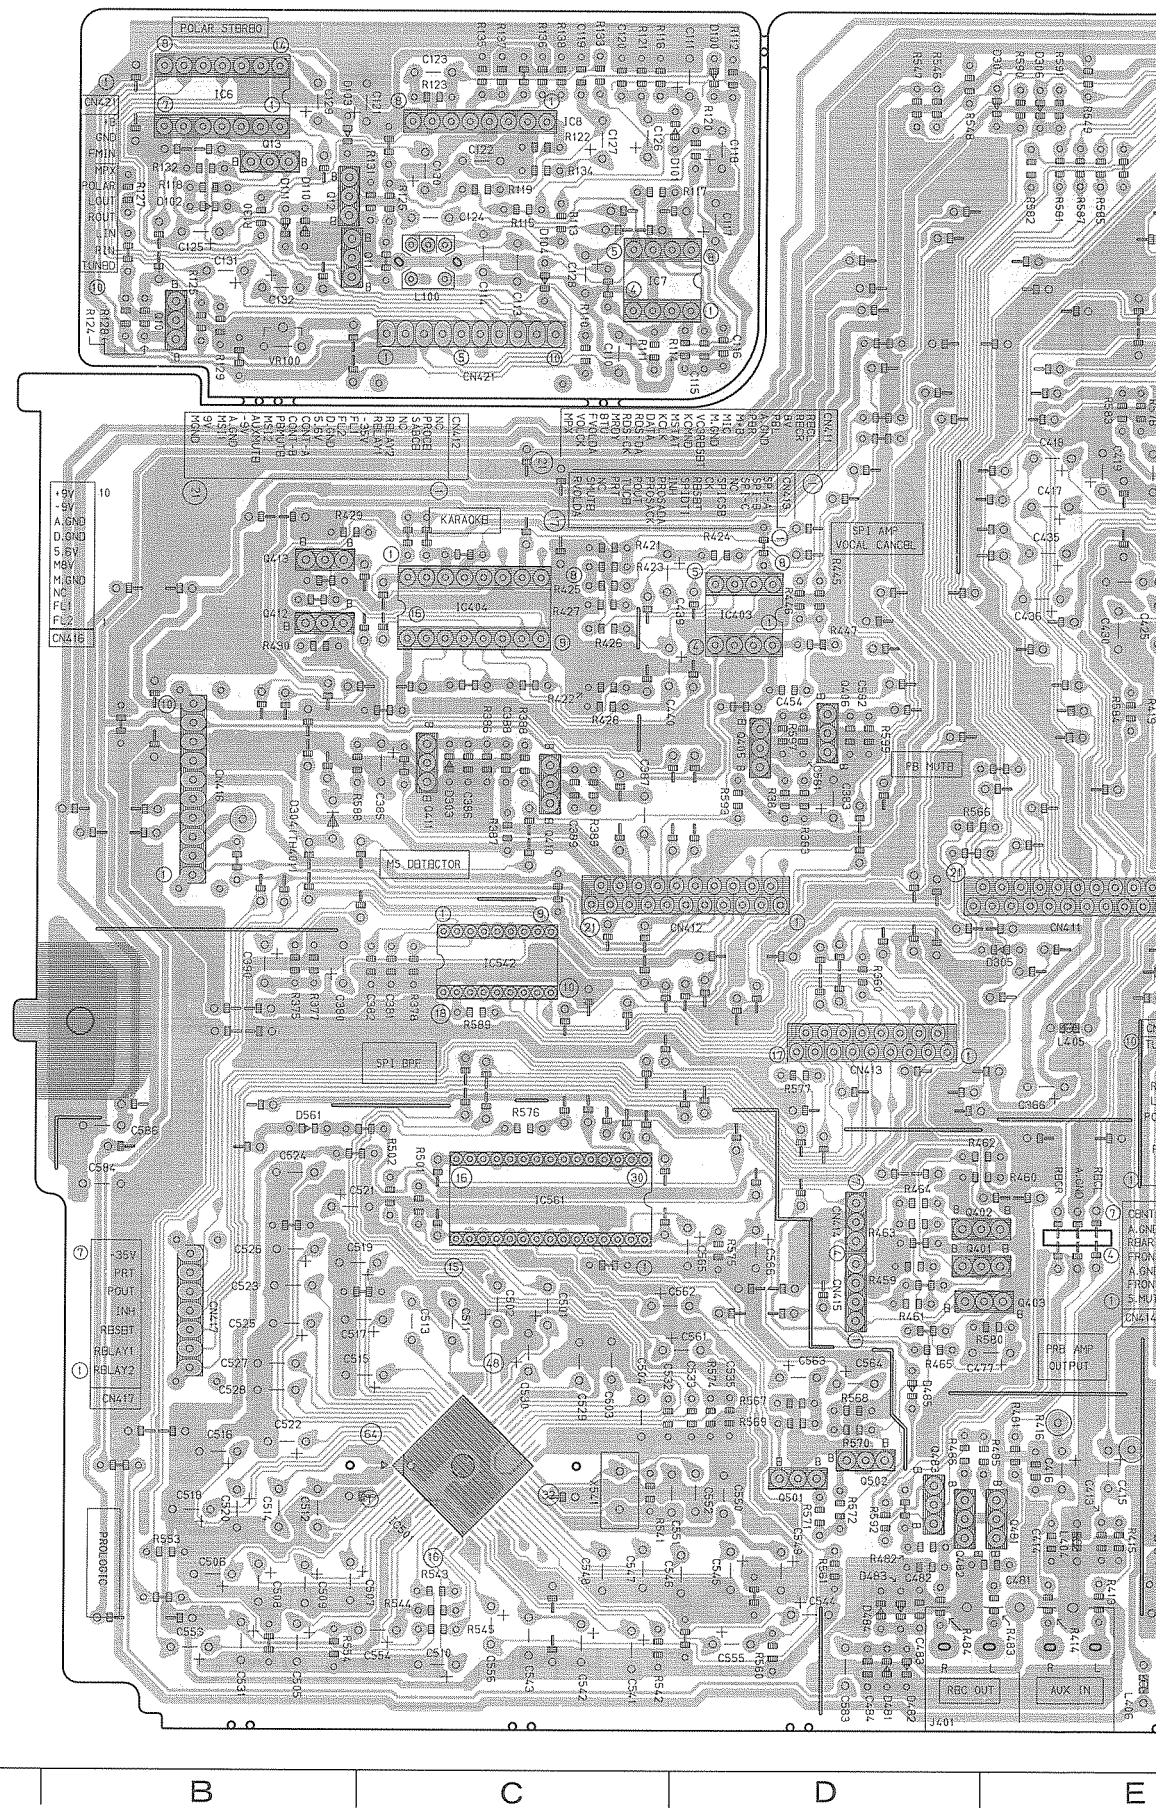



CA-MXJ55R/CA-MXJ530R

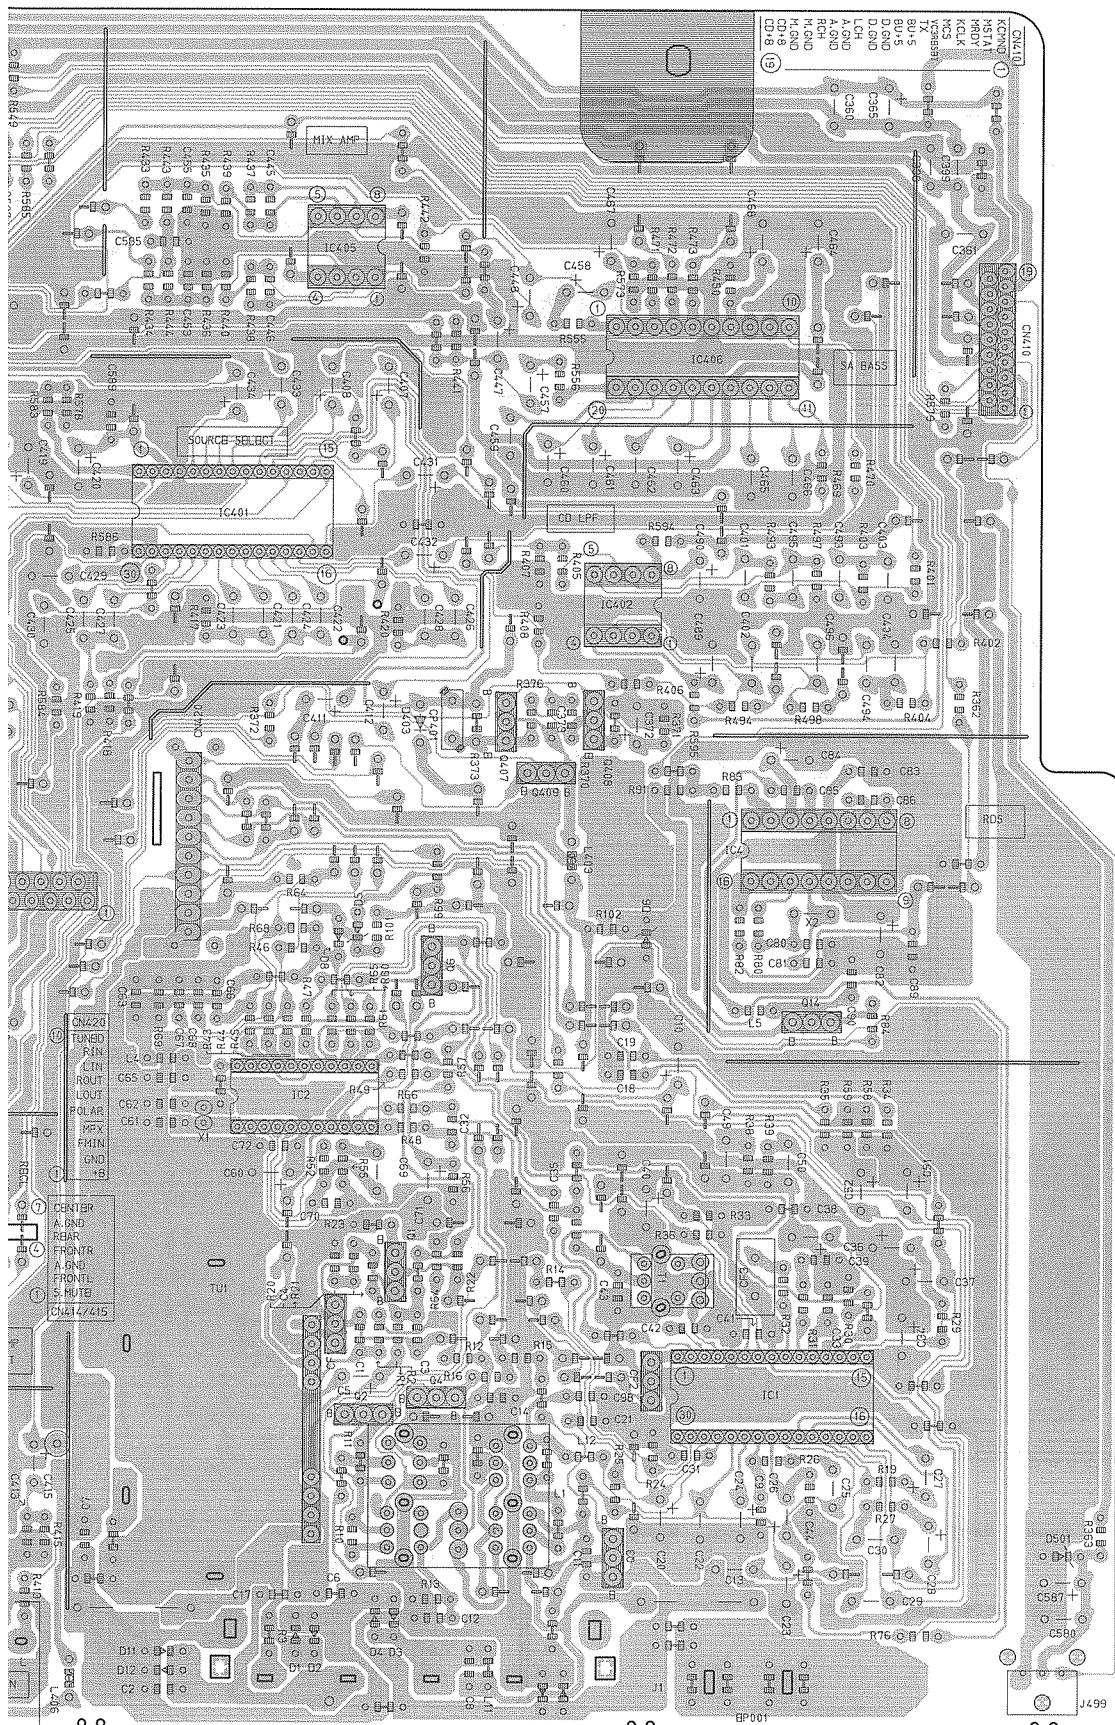

## ■ Regulator & Power Amplifier Board

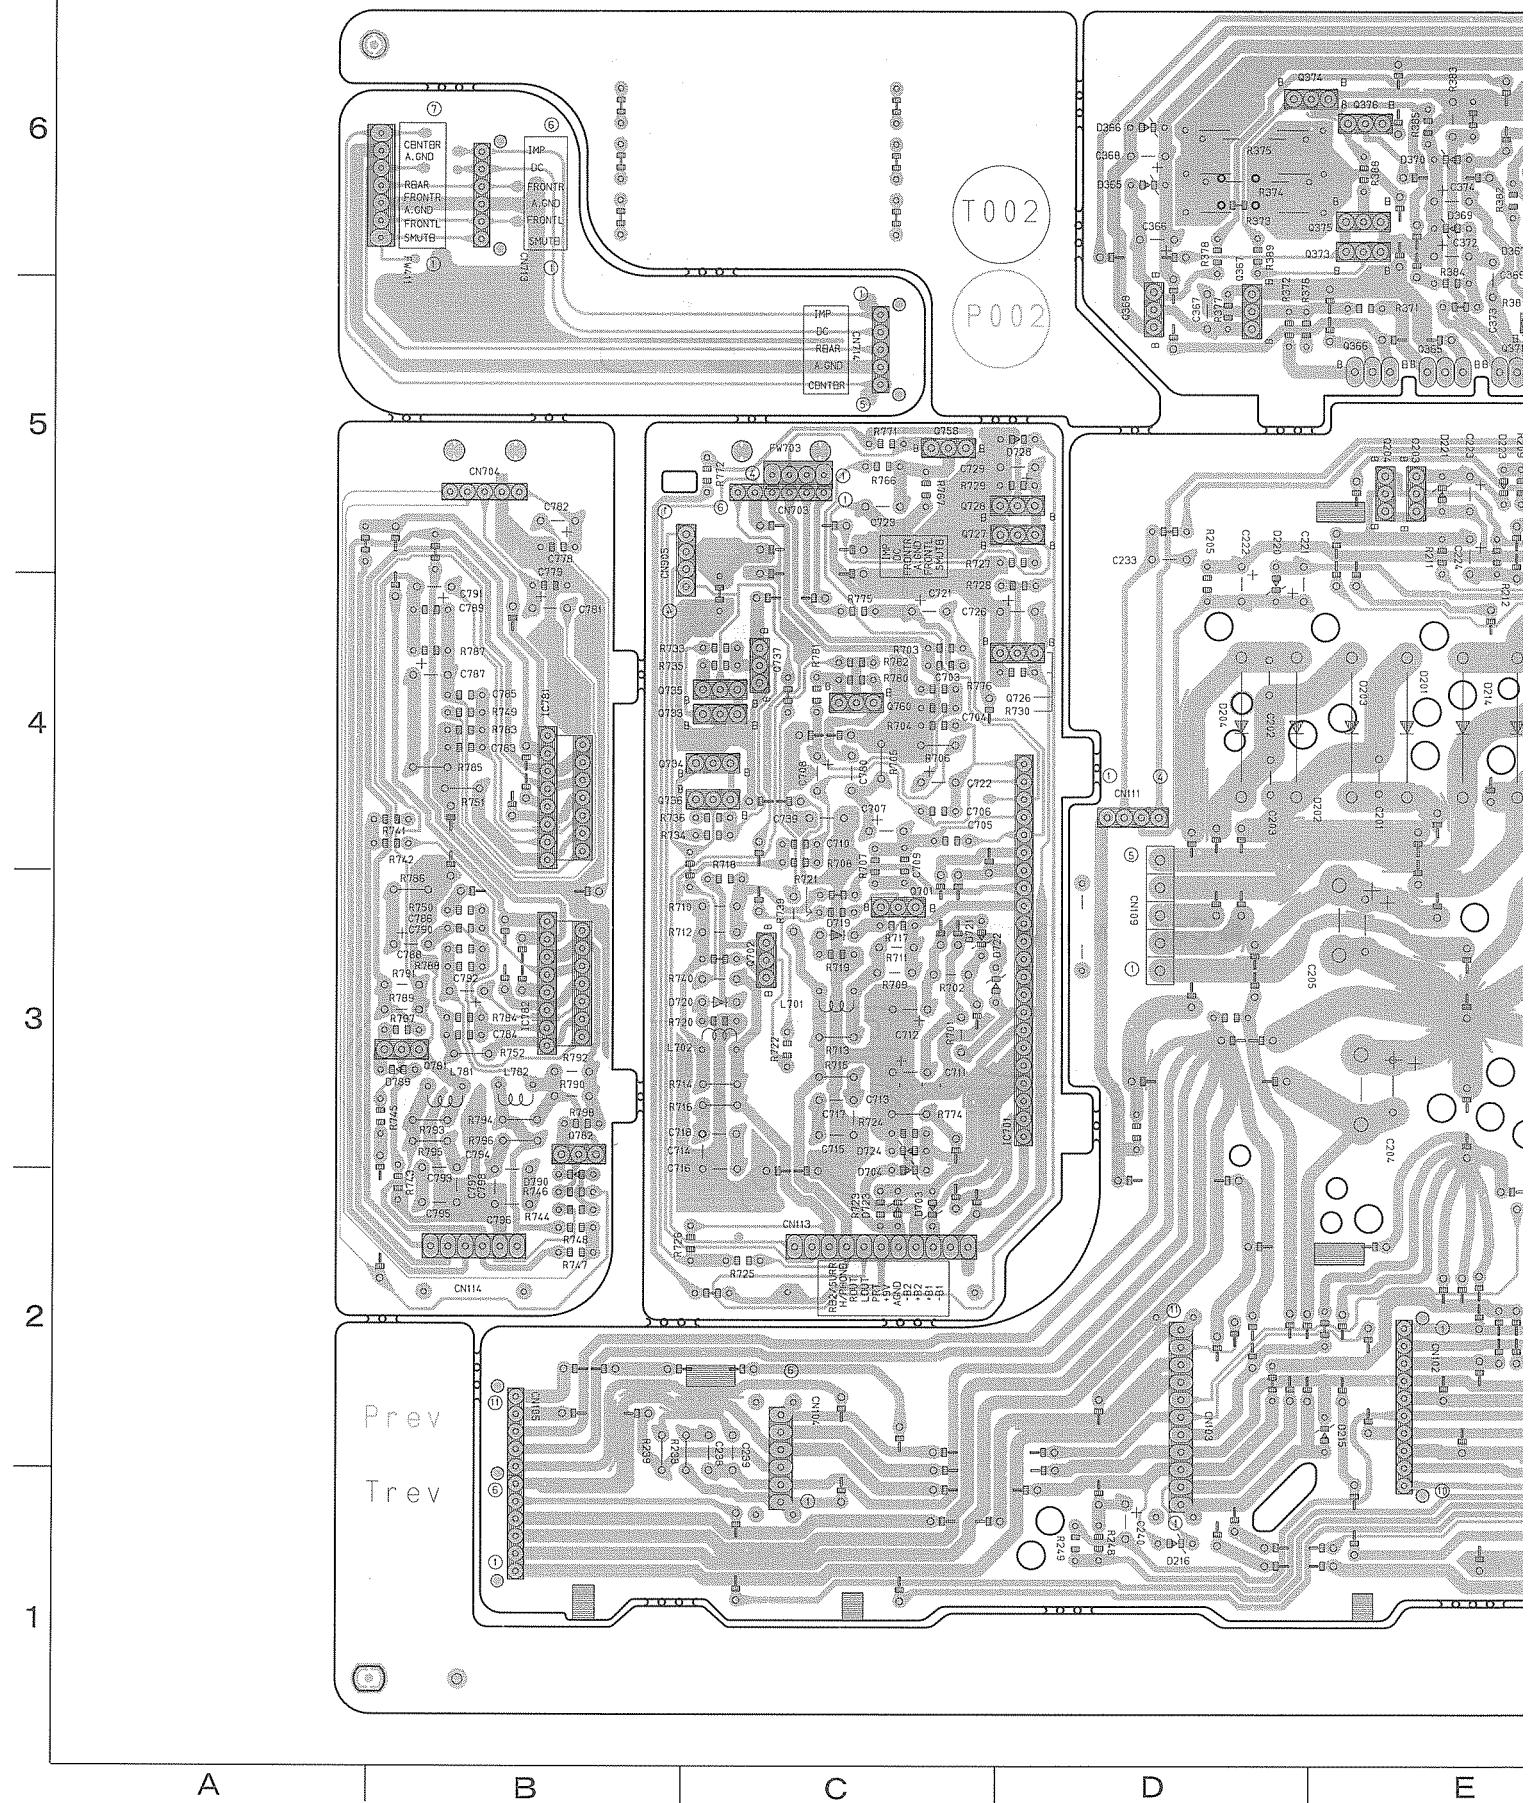

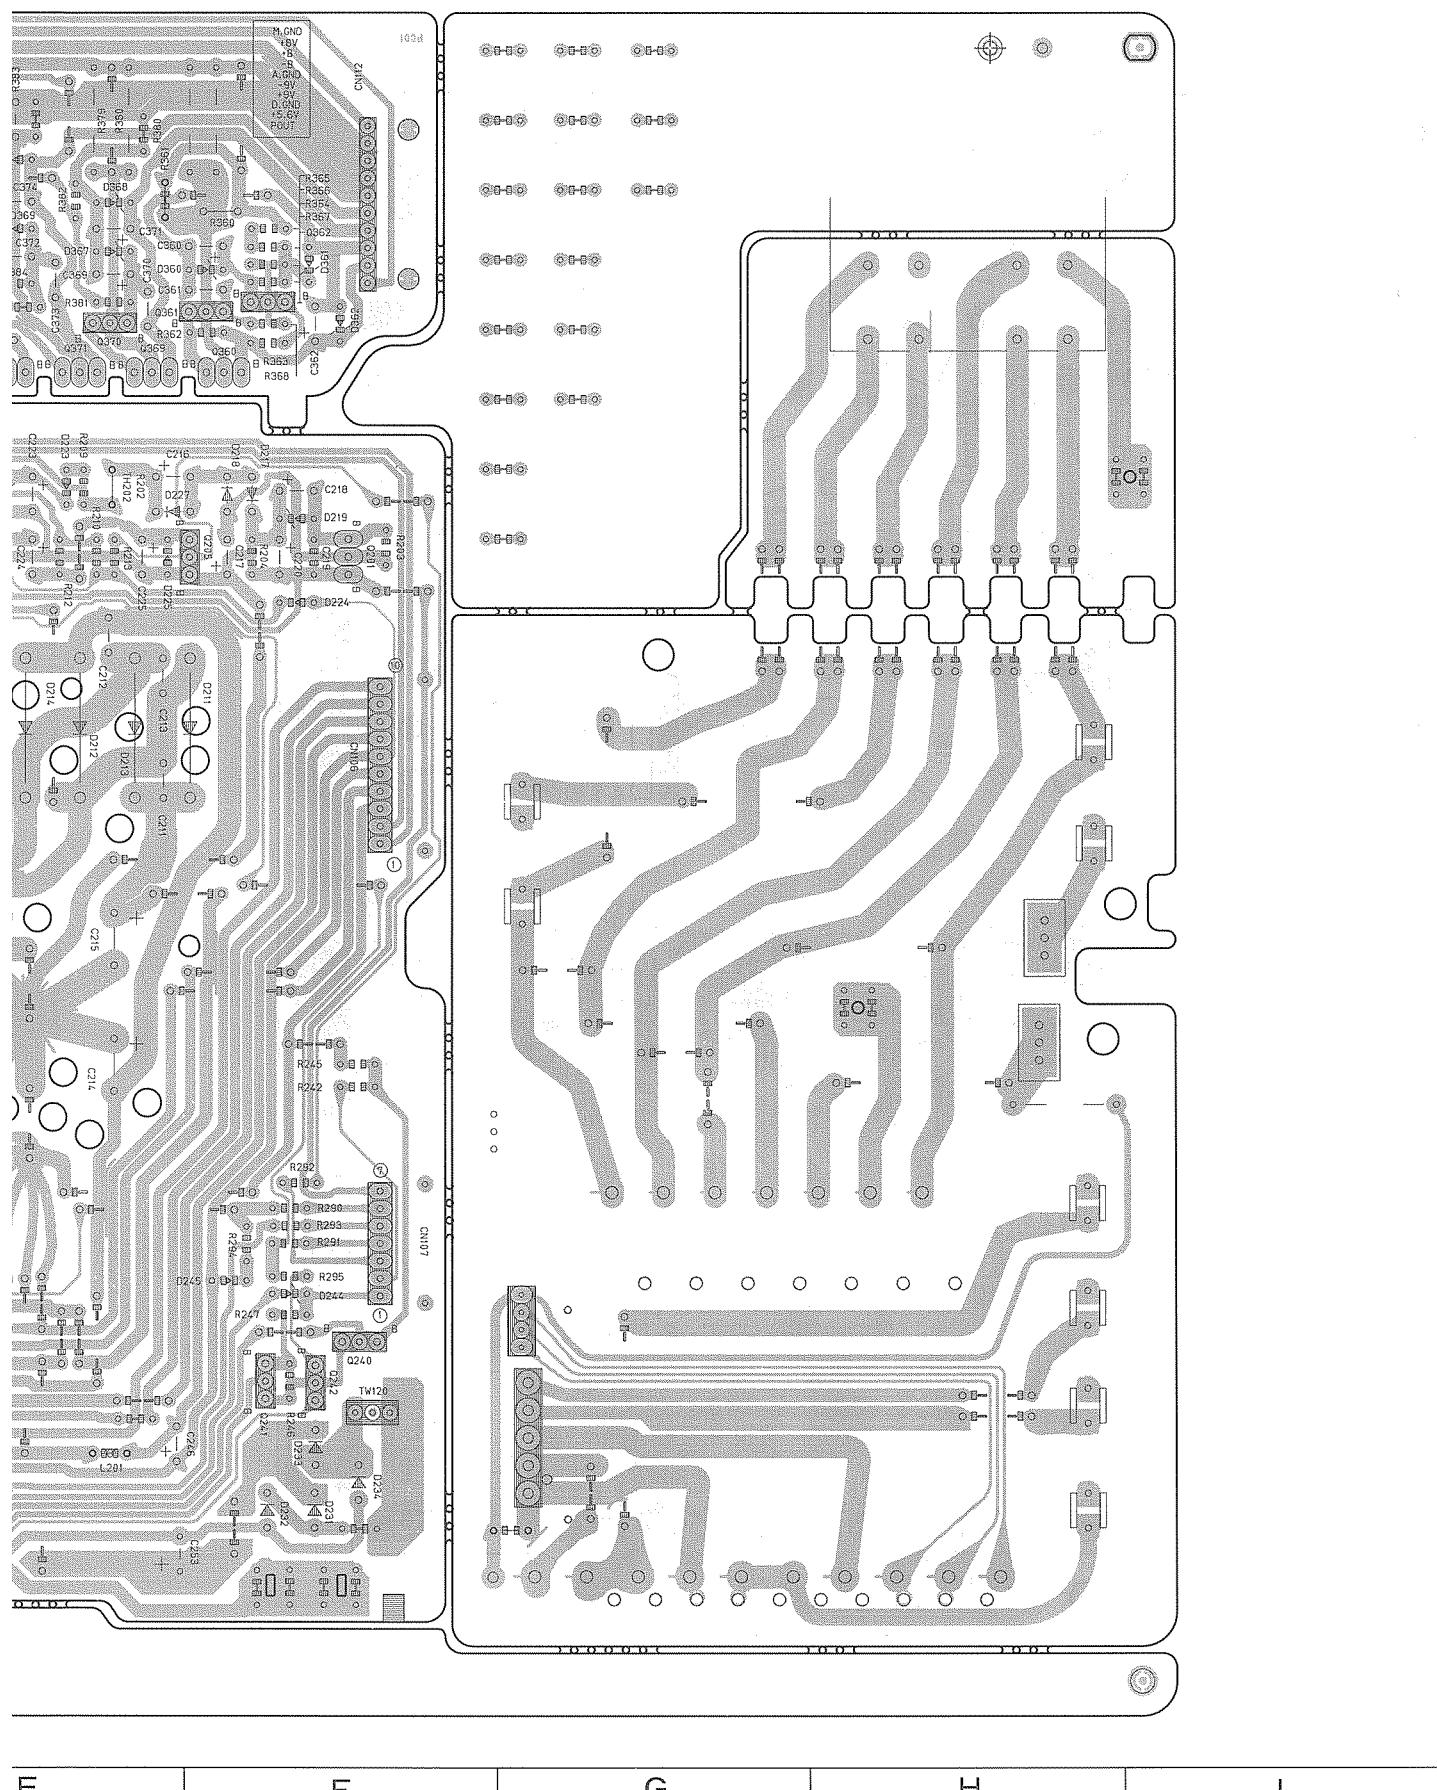

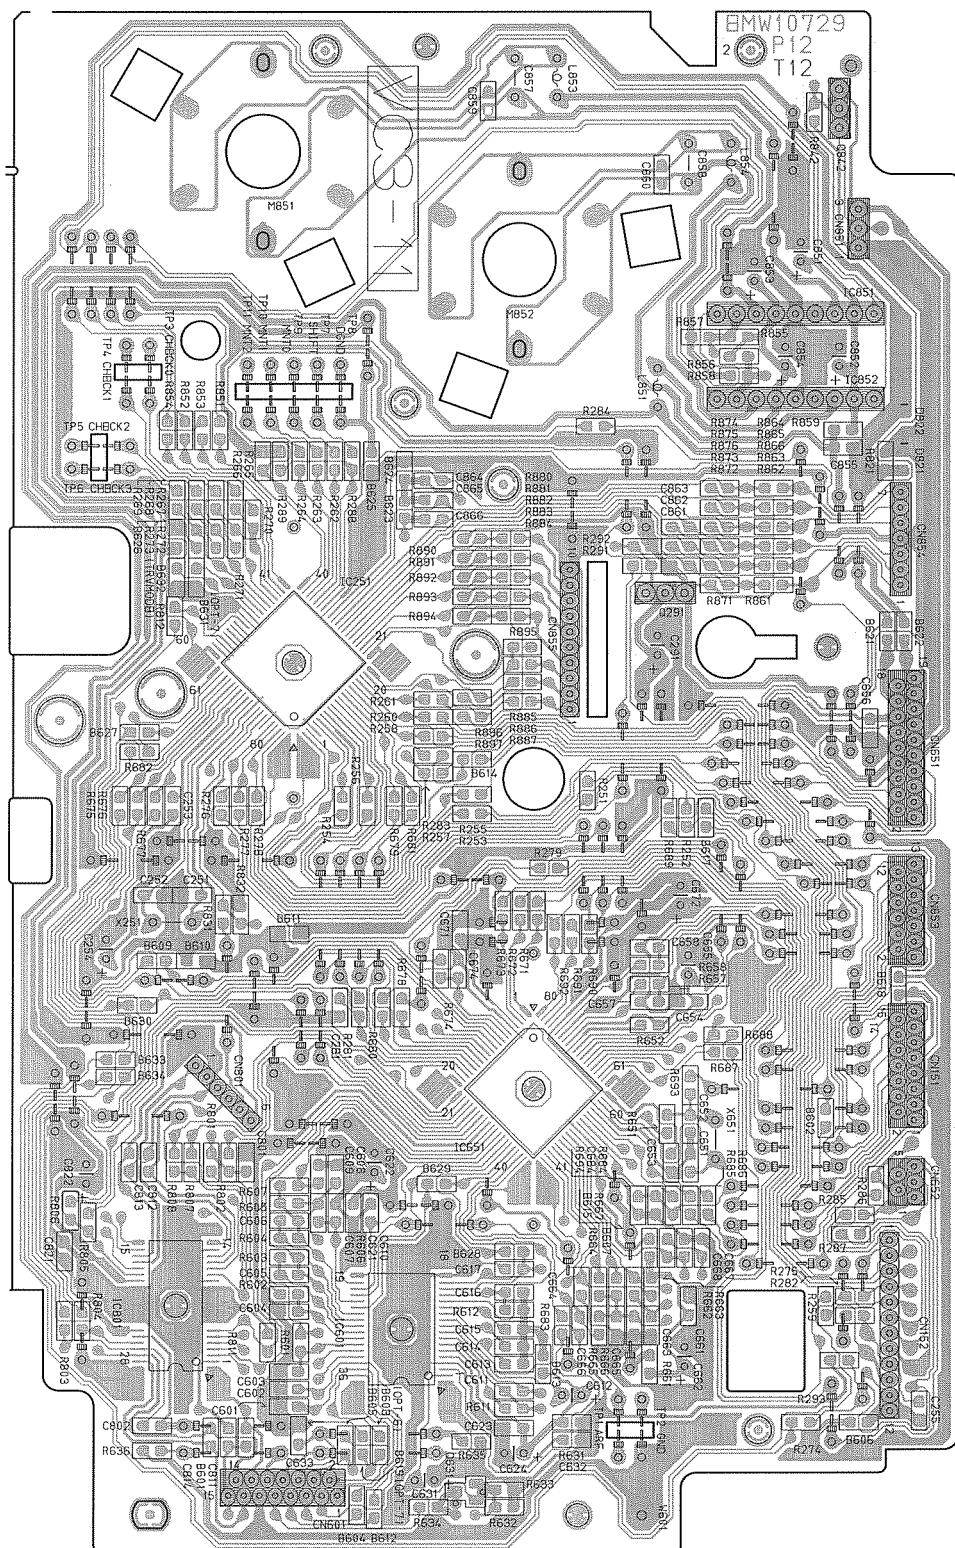**■ CD Servo Control Board**

A


B

C


D

E


■ CD Tray section switch board

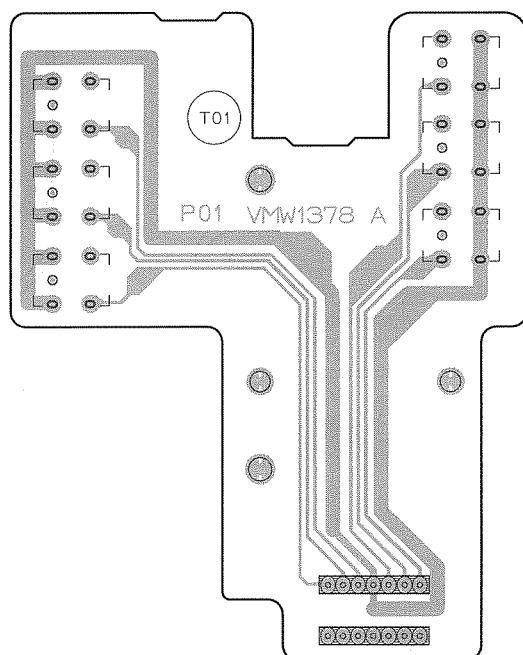

■ Cam switch board

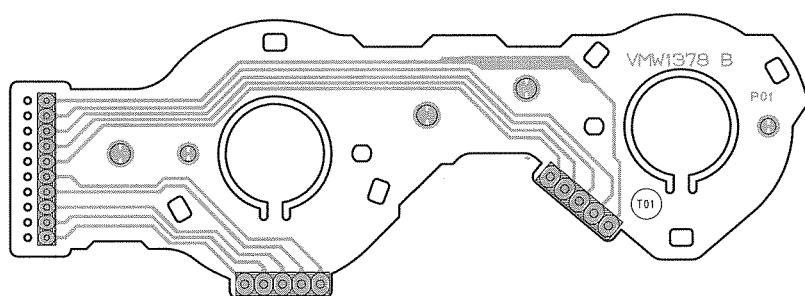

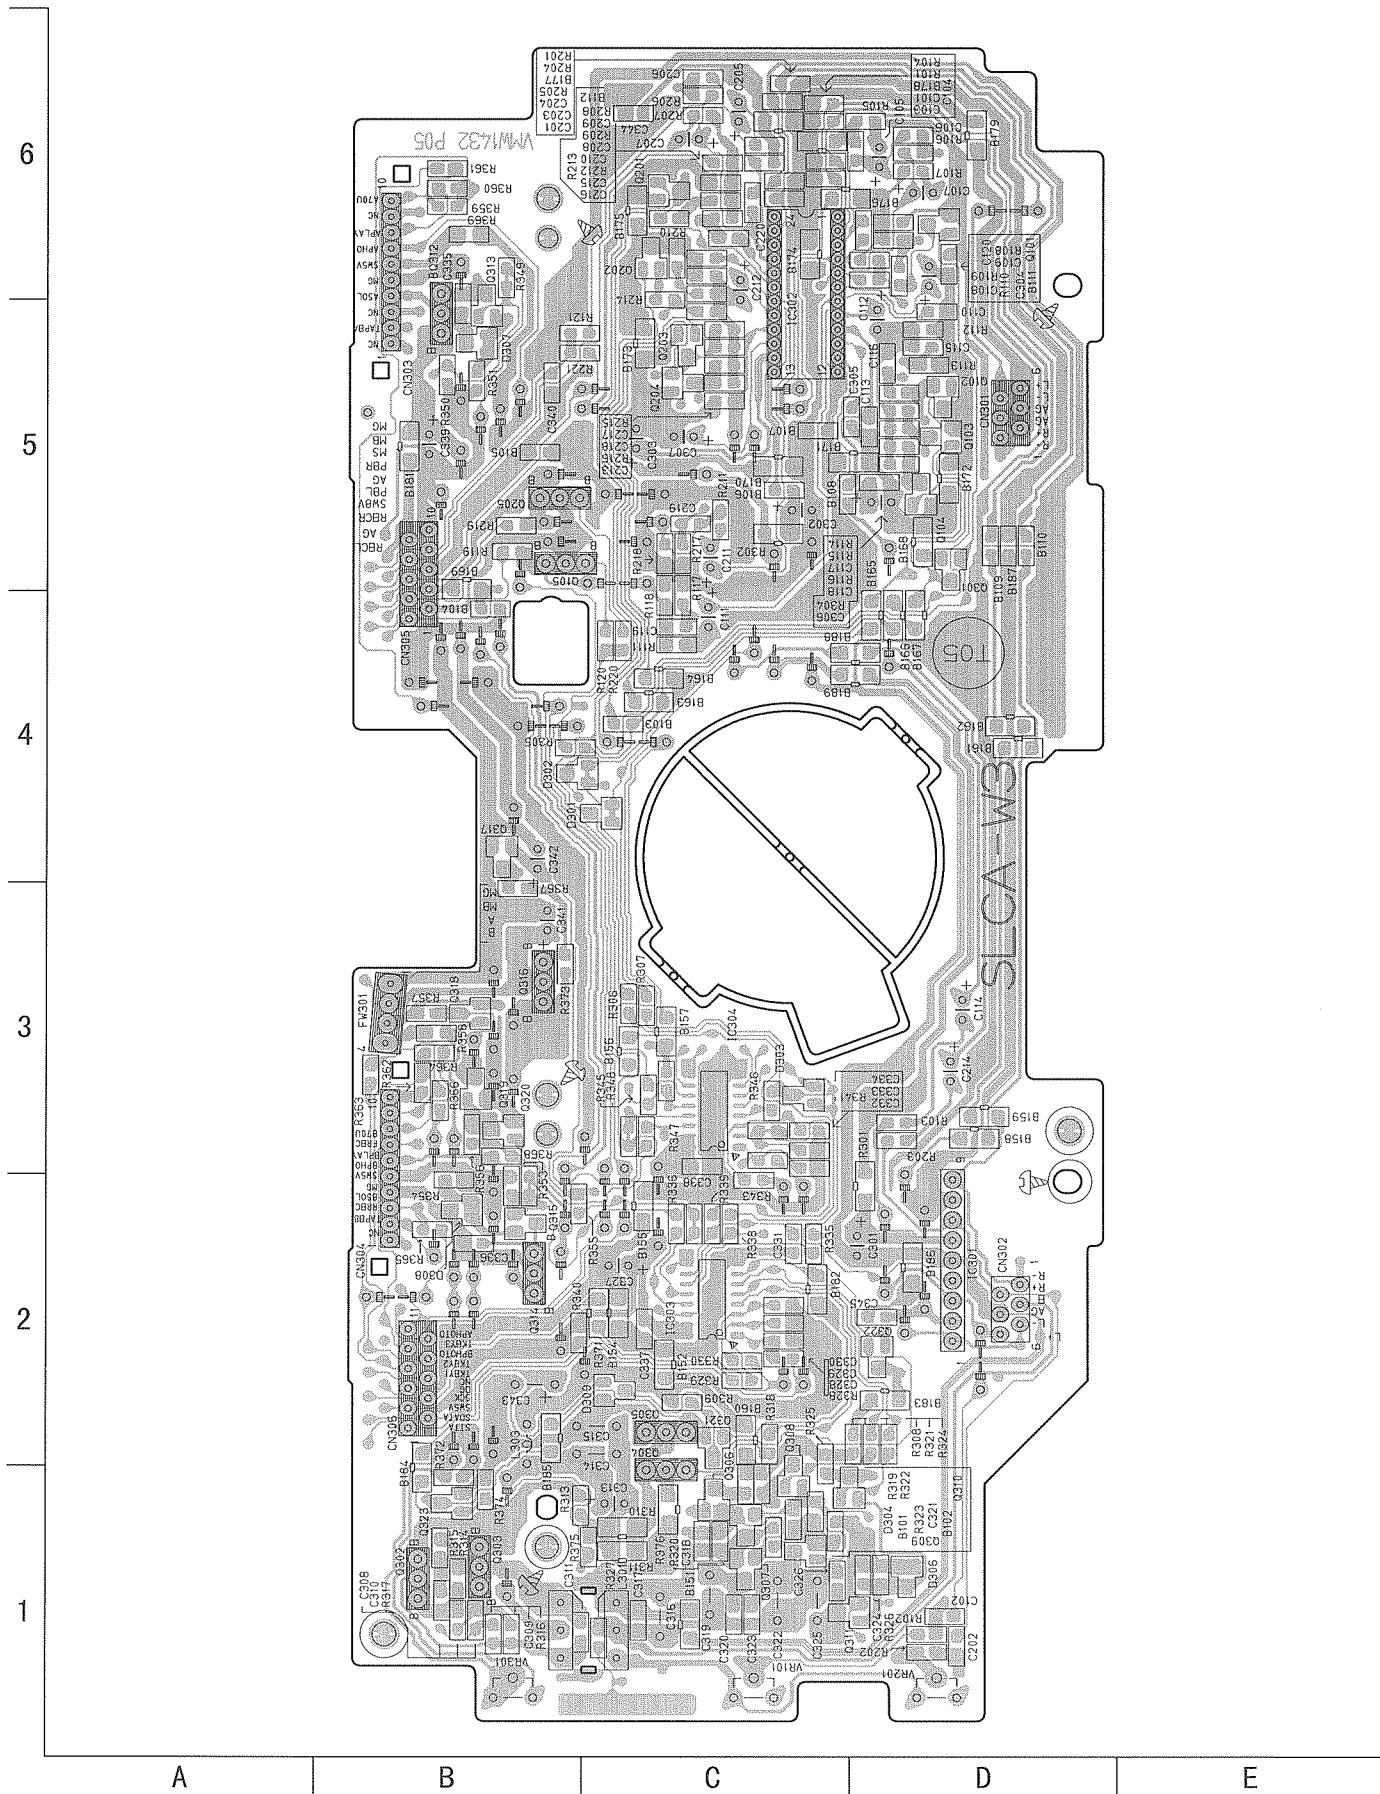

**Cassette Mechanism Board**

CA-MXJ55R/CA-MXJ530R

<<MEMO>>

## PARTS LIST

[ MX-J55R ]  
 [CA-MXJ55R]  
 [ CA-MXJ530R ]

\* All printed circuit boards and its assemblies are not available as service parts.

<b>Area Suffix(MX-J55R)</b>
EE ----- Russian Europe

<b>Area Suffix(CA-MXJ55R)</b>
B ----- U.K.
E -- Continental Europe
EN ----- Northern Europe
EV ----- Eastern Europe

<b>Area Suffix(CA-MXJ530R)</b>
B ----- U.K.
E -- Continental Europe
EN ----- Northern Europe
EV ----- Eastern Europe

### - Contents -

Exploded View of General Assembly and Parts List .....	3-3
CD Changer Mechanism Ass'y and Parts List .....	3-6
CD Mechanism Ass'y and Parts List .....	3-8
Cassette Mechanism Ass'y and Parts List .....	3-9
Electrical Parts List .....	3-11
Packing Materials and Accessories Parts List .....	3-26


CA-MXJ55R/CA-MXJ530R


<<MEMO>>



## **Exploded View of General Assembly and Parts List**

Block No. M 1 M M

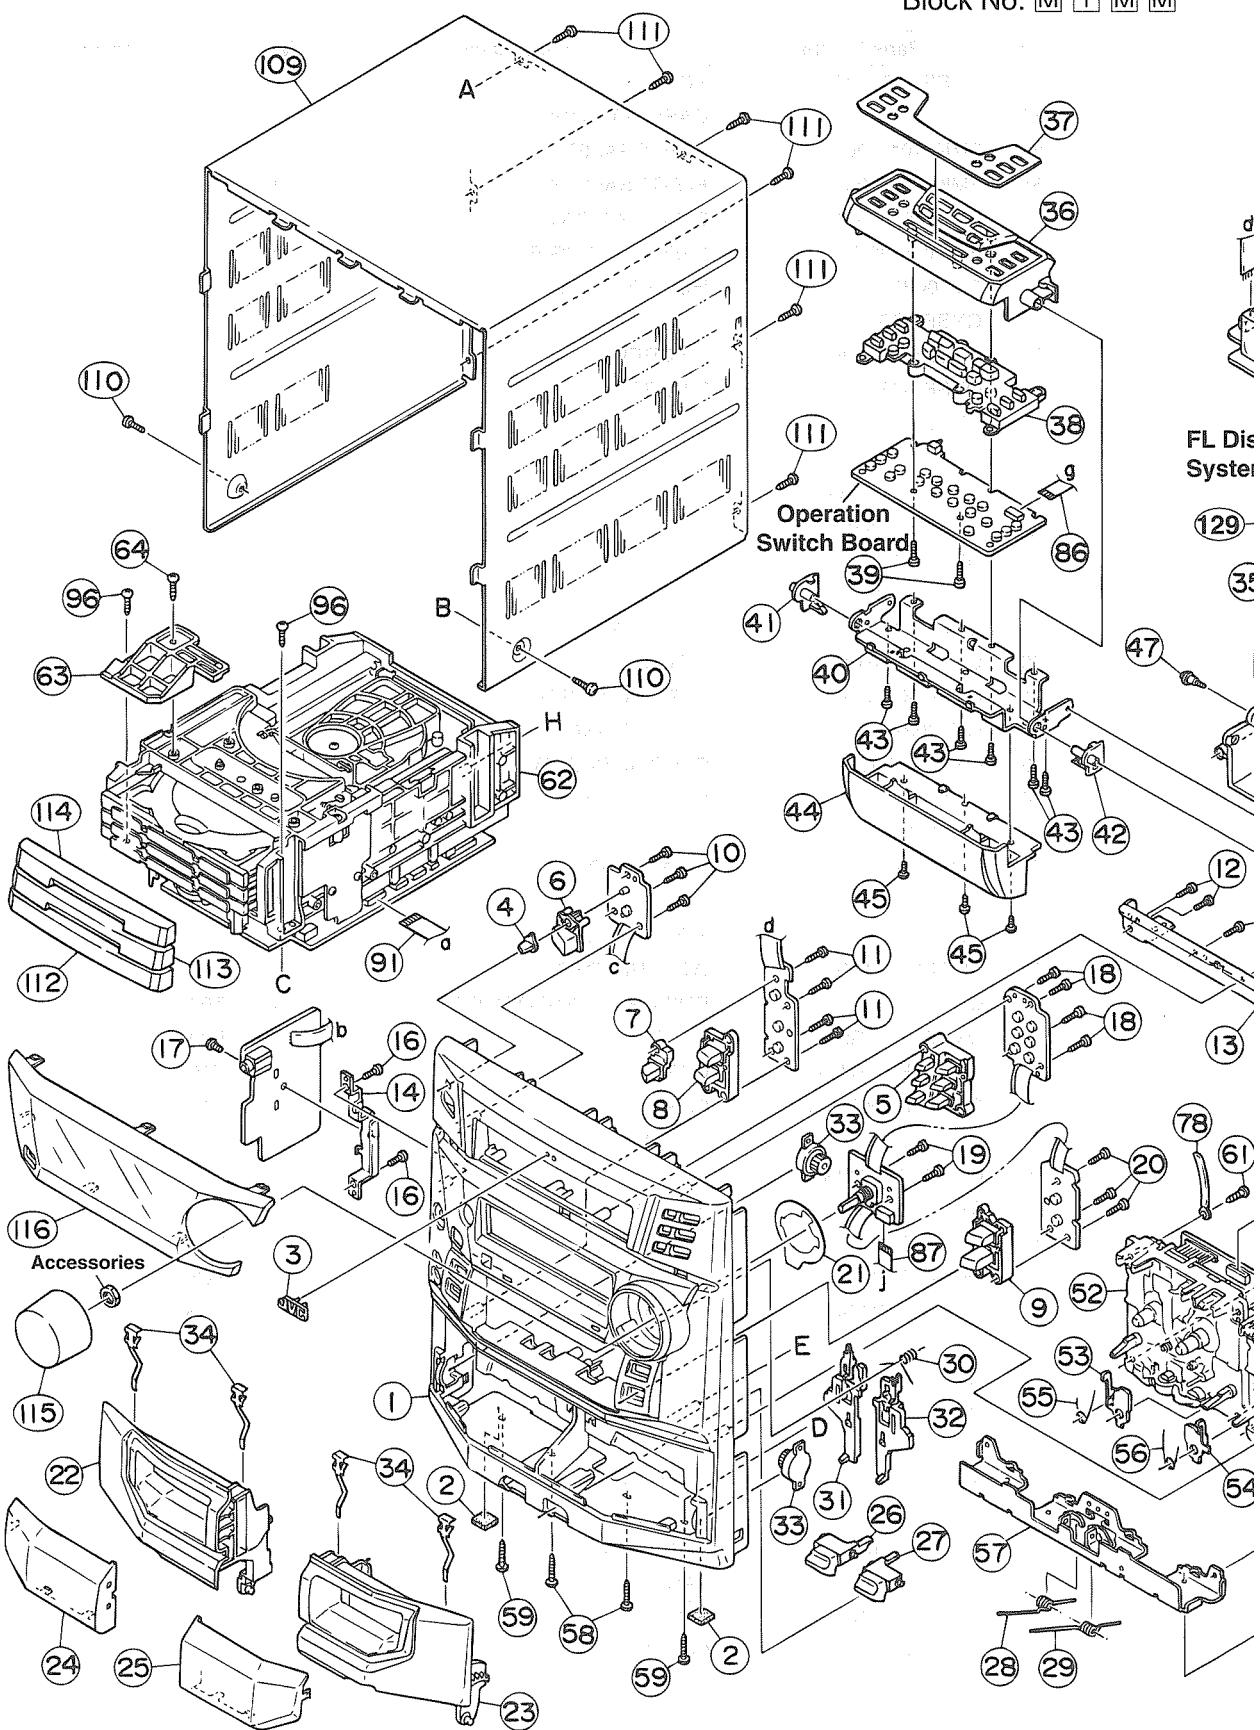

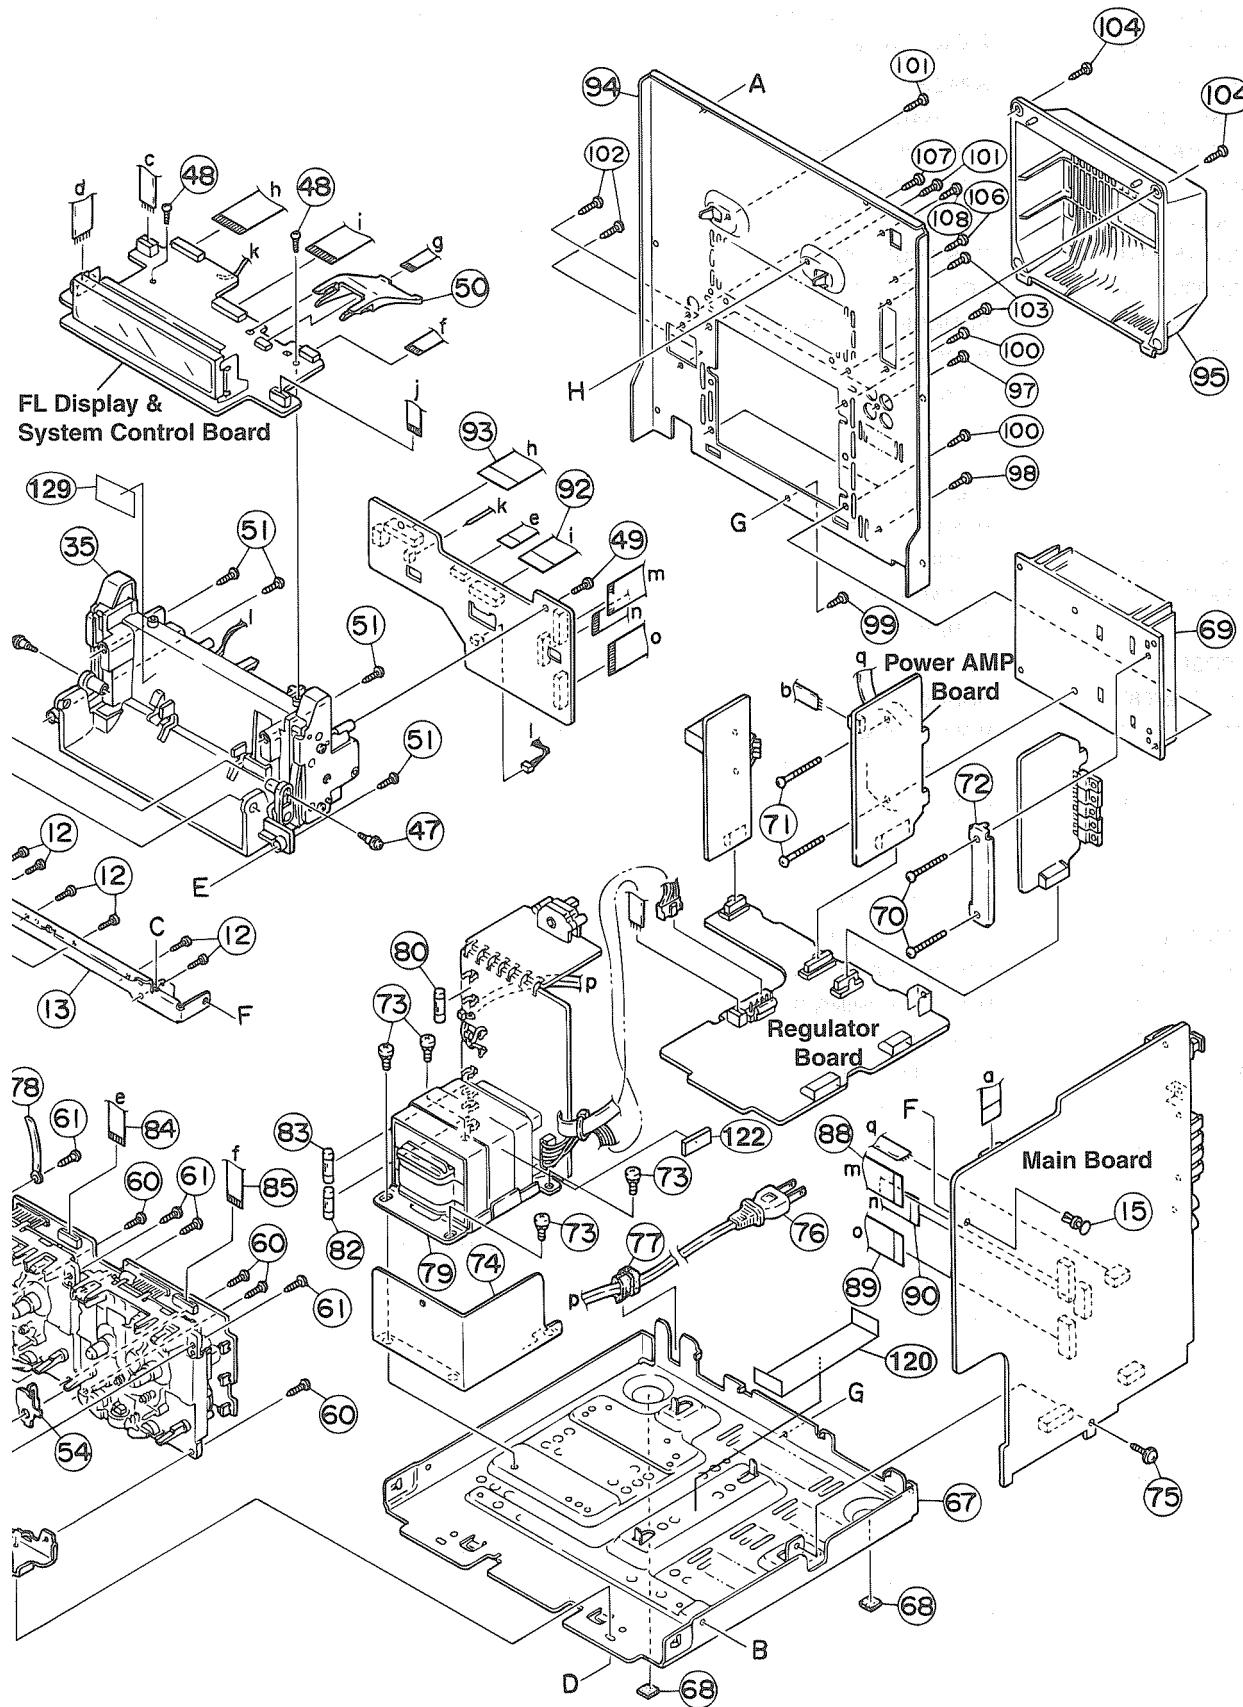

## ■ Parts List(General Assembly)

Block No.M1MM

▲	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	GV10010-018A	FRONT PANEL	1		
	2	E75896-001	SPACER	2		
	3	VJD5429-001	JVC MARK	1		
	4	GV40016-001A	STBY.INDICATOR	1		
	5	GV30047-008A	CD BUTTON ASSY	1		
	6	GV30029-006A	POWER BUTTON	1		
	7	GV30045-004A	PUSH BUTTON	1		
	8	GV20033-001A	SOURCE BUTTON(A)	1		
	9	GV20034-001A	SOURCE BUTTON(B)	1		
	10	QYSDSF2608Z	SCREW	3		
	11	QYSDSF2608Z	SCREW	4		
	12	QYSDSF2608Z	SCREW	6		
	13	GV30030-001A	STAY BRACKET	1		
	14	GV40030-001A	PHONE BRACKET	1		
	15	FMYH4004-001	PLASTIC RIVET	1		
	16	QYSDSF2608Z	SCREW	2		
	17	QYSBST3006Z	TH TAP SCREW	1		
	18	QYSDSF2608Z	SCREW	4		
	19	QYSDSF2608Z	SCREW	2		
	20	QYSDSF2608Z	SCREW	3		
	21	GV40043-001A	VOLUME SHEET	1		
	22	GV20022-004A	CASSETTE HOLDER(L)	1		
	23	GV20023-004A	CASSETTE HOLDER(R)	1		
	24	GV20024-001A	CASSETTE LENS(L)	1		
	25	GV20025-001A	CASSETTE LENS(R)	1		
	26	GV30026-004A	EJECT BUTTON(A)	1		
	27	GV30027-004A	EJECT BUTTON(B)	1		
	28	FMKW4009-001	HOLDER SPRING(A)	1		
	29	FMKW4010-001	HOLDER SPRING(B)	1		
	30	FMKW4011-001	SPRING	1		
	31	FMKS3002-003	EJECT LEVER(A)	1		
	32	FMKS3003-003	EJECT LEVER(B)	1		
	33	GV40034-001A	DAMPER	2		
	34	VKY4180-401	CASSETTE SPRING	4		
	35	GV10014-003A	CASE ASSY	1		
	36	GV30039-004A	MOVING PANEL(A)	1	CA-MXJ55R/MX-J55R	
		GV30039-006A	MOVING PANEL(A)	1	CA-MXJ530R	
	37	GV30040-017A	CONTROL SHEET	1		
	38	GV30041-007A	CONTROL BTN.ASSY	1		
	39	QYSDSF2608Z	SCREW	2		
	40	GV30042-002A	PANEL BRACKET	1		
	41	GV40028-001A	PANEL HOLDER(L)	1		
	42	GV40028-002A	PANEL HOLDER(R)	1		
	43	QYSDSF2608Z	SCREW	6		
	44	GV30043-004A	MOVING PANEL(B)	1	CA-MXJ55R/MX-J55R	
		GV30043-005A	MOVING PANEL(B)	1	CA-MXJ530R	
	45	QYSBST2606Z	T.SCREW	3		
	47	VKZ4341-204	SPECIAL SCREW	2		
	48	QYSDSF2608Z	SCREW	2		
	49	QYSDSF2608Z	SCREW	1		
	50	GV30054-001A	BOARD HOLDER	1		

## ■ Parts List(General Assembly)

Block No.M1MM

▲	Item	Parts Number	Parts Name	Q'ty	Description	Area
	51	QYSSSF3012Z	SCREW	4		
	52	-----	CASSETTE MECHA	1		
	53	FMKL4012-004	EJECT SAFETY(A)	1		
	54	FMKL4013-001	EJECT SAFETY(B)	1		
	55	FMKW4007-001	EJECT SPRING(A)	1		
	56	FMKW4008-001	EJECT SPRING(B)	1		
	57	GV20030-001A	HOLDER BRACKET	1		
	58	QYSBSG3010E	T.SCREW	2		
	59	QYSBSG3010E	T.SCREW	2		
	60	QYSBSG3010Z	T.SCREW	4		
	61	QYSBSF3010Z	SCREW	4		
	62	-----	CD CHANGER MECHA	1		
	63	E309662-001SM	DISC STOPPER	1		
	64	QYSBSF3008Z	SCREW	1		
	67	GV10011-001A	CHASSIS BASE	1		
	68	E75896-006	FELT SPACER	2		
▲	69	GV30044-002A	HEAT SINK	1		
	70	QYSBSG3014E	T.SCREW	2		
	71	QYSBSG3020E	TAPPING SCREW	2		
	72	GV40029-001A	LEAF SPRING	1		
	73	QYSDSTL4008Z	SPECIAL SCREW	4		
	74	LE30469-001A	SHIELD PLATE	1		
	75	QYSBSGG3008E	T.SCREW	1		
▲	76	QMPK090-205-JN	POWER CORD	1		E,EE,EN,EV
▲		QMPN090-200-JC	POWER CORD	1		B
	77	QZW0033-001	STRAIN RELIEF	1		
	78	VKZ4001-110S	WIRE HOLDER	1		
▲	79	QQT0251-002	POWER TRANSFORMER	1	T001	
▲	80	QMF51E2-1R25-J1	FUSE	1	F001	
▲	82	QMF51E2-3R15-J1	FUSE	1	F101	
▲	83	QMF51E2-3R15-J1	FUSE	1	F102	
	84	QUQ412-1014CJ	FLAT WIRE	1	FC854	
	85	QUQ412-1115DJ	FLAT WIRE	1	FC803	
	86	QUQ610-0915BJ	FLAT WIRE	1	FC921	
	87	QUQ412-1012CJ	FLAT WIRE	1	FC971	
	88	QUQ412-2109CJ	FLAT WIRE	1	FC857	
	89	QUQ412-2109CJ	FLAT WIRE	1	FC855	
	90	QUQ412-1712CJ	FLAT WIRE	1	FC856	
	91	QUQ110-1916BJ	FLAT WIRE	1	FC410	
	92	QUQ412-2112CJ	FLAT WIRE	1	FC801	
	93	QUQ412-2308CJ	FLAT WIRE	1	FC802	
	94	GV10013-019A	REAR PANEL	1	CA-MXJ55R	
		GV10013-021A	REAR PANEL	1	MX-J55R	
		GV10013-022A	REAR PANEL	1	CA-MXJ530R	
	95	E207356-002SM	REAR COVER	1		
	96	QYSBSG3008Z	T.SCREW	2		
	97	QYSBSGY3008E	SPECIAL SCREW	1		
	98	QYSBSGY3008E	SPECIAL SCREW	1		
	99	QYSBSGY3008E	SPECIAL SCREW	1		
	100	QYSBSGY3008E	SPECIAL SCREW	4		
	101	QYSBSGY3008E	SPECIAL SCREW	2		




## ■ Parts List(General Assembly)

Block No.M1MM

△	Item	Parts Number	Parts Name	Q'ty	Description	Area
	102	QYSBSGY3008E	SPECIAL SCREW	2		
	103	QYSBSGY3008E	SPECIAL SCREW	2		
	104	QYSBSGY3008E	SPECIAL SCREW	2		
	106	QYSBSGY3008E	SPECIAL SCREW	1		
	107	QYSBSGY3008E	SPECIAL SCREW	1		
	108	QYSBSGY3008E	SPECIAL SCREW	1		
	109	GV10012-001A/S/	METAL COVER	1		
	110	QYSDSG3006M	TAPPING SCREW	2		
	111	QYSBSGY3008E	SPECIAL SCREW	6		
	112	GV30033-003A	CD FITTING	1	CA-MXJ55R/MX-J55R	
		GV30033-004A	CD FITTING	1	CA-MXJ530R	
	113	GV30034-002A	CD FITTING	1	CA-MXJ55R/MX-J55R	
		GV30034-003A	CD FITTING	1	CA-MXJ530R	
	114	GV30035-003A	CD FITTING	1	CA-MXJ55R/MX-J55R	
		GV30035-004A	CD FITTING	1	CA-MXJ530R	
	115	GV30028-004A	VOLUME KNOB	1		
	116	GV20026-005A	WINDOW SCREEN	1	CA-MXJ55R/MX-J55R	
		GV20026-003A	WINDOW SCREEN	1	CA-MXJ530R	
	120	GV40048-001A	PROTECT SHEET	1		
	122	FMYSH103-003	FELT SPACER	1		
	129	GV40059-001A	SPACER	1		

# CD Changer Mechanism Ass'y and Parts List

Block No. M 2 M M

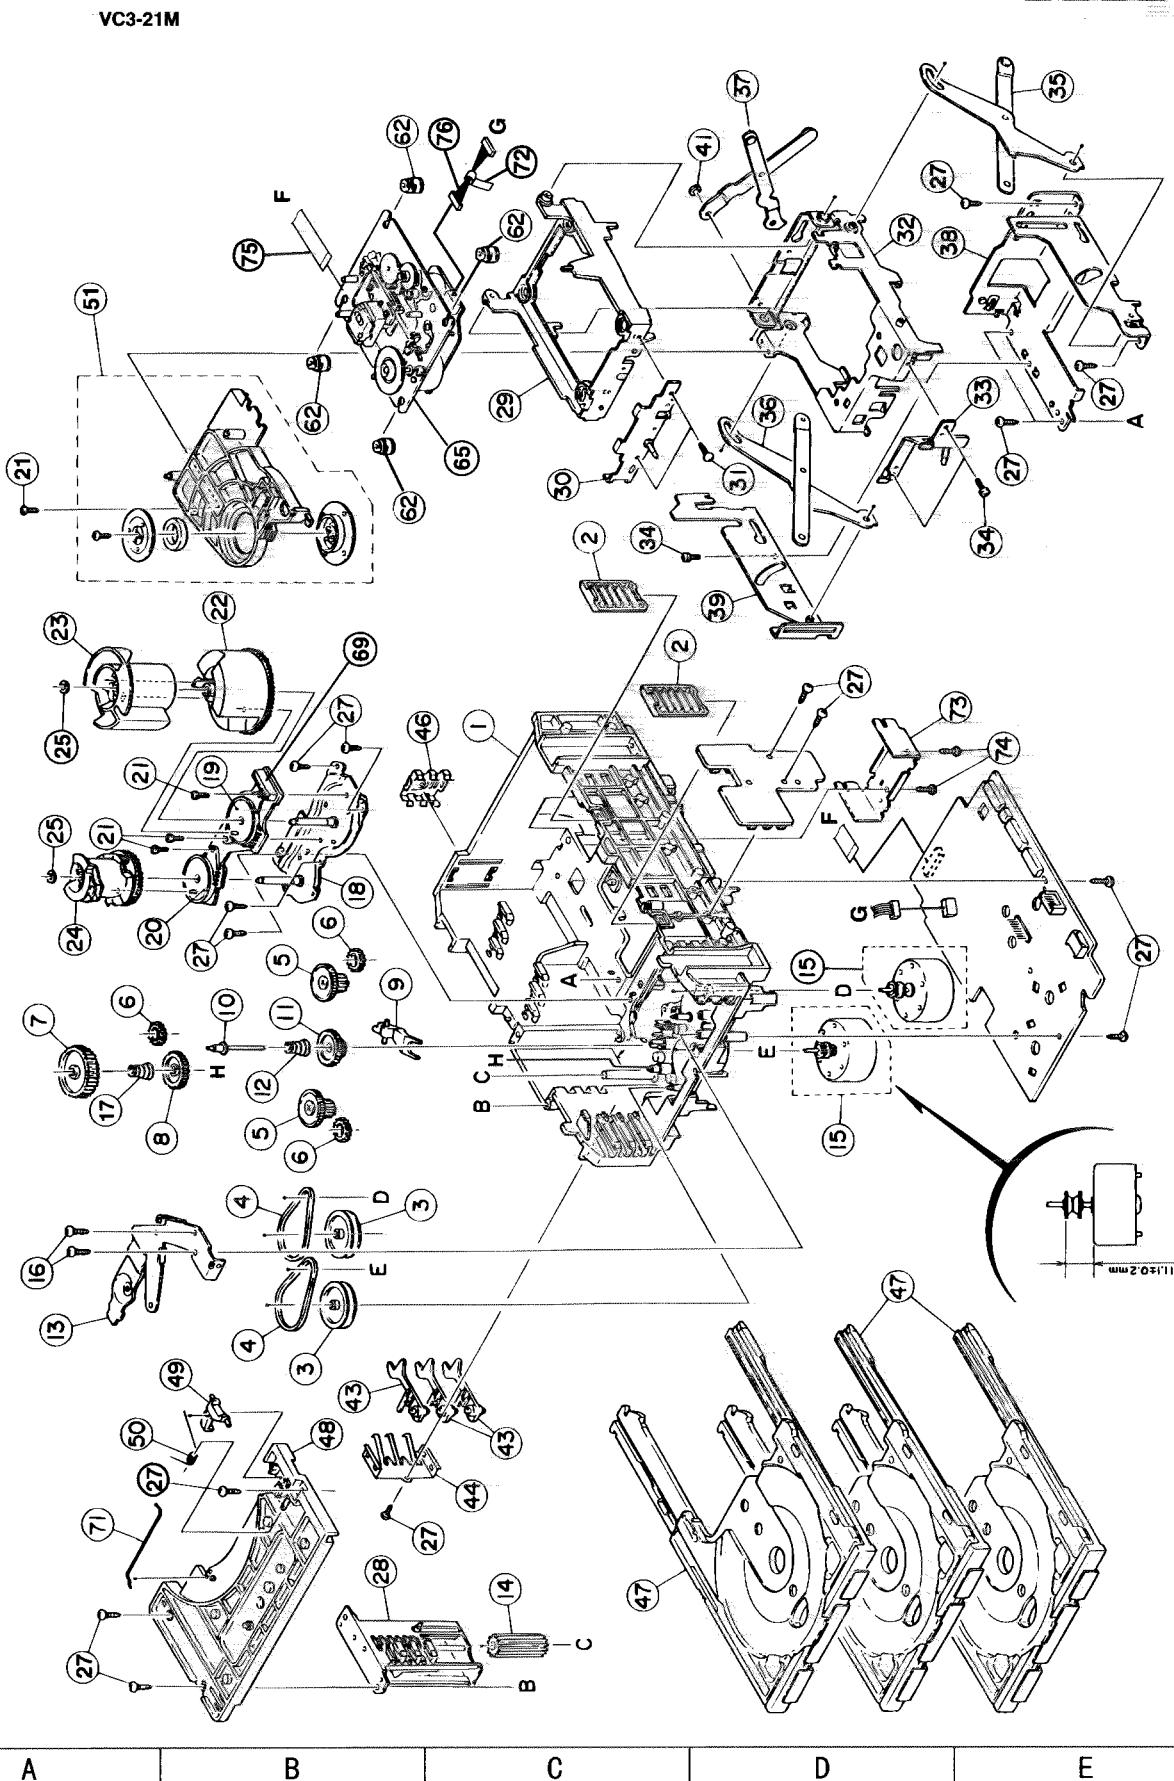

## ■ Parts List (CD Changer Mechanism)

BLOCK NO. M2MM

▲ REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
1	VKS1144-003	CHASSIS		1		
2	VKS3698-003	TRAY GUIDE		2		
3	VKS5532-003	PULLEY GEAR		2		
4	VKB3000-164	BELT		2		
5	VKS5505-003	GEAR B		2		
6	VKS5506-002	GEAR C		3		
7	VKS5507-002	CROSS GEAR U		1		
8	VKS5508-002	CROSS GEAR L		1		
9	VKS5510-003	SELECT LEVER		1		
10	VKH5769-001	S.G.SHAFT		1		
11	VKS5511-002	SELECT GEAR		1		
12	VKW155-003	COMP.SPRING		1		
13	VKM3846-002	GEAR BRACKET		1		
14	VKS5509-002MM	CYLINDER GEAR		1		
15	MSN5D257A-SA2	D.C.MOTOR ASS'Y		2		
16	QYSPSPD2616Z	SCREW		2		
17	LV40612-001A	COMP.SPRING		1		
18	VKM3825-00AMM	C.G.BASE ASS'Y		1		
19	VKZ3172-00ASS	CAM SW. R ASS'Y		1		
20	VKZ3173-00ASS	CAM SW. L ASS'Y		1		
21	QYSPT2606Z	SCREW		4		
22	VKS2263-002MM	CAM R1		1		
23	VKS2264-002MM	CAM R2		1		
24	VKS2265-002MM	CAM GEAR L		1		
25	WDL316050MM	SLIT WASHER		2		
27	QYSBSF2608Z	T-SCREW		16		
28	VKS3702-00FMM	DRIVE UNIT		1		
29	VKS2247-004	MECHA HOLDER A		1		
30	VKL7767-00B	BRACKET ASS'Y		1		
31	QYSBSF2606Z	SCREW		2		
32	VKM3860-00A	M-HOLDER B AS'Y		1		
33	VKL7802-00C	M-HOLDER C AS'Y		1		
34	QYS DST2604Z	SCREW		3		
35	VKL7810-00A	LIFTER ASS'Y R		1		
36	VKL7811-00A	LIFTER ASS'Y L		1		
37	VKL7812-00A	LIFTER ASS'Y H		1		
38	VKL2732-002	LIFTER BASE		1		
39	VKM3857-001	LIFTER BRACKET		1		
41	WDL266035-2	SLIT WASHER		1		
43	VKS5514-002MM	LOCK LEVER		3		
44	VKY3133-002MM	RETURN SPRING		1		
46	VKY3134-003MM	CLICK SPRING		1		
47	VKS2252-00E	TRAY ASS'Y		3		
48	VKS2250-003	TOP BRACKET		1		
49	VKS5515-002	S.TRAY STOPPER		1		
50	VKW5156-004	TORSION SPRING		1		
51	VKS3703-00F	CLAMPER ASS'Y		1		
62	LV40761-003A	INSULATOR		4		
65	-----	CD MECHA		1		
69	QGB2012J1-10	CONNECTOR		1		
71	VKW5187-001	ROD		1		
72	VYSA1R2-033	SPACER		1		
73	LE30611-001A	C.B HOLDER		1		
74	QYSBSF3008Z	SCREW		2		
75	QUQ610-1509AJ	FLAT WIRE		1		
76	EWS176-008	FLAT WIRE	FOR CD CB FOR HOLDER TRAVERSE 15	6	1	
			TRAVERSE 6			

# CD Mechanism Ass'y and Parts List


## ■ Grease Point

G-31KB

(Grease to apply have to be alittle for the exchange)

Block No. M 3 M M

No. EXL-M7TB

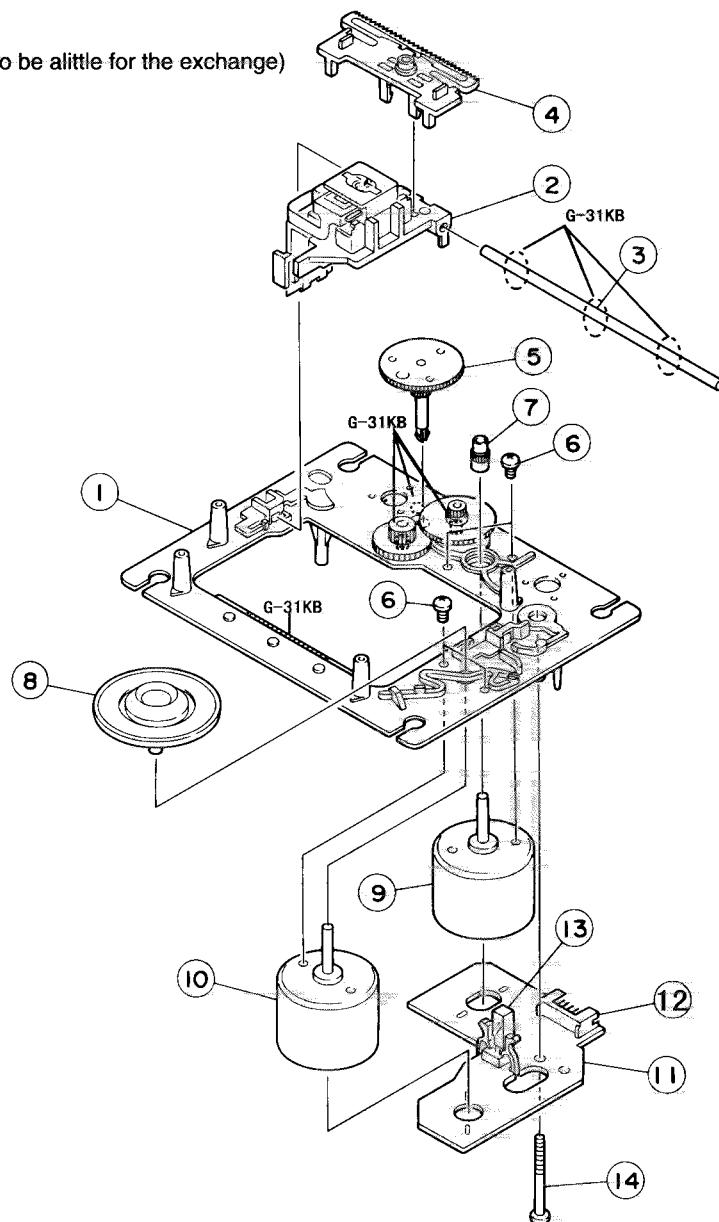

## ■ CD Mechanism Assembly Parts List

Item	Parts Number	Parts Name	Q'ty	Description	Area
1	E102731-221SMKP	MECHA. BASE ASSY	1		
2	OPTIMA-7B	OPTICAL PICK UP	1		
3	E406777-002SMKP	CD SHAFT	1		
4	HQN300031-001PK	CD RACK	1		
5	E307745-441SMKP	MECHA GEAR	1		
6	QYSDSP2003N	SCREW	4		
7	E406750-441SM	PINION GEAR	1		
8	EPB309173PKA	TURN TABLE	1		
9	E406784-001	FEED MOTOR	1		
10	E406783-001	SPINDLE MOTOR	1		
11	EMW10190-441	P. C. BOARD	1		
12	QGA2001F1-06	6P PLUG ASSY	1		
13	QSW0506-001	LEAF SWITCH	1		
14	E75832-221SS	SCREW	1		

A

B


C

D

E

# **Cassette Mechanism Ass'y and Parts List**

Block No. M 4 M M

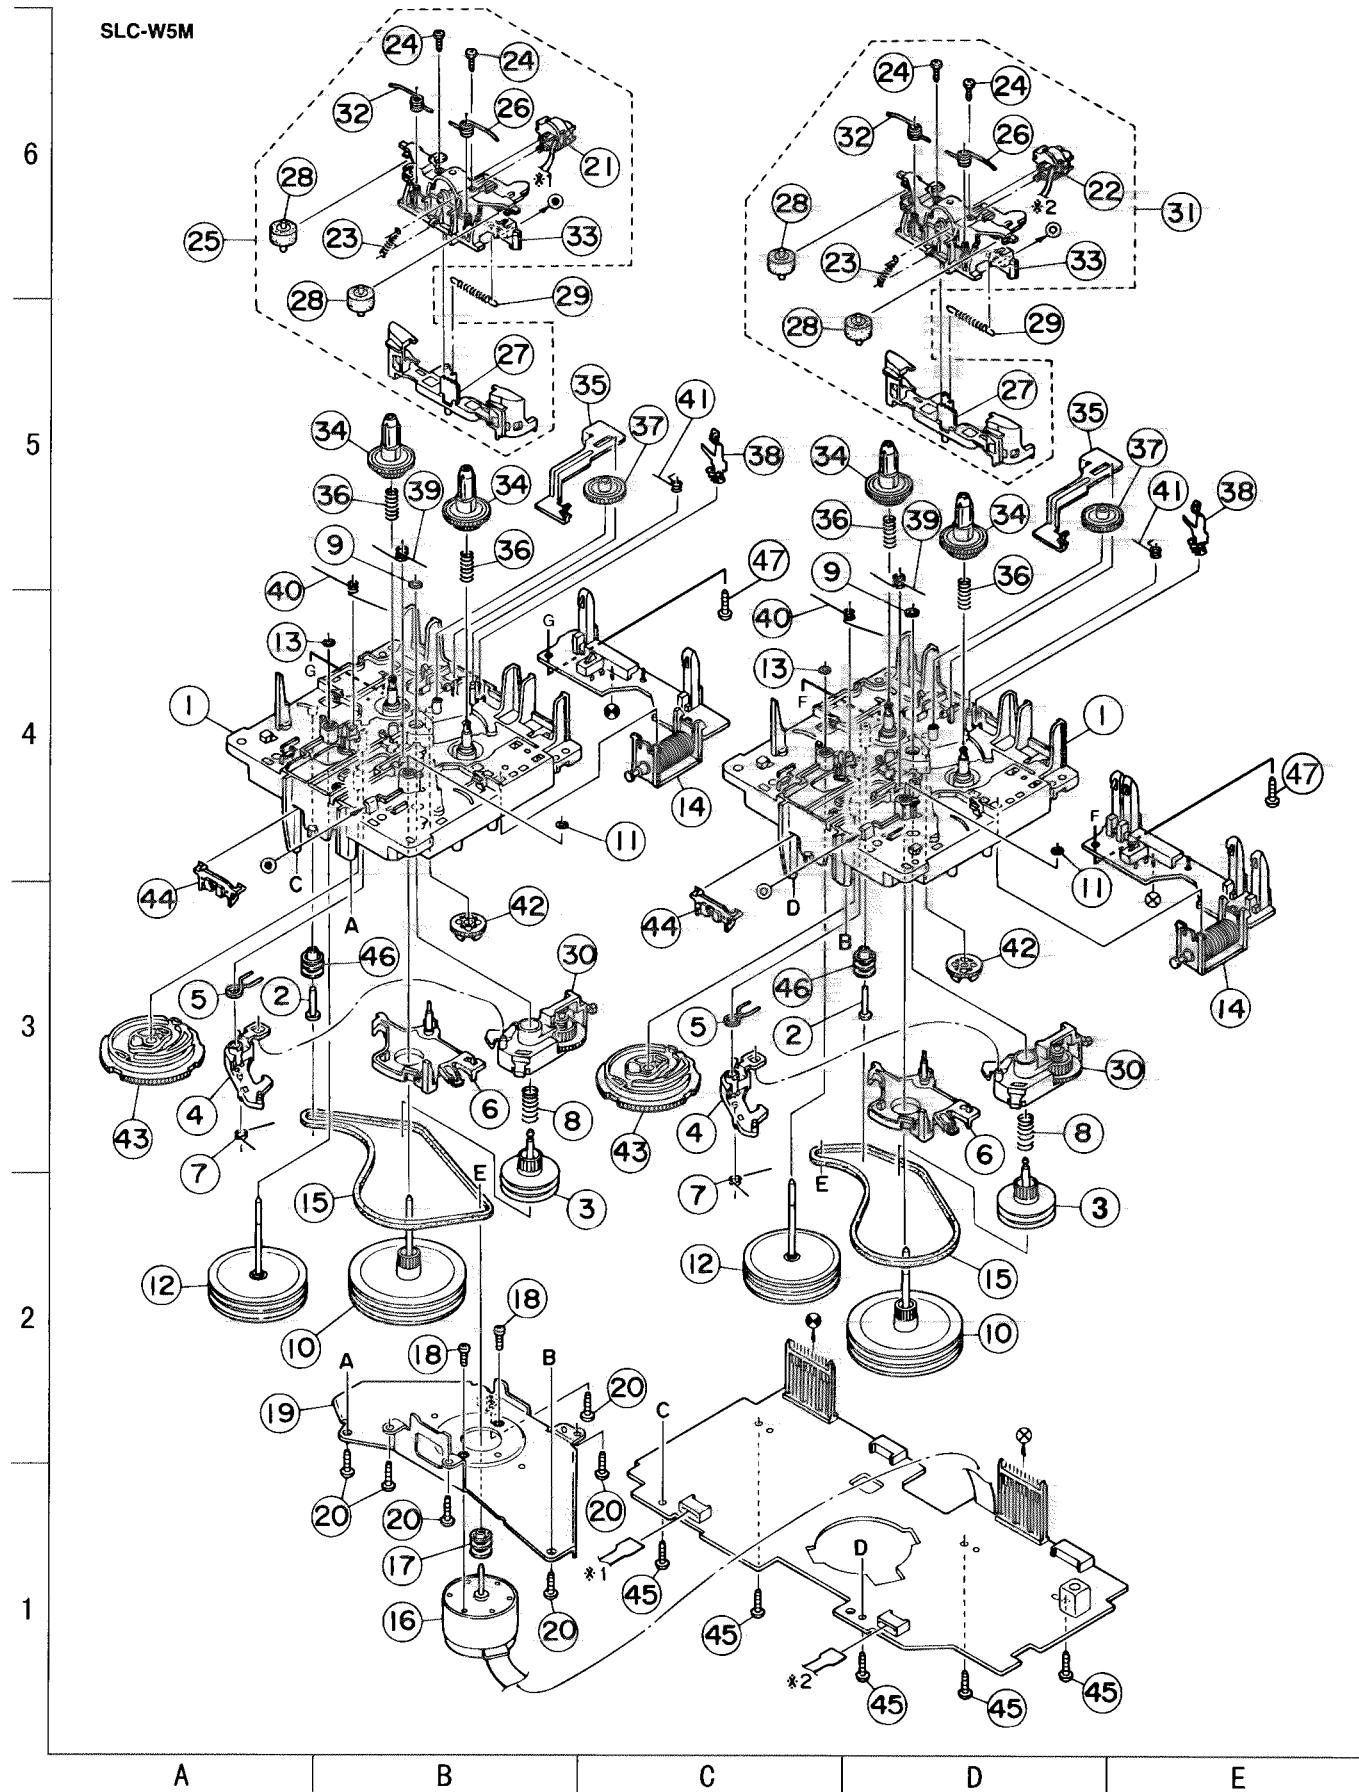

## ■ Parts List (Cassette Mechanism)

BLOCK NO. M4MM □□□

REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
1	VKS1165-00H	CHASSIS B.ASS'Y		2		
2	VKH5786-002	SHAFT		2		
3	VKS5603-00D	MAIN PULLEY ASY		2		
4	VKS3785-001MM	FR ARM		2		
5	VKW5284-002	SWING SPRING		2		
6	VKS2278-003	TRIGGER ARM		2		
7	VKW5301-001	FR SPRING		2		
8	VKW5266-001	ELEVATOR SPRING		2		
9	WDL214025	WASHER		2		
10	VKF3205-00B	F.WHEEL ASSY(R)		2		
11	WDL183425	SLIT WASHER		2		
12	VKF3207-00B	F.WHEEL ASSY(L)		2		
13	WDL173525-6	SLIT WASHER		2		
14	VKZ3174-00A	DC SOLENOID		2		
15	VKB3000-182	CAPSTAN BELT(B)		2		
16	MSI-SU2LWA	D.C.MOTOR ASS'Y		1		
17	VKR4761-001	MOTOR PULLEY		1		
18	QYSPSP2604Z	SCREW		2		
19	VKM3907-001	JOINT BRACKET		1		
20	QYSBSF2608Z	T.SCREW		6		
21	VGH0424-037	P.B.HEAD		1		
22	VGH0425-544	R/P&E HEAD		1		
23	VKW5302-001	HEAD SPRING		2		
24	VKZ4730-001	SPECIAL SCREW		4		
25	VKS2279-00C	HEAD MOUNT ASSY		1		
26	VKW5299-002	PIN ROL.SP.(R)		2		
27	VKS2277-005	DIRECTION LEVER		2		
28	VKP4233-00A	PINCH ROL. ASSY		4		
29	VKW5285-001	RETURN SPRING		2		
30	VKS3786-00G	CLUTCH ASS'Y		2		
31	VKS2275-00C	HEAD MOUNT ASSY		1		
32	VKW5300-002	PIN ROL.SP.(L)		2		
33	VKS1167-001	HEAD MOUNT BASE		2		
34	VKS2274-002	REEL GEAR		4		
35	VKM3906-003	PLAY SW LEVER		2		
36	VKW5286-002	B.T. SPRING		4		
37	VKS5559-001	PLAY IDLE GEAR		2		
38	VKY3149-002	CASSETTE SP.		2		
39	VKW5279-001	HEAD BASE SP(R)		2		
40	VKW5280-001	HEAD BASE SP(L)		2		
41	VKW5296-001	EARTH SPRING		2		
42	VKS5597-00A	FR GEAR ASS'Y		2		
43	VKS1166-003	CONTROL CAM		2		
44	VKS5577-001	FPC HOLDER		2		
45	QYSBSF2608Z	T.SCREW	FOR P.W.B.	5		
46	VKR4749-001	IDLE PULLEY		2		
47	QYSBSF2006Z	SCREW		2		

## ■ Electrical Parts List(Power AMP Board)

Block No.01

▲	Item	Parts Number	Description	Area
		I.C.S		
▲	IC701	STK411-210E	I.C(HYBRID) DIODES	
▲	D201	1N5402M-20	DIODE	
▲	D202	1N5402M-20	DIODE	
▲	D203	1N5402M-20	DIODE	
▲	D204	1N5402M-20	DIODE	
▲	D211	30DF2-FC	DIODE	
▲	D212	30DF2-FC	DIODE	
▲	D213	30DF2-FC	DIODE	
▲	D214	30DF2-FC	DIODE	
▲	D217	1SR35-100A-T5	SI DIODE	
▲	D218	1SR35-100A-T5	SI DIODE	
	D219	MTZJ33C-T2	Z DIODE I M	
	D220	MTZJ9.1C-T2	ZENER DIODE	
	D221	MTZJ5.1B-T2	ZENER DIODE	
	D223	1SS133-T2	SI.DIODE	
	D224	1SS133-T2	SI.DIODE	
	D225	1SS133-T2	SI.DIODE	
▲	D227	1SR35-100A-T5	SI DIODE	
	D244	MTZJ2.4B-T2	Z.DIODE I.M	
	D245	1SS133-T2	SI.DIODE	
	D360	MTZJ5.1B-T2	ZENER DIODE	
	D361	MTZJ11C-T2	ZENER DIODE	
	D362	MTZJ6.8C-T2	ZENER DIODE	
	D365	MTZJ9.1B-T2	ZENER DIODE	
	D366	MTZJ11C-T2	ZENER DIODE	
	D367	MTZJ10C-T2	ZENER DIODE	
	D368	MTZJ11C-T2	ZENER DIODE	
	D369	MTZJ10C-T2	ZENER DIODE	
	D370	MTZJ11C-T2	ZENER DIODE	
	D703	MTZJ8.2C-T2	ZENER DIODE	
	D704	MTZJ8.2C-T2	ZENER DIODE	
	D719	1SS133-T2	SI.DIODE	
	D720	1SS133-T2	SI.DIODE	
	D721	MTZJ8.2C-T2	ZENER DIODE	
	D722	MTZJ8.2C-T2	ZENER DIODE	
	D723	MTZJ33C-T2	Z DIODE I M	
	D724	MTZJ33C-T2	Z DIODE I M	
	D728	1SS133-T2	SI.DIODE	
		TRANSISTORS		
▲	Q201	2SB1274/RS/	TRANSISTOR	
	Q203	KRC107M-T	DIGITAL TRANSISTOR	
	Q204	KRC107M-T	DIGITAL TRANSISTOR	
	Q205	KRC107M-T	DIGITAL TRANSISTOR	
	Q240	KTC3199/GL-T	TR I/M	
▲	Q360	2SD2061/EF/	SI.TRANSISTOR	
	Q361	KTC3199/GL-T	TR I/M	
	Q362	KTC3199/GL-T	TR I/M	
▲	Q365	2SD2061/EF/	SI.TRANSISTOR	
▲	Q366	2SD2061/EF/	SI.TRANSISTOR	
	Q367	KTA1267/YG-T	TRANSISTOR	
	Q368	KTC3199/GL-T	TR I/M	
▲	Q369	2SD2061/EF/	SI.TRANSISTOR	
	Q370	KTC3199/GL-T	TR I/M	
▲	Q371	2SB1565/EF/	SI.TRANSISTOR	
	Q373	KRA104M-T	DIGITAL TRANSISTOR	
	Q374	KRC104M-T	DIGITAL TRANSISTOR	
	Q375	KRC104M-T	DIGITAL TRANSISTOR	
	Q376	KRA104M-T	DIGITAL TRANSISTOR	
	Q701	2SA1038S/SE/-T	SI.TRANSISTOR	
	Q702	2SA1038S/SE/-T	SI.TRANSISTOR	
	Q726	2SC2389S/SE/-T	SI.TRANSISTOR	
	Q727	2SA1038S/SE/-T	SI.TRANSISTOR	
	Q728	KTC3199/GL-T	TR I/M	
	Q733	2SC3576-JVC-T	SI.TRANSISTOR	
	Q734	2SC3576-JVC-T	SI.TRANSISTOR	

▲	Item	Parts Number	Description	Area
	Q735	2SC3576-JVC-T	SI.TRANSISTOR	
	Q736	2SC3576-JVC-T	SI.TRANSISTOR	
	Q737	KRA111M-T	DIGITAL TRANSISTOR	
	Q758	2SA1038S/S-E/T	TR.I.M	
	Q760	2SK301/PQ-T	F.E.T.	
		CAPACITORS		
	C201	QFV82AJ-104	0.1MF 100V THIN FILM CA	
	C202	QFV82AJ-104	0.1MF 100V THIN FILM CA	
	C203	QFV82AJ-104	0.1MF 100V THIN FILM CA	
▲	C204	QEZO461-478	4700MF E CAP.	
▲	C205	QEZO461-478	4700MF E CAP.	
	C211	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C212	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C213	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
▲	C214	QETM1VM-228J7	2200MF 35V E.CAP.	
▲	C215	QETM1VM-228J7	2200MF 35V E.CAP.	
	C216	QETN1VM-107Z	100MF 35V E.CAP.	
	C217	QETN1JM-476Z	47MF 63V E.CAP.	
	C218	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M	
	C219	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C220	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M	
	C221	EETB1HM-475E	4.7MF 50V E.CAP.	
	C222	EETB1HM-475E	4.7MF 50V E.CAP.	
	C223	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C224	EETB1HM-105E	1MF 50V E.CAP.	
	C233	QFLM1HJ-103Z	0.01MF 50V M CAP.	
	C240	QETC1HM-224Z	0.22MF 50V AL E.CAP.	
	C360	EETC1EM-226ZE	22MF 25V E.CAP.	
	C361	QCF31HZ-103Z	0.01MF 50V C CAP.	
	C362	EETC1EM-226ZE	22MF 25V E.CAP.	
	C366	EETC1EM-226ZE	22MF 25V E.CAP.	
	C367	QCF31HZ-103Z	0.01MF 50V C CAP.	
	C368	EETC1EM-226ZE	22MF 25V E.CAP.	
	C369	EETC1EM-226ZE	22MF 25V E.CAP.	
	C370	QCF31HZ-103Z	0.01MF 50V C CAP.	
	C371	EETC1EM-226ZE	22MF 25V E.CAP.	
	C372	EETC1EM-226ZE	22MF 25V E.CAP.	
	C373	QCF31HZ-103Z	0.01MF 50V C CAP.	
	C374	EETC1EM-226ZE	22MF 25V E.CAP.	
	C703	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C704	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C705	QCSB1HJ-220	22PF 50V CER.CAP.	
	C706	QCSB1HJ-220	22PF 50V CER.CAP.	
	C707	QETC1EM-476ZM	47MF 25V E.CAP.	
	C708	QETC1EM-476ZM	47MF 25V E.CAP.	
	C709	QCSB1HJ-100Y	10PF 50V CER.CAP.	
	C710	QCSB1HJ-100Y	10PF 50V CER.CAP.	
	C711	QETN1JM-476Z	47MF 63V E.CAP.	
	C712	QETN1JM-476Z	47MF 63V E.CAP.	
	C713	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C714	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C715	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C716	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C721	QTE1V06-106Z	AL E.CAP.	
	C722	QTE1V06-106Z	AL E.CAP.	
	C723	QFVJ1HJ-474Z	0.47MF 50V CAP.	
	C726	EETB1EM-106E	10MF 25V E.CAP.	
	C729	EETB1CM-476	47MF 16V E.CAP.	
	C739	QFLM1HJ-103Z	0.01MF 50V M CAP.	
	C780	QFLM1HJ-823Z	0.082MF 50V MYLAR CAP.	
	C799	QDYB1CM-103Y	0.01MF 16V CER.CAP.	EE
		QFLM1HJ-103Z	0.01MF 50V M CAP.	B,E,EN,EV
		RESISTORS		
	R203	QRE141J-332Y	3.3K 1/4W C RES.	
	R204	QRE141J-223Y	22K 1/4W C RES.	
	R205	QRE141J-104Y	100K 1/4W C RES.	
	R209	QRE141J-103Y	10K 1/4W CARBON RES.	

# CA-MXJ55R/CA-MXJ530R

## ■ Electrical Parts List(Power AMP Board)

Block No.01

▲	Item	Parts Number	Description	Area
	R210	QRE141J-472Y	4.7K 1/4W C RES.	
	R211	QRE141J-182Y	1.8K 1/4W C RES.	
	R215	QRE141J-473Y	47K 1/4W C RES.	
	R216	QRE141J-473Y	47K 1/4W C RES.	
	R242	QRE141J-222Y	2.2K 1/4W C RES.	
	R245	QRE141J-222Y	2.2K 1/4W C RES.	
	R247	QRE141J-222Y	2.2K 1/4W C RES.	
	R248	QRE141J-473Y	47K 1/4W C RES.	
	R249	QRE141J-153Y	15K 1/4W C RES.	
	R290	QRE141J-102Y	1K 1/4W C RES.	
	R291	QRE141J-102Y	1K 1/4W C RES.	
	R292	QRE141J-102Y	1K 1/4W C RES.	
	R293	QRE141J-102Y	1K 1/4W C RES.	
	R294	QRE141J-103Y	10K 1/4W CARBON RES.	
	R295	QRE141J-183Y	18K 1/4W CARBON RES.	
	R299	QRL012J-332	3.3K 1W UNF.OMF.RES.	
▲	R360	QRZ9042-2R2X	2.2 F.RES. I.M	
▲	R361	QRZ9042-2R2X	2.2 F.RES. I.M	
	R362	QRE141J-331Y	330 1/4W C RES.	
	R363	QRE141J-331Y	330 1/4W C RES.	
	R364	QRE141J-122Y	1.2K 1/4W C RES.	
	R365	QRE141J-561Y	560 1/4W C RES.	
	R366	QRE141J-561Y	560 1/4W C RES.	
	R367	QRE141J-122Y	1.2K 1/4W C RES.	
	R368	QRE141J-331Y	330 1/4W C RES.	
	R371	QRE141J-4R7Y	4.7 1/4W C RES.	
	R372	QRE141J-4R7Y	4.7 1/4W C RES.	
▲	R373	QRZ9021-220	22 FUSIBLE RES.	
▲	R374	QRZ9021-220	22 FUSIBLE RES.	
▲	R375	QRZ9021-220	22 FUSIBLE RES.	
	R376	QRE141J-221Y	220 1/4W C RES.	
	R377	QRE141J-681Y	680 1/4W CARBON RES.	
	R378	QRE141J-182Y	1.8K 1/4W C RES.	
	R381	QRE141J-272Y	2.7K 1/4W C RES.	
	R382	QRE141J-562Y	5.6K 1/4W C RES.	
	R384	QRE141J-272Y	2.7K 1/4W C RES.	
	R385	QRE141J-562Y	5.6K 1/4W C RES.	
▲	R388	QRE141J-103Y	10K 1/4W CARBON RES.	
	R389	QRE141J-103Y	10K 1/4W CARBON RES.	
	R701	QRL01DJ-101X	100 1W OMF RES.	
	R702	QRL01DJ-101X	100 1W OMF RES.	
	R703	QRE141J-563Y	56K 1/4W C RES.	
	R704	QRE141J-563Y	56K 1/4W C RES.	
	R705	QRJ146J-681X	680 1/4W UNF C RES I/	
	R706	QRJ146J-681X	680 1/4W UNF C RES I/	
	R707	QRE141J-563Y	56K 1/4W C RES.	
	R708	QRE141J-563Y	56K 1/4W C RES.	
	R709	QRT01DJ-R22X	0.22 1W UNF.MF.RES.I	
	R710	QRT01DJ-R22X	0.22 1W UNF.MF.RES.I	
	R711	QRT01DJ-R22X	0.22 1W UNF.MF.RES.I	
	R712	QRT01DJ-R22X	0.22 1W UNF.MF.RES.I	
	R713	QRJ146J-100X	10 1/4W UNF.CARBON R	
	R714	QRJ146J-100X	10 1/4W UNF.CARBON R	
	R715	QRJ146J-100X	10 1/4W UNF.CARBON R	
	R716	QRJ146J-100X	10 1/4W UNF.CARBON R	
	R717	QRE141J-122Y	1.2K 1/4W C RES.	
	R718	QRE141J-122Y	1.2K 1/4W C RES.	
	R719	QRE141J-223Y	22K 1/4W C RES.	
	R720	QRE141J-223Y	22K 1/4W C RES.	
	R721	QRE141J-103Y	10K 1/4W CARBON RES.	
	R722	QRE141J-103Y	10K 1/4W CARBON RES.	
	R723	QRE141J-392Y	3.9K 1/4W C RES.	
	R724	QRE141J-392Y	3.9K 1/4W C RES.	
	R725	QRE141J-823Y	82K 1/4W C RES.	
	R726	QRE141J-104Y	100K 1/4W C RES.	
	R727	QRE141J-104Y	100K 1/4W C RES.	
	R728	QRE141J-103Y	10K 1/4W CARBON RES.	

▲	Item	Parts Number	Description	Area
	R729	QRE141J-104Y	100K 1/4W C RES.	
	R730	QRE141J-103Y	10K 1/4W CARBON RES.	
	R733	QRE141J-472Y	4.7K 1/4W C RES.	
	R734	QRE141J-472Y	4.7K 1/4W C RES.	
	R735	QRE141J-472Y	4.7K 1/4W C RES.	
	R736	QRE141J-472Y	4.7K 1/4W C RES.	
	R739	QRL01DJ-821X	820 1W OMF RES.	
	R740	QRL01DJ-821X	820 1W OMF RES.	
	R766	QRE141J-333Y	33K 1/4W C RES.	
	R767	QRE141J-683Y	68K 1/4W C RES.	
	R771	QRE141J-222Y	2.2K 1/4W C RES.	
	R772	QRE141J-103Y	10K 1/4W CARBON RES.	
	R774	QRJ146J-100X	10 1/4W UNF.CARBON R	
	R775	QRE141J-102Y	1K 1/4W C RES.	
	R776	QRE141J-102Y	1K 1/4W C RES.	
	R780	QRE141J-105Y	1M 1/4W C RES.	
	R781	QRE141J-392Y	3.9K 1/4W C RES.	
	R782	QRE141J-475Y	4.7M 1/4W C RES.	
		OTHERS		
L201	QQR0779-001Z	INDUCTOR	B,E,EN,EV	
L701	QQLZ005-R45	INDUCTOR		
L702	QQLZ005-R45	INDUCTOR		
CN102	QGB2510J1-10	CONNECT TERMINAL		
CN103	QGB2501J1-11	CONNECT TERMINAL		
CN105	QGB2510J1-06	CONNECTOR		
CN106	QGB2501K2-10	CONNECT TERMINAL		
CN107	QGB2501K2-07	CONNECT TERMINAL		
CN109	QGA3901C1-05	5P CONNECTOR		
CN111	QGD2501C1-04Z	SOCKET ASSY		
CN112	QGB2510K2-10	CONNECTOR		
CN113	QGB2501K2-11	CONNECT TERMINAL		
CN119	EWS285-202V	CONNECTOR WIRE ASSY		
CN915	QGD2501C1-04Z	SOCKET ASSY		
EP201	E409182-001SM	EARTH TERMINAL		
FT111	QNG0020-001Z	FUSE CLIP		
FT112	QNG0020-001Z	FUSE CLIP		
FT511	QNG0020-001Z	FUSE CLIP		
FT512	QNG0020-001Z	FUSE CLIP		
FT521	QNG0020-001Z	FUSE CLIP		
FT522	QNG0020-001Z	FUSE CLIP		
FW101	QUM134-12DGZ4	FLAT WIRE		
FW703	QUM134-14DGZ4	FLAT WIRE		
TB101	QNZ0079-001Z	TAB I.M		
TB102	QNZ0079-001Z	TAB I.M		
TH202	QAD0095-4R7Z	POSITIVE THERMISTOR		

## ■ Electrical Parts List(Function,Tuner,Main Board)

Block No.02

▲	Item	Parts Number	Description	Area
		I.C.S		
IC 1	LA1838	IC(M)		
IC 2	LC72136N	IC(M)		
IC 4	BU1923	IC(M)		
IC 6	BU4066BC	IC(DIGI-MOS)	EE	
IC 7	BA15218	IC(MONO-ANALOG)	EE	
IC 8	BA15218N	IC(MONO-ANALOG)	EE	
IC401	TDA7439	IC(M)		
IC402	BA15218	IC(MONO-ANALOG)		
IC405	BA15218	IC(MONO-ANALOG)		
IC406	LA2650	IC(MONO-ANALOG)		
IC542	BA3835S	IC(M)		
		DIODES		
D 1	1SS133-T2	SI.DIODE		
D 2	1SS133-T2	SI.DIODE		
D 3	1SS133-T2	SI.DIODE		
D 4	1SS133-T2	SI.DIODE		
D 5	MTZJ5.6B-T2	ZENER DIODE		
D 6	MTZJ5.6B-T2	ZENER DIODE		
D 8	1SS133-T2	SI.DIODE		
D100	RB721Q-T2	SI.DIODE	EE	
D101	RB721Q-T2	SI.DIODE	EE	
D102	1SS133-T2	SI.DIODE	EE	
D103	1SS133-T2	SI.DIODE	EE	
D104	1SS133-T2	SI.DIODE	EE	
D110	1SS133-T2	SI.DIODE	EE	
D111	1SS133-T2	SI.DIODE	EE	
D303	1SS133-T2	SI.DIODE		
D305	1SS133-T2	SI.DIODE		
D306	1SS133-T2	SI.DIODE		
D307	1SS133-T2	SI.DIODE		
D481	1SS133-T2	SI.DIODE		
D482	1SS133-T2	SI.DIODE		
D483	1SS133-T2	SI.DIODE		
D484	1SS133-T2	SI.DIODE		
D485	1SS133-T2	SI.DIODE		
D501	MTZJ5.1B-T2	ZENER DIODE		
		TRANSISTORS		
Q 1	2SC1923/O-T	TR TAPE		
Q 2	KRA107M-T	DIGITAL TRANSISTOR		
Q 3	KTC3199/GL-T	TR I/M		
Q 4	KTC3199/GL-T	TR I/M		
Q 6	KRA107M-T	DIGITAL TRANSISTOR		
Q 14	2SA1175/HFE/-T	TRANSISTOR		
Q100	KTC3199/GL-T	TR I/M	EE	
Q101	KRC102M-T	DIGITAL TRANSISTOR	EE	
Q102	KTC3199/GL-T	TR I/M	EE	
Q103	KRC102M-T	DIGITAL TRANSISTOR	EE	
Q401	2SC3576-JVC-T	SI.TRANSISTOR		
Q402	2SC3576-JVC-T	SI.TRANSISTOR		
Q403	KRA102M-T	DIGITAL TRANSISTOR		
Q405	2SC3576-JVC-T	SI.TRANSISTOR		
Q406	2SC3576-JVC-T	SI.TRANSISTOR		
Q407	2SA1175/HFE/-T	TRANSISTOR		
Q408	KTC3199/GL-T	TR I/M		
Q409	KRC114M-T	SI.TRANSISTOR		
Q410	KTC3199/GL-T	TR I/M		
Q411	KTC3199/GL-T	TR I/M		
Q481	2SC3576-JVC-T	SI.TRANSISTOR		
Q482	2SC3576-JVC-T	SI.TRANSISTOR		
Q483	KRA102M-T	DIGITAL TRANSISTOR		
		CAPACITORS		
C 1	QCBB1HK-223Y	0.022MF 50V CER.CAP.		
C 3	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 4	QDYB1CM-103Y	0.01MF 16V CER.CAP.		
C 5	EETC1CM-106ZJC	10MF 16V AL E.CAP.	EE	
	QETN1AM-107Z	100MF 10V AL E.CAP.	B,E,EN,EV	

▲	Item	Parts Number	Description	Area
C 8	QCSB1HJ-150Y	15PF 50V CER.CAP.		
C 9	QDXB1CM-272Y	2700PF 16V C.CAPA. I.M		
C 10	EETC1HM-474ZJC	0.47MF 50V E.CAP.		
C 12	QCSB1HJ-150Y	15PF 50V CER.CAP.		
C 13	QFLM1HJ-473Z	0.047MF 50V M CAP.	B,E,EN,EV	
C 14	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 18	QCBB1HK-471Y	470PF 50V CER.CAP.	EE	
	QDXB1CM-152Y	1500PF 16V C CAP.	B,E,EN,EV	
C 19	QCBB1HK-471Y	470PF 50V CER.CAP.	EE	
	QDXB1CM-152Y	1500PF 16V C CAP.	B,E,EN,EV	
C 20	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M		
C 21	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 22	QFVJ1HJ-274Z	0.27MF 50V CAP.		
C 23	EETC1HM-105ZJC	1MF 50V E.CAP.		
C 24	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M		
C 25	QFLM1HJ-223Z	0.022MF 50V M CAP.		
C 26	EETB1EM-106E	10MF 25V E.CAP.		
C 27	EETB1HM-105E	1MF 50V E.CAP.		
C 28	EETB1HM-105E	1MF 50V E.CAP.		
C 29	QFLM1HJ-182Z	1800PF 50V MYLAR CAP.		
C 30	QFLM1HJ-182Z	1800PF 50V MYLAR CAP.		
C 31	QCSB1HJ-330Y	33PF 50V CER.CAP.	B,E,EN,EV	
C 32	QCGB1HK-102	1000PF 50V CER.CAP.		
C 33	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 34	QETB1HM-474N	0.47MF 50V E.CAP.		
C 35	QDYB1CM-103Y	0.01MF 16V CER.CAP.		
C 36	EETB1HM-105E	1MF 50V E.CAP.		
C 37	QETB1HM-474N	0.47MF 50V E.CAP.		
C 38	EETB1HM-105E	1MF 50V E.CAP.		
C 39	QCBB1HK-223Y	0.022MF 50V CER.CAP.		
C 40	QETC1EM-107Z	100MF 25V AL E.CAP.		
C 41	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 42	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 43	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 51	QENC1HM-105Z	1MF 50V NP E.CAP.	EE	
C 52	QENC1HM-105Z	1MF 50V NP E.CAP.	EE	
C 60	QEKC1AM-107Z	100MF 10V E CAP.		
C 61	QCSB1HJ-120Y	12PF 50V CER.CAP.		
C 62	QCSB1HJ-120Y	12PF 50V CER.CAP.		
C 63	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 65	QCGB1HK-102	1000PF 50V CER.CAP.		
C 66	QCBB1HK-151	150PF 50V CER.CAP.		
C 67	QCSB1HJ-270Y	27PF 50V CER.CAP.		
C 68	QCBB1HK-101Y	100PF 50V CER.CAP.		
C 69	QFVJ1HJ-105Z	1MF 50V TF.CAPA. I.M		
C 70	QDXB1CM-392Y	3900PF 16V C CAP.		
C 71	EETB1CM-476	47MF 16V E.CAP.		
C 72	QCGB1HK-102	1000PF 50V CER.CAP.		
C 80	QCBB1HK-820Y	82PF 50V CER.CAP.		
C 81	QCSB1HJ-470	47PF 50V CER.CAP.		
C 82	EETC1CM-106ZJC	10MF 16V AL E.CAP.		
C 83	QCBB1HK-473Y	0.047MF 50V CER.CAP.		
C 84	QETC1HM-225ZM	2.2MF 50V E.CAP.		
C 85	QCBB1HK-331Y	330PF 50V CER.CAP.		
C 86	QCBB1HK-561Y	560PF 50V CER.CAP.		
C 89	QCGB1HK-102	1000PF 50V CER.CAP.		
C 90	QDYB1CM-103Y	0.01MF 16V CER.CAP.		
C 98	QCSB1HJ-100Y	10PF 50V CER.CAP.		
C 110	EETB1HM-105E	1MF 50V E.CAP.	EE	
C 111	EETC1HM-335ZJC	3.3MF 50V E.CAP.	EE	
C 113	QFP32AJ-103Z	0.01MF 100V PP CAP.	EE	
C 114	QFP32AJ-103Z	0.01MF 100V PP CAP.	EE	
C 115	QCBB1HK-271Y	270PF 50V CER.CAP.	EE	
C 116	QCBB1HK-271Y	270PF 50V CER.CAP.	EE	
C 117	EETB1HM-475E	4.7MF 50V E.CAP.	EE	
C 118	EETB1HM-475E	4.7MF 50V E.CAP.	EE	
C 119	QDXB1CM-222Y	2200PF 16V C CAP.	EE	

# CA-MXJ55R/CA-MXJ530R

## ■ Electrical Parts List(Function,Tuner,Main Board)

Block No.02

▲	Item	Parts Number	Description	Area
C120	QDXB1CM-222Y	2200PF 16V C CAP.	EE	
C121	QETN1AM-226Z	22MF 10V E.CAP.	EE	
C122	QCS21HJ-221	220PF 50V CER.CAP.	EE	
C123	QCS21HJ-221	220PF 50V CER.CAP.	EE	
C124	QFLM1HJ-103Z	0.01MF 50V M CAP.	EE	
C125	EETB1HM-105E	1MF 50V E.CAP.	EE	
C126	EETB1HM-105E	1MF 50V E.CAP.	EE	
C127	EETB1HM-105E	1MF 50V E.CAP.	EE	
C128	EETC1HM-335ZJC	3.3MF 50V E.CAP.	EE	
C129	EETB1HM-105E	1MF 50V E.CAP.	EE	
C130	EETB1HM-105E	1MF 50V E.CAP.	EE	
C131	EETB1HM-105E	1MF 50V E.CAP.	EE	
C132	EETB1HM-105E	1MF 50V E.CAP.	EE	
C360	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C361	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C365	QETN1CM-227ZS	220MF 16V E.CAP.		
C366	QETN1AM-108Z	1000MF 10V AL E.CAP.		
C372	EETB1HM-475E	4.7MF 50V E.CAP.		
C373	QDYB1CM-103Y	0.01MF 16V CER.CAP.		
C380	QETC1HM-224Z	0.22MF 50V AL E.CAP.		
C381	QCFB1HZ-104Y	0.1MF 50V CER.CAP.		
C382	QCFB1HZ-104Y	0.1MF 50V CER.CAP.		
C383	QETC1EM-476ZM	47MF 25V E.CAP.		
C385	EETB1HM-105E	1MF 50V E.CAP.		
C386	QDGB1HK-681Y	680PF 50V C CAP.		
C387	QFLM1HJ-153Z	0.015MF 50V M CAP.		
C388	QDXB1CM-182Y	1800PF 16V C CAP.		
C389	QCSB1HJ-330Y	33PF 50V CER.CAP.		
C390	QETC1HM-224Z	0.22MF 50V AL E.CAP.		
C398	QFLM1HJ-103Z	0.01MF 50V M CAP.	B,E,EN,EV	
C399	QFLM1HJ-103Z	0.01MF 50V M CAP.	B,E,EN,EV	
C401	QFLM1HJ-682Z	6800PF 50V M CAP.		
C402	QFLM1HJ-682Z	6800PF 50V M CAP.		
C403	QFLM1HJ-102Z	1000PF 50V MYLAR CAP.		
C404	QFLM1HJ-102Z	1000PF 50V MYLAR CAP.		
C407	QTE1V06-106Z	AL E.CAP.		
C408	QTE1V06-106Z	AL E.CAP.		
C411	EETB1EM-106E	10MF 25V E.CAP.		
C412	EETB1EM-106E	10MF 25V E.CAP.		
C413	QCBB1HK-221Y	220PF 50V CER.CAP.		
C414	QCBB1HK-221Y	220PF 50V CER.CAP.		
C415	EETB1EM-106E	10MF 25V E.CAP.		
C416	EETB1EM-106E	10MF 25V E.CAP.		
C417	QETC1HM-225ZM	2.2MF 50V E.CAP.		
C418	QETC1HM-225ZM	2.2MF 50V E.CAP.		
C419	EETB1EM-106E	10MF 25V E.CAP.		
C420	QETN1AM-107Z	100MF 10V AL E.CAP.		
C421	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C422	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C423	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C424	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C425	QFLM1HJ-183Z	0.018MF 50V M CAP.		
C426	QFLM1HJ-183Z	0.018MF 50V M CAP.		
C427	QFLM1HJ-223Z	0.022MF 50V M CAP.		
C428	QFLM1HJ-223Z	0.022MF 50V M CAP.		
C429	QFLM1HJ-562Z	5600PF 50V MYLAR CAP.		
C430	QFLM1HJ-562Z	5600PF 50V MYLAR CAP.		
C431	QETC1HM-225ZM	2.2MF 50V E.CAP.		
C432	QETC1HM-225ZM	2.2MF 50V E.CAP.		
C433	QTE1H39-225Z	2.2MF 50V E.CAP.		
C434	QTE1H39-225Z	2.2MF 50V E.CAP.		
C435	QETN1EM-106Z	10MF 25V E.CAP.		
C436	QETN1EM-106Z	10MF 25V E.CAP.		
C445	QCBB1HK-101Y	100PF 50V CER.CAP.		
C446	QCBB1HK-101Y	100PF 50V CER.CAP.		
C447	QTE1C39-106Z	10MF 16V E.CAP.		
C448	QTE1C39-106Z	10MF 16V E.CAP.		

▲	Item	Parts Number	Description	Area
C453	QCBB1HK-101Y	100PF 50V CER.CAP.	B,E,EN,EV	
C455	QCBB1HK-101Y	100PF 50V CER.CAP.	B,E,EN,EV	
C457	EETB1EM-106E	10MF 25V E.CAP.		
C458	EETB1EM-106E	10MF 25V E.CAP.		
C459	QFLM1HJ-333Z	0.033MF 50V MYLAR CAP.		
C460	EETB1HM-475E	4.7MF 50V E.CAP.		
C461	QETB1HM-474N	0.47MF 50V E.CAP.		
C462	QFLM1HJ-393Z	0.039MF 50V M CAP.		
C463	EETB1HM-475E	4.7MF 50V E.CAP.		
C464	QETN1AM-107Z	100MF 10V AL E.CAP.		
C465	QFLM1HJ-473Z	0.047MF 50V M CAP.		
C466	QFLM1HJ-473Z	0.047MF 50V M CAP.		
C467	EETB1HM-105E	1MF 50V E.CAP.		
C468	QETC1EM-476ZM	47MF 25V E.CAP.		
C477	EETB1HM-475E	4.7MF 50V E.CAP.		
C481	QDGB1HK-102Y	1000PF 50V CER.CAP.		
C482	QDGB1HK-102Y	1000PF 50V CER.CAP.		
C483	QDXB1CM-222Y	2200PF 16V C CAP.		
C484	QCBB1HK-101Y	100PF 50V CER.CAP.	EE	
	QDXB1CM-222Y	2200PF 16V C CAP.	B,E,EN,EV	
C489	EETB1CM-476	47MF 16V E.CAP.		
C490	EETB1CM-476	47MF 16V E.CAP.		
C493	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C494	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C495	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C496	QFVJ1HJ-104Z	0.1MF 50V TF CAP.		
C580	QDX31EM-473Z	0.047MF 25V C CAP.		
C583	QFLM1HJ-103Z	0.01MF 50V M CAP.	B,E,EN,EV	
C584	QCS31HJ-391Z	390PF 50V C CAP.	B,E,EN,EV	
C586	QFLM1HJ-102Z	1000PF 50V C CAP.	B,E,EN,EV	
C587	EETB1EM-106E	10MF 25V E.CAP.		
C589	QDYB1CM-103Y	0.01MF 16V CER.CAP.		
	RESISTORS			
R 1	QRE141J-102Y	1K 1/4W C RES.		
R 2	QRE141J-121Y	120 1/4W C RES.	EE	
	QRE141J-181Y	180 1/4W C RES.	B,E,EN,EV	
R 10	QRE141J-152Y	1.5K 1/4W CARBON RES.		
R 12	QRE141J-102Y	1K 1/4W C RES.		
R 13	QRE141J-104Y	100K 1/4W C RES.		
R 15	QRE141J-103Y	10K 1/4W CARBON RES.		
R 16	QRE141J-103Y	10K 1/4W CARBON RES.		
R 19	QRE141J-393Y	39K 1/4W C RES.		
R 20	QRE141J-331Y	330 1/4W C RES.		
R 21	QRE141J-224Y	220K 1/4W C RES.		
R 22	QRE141J-331Y	330 1/4W C RES.		
R 24	QRE141J-433Y	43K 1/4W C RES.		
R 25	QRE141J-272Y	2.7K 1/4W C RES.		
R 26	QRE141J-273Y	27K 1/4W CARBON RES.		
R 27	QRE141J-393Y	39K 1/4W C RES.		
R 28	QRE141J-223Y	22K 1/4W C RES.		
R 29	QRE141J-302Y	3K 1/4W C RES.		
R 30	QRE141J-392Y	3.9K 1/4W C RES.		
R 31	QRE141J-200Y	20 1/4W C RES ITM		
R 32	QRE141J-331Y	330 1/4W C RES.		
R 33	QRE141J-103Y	10K 1/4W CARBON RES.		
R 34	QRE141J-222Y	2.2K 1/4W C RES.		
R 35	QRE141J-222Y	2.2K 1/4W C RES.		
R 36	QRE141J-103Y	10K 1/4W CARBON RES.		
R 37	QRE141J-102Y	1K 1/4W C RES.		
R 43	QRE141J-102Y	1K 1/4W C RES.		
R 44	QRE141J-102Y	1K 1/4W C RES.		
R 45	QRE141J-102Y	1K 1/4W C RES.		
R 46	QRE141J-563Y	56K 1/4W C RES.		
R 47	QRE141J-103Y	10K 1/4W CARBON RES.		
R 48	QRE141J-331Y	330 1/4W C RES.		
R 49	QRE141J-102Y	1K 1/4W C RES.		
R 52	QRE141J-472Y	4.7K 1/4W C RES.		

## ■ Electrical Parts List(Function,Tuner,Main Board)

Block No.02

▲	Item	Parts Number	Description	Area
R 54	QRE141J-472Y	4.7K	1/4W C RES.	
R 55	QRE141J-182Y	1.8K	1/4W C RES.	
R 56	QRE141J-332Y	3.3K	1/4W C RES.	
R 57	QRE141J-102Y	1K	1/4W C RES.	
R 60	QRE141J-102Y	1K	1/4W C RES.	
R 61	QRE141J-102Y	1K	1/4W C RES.	
R 64	QRE141J-473Y	47K	1/4W C RES.	
R 65	QRE141J-222Y	2.2K	1/4W C RES.	
R 66	QRE141J-222Y	2.2K	1/4W C RES.	
R 69	QRE141J-103Y	10K	1/4W CARBON RES.	
R 76	QRE141J-102Y	1K	1/4W C RES.	
R 80	QRE141J-222Y	2.2K	1/4W C RES.	
R 82	QRE141J-102Y	1K	1/4W C RES.	
R 83	QRE141J-102Y	1K	1/4W C RES.	
R 84	QRE141J-103Y	10K	1/4W CARBON RES.	
R 91	QRE141J-103Y	10K	1/4W CARBON RES.	
R 99	QRE141J-102Y	1K	1/4W C RES.	EE
R101	QRE141J-271Y	270	1/4W C RES.	
R102	QRE141J-391Y	390	1/4W C RES.	
R110	QRE141J-123Y	12K	1/4W C RES.	EE
R111	QRE141J-563Y	56K	1/4W C RES.	EE
R112	QRE141J-103Y	10K	1/4W CARBON RES.	EE
R113	QRE141J-563Y	56K	1/4W C RES.	EE
R114	QRE141J-562Y	5.6K	1/4W C RES.	EE
R115	QRE141J-184Y	180K	1/4W C RES.	EE
R116	QRE141J-224Y	220K	1/4W C RES.	EE
R117	QRE141J-623Y	62K	1/4W C RES.	EE
R118	QRE141J-103Y	10K	1/4W CARBON RES.	EE
R119	QRE141J-224Y	220K	1/4W C RES.	EE
R120	QRE141J-224Y	220K	1/4W C RES.	EE
R121	QRE141J-333Y	33K	1/4W C RES.	EE
R122	QRE141J-224Y	220K	1/4W C RES.	EE
R123	QRE141J-224Y	220K	1/4W C RES.	EE
R124	QRE141J-103Y	10K	1/4W CARBON RES.	EE
R125	QRE141J-103Y	10K	1/4W CARBON RES.	EE
R126	QRE141J-333Y	33K	1/4W C RES.	EE
R127	QRE141J-473Y	47K	1/4W C RES.	EE
R128	QRE141J-473Y	47K	1/4W C RES.	EE
R129	QRE141J-104Y	100K	1/4W C RES.	EE
R130	QRE141J-104Y	100K	1/4W C RES.	EE
R131	QRE141J-473Y	47K	1/4W C RES.	EE
R132	QRE141J-102Y	1K	1/4W C RES.	EE
R133	QRE141J-274Y	270K	1/4W C RES.	EE
R134	QRE141J-274Y	270K	1/4W C RES.	EE
R135	QRE141J-184Y	180K	1/4W C RES.	EE
R136	QRE141J-184Y	180K	1/4W C RES.	EE
R137	QRE141J-224Y	220K	1/4W C RES.	EE
R138	QRE141J-224Y	220K	1/4W C RES.	EE
R360	QRE141J-222Y	2.2K	1/4W C RES.	
R362	QRE141J-221Y	220	1/4W C RES.	
R363	QRE141J-391Y	390	1/4W C RES.	
R370	QRE141J-102Y	1K	1/4W C RES.	
R371	QRE141J-103Y	10K	1/4W CARBON RES.	
R372	QRE141J-103Y	10K	1/4W CARBON RES.	
R375	QRE141J-331Y	330	1/4W C RES.	
R376	QRE141J-473Y	47K	1/4W C RES.	
R378	QRE141J-104Y	100K	1/4W C RES.	
R383	QRE141J-472Y	4.7K	1/4W C RES.	
R384	QRE141J-472Y	4.7K	1/4W C RES.	
R386	QRE141J-104Y	100K	1/4W C RES.	
R387	QRE141J-473Y	47K	1/4W C RES.	
R388	QRE141J-220Y	22	1/4W CARBON RES.	
R389	QRE141J-225Y	2.2M	1/4W C RES.	
R401	QRE141J-222Y	2.2K	1/4W C RES.	
R402	QRE141J-222Y	2.2K	1/4W C RES.	
R403	QRE141J-222Y	2.2K	1/4W C RES.	
R404	QRE141J-222Y	2.2K	1/4W C RES.	

▲	Item	Parts Number	Description	Area
R405	QRE141J-432Y	4.3K	1/4W C RES.	
R406	QRE141J-432Y	4.3K	1/4W C RES.	
R407	QRE141J-302Y	3K	1/4W C RES.	
R408	QRE141J-302Y	3K	1/4W C RES.	
R413	QRE141J-303Y	30K	1/4W C RES.	
R414	QRE141J-303Y	30K	1/4W C RES.	
R415	QRE141J-303Y	30K	1/4W C RES.	
R416	QRE141J-303Y	30K	1/4W C RES.	
R417	QRE141J-562Y	5.6K	1/4W C RES.	
R418	QRE141J-562Y	5.6K	1/4W C RES.	
R419	QRE141J-272Y	2.7K	1/4W C RES.	
R420	QRE141J-272Y	2.7K	1/4W C RES.	
R421	QRE141J-104Y	100K	1/4W C RES.	
R422	QRE141J-104Y	100K	1/4W C RES.	
R433	QRE141J-562Y	5.6K	1/4W C RES.	
R434	QRE141J-562Y	5.6K	1/4W C RES.	
R435	QRE141J-104Y	100K	1/4W C RES.	
R436	QRE141J-104Y	100K	1/4W C RES.	
R437	QRE141J-472Y	4.7K	1/4W C RES.	
R438	QRE141J-472Y	4.7K	1/4W C RES.	
R439	QRE141J-472Y	4.7K	1/4W C RES.	
R440	QRE141J-472Y	4.7K	1/4W C RES.	
R441	QRE141J-104Y	100K	1/4W C RES.	
R442	QRE141J-104Y	100K	1/4W C RES.	
R445	QRE141J-303Y	30K	1/4W C RES.	
R446	QRE141J-303Y	30K	1/4W C RES.	
R450	QRE141J-224Y	220K	1/4W C RES.	
R459	QRE141J-472Y	4.7K	1/4W C RES.	
R460	QRE141J-472Y	4.7K	1/4W C RES.	
R461	QRE141J-222Y	2.2K	1/4W C RES.	
R462	QRE141J-222Y	2.2K	1/4W C RES.	
R463	QRE141J-103Y	10K	1/4W CARBON RES.	
R464	QRE141J-103Y	10K	1/4W CARBON RES.	
R465	QRE141J-102Y	1K	1/4W C RES.	
R469	QRE141J-221Y	220	1/4W C RES.	
R470	QRE141J-221Y	220	1/4W C RES.	
R471	QRE141J-103Y	10K	1/4W CARBON RES.	
R472	QRE141J-103Y	10K	1/4W CARBON RES.	
R473	QRE141J-103Y	10K	1/4W CARBON RES.	
R481	QRE141J-222Y	2.2K	1/4W C RES.	
R482	QRE141J-222Y	2.2K	1/4W C RES.	
R483	QRE141J-221Y	220	1/4W C RES.	
R484	QRE141J-221Y	220	1/4W C RES.	
R485	QRE141J-103Y	10K	1/4W CARBON RES.	
R486	QRE141J-103Y	10K	1/4W CARBON RES.	
R493	QRE141J-123Y	12K	1/4W C RES.	
R494	QRE141J-123Y	12K	1/4W C RES.	
R497	QRE141J-104Y	100K	1/4W C RES.	
R498	QRE141J-104Y	100K	1/4W C RES.	
R546	QRE141J-473Y	47K	1/4W C RES.	
R547	QRE141J-473Y	47K	1/4W C RES.	
R548	QRE141J-563Y	56K	1/4W C RES.	
R549	QRE141J-563Y	56K	1/4W C RES.	
R555	QRE141J-102Y	1K	1/4W C RES.	
R556	QRE141J-102Y	1K	1/4W C RES.	
R573	QRE141J-103Y	10K	1/4W CARBON RES.	
R576	QRE141J-102Y	1K	1/4W C RES.	
R578	QRE141J-103Y	10K	1/4W CARBON RES.	
R579	QRE141J-102Y	1K	1/4W C RES.	
R580	QRE141J-103Y	10K	1/4W CARBON RES.	
R581	QRE141J-102Y	1K	1/4W C RES.	
R582	QRE141J-102Y	1K	1/4W C RES.	
R583	QRE141J-102Y	1K	1/4W C RES.	
R584	QRE141J-102Y	1K	1/4W C RES.	
R585	QRE141J-102Y	1K	1/4W C RES.	
R586	QRE141J-103Y	10K	1/4W CARBON RES.	
R587	QRE141J-102Y	1K	1/4W C RES.	

# CA-MXJ55R/CA-MXJ530R

## ■ Electrical Parts List(Function,Tuner,Main Board)

Block No.02

△	Item	Parts Number	Description	Area
	R588	QRE141J-103Y	10K 1/4W CARBON RES.	
	R589	QRE141J-102Y	1K 1/4W C RES.	
	R592	QRE141J-102Y	1K 1/4W C RES.	
	R593	QRE141J-272Y	2.7K 1/4W C RES.	
	R594	QRE141J-181Y	180 1/4W C RES.	
	R595	QRE141J-181Y	180 1/4W C RES.	
	R597	QRE141J-222Y	2.2K 1/4W C RES.	
	R599	QRE141J-222Y	2.2K 1/4W C RES.	
	VR100	QVP0004-203Z	20K V.RES. I.M	EE
	OTHERS			
J 1	QNB0014-001	ANT TERMINAL		
J401	QNN0132-001	PIN JACK		
J499	GP1F32T	OPTICAL JACK		
L 1	QQR0884-001	COIL BLOCK		
L 4	QQL231K-221Y	INDUCTOR		
L 5	QQL231K-101Y	INDUCTOR		
L 11	QQL231K-2R7Y	INDUCTOR		
L 12	QQL231K-330Y	INDUCTOR	B,E,EN,EV	
L100	QQR0522-001	NOISE FILTER	EE	
L403	QQR0779-001Z	INDUCTOR	B,E,EN,EV	
L405	QQR0779-001Z	INDUCTOR	B,E,EN,EV	
L406	QQR0779-001Z	INDUCTOR	B,E,EN,EV	
T 1	QQR0793-001	IFT		
X 1	QAX0402-001	CRYSTAL		
X 2	QAX0263-001Z	CRYSTAL		
CF 1	QAX0403-001	CERAMIC FILTER	EE	
	QAX0420-001	C FILTER	B,E,EN,EV	
CF 2	QAX0403-001	CERAMIC FILTER	EE	
	QAX0421-001	C FILTER	B,E,EN,EV	
CF 3	QAX0519-001Z	CERAMIC FILTER		
CN410	QGF1016F1-19	CONNECTOR		
CN411	QGF1201C3-21	CONNECT TERMINAL		
CN412	QGF1201C3-21	CONNECT TERMINAL		
CN413	QGF1201C3-17	CONNECT TERMINAL		
CN415	QGD2501C1-04Z	SOCKET ASSY		
CN416	QGB2501J1-10	CONNECT TERMINAL		
CN417	QGB2501J1-07	CONNECT TERMINAL		
CN420	QGB2501J1-10	CONNECT TERMINAL	EE	
CN421	QGB2501K2-10	CONNECT TERMINAL	EE	
EP001	E409182-001SM	EARTH TERMINAL		
TH401	QAD0064-2R2Z	POSISTOR I.M		
TU 1	QAU0034-001	FM FRONT END	B,E,EN,EV	
	QAU0036-001	FM FRONT END	EE	

## ■ Electrical Parts List(System Control &amp; Switch Board)

▲	Item	Parts Number	Description	Area
		I.C.S		
	IC810	MN101C23DBP	I.C(M)	
	IC811	NJU3714D	I.C(M)	
	IC812	GP1U291Q	I.C(M)	
	IC853	TA8409S	I.C(MONO-ANALOG)	
	IC854	NJU3711D	I.C(MONO-ANALOG)	
		DIODES		
	D801	1SR35-100A-T5	SI DIODE	
	D803	1SS119-02-T2	SI DIODE	
	D804	1SS133-T2	SI.DIODE	
	D831	MTZJ5.1A-T2	SI.DIODE	
	D832	MTZJ5.1A-T2	SI.DIODE	
	D920	SLR-342DC-T	L.E.D.	
	D955	SLR-342MC-T	LED I.M	
	D956	SLR-342MC-T	LED I.M	
	D957	SLR-342MC-T	LED I.M	
	D958	SLR-342MC-T	LED I.M	
	D961	1SS133-T2	SI.DIODE	
	D962	SLR-342VC-T	L.E.D.	
	D981	SLR-342MC-T	LED I.M	
	D982	SLR-342MC-T	LED I.M	
	D983	SLR-342MC-T	LED I.M	
	D984	SLR-342MC-T	LED I.M	
	D991	SLR-342MC-T	LED I.M	
	D992	SLR-342MC-T	LED I.M	
	D993	SLR-342MC-T	LED I.M	
	D1041	1SS133-T2	SI.DIODE	
		TRANSISTORS		
	Q801	2SC2668/O-T	TRANSISTOR TAPE	
	Q802	2SC2668/O-T	TRANSISTOR TAPE	
	Q803	DTC114ES	DIGITAL TRANSISTOR	
	Q804	DTC114ES	DIGITAL TRANSISTOR	
	Q805	DTC114ES	DIGITAL TRANSISTOR	
	Q806	DTC114ES	DIGITAL TRANSISTOR	
	Q807	DTC114ES	DIGITAL TRANSISTOR	
	Q808	DTC114ES	DIGITAL TRANSISTOR	
	Q809	DTC114ES	DIGITAL TRANSISTOR	
	Q810	DTC114ES	DIGITAL TRANSISTOR	
	Q811	DTC114ES	DIGITAL TRANSISTOR	
	Q851	KTC3199/GL-T	TR I/M	
	Q961	KRA102M-T	DIGITAL TRANSISTOR	
		CAPACITORS		
	C801	QFVJ1HJ-124Z	0.12MF 50V TF CAP.	
	C803	QETC0JM-477ZM	470MF 6.3V E.CAP.	
	C804	QETN0JM-108Z	1000MF 6.3V AL E.CAP.	
	C805	QCGB1HK-102	1000PF 50V CER.CAP.	
	C806	QCGB1HK-102	1000PF 50V CER.CAP.	
	C807	QCSB1HJ-390Y	39PF 50V CER.CAP.	
	C808	QCSB1HJ-330Y	33PF 50V CER.CAP.	
	C809	QCSB1HJ-330Y	33PF 50V CER.CAP.	
	C810	QCSB1HJ-390Y	39PF 50V CER.CAP.	
	C811	QCGB1HK-102	1000PF 50V CER.CAP.	
	C812	QCSB1HJ-220	22PF 50V CER.CAP.	
	C813	QCSB1HJ-270Y	27PF 50V CER.CAP.	
	C814	QCGB1HK-102	1000PF 50V CER.CAP.	
	C815	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M.	
	C816	EETB1CM-476	47MF 16V E.CAP.	
	C817	EETC1HM-226ZJC	22MF 50V E.CAPA. I.M.	
	C818	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C819	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C820	QCZ0205-155	1.5MF 25V C.CAP.	
	C821	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C831	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C832	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C834	QEKC0JM-226Z	22MF 16V CER.CAP.	
	C851	EETB1EM-106E	10MF 25V E.CAP.	
	C852	QCBB1HK-221Y	220PF 50V CER.CAP.	

▲	Item	Parts Number	Description	Area
	C853	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C854	EETC1EM-226ZE	22MF 25V E.CAP.	
	C855	QETB0JM-227	220MF 6.3V E.CAP.	
	C856	QETN1AM-107Z	100MF 10V AL E.CAP.	
	C857	EETC1CM-476ZJC	47MF 50V AL E.CAP.	
	C858	QCBB1HK-221Y	220PF 50V CER.CAP.	B,E,EN,EV
	C859	QCBB1HK-221Y	220PF 50V CER.CAP.	B,E,EN,EV
	C860	QFLM1HJ-103Z	0.01MF 50V CER.CAP.	B,E,EN,EV
	C971	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C972	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
	C1001	QCGB1HK-102	1000PF 50V CER.CAP.	B,E,EN,EV
	C1002	QCGB1HK-102	1000PF 50V CER.CAP.	B,E,EN,EV
	C1003	QDGB1HK-102Y	1000PF 50V CER.CAP.	B,E,EN,EV
	C1004	QCGB1HK-102	1000PF 50V CER.CAP.	
	C1005	QCGB1HK-102	1000PF 50V CER.CAP.	
	C1006	QCGB1HK-102	1000PF 50V CER.CAP.	
	C1051	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C1052	QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C1053	QDXB1CM-222Y	2200PF 16V C CAP.	
	C1054	QDXB1CM-222Y	2200PF 16V C CAP.	
	C1055	QFLM1HJ-393Z	0.039MF 50V M CAP.	
	C1056	QFLM1HJ-393Z	0.039MF 50V M CAP.	
		RESISTORS		
	R801	QRE141J-331Y	330 1/4W C RES.	
	R802	QRE141J-223Y	22K 1/4W C RES.	
	R803	QRE141J-223Y	22K 1/4W C RES.	
	R804	QRE141J-822Y	8.2K 1/4W C RES.	
	R805	QRE141J-822Y	8.2K 1/4W C RES.	
	R806	QRE141J-124Y	120K 1/4W C RES.	
	R807	QRE141J-103Y	10K 1/4W CARBON RES.	
	R808	QRE141J-103Y	10K 1/4W CARBON RES.	
	R809	QRE141J-103Y	10K 1/4W CARBON RES.	
	R810	QRE141J-103Y	10K 1/4W CARBON RES.	
	R811	QRE141J-103Y	10K 1/4W CARBON RES.	
	R812	QRE141J-103Y	10K 1/4W CARBON RES.	
	R813	QRE141J-103Y	10K 1/4W CARBON RES.	
	R814	QRE141J-103Y	10K 1/4W CARBON RES.	
	R815	QRE141J-563Y	56K 1/4W C RES.	
	R816	QRE141J-563Y	56K 1/4W C RES.	
	R817	QRE141J-103Y	10K 1/4W CARBON RES.	
	R818	QRE141J-103Y	10K 1/4W CARBON RES.	
	R819	QRE141J-102Y	1K 1/4W C RES.	
	R820	QRE141J-102Y	1K 1/4W C RES.	
	R821	QRE141J-102Y	1K 1/4W C RES.	
	R822	QRE141J-102Y	1K 1/4W C RES.	
	R823	QRE141J-102Y	1K 1/4W C RES.	
	R824	QRE141J-102Y	1K 1/4W C RES.	
	R825	QRE141J-102Y	1K 1/4W C RES.	
	R826	QRE141J-102Y	1K 1/4W C RES.	
	R827	QRE141J-103Y	10K 1/4W CARBON RES.	
	R828	QRE141J-201Y	200 1/4W C.RES. I.M.	
	R829	QRE141J-201Y	200 1/4W C.RES. I.M.	
	R830	QRE141J-201Y	200 1/4W C.RES. I.M.	
	R831	QRE141J-104Y	100K 1/4W C RES.	
	R832	QRE141J-104Y	100K 1/4W C RES.	
	R833	QRE141J-104Y	100K 1/4W C RES.	
	R834	QRE141J-104Y	100K 1/4W C RES.	
	R835	QRE141J-104Y	100K 1/4W C RES.	
	R836	QRE141J-104Y	100K 1/4W C RES.	
	R837	QRE141J-104Y	100K 1/4W C RES.	
	R838	QRE141J-102Y	1K 1/4W C RES.	
	R839	QRE141J-102Y	1K 1/4W C RES.	
	R840	QRE141J-103Y	10K 1/4W CARBON RES.	
	R841	QRE141J-103Y	10K 1/4W CARBON RES.	
	R842	QRE141J-103Y	10K 1/4W CARBON RES.	
	R843	QRE141J-103Y	10K 1/4W CARBON RES.	
	R844	QRE141J-103Y	10K 1/4W CARBON RES.	

# CA-MXJ55R/CA-MXJ530R

## ■ Electrical Parts List(System Control & Switch Board)

Block No.03

▲	Item	Parts Number	Description	Area
	R845	QRE141J-102Y	1K 1/4W C RES.	
	R846	QRE141J-102Y	1K 1/4W C RES.	
	R847	QRE141J-102Y	1K 1/4W C RES.	
	R848	QRE141J-102Y	1K 1/4W C RES.	
	R849	QRE141J-102Y	1K 1/4W C RES.	
	R850	QRE141J-103Y	10K 1/4W C RES.	
	R851	QRE141J-562Y	5.6K 1/4W C RES.	
	R852	QRE141J-3R9Y	3.9 1/4W C RES.	
	R853	QRE141J-183Y	18K 1/4W CARBON RES.	
	R854	QRE141J-332Y	3.3K 1/4W C RES.	
	R856	QRE141J-151Y	150 1/4W C RES.	
	R857	QRE141J-391Y	390 1/4W C.RES. I.M	
	R920	QRE141J-391Y	390 1/4W C.RES. I.M	
	R921	QRE141J-102Y	1K 1/4W C RES.	
	R922	QRE141J-102Y	1K 1/4W C RES.	
	R923	QRE141J-122Y	1.2K 1/4W C RES.	
	R924	QRE141J-152Y	1.5K 1/4W CARBON RES.	
	R925	QRE141J-222Y	2.2K 1/4W C RES.	
	R926	QRE141J-272Y	2.7K 1/4W C RES.	
	R927	QRE141J-392Y	3.9K 1/4W C RES.	
	R928	QRE141J-562Y	5.6K 1/4W C RES.	
	R931	QRE141J-102Y	1K 1/4W C RES.	
	R932	QRE141J-102Y	1K 1/4W C RES.	
	R933	QRE141J-122Y	1.2K 1/4W C RES.	
	R934	QRE141J-152Y	1.5K 1/4W CARBON RES.	
	R935	QRE141J-222Y	2.2K 1/4W C RES.	
	R936	QRE141J-272Y	2.7K 1/4W C RES.	
	R937	QRE141J-392Y	3.9K 1/4W C RES.	
	R938	QRE141J-562Y	5.6K 1/4W C RES.	
	R939	QRE141J-103Y	10K 1/4W CARBON RES.	
	R940	QRE141J-563Y	56K 1/4W C RES.	B,E,EN,EV
	R941	QRE141J-102Y	1K 1/4W C RES.	
	R942	QRE141J-102Y	1K 1/4W C RES.	
	R943	QRE141J-122Y	1.2K 1/4W C RES.	
	R944	QRE141J-152Y	1.5K 1/4W CARBON RES.	
	R945	QRE141J-153Y	15K 1/4W C RES.	
	R946	QRE141J-103Y	10K 1/4W CARBON RES.	
	R947	QRE141J-563Y	56K 1/4W C RES.	EE
	R948	QRE141J-104Y	100K 1/4W C RES.	
	R949	QRE141J-104Y	100K 1/4W C RES.	
	R951	QRE141J-102Y	1K 1/4W C RES.	
	R952	QRE141J-103Y	10K 1/4W CARBON RES.	
	R953	QRE141J-183Y	18K 1/4W CARBON RES.	
	R955	QRE141J-201Y	200 1/4W C.RES. I.M	
	R956	QRE141J-201Y	200 1/4W C.RES. I.M	
	R957	QRE141J-201Y	200 1/4W C.RES. I.M	
	R958	QRE141J-201Y	200 1/4W C.RES. I.M	
	R961	QRE141J-201Y	200 1/4W C.RES. I.M	
	R962	QRE141J-472Y	4.7K 1/4W C RES.	
	R963	QRE141J-102Y	1K 1/4W C RES.	
	R964	QRE141J-122Y	1.2K 1/4W C RES.	
	R981	QRE141J-201Y	200 1/4W C.RES. I.M	
	R982	QRE141J-201Y	200 1/4W C.RES. I.M	
	R983	QRE141J-201Y	200 1/4W C.RES. I.M	
	R984	QRE141J-201Y	200 1/4W C.RES. I.M	
	R985	QRE141J-103Y	10K 1/4W CARBON RES.	
	R986	QRE141J-183Y	18K 1/4W CARBON RES.	
	R992	QRE141J-152Y	1.5K 1/4W CARBON RES.	
	R993	QRE141J-222Y	2.2K 1/4W C RES.	
	R994	QRE141J-272Y	2.7K 1/4W C RES.	
	R995	QRE141J-392Y	3.9K 1/4W C RES.	
	R996	QRE141J-562Y	5.6K 1/4W C RES.	
	RA801	QRB169J-104	100K 1/10WRES. ARR	
	RA802	QRB169J-104	100K 1/10WRES. ARR	
	R1026	QRE141J-683Y	68K 1/4W C RES.	
	R1035	QRE141J-393Y	39K 1/4W C RES.	
▲	R1051	QRJ146J-4R7X	4.7 1/4W UNF.CARBON R	

▲	Item	Parts Number	Description	Area
	R1052	QRJ146J-4R7X	4.7 1/4W UNF.CARBON R	
	R1053	QRE141J-393Y	39K 1/4W C RES.	
	R1054	QRE141J-393Y	39K 1/4W C RES.	
	R1055	QRE141J-102Y	1K 1/4W C RES.	
		OTHERS		
		E3400-439	FELT SPACER	
		GV30032-001A	FL HOLDER	
J 81		QNB0038-001	SPK.TERMINAL	EE
		QNB0088-001	SPEAKER TERMINAL	B,E,EN,EV
J 82		QNN0017-001	PIN JACK	
L 801		QQL173K-470Z	INDUCTOR	
L 802		QQL231K-220Y	INDUCTOR	
L 803		QQL29BJ-100Z	INDUCTOR	
L 805		QQL173K-470Z	INDUCTOR	
L 806		QQL173K-470Z	INDUCTOR	
L 851		QQL29BJ-100Z	INDUCTOR	
L 852		QQR0779-001Z	INDUCTOR	
L 853		QQR0779-001Z	INDUCTOR	B,E,EN,EV
L 1003		QQR0779-001Z	INDUCTOR	B,E,EN,EV
S 921		QSW0674-001Z	TACT SWITCH	
S 922		QSW0674-001Z	TACT SWITCH	
S 923		QSW0674-001Z	TACT SWITCH	
S 924		QSW0674-001Z	TACT SWITCH	
S 925		QSW0674-001Z	TACT SWITCH	
S 926		QSW0674-001Z	TACT SWITCH	
S 927		QSW0674-001Z	TACT SWITCH	
S 928		QSW0674-001Z	TACT SWITCH	
S 931		QSW0674-001Z	TACT SWITCH	
S 932		QSW0674-001Z	TACT SWITCH	
S 933		QSW0674-001Z	TACT SWITCH	
S 934		QSW0674-001Z	TACT SWITCH	
S 935		QSW0674-001Z	TACT SWITCH	
S 936		QSW0674-001Z	TACT SWITCH	
S 937		QSW0674-001Z	TACT SWITCH	
S 938		QSW0674-001Z	TACT SWITCH	
S 939		QSW0674-001Z	TACT SWITCH	
S 941		QSW0674-001Z	TACT SWITCH	
S 942		QSW0674-001Z	TACT SWITCH	
S 943		QSW0674-001Z	TACT SWITCH	
S 944		QSW0674-001Z	TACT SWITCH	
S 945		QSW0674-001Z	TACT SWITCH	
S 946		QSW0674-001Z	TACT SWITCH	
S 948		QSW0518-001	PUSH SWITCH	
S 949		QSW0518-001	PUSH SWITCH	
S 951		QSW0674-001Z	TACT SWITCH	
S 952		QSW0674-001Z	TACT SWITCH	
S 953		QSW0674-001Z	TACT SWITCH	
S 963		QSW0674-001Z	TACT SWITCH	
S 985		QSW0674-001Z	TACT SWITCH	
S 986		QSW0674-001Z	TACT SWITCH	
S 992		QSW0674-001Z	TACT SWITCH	
S 993		QSW0674-001Z	TACT SWITCH	
S 994		QSW0674-001Z	TACT SWITCH	
S 995		QSW0674-001Z	TACT SWITCH	
S 996		QSW0674-001Z	TACT SWITCH	
S 997		QSW0674-001Z	TACT SWITCH	
X 801		QAX0416-001Z	CERA LOCK	
X 802		QAX0401-001	CRYSTAL	
CN115		QGB2510K2-06	CONNECTOR	
CN810		QGF1201F3-21	VMC0332-R21	
CN811		QGF1201F3-23	CONNECTOR	
CN812		QGF1201F3-11	CONNECTOR	
CN813		QGF1016F1-09	CONNECT TERMINAL	
CN814		QGD2501C1-04Z	SOCKET ASSY	
CN815		QGD2501C1-03Z	SOCKET ASSY	
CN816		QGD2501C1-05Z	SOCKET ASSY	
CN817		QGF1201C3-10	CONNECTOR	

## ■ Electrical Parts List(System Control &amp; Switch Board)

Δ	Item	Parts Number	Description	Area
	CN856	QGF1201C3-21	CONNECT TERMINAL	
	CN857	QGF1201C3-23	CONNECTOR	
	CN858	QGD2501C1-05Z	SOCKET ASSY	B,E,EN,EV
	CN859	QGF1201C3-10	CONNECTOR	
	CN860	QGF1201C3-21	CONNECT TERMINAL	
	CN861	QGF1201C3-17	CONNECT TERMINAL	
	CN862	QGF1201C3-21	CONNECT TERMINAL	
	CN863	EMV5111-002	2P CONNECTOR	
	CN921	QGF1016F1-09	CONNECT TERMINAL	
	CN971	QGF1201F3-10	CONNECTOR	
	FL801	QLF0059-001	FL TUBE	
	FW901	QUM134-34DGZ4	FLAT WIRE	
	FW951	QUM027-08DGZ3	FLAT WIRE	
	FW961	QUM025-14DGZ3	FLAT WIRE	
	FW971	QUM026-07Z3Z3	FLAT WIRE	
	FW972	QUM025-07Z3Z3	FLAT WIRE	
	JS971	QSW0538-001	ROTARY SWITCH	
	J1001	QNS0030-001	JACK	
	L1001	QQL231K-470Y	INDUCTOR	B,E,EN,EV
	L1002	QQL231K-470Y	INDUCTOR	B,E,EN,EV
	L1003	QQL231K-2R2Y	INDUCTOR I.M	
	RY 1	QSK0057-001	RELAY	
	SP801	VYH7653-001	I.C.PROTECTOR	

Electrical Parts List (CD Servo Control Board)

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
C	251	NCS21HJ-100X	C CAPACITOR	10PF 5% 50V	
C	252	NCS21HJ-100X	C CAPACITOR	10PF 5% 50V	
C	253	NCB21EK-100X	C CAPACITOR	10MF 10% 25V	
C	254	QER21AM-472Z	E CAPACITOR	.47MF 20% 10V	
C	255	NCB21EK-100X	C CAPACITOR	.47MF 20% 25V	
C	281	NCS21HJ-223X	C CAPACITOR	.022MF 10% 50V	
C	291	QER21AM-472Z	E CAPACITOR	.47MF 20% 10V	
C	601	NCS21HJ-102X	C CAPACITOR	.1000PF 10% 50V	
C	602	NCB21HK-102X	C CAPACITOR	.1000PF 10% 50V	
C	603	NCB21HK-223X	C CAPACITOR	.022MF 10% 50V	
C	604	NCS21HJ-223X	C CAPACITOR	.022MF 10% 50V	
C	605	NCS21HJ-271X	C CAPACITOR	.270PF 5% 50V	
C	606	NCS21HJ-182X	C CAPACITOR	.180PF 5% 50V	
C	607	NCB21HK-222X	C CAPACITOR	.2000PF 10% 50V	
C	608	NCB21HK-223X	C CAPACITOR	.022MF 10% 50V	
C	610	NCS21HJ-104X	C CAPACITOR	.10MF 10% 25V	
C	611	NCB21EK-104X	C CAPACITOR	.10MF 10% 25V	
C	612	QER21AM-105X	E CAPACITOR	1.0MF 20% 50V	
C	613	NCF21CZ-101X	C CAPACITOR	1.00PF 5% 50V	
C	614	NCB21HK-273X	C CAPACITOR	.007MF 10% 50V	
C	615	NCS21HK-473X	C CAPACITOR	.4700PF 10% 50V	
C	616	NCS21HK-103X	C CAPACITOR	.010MF 10% 50V	
C	617	NCS21HJ-331X	C CAPACITOR	.330PF 5% 50V	
C	621	NCF21EK-105X	C CAPACITOR	.10MF 10% 25V	
C	623	NCF21CZ-105X	C CAPACITOR	.10MF +80% -20%	
C	624	QER21AM-107	E CAPACITOR	.10MF 20% 10V	
C	631	QER41CM-106	E CAPACITOR	.10MF 20% 16V	
C	632	NCF21CZ-105X	C CAPACITOR	.1.0MF +80% -20%	
C	634	NCS21HK-223X	C CAPACITOR	.02MF 10% 50V	
C	651	NCS21HJ-120X	C CAPACITOR	.12PF 5% 50V	
C	652	NCS21HJ-150X	C CAPACITOR	.15PF 5% 50V	
C	653	NCB21EK-105X	C CAPACITOR	.01MF 10% 25V	
C	654	NCB21HK-223X	C CAPACITOR	.002MF 10% 50V	
C	655	QER41AM-227	E CAPACITOR	.220MF 10% 10V	
C	656	NCS21EK-104X	C CAPACITOR	.10MF 10% 25V	
C	657	NCB21HK-222X	C CAPACITOR	.2200PF 10% 50V	
C	658	NCB21HK-222X	C CAPACITOR	.2200PF 10% 50V	
C	661	NCB21EK-105X	C CAPACITOR	.10MF 10% 25V	
C	662	QER41AM-107	E CAPACITOR	.10MF 10% 25V	
C	663	NCS21EK-104X	C CAPACITOR	.10MF 10% 25V	
C	664	NCS21HK-223X	C CAPACITOR	.022MF 10% 50V	
C	665	NCS21HK-223X	C CAPACITOR	.022MF 10% 50V	
C	666	NCS21HJ-671X	C CAPACITOR	.470PF 5% 50V	
C	667	NCF21CZ-473X	C CAPACITOR	.0.0MF +80% -20%	
C	668	NCB21HK-473X	C CAPACITOR	.0.0MF 10% 50V	
C	671	NCS21EK-105X	C CAPACITOR	.10MF 10% 25V	
C	672	QER61AM-107	E CAPACITOR	.10MF 20% 10V	
C	801	NCS21HK-822X	C CAPACITOR	.8200PF 10% 50V	
C	802	NCS21HK-152X	C CAPACITOR	.1500PF 10% 50V	
C	811	NCS21HJ-221X	C CAPACITOR	.220PF 5% 50V	
C	812	NCS21HJ-221X	C CAPACITOR	.220PF 5% 50V	
C	813	NCS21HJ-221X	C CAPACITOR	.220PF 5% 50V	
C	814	NCS21HJ-221X	C CAPACITOR	.220PF 5% 50V	
C	822	QER61AM-227	E CAPACITOR	.1.0MF +80% -20%	
					220MF 20% 10V

REF.	PARTS NO.	PARTS NAME	REMARKS	BLOCK NO.	SUFFIX
C 851	GER11CH-108	E CAPACITOR	10MF 20% 16V		
C 852	GER41CM-106	E CAPACITOR	10MF 20% 16V		
C 853	NCB21EK-104X	C CAPACITOR	-1.0MF 10% 25V		
C 859	NCF21CZ-105X	C CAPACITOR	-1.0MF +80%:-20%		
C 860	NCF21CZ-105X	C CAPACITOR	1.0MF +80%:-20%		
CN151	GGF1016F1-15	15PF C/RIG			
CN152	QGA2001F1-12	12P C/RIG	VIDEO CD		
CN651	QGF1016F1-15	15PF CONNECTOR	VIDEO CD		
CN652	QGF1016F1-19	CONNECTOR	TRAVERSE		
CN652	QGF1016F1-05	CONNECTOR	MAIN		
CN653	GGF1016F1-13	CONNECTOR	OSD		
CNB01	QGA2001C1-06	6P PLUG ASSY	CD TEXT		
CNB01	QGD2503CF1-03	SOCKET	TRAVERSE		
CNB54	QGB2016K1-07	CONNECTOR	DISC DETECTION		
CNB55	QGB2012K2-10	CONNECTOR	TRAY SWITCH		
IC251	UPD7705SGCA37	IC	CAM SWITCH		
IC601	AN8806SB-W	IC	MICOM		
IC651	MN35510	IC	RF AMP		
IC801	BA6897FP-W	IC	DSP & DAC		
IC851	TAB1095	IC	PU DRIVE		
IC852	TAB4095	IC	L MOTOR DRIVE		
L 851	QGL01BK-100Z	INDUCTOR	R MOTOR DRIVE		
L 852	QGL01BK-100Z	INDUCTOR	VS DE-COUPLE		
L 854	QGL01BK-100Z	INDUCTOR	L MOTOR		
L 854	QGL01BK-100Z	INDUCTOR	R MOTOR		
Q 291	2SB1357-E/F/T	TRANSISTOR	SP.ON		
Q 842	DTA144ES-T	TRANSISTOR	APC		
R 251	NRSA02J-102X	MG RESISTOR	/DISC		
R 252	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 253	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 254	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 255	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 256	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 257	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 258	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 259	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 260	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 261	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 262	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 263	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 264	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 265	NRSA02J-102X	MG RESISTOR	22K 5%	1/10W	
R 266	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 267	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 268	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 269	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 274	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 275	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 277	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 278	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 279	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 281	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 282	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	
R 283	NRSA02J-102X	MG RESISTOR	1.0K 5%	1/10W	

A	REF.	PARTS NO.	PARTS NAME	REMARKS	BLOCK NO. <u>24</u>	PARTS NO.	PARTS NAME	REMARKS	BLOCK NO. <u>24</u>
R 284	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 694	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 285	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 801	NRSA02J-102X	MG RESISTOR	2.2K 5% 1/10W	
R 286	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 802	NRSA02J-102X	MG RESISTOR	4.7K 5% 1/10W	
R 287	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 803	NRSA02J-102X	MG RESISTOR	12K 5% 1/10W	
R 288	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 804	NRSA02J-102X	MG RESISTOR	15K 5% 1/10W	
R 291	NRSA02J-102X	MG RESISTOR	1.2K 5% 1/10W		R 805	NRSA02J-102X	MG RESISTOR	12K 5% 1/10W	
R 292	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W		R 806	NRSA02J-102X	MG RESISTOR	22.5 5% 1/10W	
R 293	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W		R 807	NRSA02J-102X	MG RESISTOR	2.2K 5% 1/10W	
R 601	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 808	NRSA02J-102X	MG RESISTOR	22K 5% 1/10W	
R 602	NRSA02J-102X	MG RESISTOR	270K 5% 1/10W		R 811	NRSA02J-102X	MG RESISTOR	4.7K 5% 1/10W	
R 603	NRSA02J-104X	MG RESISTOR	150K 5% 1/10W		R 812	NRSA02J-102X	MG RESISTOR	2.2K 5% 1/10W	
R 604	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W		R 831	NRSA02J-102X	MG RESISTOR	150 5% 1/10W	
R 605	NRSA02J-104X	MG RESISTOR	150K 5% 1/10W		R 832	NRSA02J-102X	MG RESISTOR	10K 5% 1/10W	
R 606	NRSA02J-104X	MG RESISTOR	470K 5% 1/10W		R 842	NRSA02J-102X	MG RESISTOR	4.7K 5% 1/10W	
R 607	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 851	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 611	NRSA02J-113X	MG RESISTOR	1.0K 5% 1/10W		R 852	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 612	NRSA02J-125X	MG RESISTOR	1.2M 5% 1/10W		R 853	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 631	NRSA02J-2R2X	MG RESISTOR	2.2M 5% 1/10W		R 854	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 632	NRSA02J-1000X	MG RESISTOR	10M 5% 1/10W		R 855	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 633	NRSA02J-120X	MG RESISTOR	12.5M 5% 1/10W		R 856	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 635	NRSA02J-121X	MG RESISTOR	120M 5% 1/10W		R 857	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 636	NRSA02J-910X	MG RESISTOR	91 5% 1/10W		R 858	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 636	NRSA02J-910X	MG RESISTOR	270 5% 1/10W		R 859	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 652	NRSA02J-220X	MG RESISTOR	22.5M 5% 1/10W		R 861	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 652	NRSA02J-220X	MG RESISTOR	22.5M 5% 1/10W		R 862	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 657	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 863	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 661	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 864	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 662	NRSA02J-471X	MG RESISTOR	470 5% 1/10W		R 865	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 663	NRSA02J-126X	MG RESISTOR	120K 5% 1/10W		R 866	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 665	NRSA02J-663X	MG RESISTOR	68K 5% 1/10W		R 868	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 666	NRSA02J-155X	MG RESISTOR	1.5M 5% 1/10W		R 869	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 667	NRSA02J-562X	MG RESISTOR	5.6K 5% 1/10W		R 883	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 671	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 884	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 672	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 885	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 673	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 886	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 674	NRSA02J-101X	MG RESISTOR	100 5% 1/10W		R 887	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	
R 675	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 888	NRSA02J-102X	SIN TWIST WIRE	D.GND	
R 676	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 889	NRSA02J-102X	1.0K 5% 1/10W	X 251 QAX0360-0012	FOR IC251
R 677	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W		R 890	NRSA02J-102X	1.0K 5% 1/10W	X 651 QAX0211-0012	CRYSTAL FOR IC651
R 678	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 680	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 681	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 682	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 683	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 684	NRSA02J-271X	MG RESISTOR	270 5% 1/10W						
R 685	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 686	NRSA02J-101X	MG RESISTOR	100 5% 1/10W						
R 687	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 688	NRSA02J-101X	MG RESISTOR	100 5% 1/10W						
R 689	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W						
R 690	NRSA02J-101X	MG RESISTOR	100 5% 1/10W						
R 691	NRSA02J-101X	MG RESISTOR	100 5% 1/10W						
R 692	NRSA02J-101X	MG RESISTOR	100 5% 1/10W						
R 693	NRSA02J-471X	MG RESISTOR	470 5% 1/10W						

**CA-MXJ55R/CA-MXJ530R**

## ■ Electrical Parts List (CD Changer Mechanism Switch Board)

REF.		PARTS NO.	PART'S NAME	REMARKS	SUFFIX
CNB02	QGB20161-07	CONNECTOR			
SW 1	GSW0507-001	LEVER SWITCH			
SW 2	GSW0507-001	LEVER SWITCH			
SW 3	GSW0507-001	LEVER SWITCH			
SW 4	GSW0507-001	LEVER SWITCH			
SW 5	GSW0507-001	LEVER SWITCH			
SW 6	GSW0507-001	LEVER SWITCH			

Electrical Parts List (Cassette Mechanism Control Board)

REF.		PARTS NO.	PARTS NAME	REMARKS	BLOCK NO. <del>101</del>	SUFFIX
C 101	NCS21HJ-581X	C CAPACITOR	560PF 5X 50V			
C 102	NCS21HJ-33X	C CAPACITOR	330PF 5X 50V			
C 103	NCS21HJ-56X	C CAPACITOR	560PF 5X 50V			
C 104	NCS21HJ-221X	C CAPACITOR	220PF 5X 50V			
C 105	QEKA1EM-220	E CAPACITOR	220MF 10X .3V			
C 106	NCB21HK-333X	C CAPACITOR	.033MF 10X 50V			
C 107	QEKA1EM-475	E CAPACITOR	.047MF 20X 25V			
C 108	NCB21HK-393X	C CAPACITOR	.039MF 10X 50V			
C 110	NCS21HJ-221X	C CAPACITOR	220PF 5X 50V			
C 111	NCS21HJ-106	E CAPACITOR	10MF 20X 50V			
C 112	QEKA1C-106	E CAPACITOR	10MF 20X 10V			
C 113	QEKA1EM-332X	E CAPACITOR	3300PF 10X 50V			
C 114	QEKA1EM-475	E CAPACITOR	.047MF 20X 25V			
C 115	NCB21HK-153X	C CAPACITOR	.015MF 10X 50V			
C 116	NCB21HK-B22X	C CAPACITOR	B220PF 10X 50V			
C 117	NCB21HK-323X	C CAPACITOR	.032MF 10X 50V			
C 119	NCB21HK-563X	C CAPACITOR	.056MF 10X 50V			
C 120	NCS21HJ-330X	C CAPACITOR	.033MF 5X 50V			
C 201	NCS21HJ-561X	C CAPACITOR	.056MF 5X 50V			
C 202	NCS21HJ-331X	C CAPACITOR	.033MF 5X 50V			
C 203	NCS21HJ-221X	C CAPACITOR	560PF 5X 50V			
C 204	QEKA1EM-227	E CAPACITOR	220PF 5X 50V			
C 205	QEKA1EM-227	E CAPACITOR	220MF 20X 6.3V			
C 206	NCB21HK-333X	C CAPACITOR	.033MF 10X 50V			
C 207	QEKA1EM-475	E CAPACITOR	.047MF 20X 25V			
C 208	NCB21HK-393X	C CAPACITOR	.039MF 10X 50V			
C 210	NCS21HJ-221X	C CAPACITOR	220PF 5X 50V			
C 211	QEKA1EM-106	E CAPACITOR	10MF 20X 16V			
C 212	QEKA1CM-106	E CAPACITOR	10MF 20X 16V			
C 213	NCB21HK-332X	C CAPACITOR	3300PF 10X 50V			
C 214	QEKA1EM-475	E CAPACITOR	.047MF 20X 25V			
C 215	NCB21HK-153X	C CAPACITOR	.015MF 10X 50V			
C 216	NCB21HK-B22X	C CAPACITOR	B220PF 10X 50V			
C 217	NCB21HK-223X	C CAPACITOR	.022MF 10X 50V			
C 219	NCB21HK-563X	C CAPACITOR	.056MF 10X 50V			
C 220	NCS21HJ-330X	C CAPACITOR	.033MF 5X 50V			
C 301	QEKA1EM-106	E CAPACITOR	10MF 20X 16V			
C 302	QEKA1CM-475	E CAPACITOR	47MF 20X 16V			
C 303	QEKA1CM-226	E CAPACITOR	22MF 20X 16V			
C 304	QEKA1EM-77	E CAPACITOR	220PF 20X 25V			
C 305	NCS21HJ-393X	E CAPACITOR	.039MF 10X 50V			
C 306	NCB21HK-562X	C CAPACITOR	220MF 20X 6.3V			
C 309	NCB21HK-562X	C CAPACITOR	5600PF 10X 50V			
C 310	NCB21HK-223X	C CAPACITOR	.022MF 10X 50V			
C 311	NCB21HK-B22X	C CAPACITOR	B2200PF 10X 50V			
C 313	QEKA1AM-107Z	E CAPACITOR	100MF 20X 10V			
C 314	QEKA105-155Z	ML C CAPACITOR	1.5MF 1.5NF			
C 315	QC2005-155Z	ML C CAPACITOR	1.5MF 1.5NF			
C 316	QF5205-103Z	PP CAPACITOR	.010MF 5X 100V			
C 318	NCB21HK-103Z	C CAPACITOR	.010MF 10X 50V			
C 319	QFG321J-8212	T CAPACITOR	B20PF 5X 100V			
C 320	NCB21HK-103X	T CAPACITOR	.010MF 10X 50V			
C 322	QFG321J-1522	M CAPACITOR	1500PF 5X 100V			

A	REF.	PARTS NO.	PARTS NAME	REMARKS	BLOCK NO. <del>REF.</del>	SUFFIX	BLOCK NO. <del>REF.</del>	SUFFIX	BLOCK NO. <del>REF.</del>	SUFFIX	PARTS NO.	PARTS NAME	REMARKS	
C	328	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	R 103	NRSA02J-220X	MG RESISTOR	22 5% 1/10W	R 106	NRSA02J-392X	MG RESISTOR	R 106	MG RESISTOR	3.9K 5% 1/10W
C	329	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	R 107	NRSA02J-123X	MG RESISTOR	1.2K 5% 1/10W	R 108	NRSA02J-222X	MG RESISTOR	R 108	MG RESISTOR	2.2K 5% 1/10W
C	330	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	R 109	NRSA02J-150X	MG RESISTOR	1.0K 5% 1/10W	R 111	NRSA02J-562X	MG RESISTOR	R 111	MG RESISTOR	1.5K 5% 1/10W
C	332	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	R 112	NRSA02J-122X	MG RESISTOR	1.2K 5% 1/10W	R 113	NRSA02J-271X	MG RESISTOR	R 113	MG RESISTOR	2.70 5% 1/10W
C	333	NCB21HK-103X	C CAPACITOR	.010MF 10X 50V	R 114	NRSA02J-391X	MG RESISTOR	3.90 5% 1/10W	R 115	NRSA02J-332X	MG RESISTOR	R 115	MG RESISTOR	3.3K 5% 1/10W
C	336	NCB21HK-103X	C CAPACITOR	.010MF 10X 50V	R 117	NRSA02J-332X	MG RESISTOR	3.3K 5% 1/10W	R 118	NRSA02J-155X	MG RESISTOR	R 118	MG RESISTOR	1.5K 5% 1/10W
C	337	NCB21HK-103X	C CAPACITOR	.010MF 10X 50V	R 119	NRSA02J-203X	MG RESISTOR	2.0K 5% 1/10W	R 120	NRSA02J-102X	MG RESISTOR	R 120	MG RESISTOR	1.0K 5% 1/10W
C	338	NCB21HK-103X	C CAPACITOR	.010MF 10X 50V	R 121	NRSA02J-122X	MG RESISTOR	1.2K 5% 1/10W	R 122	NRSA02J-102X	MG RESISTOR	R 122	MG RESISTOR	1.0K 5% 1/10W
C	339	QEK1CM-476	E CAPACITOR	4.7MF 20X 16V	R 123	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	R 124	NRSA02J-102X	MG RESISTOR	R 124	MG RESISTOR	1.0K 5% 1/10W
C	340	NCB21HK-103X	C CAPACITOR	.010MF 10X 50V	R 125	NRSA02J-183X	MG RESISTOR	18K 5% 1/10W	R 126	NRSA02J-220X	MG RESISTOR	R 126	MG RESISTOR	22 5% 1/10W
C	341	QEK1JAM-107Z	E CAPACITOR	100MF 20X 10V	R 127	NRSA02J-392X	MG RESISTOR	3.9K 5% 1/10W	R 128	NRSA02J-155X	MG RESISTOR	R 128	MG RESISTOR	1.5K 5% 1/10W
C	342	QEKF1EM-475	E CAPACITOR	4.7MF 20X 25V	R 129	NRSA02J-203X	MG RESISTOR	2.0K 5% 1/10W	R 130	NRSA02J-102X	MG RESISTOR	R 130	MG RESISTOR	1.0K 5% 1/10W
C	343	QEKF1CM-106	E CAPACITOR	1.0MF 20X 16V	R 131	NRSA02J-122X	MG RESISTOR	1.2K 5% 1/10W	R 132	NRSA02J-102X	MG RESISTOR	R 132	MG RESISTOR	1.0K 5% 1/10W
C	344	NCB21HK-472X	C CAPACITOR	4.700PF 10X 50V	R 133	NRSA02J-330X	MG RESISTOR	3.3K 5% 1/10W	R 134	NRSA02J-102X	MG RESISTOR	R 134	MG RESISTOR	1.0K 5% 1/10W
C	345	NCS21HJ-331X	C CAPACITOR	3300PF 5% 50V	R 135	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	R 136	NRSA02J-183X	MG RESISTOR	R 136	MG RESISTOR	18K 5% 1/10W
CN	301	QGF1205F1-06	CONNECTOR		R 137	NRSA02J-392X	MG RESISTOR	3.9K 5% 1/10W	R 138	NRSA02J-123X	MG RESISTOR	R 138	MG RESISTOR	1.2K 5% 1/10W
CN	302	QGF1205F1-06	CONNECTOR		R 139	NRSA02J-123X	MG RESISTOR	1.2K 5% 1/10W	R 140	NRSA02J-152X	MG RESISTOR	R 140	MG RESISTOR	2.2K 5% 1/10W
CN	303	QGF1205F1-10	CONNECTOR		R 141	NRSA02J-152X	MG RESISTOR	1.5K 5% 1/10W	R 142	NRSA02J-152X	MG RESISTOR	R 142	MG RESISTOR	1.5K 5% 1/10W
CN	304	QGF1205F1-11	CONNECTOR		R 143	NRSA02J-152X	MG RESISTOR	1.5K 5% 1/10W	R 144	NRSA02J-271X	MG RESISTOR	R 144	MG RESISTOR	2.70 5% 1/10W
D	307	H2MS-1NB2-X	CHIP Z DIODE		R 145	NRSA02J-391X	MG RESISTOR	3.9K 5% 1/10W	R 146	NRSA02J-332X	MG RESISTOR	R 146	MG RESISTOR	3.3K 5% 1/10W
D	308	H2MS-1NB2-X	CHIP Z DIODE		R 147	NRSA02J-152X	MG RESISTOR	1.5K 5% 1/10W	R 148	NRSA02J-122X	MG RESISTOR	R 148	MG RESISTOR	1.2K 5% 1/10W
D	309	MA701A-X	S.K.DIODE		R 149	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	R 150	NRSA02J-102X	MG RESISTOR	R 150	MG RESISTOR	1.0K 5% 1/10W
IC	301	BA326N	IC		R 151	NRSA02J-221X	MG RESISTOR	2.2K 5% 1/10W	R 152	NRSA02J-392X	MG RESISTOR	R 152	MG RESISTOR	3.9K 5% 1/10W
IC	302	AN74LS5	IC		R 153	NRSA02J-155X	MG RESISTOR	1.5K 5% 1/10W	R 154	NRSA02J-392X	MG RESISTOR	R 154	MG RESISTOR	3.9K 5% 1/10W
IC	303	BU409BCF-X	IC		R 155	NRSA02J-332X	MG RESISTOR	3.3K 5% 1/10W	R 156	NRSA02J-152X	MG RESISTOR	R 156	MG RESISTOR	1.5K 5% 1/10W
IC	304	BU409BCF-X	IC		R 157	NRSA02J-152X	MG RESISTOR	1.5K 5% 1/10W	R 158	NRSA02J-152X	MG RESISTOR	R 158	MG RESISTOR	1.5K 5% 1/10W
L	301	QGR0620-001	OSC COIL(BIAS)		R 159	NRSA02J-393X	MG RESISTOR	3.9K 5% 1/10W	R 160	NRSA02J-102X	MG RESISTOR	R 160	MG RESISTOR	1.0K 5% 1/10W
L	303	QGL01BK-100Z	INDUCTOR		R 161	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	R 162	NRSA02J-102X	MG RESISTOR	R 162	MG RESISTOR	1.0K 5% 1/10W
Q	102	DTCL14EKA-X	TRANSISTOR		R 163	NRSA02J-122X	MG RESISTOR	1.2K 5% 1/10W	R 164	NRSA02J-122X	MG RESISTOR	R 164	MG RESISTOR	1.2K 5% 1/10W
Q	103	DTCL14EKA-X	TRANSISTOR		R 165	NRSA02J-152X	MG RESISTOR	1.5K 5% 1/10W	R 166	NRSA02J-152X	MG RESISTOR	R 166	MG RESISTOR	1.5K 5% 1/10W
Q	105	2SC3576-JVC-T	TRANSISTOR		R 167	NRSA02J-101X	MG RESISTOR	1.0K 5% 1/10W	R 168	NRSA02J-101X	MG RESISTOR	R 168	MG RESISTOR	1.0K 5% 1/10W
Q	202	DTCL144TKA-X	TRANSISTOR		R 169	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 170	NRSA02J-103X	MG RESISTOR	R 170	MG RESISTOR	1.0K 5% 1/10W
Q	203	DTCL14EKA-X	TRANSISTOR		R 171	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 172	NRSA02J-103X	MG RESISTOR	R 172	MG RESISTOR	1.0K 5% 1/10W
Q	205	2SC3576-JVC-T	TRANSISTOR		R 173	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 174	NRSA02J-103X	MG RESISTOR	R 174	MG RESISTOR	1.0K 5% 1/10W
Q	302	2SC2001/K/-T	TRANSISTOR		R 175	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 176	NRSA02J-103X	MG RESISTOR	R 176	MG RESISTOR	1.0K 5% 1/10W
Q	303	2SC2001/K/-T	TRANSISTOR		R 177	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 178	NRSA02J-103X	MG RESISTOR	R 178	MG RESISTOR	1.0K 5% 1/10W
Q	305	2SC3576-JVC-T	TRANSISTOR		R 179	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 180	NRSA02J-103X	MG RESISTOR	R 180	MG RESISTOR	1.0K 5% 1/10W
Q	306	2SC2412K/RS/-X	CHIP TRANSISTOR		R 181	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 182	NRSA02J-103X	MG RESISTOR	R 182	MG RESISTOR	1.0K 5% 1/10W
Q	307	2SC2412K/RS/-X	CHIP TRANSISTOR		R 183	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 184	NRSA02J-103X	MG RESISTOR	R 184	MG RESISTOR	1.0K 5% 1/10W
Q	308	2SC2412K/RS/-X	CHIP TRANSISTOR		R 185	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 186	NRSA02J-103X	MG RESISTOR	R 186	MG RESISTOR	1.0K 5% 1/10W
Q	312	2SC2412K/RS/-X	CHIP TRANSISTOR		R 187	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 188	NRSA02J-103X	MG RESISTOR	R 188	MG RESISTOR	1.0K 5% 1/10W
Q	313	2SC2412K/RS/-X	CHIP TRANSISTOR		R 189	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 190	NRSA02J-103X	MG RESISTOR	R 190	MG RESISTOR	1.0K 5% 1/10W
Q	314	2SC2412K/RS/-X	CHIP TRANSISTOR		R 191	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 192	NRSA02J-103X	MG RESISTOR	R 192	MG RESISTOR	1.0K 5% 1/10W
Q	315	2SC2412K/RS/-X	CHIP TRANSISTOR		R 193	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 194	NRSA02J-103X	MG RESISTOR	R 194	MG RESISTOR	1.0K 5% 1/10W
Q	316	2SA152/LK/-T	TRANSISTOR		R 195	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 196	NRSA02J-103X	MG RESISTOR	R 196	MG RESISTOR	1.0K 5% 1/10W
Q	317	DTCL14EKA-X	TRANSISTOR		R 197	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 198	NRSA02J-103X	MG RESISTOR	R 198	MG RESISTOR	1.0K 5% 1/10W
Q	321	DTCL14EKA-X	TRANSISTOR		R 199	NRSA02J-103X	MG RESISTOR	1.0K 5% 1/10W	R 200	NRSA02J-474X	MG RESISTOR	R 200	MG RESISTOR	4.70K 5% 1/10W
Q	323	2SC2412K/RS/-X	CHIP TRANSISTOR		R 201	NRSA02J-222X	MG RESISTOR	2.2K 5% 1/10W	R 202	NRSA02J-222X	MG RESISTOR	R 202	MG RESISTOR	2.2K 5% 1/10W
R	102	NRSA02J-102X	MG RESISTOR	1.0K 5% 1/10W	R 203	NRSA02J-183X	MG RESISTOR	1.8K 5% 1/10W	R 204	NRSA02J-183X	MG RESISTOR	R 204	MG RESISTOR	5K 5% 1/10W
R	103	NRSA02J-183X	MG RESISTOR	1.8K 5% 1/10W	R 205	NRSA02J-183X	MG RESISTOR	1.8K 5% 1/10W	R 206	NRSA02J-183X	MG RESISTOR	R 206	MG RESISTOR	5K 5% 1/10W

## ■ Electrical Parts List (Cassette Mechanism Switch Board)

REF.	PARTS NO.	PARTS NAME	SUFFIX	REMARKS	BLOCK NO. 06111111
R 355	NRS102J-222X	MG RESISTOR	2.2K 5% 1/10W		
R 356	NRS102J-392X	MG RESISTOR	3.9K 5% 1/10W		
R 358	NRS102J-222X	MG RESISTOR	2.2K 5% 1/10W		
R 359	NRS102J-222X	MG RESISTOR	2.2K 5% 1/10W		
R 361	NRS102J-222X	MG RESISTOR	2.2K 5% 1/10W		
R 362	NRS102J-123X	MG RESISTOR	12K 5% 1/10W		
R 363	NRS102J-183X	MG RESISTOR	18K 5% 1/10W		
R 364	NRS102J-433X	MG RESISTOR	43K 5% 1/10W		
R 365	NRS102J-203X	MG RESISTOR	20K 5% 1/10W		
R 366	NRS102J-123X	MG RESISTOR	12K 5% 1/10W		
R 368	NRS102J-391X	MG RESISTOR	1.0K 5% 1/10W		
R 369	NRS102J-391X	MG RESISTOR	390 5% 1/10W		
R 371	NRS101J-222X	MG RESISTOR	2.2K 5% 1/8W		
R 374	NRS102J-912X	MG RESISTOR	9.1K 5% 1/10W		
R 375	NRS101J-683X	MG RESISTOR	68K 5% 1/10W		
VR101	QVP0008-5032	SEMICONDUCTOR	6.8 5% 1/BW		
VR201	QVP0008-5032	SEMICONDUCTOR			
VR301	QVP0008-1032	SEMICONDUCTOR			
WIRE	VW3304-10A3K	FLAT WIRE			

REF.	PARTS NO.	PARTS NAME	SUFFIX	REMARKS	BLOCK NO. 07111111
CN	QGB2011L1-10	TOP PLUG ASSY			
D	1 ISR139-100-12	SI DIODE			
IC	1 SQ-105F3-BB,C	PHOTO SENSER			
P	1 QNZ20104-001	POST PIN			
SW	2 QSW0832-001	CASSETTE SWITCH TAPE			
SW	4 QSW0832-001	CASSETTE SWITCH			
SW	6 QSW0507-001	SWITCH			


Electrical Parts List (Cassette Mechanism Switch Board)

REF.	PARTS NO.	PARTS NAME	REMARKS	BLOCK NO. SUFFIX
CN 1	QGB20111-10	TOP PLUG ASSY		
D 1	1SR139-100-T2	SI DIODE		
I C 1	SG-105F3-BB-C	PHOTO SENSER		
P 1	GN20104-001	POST PIN		
SW 1	QSW0832-001	CASSETTE SWITCH R.REC		
SW 2	QSW0832-001	CASSETTE SWITCH TAPE		
SW 4	QSW0832-001	CASSETTE SWITCH ZOU		
SW 5	QSW0832-001	CASSETTE SWITCH F.REC		
SW 6	QSW0507-001	CASSETTE SWITCH		

## Packing Materials and Accessories Parts List

Block No.  5  M  M  
 Block No.  M  6  M  M

(MX-J55R)

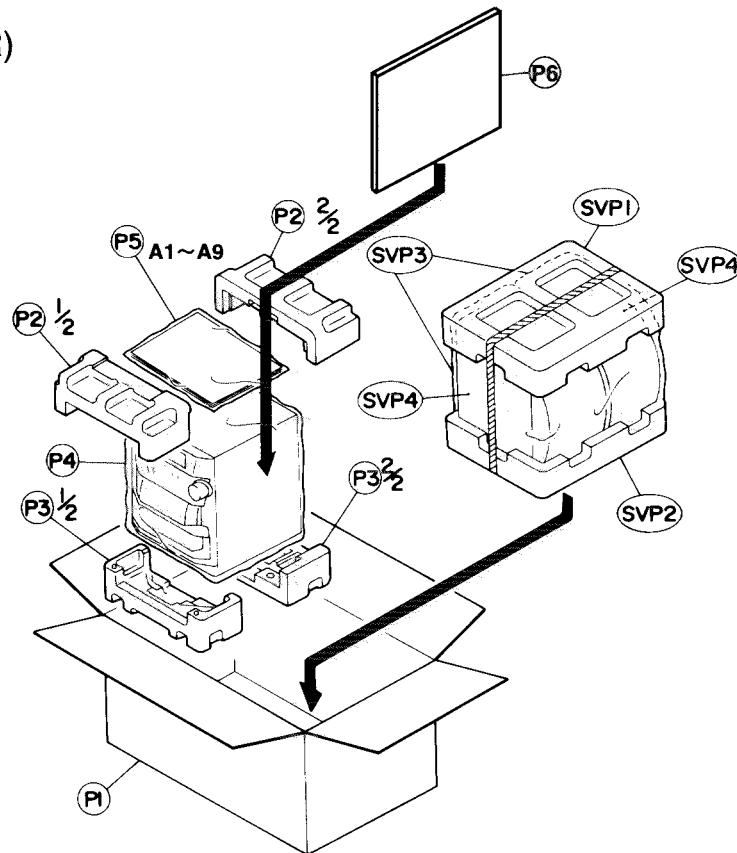

6

5


4

3

2

1

(CA-MXJ55R/MXJ530R)

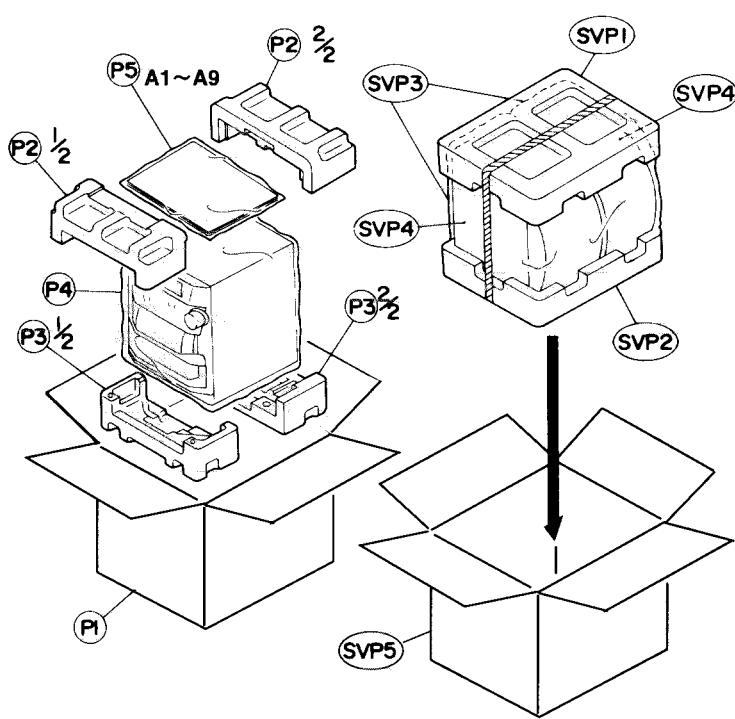

A

B

C

D

E

## ■ Packing Parts List

Block No.M5MM

▲	Item	Parts Number	Parts Name	Q'ty	Description	Area
P1	GV20036-013A	PACKING CASE		1	MX-J55R	
	GV20041-005A	PACKING CASE		1	CA-MXJ55R	
	GV20041-006A	PACKING CASE		1	CA-MXJ530R	
P2	GV10016-003A	UPPER CUSHION		1	MX-J55R	
	GV10018-002A	UPPER CUSHION		1	CA-MXJ55R/MXJ530R	
P3	GV10017-002A	BOTTOM CUSHION		1	MX-J55R	
	GV10019-002A	BOTTOM CUSHION		1	CA-MXJ55R/MXJ530R	
P4	QPC06506315P	POLY BAG		1		
P5	QPC02503515P	POLY BAG		1		
P6	GV40047-001A	CORRUGATED		1	MX-J55R	
SVP 1	720-TSPJ55-00	SPEAKER CUSHION(UPPER)		1	MX-J55R/CA-MXJ55R	
	720-TMXJ70-00	SPEAKER CUSHION(UPPER)		1	CA-MXJ530R	
SVP 2	720-BSPJ55-00	SPEAKER CUSHION(BOTTOM)		1	MX-J55R/CA-MXJ55R	
	720-BMXJ70-00	SPEAKER CUSHION(BOTTOM)		1	CA-MXJ530R	
SVP 3	700-120034-20	POLY BAG		2		
SVP 5	GV20036-010A	SPEAKER PACKING CASE		1	CA-MXJ55R	
	GV20036-011A	SPEAKER PACKING CASE		1	CA-MXJ530R	

## ■ Accessories Parts List

Block No.M6MM

▲	Item	Parts Number	Parts Name	Q'ty	Description	Area
A1	GVT0012-006A	INSTRUCTION BOOK		1	CA-MXJ55R/MXJ530R	E
	GVT0012-007A	INSTRUCTION BOOK		1	CA-MXJ55R/MXJ530R	EN
	GVT0012-008A	INSTRUCTION BOOK		1	CA-MXJ55R/MXJ530R	B
	GVT0012-009A	INSTRUCTION BOOK		1	CA-MXJ55R/MXJ530R	EV
	GVT0012-010A	INSTRUCTION BOOK		1	MX-J55R	EE
A2	EWP503-001	ANTENNA WIRE		1		
A3	BT-54008-2	WARRANTY CARD		1		B,E,EN
A4	E43486-340A	SAFETY SHEET		1		B
A5	VNA3000-202	REGISTER CARD		1		B
A6	BT-54012-1	W.CARD		1		EE,EV
A7	RM-SMXJ55R	WIRE-LESS REMOTE CONTROL		1		
A8	-----	BATTERY		1		
A9	QAL0014-001	LOOP ANTENNA		1		
SVP 4	MXJ50K-SPBOX-L	SPEAKER BOX(L)		1	MX-J55R/CA-MXJ55R	
	MXJ50K-SPBOX-R	SPEAKER BOX(R)		1	MX-J55R/CA-MXJ55R	
	MXJ56K-SPBOX-L	SPEAKER BOX(L)		1	CA-MXJ530R	
	MXJ56K-SPBOX-R	SPEAKER BOX(R)		1	CA-MXJ530R	

**CA-MXJ55R/CA-MXJ530R**

**JVC**

VICTOR COMPANY OF JAPAN, LIMITED  
AUDIO DIVISION, 10-1, 1Chome, Ohwatari-machi, maebashi-city, 371-8543, Japan

No.20759

 Printed in Japan  
9904(O)