
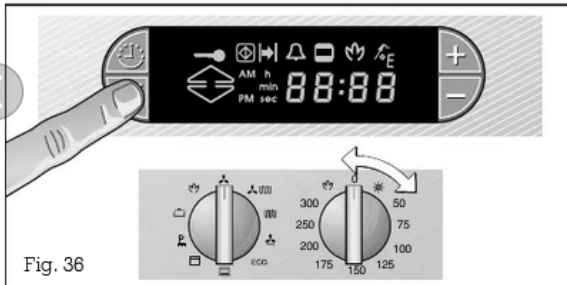


### 3.8 Special functions

#### Child lock

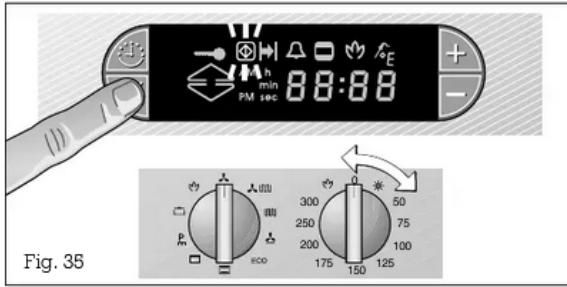

The child lock prevents inadvertent activation of the oven.

#### Proceed as follows:

##### Switching on:

- Turn the "Temperature" control knob to any position on the right.
- Press the ✓ (Confirmation) key and keep it pressed.
- Turn the "Temperature" control knob to 0.

The ☹ symbol (Child lock) appears on the display.

##### Switching off:

- Press the ✓ (Confirmation) key and keep it pressed.
- Turn the "Temperature" control knob to any position on the right.
- Release the ✓ (Confirmation) key.
- Press the "Temperature" control knob to 0.

The ☹ symbol (Child lock) disappears from the display.