


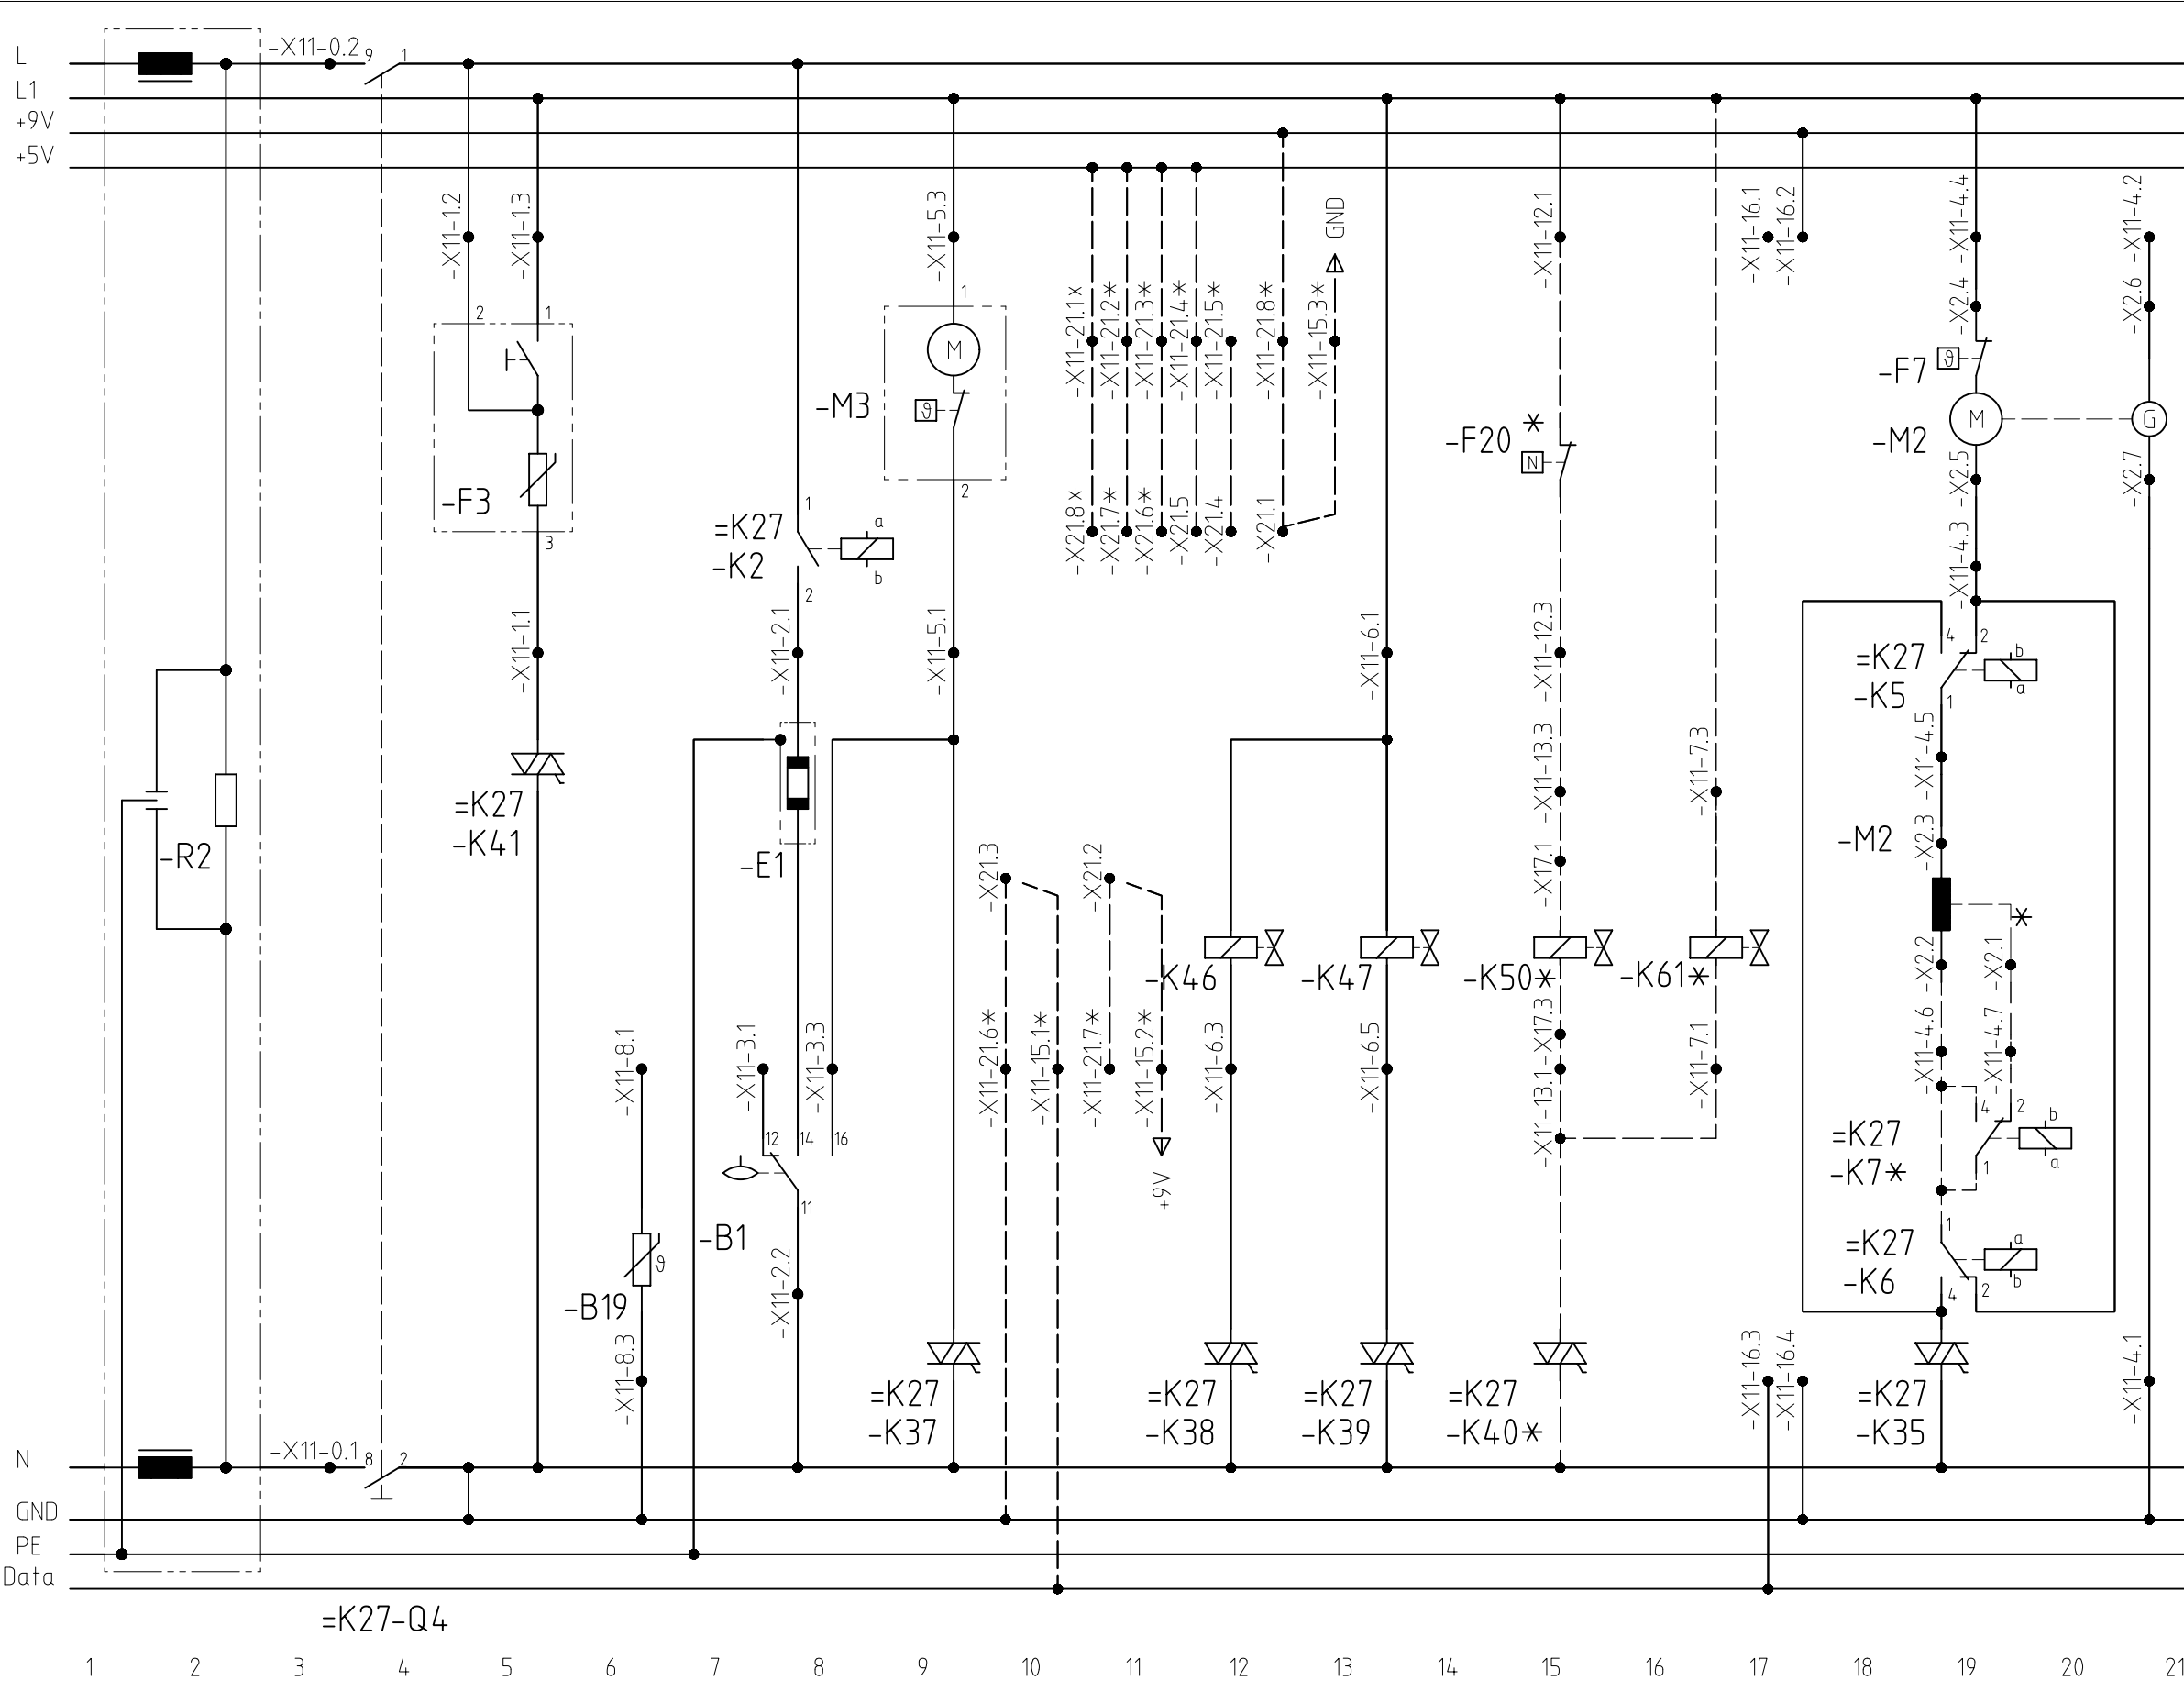

REF	Components	Path
-B1	Water controller	7-8
-B19	NTC-Temperature sensor washing	6
-E1	Heater	7-8
-F3	Switch door with lock	5
-F7	Circuit breaker motor	18
-F20	Switch-Aqua Stop	15
-K2	Relay heater	8-9
-K5	Relay reversing	19
-K6	Relay reversing	19
-K7	Relay field reversal	19-20
-K27	Module control	3,21
-K35	Triac-Motor control	19
-K37	Triac-Pump	10
-K38	Triac-Solenoid valve main wash	12
-K39	Triac-Solenoid valve prewash	13
-K40	Triac-Solenoid valve warm water/Aqua Stop	15
-K41	Triac-Lock locking	5
-K46	Solenoid valve main wash	12
-K47	Solenoid valve prewash	13
-K50	Solenoid valve/Aqua Stop	15
-K61	Solenoid valve warm water	17
-K64	Operating and display module	11,12
-M2	Washing and spinning motor	19,21
-M3	Motor pump	10
-Q4	Main switch	4
-R2	Interference suppression filters	1-3
-X2	Motor plug in connection	19,21
-X11-21	Control module plug in connection (8 pole)	10-12
-X11	Control module plug in connection	3,21
-X11-15	Control module plug in connection (3 pole)	10,11,13
-X17	Coupling-Aqua Stop	15
-X21	Plug in operating module	10-12

* wahlweise optional