

Service
Service
Service



Service Manual

TABLE OF CONTENTS

	Page
Location Boards / System info.....	1-2
Technical Specification	1-3
Service Tool / Measurement setup / Safety	1-4
Warning / Handling Chip components	1-5
Abbreviations	1-6
Instruction for Use	2-1
Wiring diagram	2-18
Block diagram	3
Service Test program	4
Dismantling hints / Service positions	5
Front Board	6
Tuner 95 diagram	7A
Dolby Pro Logic Board	8
Mains Board	9
Mono Board	10
Exploded view	11
Partslist Exploded view	12
Electrical partslist Mono Board	13

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by MD 0009 Service Audio Printed in the Netherlands Subject to modification


3104 215 50040

PCS 102 412



PHILIPS

LOCATION OF PRINTED CIRCUIT BOARDS

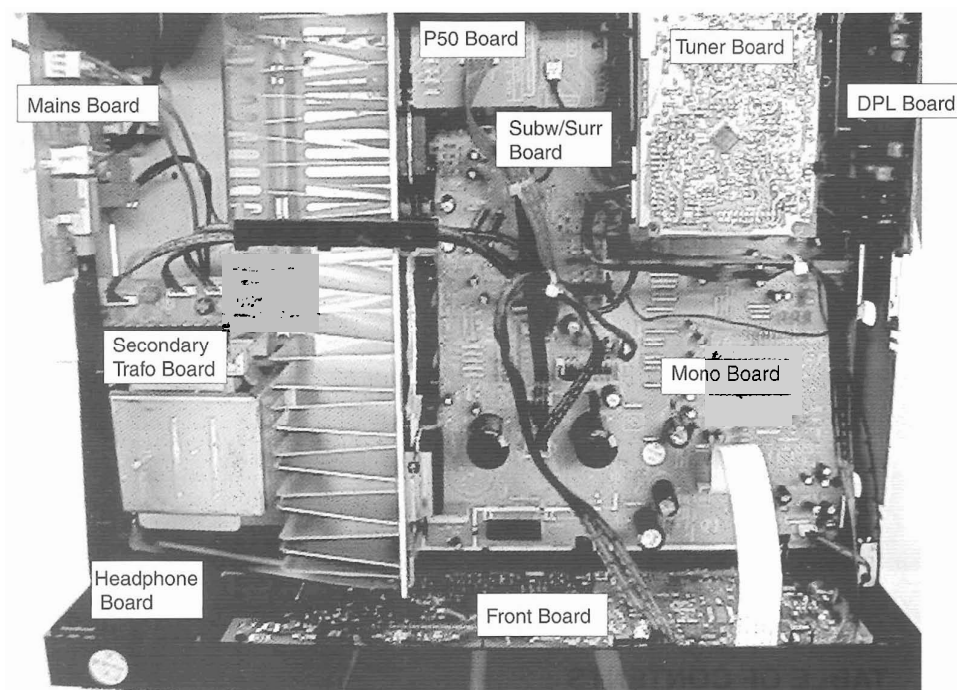

SYSTEM INFORMATION

Receiver	Front speaker	Center speaker	Surround Speaker
MX740/22 include :			
FR740/00	2 x Home Cinema Speaker 60W	Home Cinema Center Speaker 60W	2 x Home Cinema Surround Speaker 60W

SPECIFICATION FR740

General

Mains voltage	: 230V
Mains frequency	: 50Hz
Power consumption	: ≤ 2W at stby
Dimension	: 138x435x350 mm
Remote control	: RC2526

Amplifier

Output power	
Stereo mode (L+R)	: 2x60W DIN (1kHz, 0,7%THD, 6Ω)
Surround mode	
L+R	: 2x60W (1kHz, 0,7%THD, 6Ω)
Center	: 60W (1kHz, 0,7%THD, 6Ω)
Surround Left+Right	: 2x60W (1kHz, 0,7%THD, 6Ω)

Distortion (5W)	
1kHz	: ≤ 0,05%
40Hz - 20kHz:	: ≤ 0.2%

Headphone	: 6,3mm stereo jack with switch
Output level	: 3V EMF, 60Ω

Crosstalk between source	—1kHz	: ≤ -65dB
(1W)	250Hz – 10kHz	: ≤ -60dB

Crosstalk between channels	-1kHz	: ≤ -55dB
(1W)	250Hz – 10kHz	: ≤ -50dB

Frequency response	: ≤ 10Hz – ≥30kHz (-1dB)
--------------------	--------------------------

Power stage protection	: Shortcircuit
	: DC (Vout ≥10V) for ±1sec
Temperature	: Transformer (≥140° Celcius)
	: Heatsink (≥140° Celcius)

Audio Selector

Input sensitivity	
CD	: 250mV impedance ≥ 47kΩ
CDR/TAPE	: 250mV impedance ≥ 47kΩ
VCR	: 250mV impedance ≥ 47kΩ
TV	: 250mV impedance ≥ 47kΩ
6 CH / DVD	: 250mV impedance ≥ 47kΩ

Output level	
CDR/TAPE	: 250mV impedance ≤ 1kΩ
VCR	: 250mV impedance ≤ 1kΩ

Output level (variable)	
Center pre-out	: 800mV impedance ≤ 1kΩ
Subwoofer pre-out	: 800mV impedance ≤ 1kΩ

Tone controle

Loudness	
(volume ≤ -20dB Ref: 1kHz=0dB)	: 100Hz +6 dB
	: 10kHz +2,5 dB

Tone control (Ref: 1kHz=0dB)	
	: Bass 100Hz -9dB →+9dB
	: Treble 10kHz -9dB →+9dB

Hall	: Lt , Rt into Left, Surround, Right
------	--------------------------------------

DSC settings		100Hz	1kHz	10kHz
Personal	dB	0	0	0
Movie	dB	+ 4	+2	+4
Speech	dB	- 4	+1	- 2
Music	dB	+ 4	- 1	+2
Multimedia	dB	+ 7	+3	+6

Dolby Pro Logic

Stereo bypass from	: Lt , Rt into Left, Right
Dolby Pro Logic decoding	: Lt , Rt into Left, Right, Center, Surround
Dolby 3 Stereo decoding	: Lt , Rt into Left, Center, Right
Center phantom decoding	: Lt , Rt into Left, Right, Surround (Phantom = no center speaker)
Surround delay	: variable (15 - 30 msec)
Center mode	: Large, smal, phantom
Testtone	

Tuner - (Tuner95)

RDS	: Only in /00
-----	---------------

FM	
Tuning range	: 87.5 – 108MHz
Grid	: 50kHz
IF frequency	: 10.7MHz ±25kHz
Aerial input	: 75 Ω coaxial
Sensitivity at 26dB S/N	: ≤ 2μV
Selectivity at 300kHz	: ≥ 55dB
Image rejection	: ≥ 100dB
Distortion at RF=1mV,dev.75kHz	: ≤ 0,8%
-3dB Limiting point	: ≤ 2μV
Crosstalk at RF=1mV,dev.40kHz	: ≥35dB

MW	
Tuning range	: 531 - 1602kHz
Grid	: 9kHz
IF frequency	: 450kHz ±1kHz
Aerial input	: Frame aerial
Sensitivity at 26dB S/N	: ≤ 1,5mV/m
Selectivity at 9kHz	: ≥ 23dB
IF rejection	: ≥ 50dB
Image rejection	: ≥ 33dB
Distortion at RF=50mV,m=80%	: ≤ 3%


LW only in /00	
Tuning range	: 153 - 279kHz
Grid	: 3kHz
IF frequency	: 450kHz ±1kHz
Aerial input	: Frame aerial
Sensitivity at 26dB S/N	: ≤ 2,8mV/m
Selectivity at 9kHz	: ≥ 26dB
IF rejection	: ≥ 100dB
Image rejection	: ≥ 45dB
Distortion at RF=50mV,m=80%	: ≤ 3%dB

SERVICE TOOL

Dolby Prologic Test Disc.....4822 395 10216


MEASUREMENT SETUP

Tuner FM

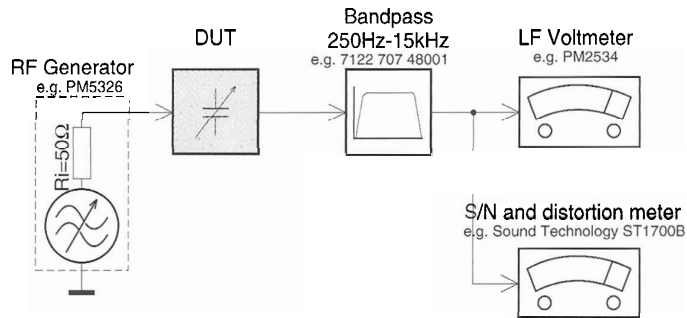

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).

Tuner AM (MW,LW)

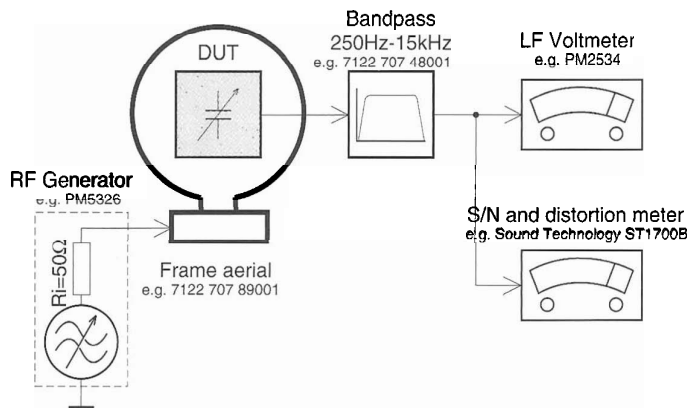

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).

SAFETY

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Safety components are marked by the symbol

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

Les composants de sécurité sont marqués

SAFETY



(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden.

Sicherheitsbauteile sind durch das Symbol

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool

(I)

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

Componenti di sicurezza sono marcati con

WARNING

(GB) WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enlever le braceleterti d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Sorgen Sie dafür, daß sie im Reparaturfall über ein Puls-armband mit Widerstand mit dem Massepotential des Gerätes verbunden sind. Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

ESD



(NL) WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.






(GB) AVAILABLE ESD PROTECTION EQUIPMENT :

anti-static table mat large 1200x650x1.25mm
small 600x650x1.25mm

anti-static wristband
connection box (3 press stud connections, 1M)
extendible cable (2m, 2M , to connect wristband to connection box)
connecting cable (3m, 2M , to connect table mat to connection box)
earth cable (1M , to connect any product to mat or to connection box)
KIT ESD3 (combining all 6 prior products - small table mat)
wristband tester

4822 466 10953
4822 466 10958
4822 395 10223
4822 320 11307
4822 320 11305
4822 320 11306
4822 320 11308
4822 310 10671
4822 344 13999

HANDLING CHIP COMPONENTS

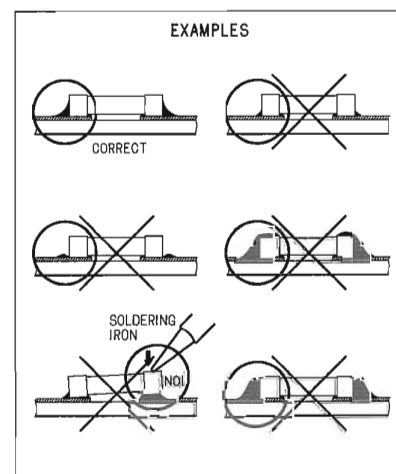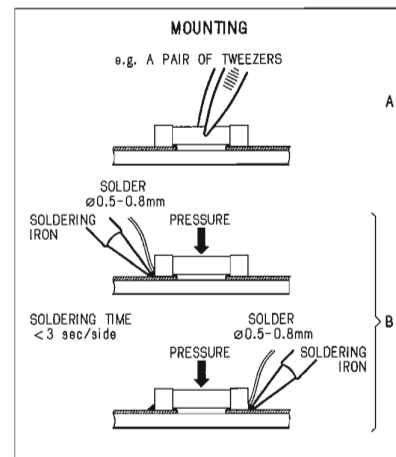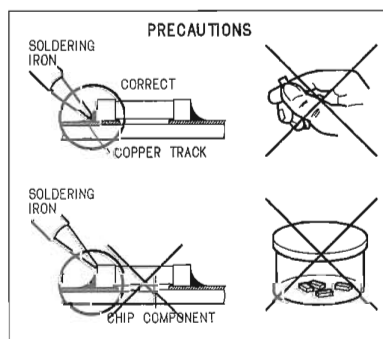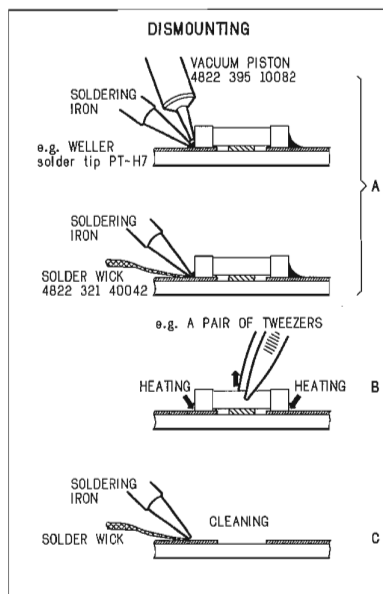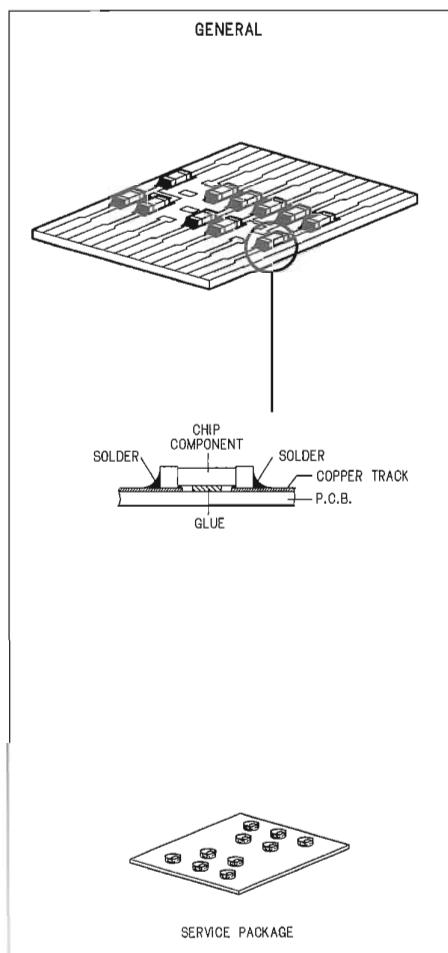

ABBREVIATIONS

A

ac 0VA	AC 0 Voltage
ac 10VB	AC 10 Voltage
ac 110VB	AC 110 Voltage
ac 120VB	AC 120 Voltage
ac gnd	AC ground
ac1	AC voltage 1
ac2	AC voltage 2
ac3	AC voltage 3
ac h1	AC high voltage 1
ac h2	AC high voltage 2
ac l1	AC low voltage 1
ac l2	AC low voltage 2
amp lr on	Amplifier Left - Right On
amp mute lr	Amplifier mute Left - Right
amp mute c s	Amplifier mute center surround
amp mute c s sub	Amplifier mute center surround subwoofer
amp pd	Amplifier power down
amp prot	Amplifier protection
amp s on	Amplifier surround On
amp stby	Amplifier Standby
av gnd	Audio ground
av l	Audio Left
av r	Audio Right

D

d gnd	Dolby ground
dd req	Dolby decoder request
dpl c out	Dolbyprologic Center out
dpl clk	Dolbyprologic clock
dpl gnd	Dolbyprologic ground
dpl l in	Dolbyprologic Left in
dpl l out	Dolbyprologic Left out
dpl r in	Dolbyprologic Right in
dpl r out	Dolbyprologic Right out
dpl s	Dolbyprologic surround
dpl sub	Dolbyprologic subwoofer

F

f1	Filament 1
f2	Filament 2
fmute	Fast mute

G

gnd d	Ground digital
gnd s	Ground signal

H

hp gnd	Headphone ground
hp l	Headphone Left
hp on	Headphone On
hp r	Headphone Right
hst	Heatsink temperature

L

ls c	Loudspeaker Center
ls gnd	Loudspeaker ground
ls l	Loudspeaker Left
ls r	Loudspeaker Right

M

mfd	Mains failure detection
-----	-------------------------

P

p gnd	P50 ground
p p50	Cinema link P50 code

S

ss ce	Source selector chipenable
ss clk	Source selector clock
ss data	Source selector data
sofac scl	Sofac I ² C clock
sofac1 sda1	Sofac 1 I ² C data1
sofac2 sda2	Sofac 2 I ² C data2
surr pre-out	Surround pre-out
s gnd	Surround ground

T


tu clk	Tuner clock
tu da	Tuner data
tu en	Tuner enable
tu gnd	Tuner ground
tu l	Tuner Left
tu r	Tuner Right
tu rds	Tuner RDS
tu stereo	Tuner stereo

V

v gnd	Video ground
-------	--------------

INSTRUCTIONS FOR USE

CONTROLS

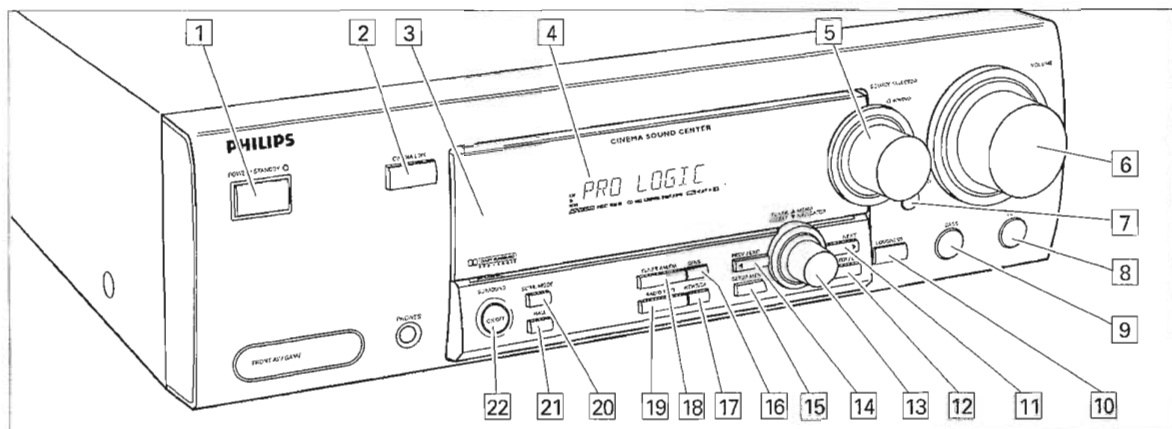

- 1 **POWER / STANDBY** Switches the receiver on and off.
- 2 **CINEMA LINK** Switches the system control bus between the receiver and the TV on and off.
- 3 Sensor for the infrared remote control.
- 4 Display
- 5 **SOURCE SELECTOR** Selects the different audio and video connectors.
- 6 **VOLUME** Increases and decreases the volume level.
- 7 **FRONT AV** Selects the FRONT AV / GAME input (FR 760 only).
- 8 **TREBLE** Adjusts the treble when used in combination with VOLUME.
- 9 **BASS** Adjusts the bass when used in combination with VOLUME.
- 10 **LOUDNESS** Switches LOUDNESS on and off.
- 11 **NEXT ►** TUNER: searches radio stations. MENU: switches to the next menu level.
- 12 **ENTER / OK** Confirms selected menu values.

13 **TUNER PRESET ◄ MENU NAVIGATOR**

TUNER: switches to the next and previous stored radio station.
MENU: moves upwards and downwards.


- 14 **◄ PREV. / EXIT** TUNER: searches radio stations. MENU: switches to the previous menu level.
- 15 **SETUP MENU** Switches the menu on and off.
- 16 **SENS.** Switches between low and high tuner sensitivity.
- 17 **NEWS/TA** Switches the RDS news and RDS traffic announcement on and off.
- 18 **TUNER AM/FM** Switches the wavebands of the tuner.
- 19 **RADIO TEXT** Scrolls through the different RDS information.
- 20 **SURR. MODE** Switches through the different speaker configurations.
- 21 **HALL** Switches HALL on and off.
- 22 **SURROUND ON/OFF** Switches between the last selected surround mode and stereo.

INSTRUCTIONS FOR USE

REMOTE CONTROL

Remote control usage

Open the battery compartment of the remote control and insert 2 alkaline batteries, type **AA** (R06, UM-3).

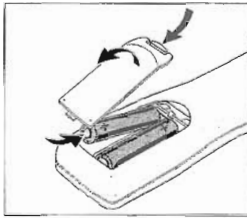

Remove batteries if they are flat or if the remote control is not going to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.


The buttons on the remote control work the same way as the corresponding ones on the receiver.

Additional appliances can only be controlled if they are working with the RC-5 and the RC-6 code system.

Important!

You have to press a source button for longer than 1 second to switch the sound source on the receiver. Pressing a source button for less than 1 second will only switch the remote control to use the commands for the selected product.

The remote control remains tuned to the selected source until another source button on the remote control is pressed. This enables you to operate additional sources (i. e. winding a tape) without changing the source on the receiver.

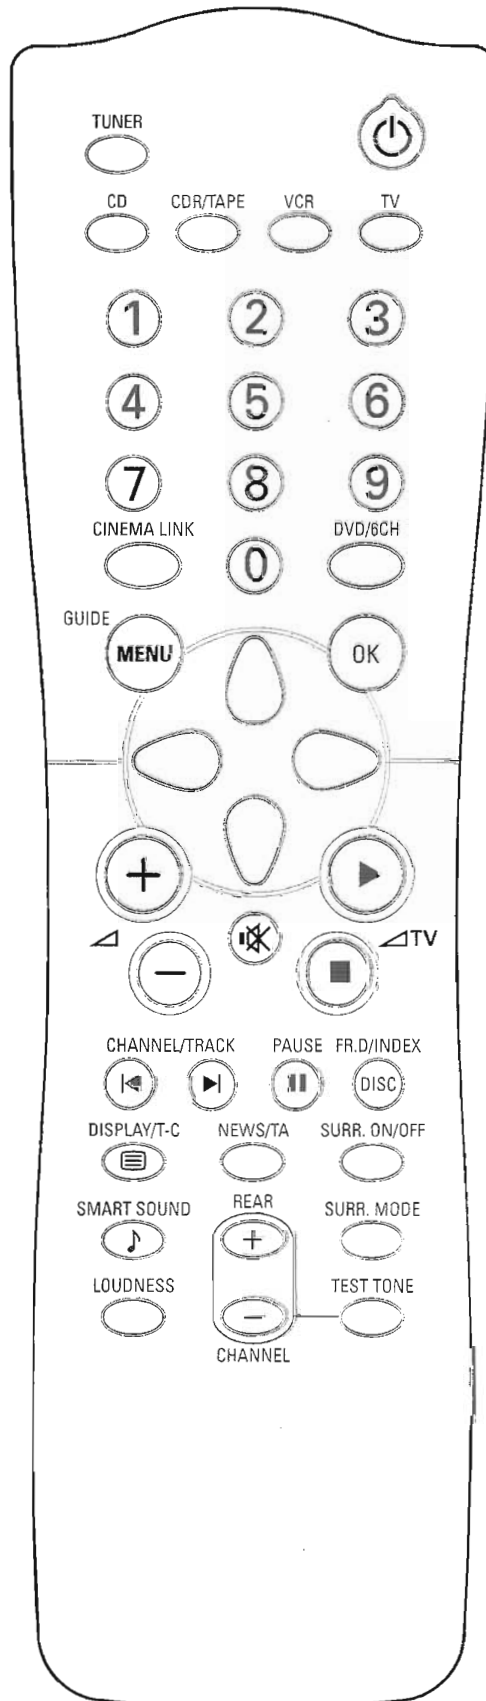

INSTRUCTIONS FOR USE


REMOTE CONTROL

Remote control buttons

-  Switches the receiver to standby.
 TUNER, CD, CDR/TAPE,
 TV, VCR, DVD/6CH Switches the remote control to the
 commands of the different products.
 Selects the sources if pressed longer
 than 1 second.
- 1-0 Keys in numbers for tracks, stations or
 frequencies. Numbers consisting of
 two figures must be keyed in within
 2 seconds.
- CINEMA LINK Switches the connection between the
 receiver and the TV on and off.
- MENU GUIDE** TUNER: Switches the receiver menu
 on and off.
 DVD, TV: Switches the DVD/TV menu
 on and off.
- OK Confirms menu options.
- Arrow buttons TUNER: Moves in the menus.
 Right/left arrows are tuning up/down.
 CD, CDR: Left/right arrows are
 searching backwards/forwards,
 up/down arrows are selecting the
 next/previous track.
- +  Increases the receiver volume.
-  Decreases the receiver volume.
-  Mutes the sound of the receiver.
-  Increases the TV volume.
 CD, CDR, VCR, DVD: Starts playback.
-  Decreases the TV volume.
 CD, CDR, VCR, DVD: Stops playback.
-  CHANNEL/TRACK Selects the previous preset tuner
 station.
 VCR: Rewinds the tape.
 CD, CDR, DVD: Selects the previous
 track.
 TV: Selects the previous channel.
-  CHANNEL/TRACK Selects the next preset tuner station.
 VCR: Fast forwards the tape.
 CD, CDR, DVD: Selects the next
 track.
 TV: Selects the next channel.
-  PAUSE CD, CDR, VCR, DVD: Pauses
 playback.
- DISC FR.D./INDEX CD-, CDR-, DVD-Changers:
 Switches to the next disc.
 TUNER: Switches to FREQUENCY
 DIRECT.
 VCR: Switches the index search on
 and off.
-  DISPLAY/T-C TUNER: Switches between station
 name, frequency and radio text.
 CD, CDR: Switches between the
 different time displays.
 TV: Switches teletext on and off.
 DVD: Switches between title and
 chapter.
- NEWS/TA Switches the functions NEWS and
 TRAFFIC ANNOUNCEMENT on and off.
- SURR. ON/OFF Switches SURROUND SOUND on and
 off.
-  SMART SOUND Scrolls through the different smart
 sounds.
- + / - REAR Increases/decreases the volume of the
 rear speakers. While test tone is on,
 the volume of the speakers you are
 hearing can be increased/decreased
 with these buttons.
- SURR. MODE Scrolls through the different surround
 modes.
- LOUDNESS Switches LOUDNESS on and off.
- TEST TONE Switches the test tone on and off.
 While test tone is on, the volume of
 the speakers you are hearing can be
 increased/decreased with
 + / - REAR.

INSTRUCTIONS FOR USE

CONNECTORS

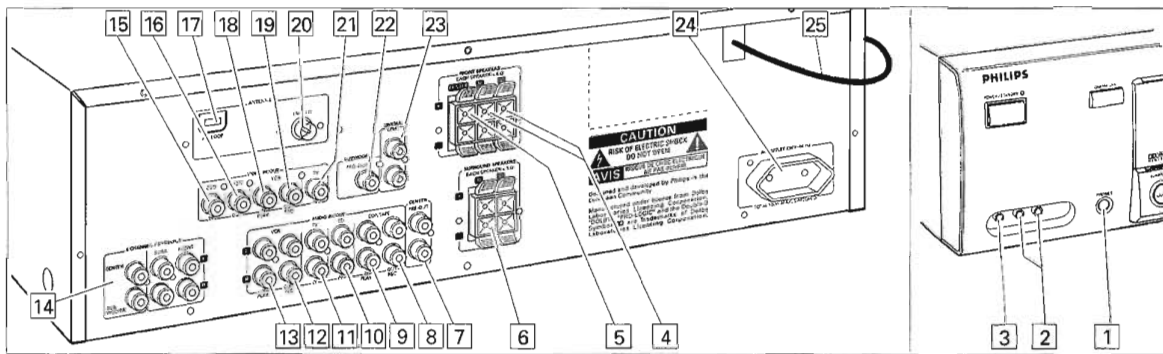

Connectors	Connectors name	Connect to:
6.3 mm headphone socket at the front	1 PHONES	A headphone with a 6.3 mm plug.
Audio and video inputs at the front (FR 760 only)	2 FRONT AV / GAME	Left and right audio out sockets of appliances such as video cameras and game consoles.
	3 FRONT AV / GAME	Video out sockets of appliances such as video cameras and game consoles.
FRONT SPEAKERS	4 R, L	Right and left front speaker.
	5 CENTER	Center speaker.
SURROUND SPEAKERS	6 R, L	Right and left surround speaker.
AUDIO IN/OUT	8 CDR/TAPE OUT	Input of a CD recorder or a tape deck.
	9 CDR/TAPE IN	Output of a CD recorder or a tape deck.
	10 CD IN	Output of a CD player.
	11 TV IN	Output of a TV.
	12 VCR OUT	Input of a video recorder.
	13 VCR IN	Output of a video recorder.
6-channel input	14 6 CHANNEL / DVD INPUT	6-channel output of appliances such as DVD or Laserdisc players.
VIDEO IN/OUT (FR 760 only)	15 DVD IN	Output of a DVD player.
	16 MON OUT	Input of a monitor (e. g. the TV).
	18 VCR IN	Output of a video recorder.
	19 VCR OUT	Input of a video recorder (for recording).
	21 TV IN	Output of a TV.
Antenna connectors	17 AM LOOP	Frame antenna supplied.
	20 FM 75 Ω	Wire antenna supplied or exterior antenna.
Preamplified outputs	7 CENTER PRE-OUT	Input of a TV when it is used as the center speaker (only possible when the CINEMA LINK system bus is connected).
	22 SUBWOOFER PRE-OUT	Input of a powered subwoofer.
System control bus	23 CINEMA LINK	System control bus sockets of a Philips TV with CINEMA LINK.
Mains outlet	24 AC OUTLET	Supplies same voltage as mains. Up to 100 W total permitted load.
Mains lead	25	After all other connections have been made , connect the mains lead to the wall socket.

Diagram illustrating the connection of various audio components to the back of a Pioneer receiver:


- DVD PLAYER (6 Channel Output)** is connected to the **6-CHANNEL INPUT**.
- POWERED SUBWOOFER** is connected to the **SUBWOOFER** output.
- VCR** is connected to the **VCR AUDIO OUT** and **AUDIO IN**.
- SAT RECEIVER** is connected to the **SAT IN**.
- CD RECORDER** is connected to the **CD RECORDER IN** and **OUT**.
- CD PLAYER** is connected to the **CD PLAYER** input.

The receiver also features a **TV/SAT** input, **VIDEO INPUT**, and a **4-CHANNEL INPUT**. A **CAUTION** label is present on the right side of the receiver.


INSTRUCTIONS FOR USE

CONNECTIONS

System control bus, CINEMA LINK

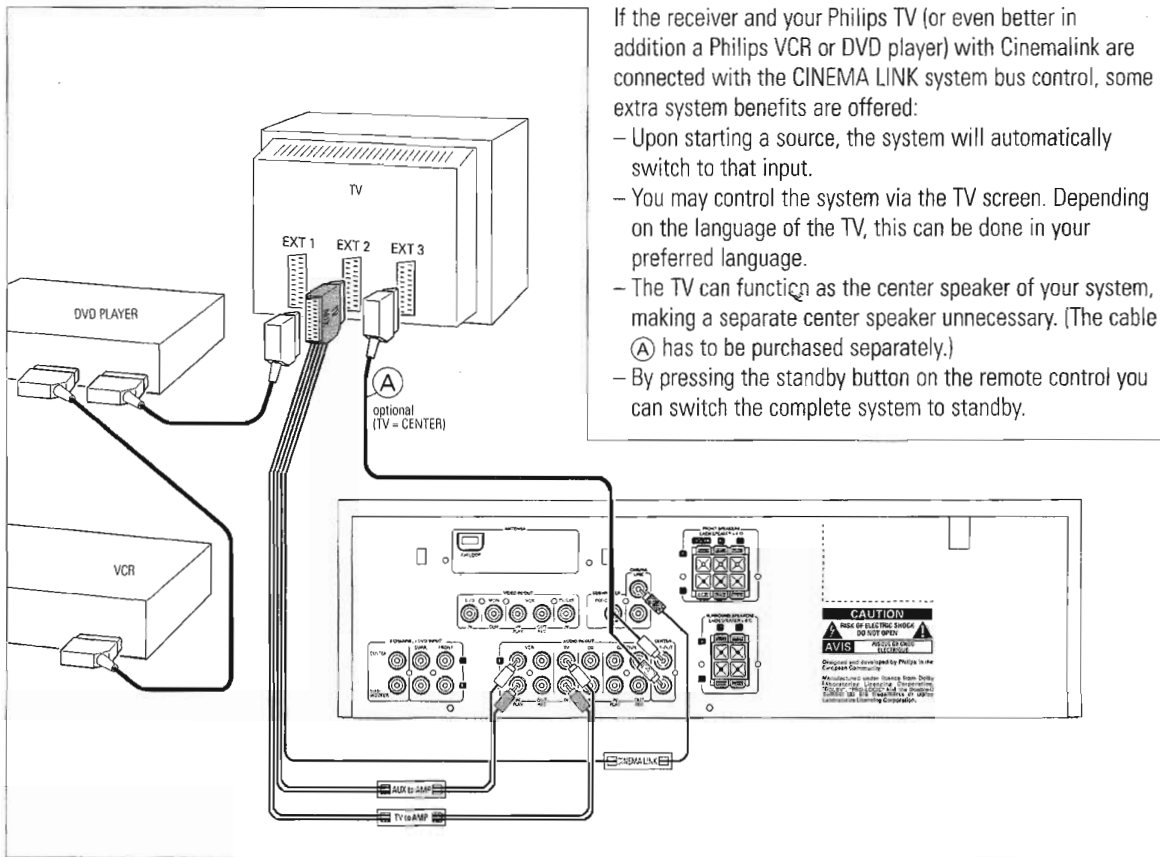

Video connections (FR 760 only)

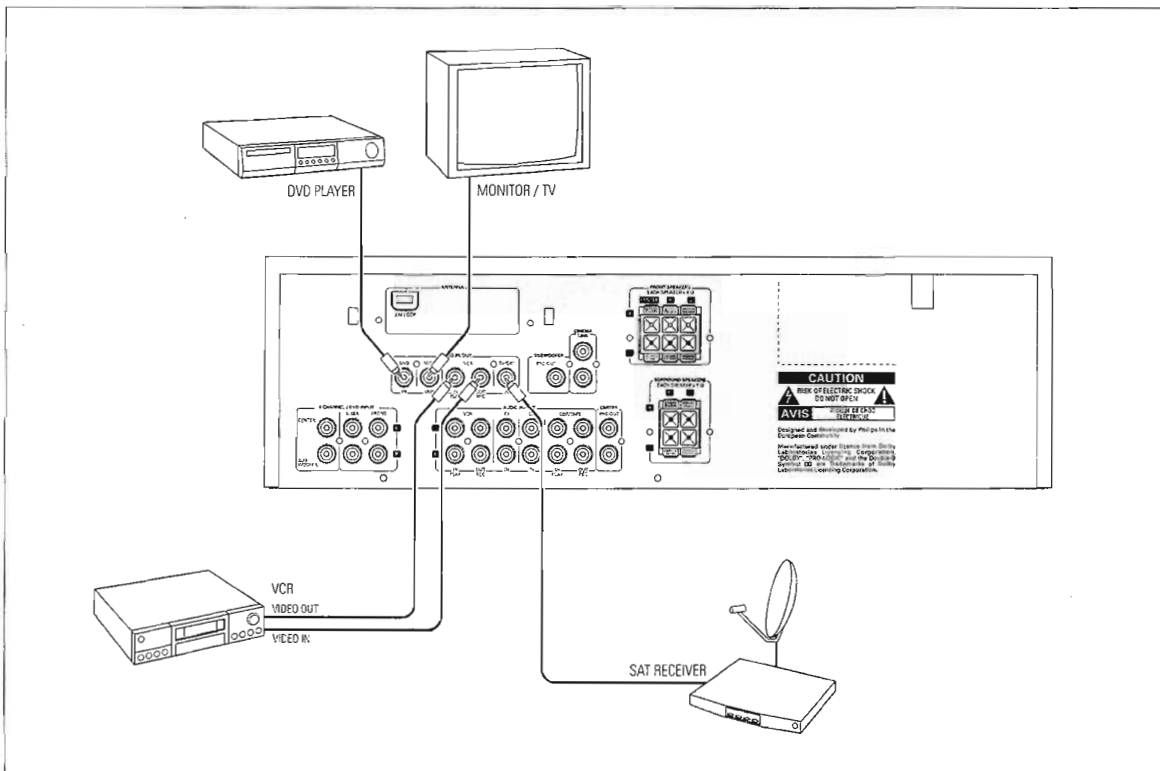

INSTRUCTIONS FOR USE

CONNECTIONS

Mains

The type plate is located on the rear of the receiver.


- 1 Check whether the mains voltage as shown on the type plate corresponds to your local mains voltage. If it does not, consult your dealer or service organization.
- 2 Connect the mains cable to the wall socket.

To disconnect the set from the mains completely, remove the mains plug from the wall socket.

For users in the U. K.: please follow the instructions on page 2.

Speaker connections

The speaker connections on the receiver are click-fit connectors. Use them as shown below.

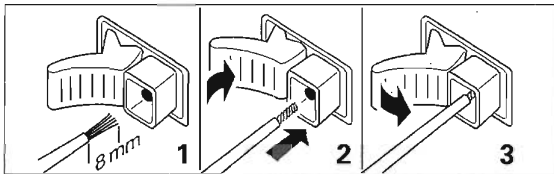

- 1 Always connect the coloured (or marked) wire to the coloured terminal and the black (or unmarked) wire to the black terminal.
- 2 Connect:
 - Left front speaker to L (red and black)
 - Right front speaker to R (red and black)
 - Center speaker to CENTER (blue and black)
 - Left surround speaker to SURROUND L (grey and black)
 - Right surround speaker to SURROUND R (grey and black)


TV as the center speaker

You may use your Philips TV with CINEMA LINK as the center speaker. For TVs with a scart connector an additional audio cinch-to-scart cable is needed. For TV's with cinch connectors additional cinch cables are needed. Look into the instruction manual of your TV on how to use it as the center speaker.

Antenna connections**AM (MW) antenna**


The loop antenna supplied is for indoor use only. Position the antenna as far away as possible from the receiver, the TV, the cables, a DVD player, a VCR and other radiation sources.

- 1 Fit the plug of the frame antenna to AM LOOP as shown below.
- 2 Position the antenna as far away as possible from radiation sources.
- 3 Turn the antenna for optimum reception.

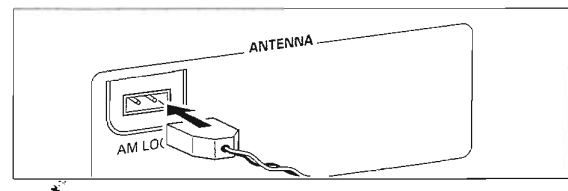
**FM antenna**

The wire antenna supplied can only be used to receive nearby stations. For better reception we recommend using a cable antenna system or an outdoor antenna.

- 1 Fit the supplied wire antenna to FM 75 Ω as shown below.
 - 2 Move the antenna in different positions for optimum reception.
- If you are using a cable antenna system or an outdoor antenna, fit the antenna plug to FM 75 Ω instead of the wire antenna.

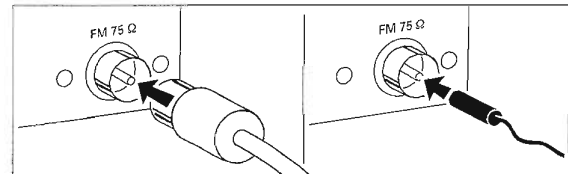
**FRONT AV / GAME cap (FR 760 only)**

- To remove the FRONT AV / GAME cap, press on the right side of the cap.
- Insert the cap from below to close the compartment.

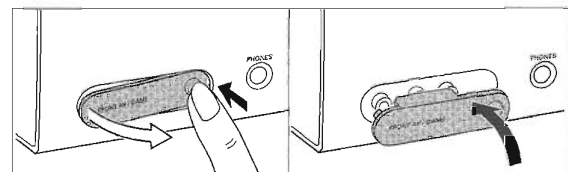

INSTRUCTIONS FOR USE

SYSTEM SETUP

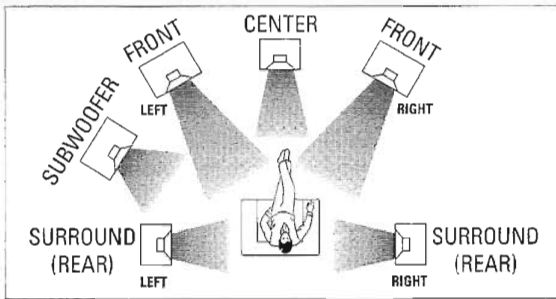

Positioning of the speakers

General hints for positioning

Avoid positioning the speakers in a corner or on the floor as this will boost the bass tones too much. Placing the speakers behind curtains, furniture, etc. will reduce the treble response. The listener should always be able to "see" the speakers.

Each room has different acoustic characteristics and the positioning possibilities are often limited. You can find the best position for your speakers by referring to the picture above.

As a minimum we recommend 5 speakers (2 front, a center, 2 surround) for good surround sound. It is possible to reproduce some kind of surround sound with fewer speakers. This is done by redirecting the signals which are foreseen for the missing speakers to the existing ones. See "Menus" on how to set up the receiver correctly for the number and size of the speakers used.

Positioning the front speakers

The front speakers should be placed right and left in front of the listening position like usual stereo speakers.

Positioning the center speaker

The center speaker should be placed in the center between the two front speakers, e. g. underneath or on top of the TV. The best height for the center speaker is the height of the listener's ears (while seated).

Positioning the surround speakers

The surround speakers should face each other and be in line with, or slightly behind the listener.

Positioning the subwoofer

A subwoofer can be used to enhance the bass performance of your system dramatically. The subwoofer can be positioned anywhere in the room, because it is not possible to locate the source of deep tones. Nevertheless, you should not place the subwoofer in the middle of a room, since the bass could be severely weakened. Do not place any object on the subwoofer.

Speaker setup and testing

The relative volume of the speakers must be adjusted for optimal surround sound. You should be at your usual listening position when adjusting the speaker volume. See "Receiver menus" on how to set up the receiver for the used speakers. Ideally, the volume in the listening position should be the same from all speakers.

- 1 Press POWER / STANDBY to switch on the receiver.
- 2 Press TEST TONE on the remote control.
→ A test tone coming from the different speakers is heard.
- 3 Press + / - REAR on the remote control to increase/decrease the volume of the actual speaker.
- 4 Press TEST TONE on the remote control.
→ The test tone stops.

Note: If you are not completely satisfied with the volume settings, we recommend making minor adjustments to them during surround sound playback.

Power handling

If the receiver is used at very high power, it can produce distortions which may seriously damage your speakers. If distortions occur, reduce the volume and the tone controls to a level where the sound is acceptable again.

To avoid overheating of the set a safety circuit has been built in. Therefore your set may disconnect under extreme conditions. If this happens, switch the set off and let it cool down before reusing it.

Headphones

Connecting headphones to PHONES will switch off the speakers. The receiver switches to STEREO and surround sound will be reduced to a stereo signal which is reproducible by standard headphones.

Disconnecting the headphones switches on the speakers again. If you wish to enjoy surround sound again, switch the receiver back to surround sound.

INSTRUCTIONS FOR USE

DISPLAY

Display


The display of the receiver is divided into 3 sections, which are to be used for the following:

Menu indication



These signs show you if the menu is on or off and indicate in which direction you may move.

- MENU** Menu is on.
- ◀** You may move backwards to the previous menu topic using **◀ PREV. / EXIT** ("left" key on the remote control).
- ▲** You may move up in an option list using **▲ MENU NAVIGATOR** ("up" key on the remote control).
- ▼** You may move down in an option list using **▼ MENU NAVIGATOR** ("down" key on the remote control).
- ▶** You may move forward to the next menu topic using **▶ NEXT** ("right" key on the remote control).
- OK** You may confirm the displayed value.

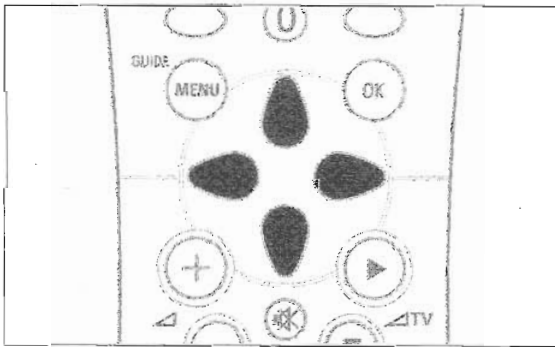


Status lights



Signs showing you various settings and information about the status of the receiver.

- PRESET** Tuner is tuned to a preset radio station.
- SENS HI** Tuner is switched to high sensitivity.
- SENS LO** Tuner is switched to low sensitivity.
- CINEMA LINK ON** CINEMA LINK is active.
- ◯** An FM station is being received in stereo.
- SMART SOUND** One of the preset sound settings of the receiver is being used.
- RDS** An RDS station is being received.
- EON** An RDS station with EON is being received.
- HALL** HALL effect is on.
- TA** RDS traffic announcement is on.
- NEWS** RDS news announcement is on.
- LOUDNESS** LOUDNESS is switched on.

Information area



This area is used for feedback of the receiver, tuner frequencies, menu options, values and scrolling text messages.

INSTRUCTIONS FOR USE

MENUS

Receiver menu

The receiver is equipped with a menu system. The menu is used for the setup of the receiver. The different menu options are related to each other in a logical way. Let's assume you have no center speaker connected, and therefore switched **CENTER LS** to **NO**. If you try to use **VOL CENTER**, a message will be scrolled that this is not possible (**INSTALL CENTER SPEAKER**).

The menu always works the same way. Arrows in the display show you the possible moving directions.

1 Press **SETUP MENU**.

→ **MENU**, and * **VOL BAL** is displayed.

• **You can exit the menu at any time by pressing SETUP MENU.**

2 Turn **◆** **MENU NAVIGATOR** until the desired option (or a value) is displayed.

3 Press **NEXT ►** to choose the displayed option (or **ENTER / OK** to confirm a value).

- You can leave any option (values remain unchanged) by pressing **◀ PREV. / EXIT**.

Menu structure* **VOL BAL**

Adjusts the relative volume balance between the connected speakers.

— **TEST TONE**

Test tone: on/off

— **VOL FR-L**

Volume front left speaker: -50...+50

— **VOL FR-R**

Volume front right speaker: -50...+50

— **VOL CENTER**

Volume center speaker: -50...+50

— **VOL REAR-L**

Volume rear left speaker: -50...+50

— **VOL REAR-R**

Volume rear right speaker: -50...+50

— **VOL SUBW**

Volume subwoofer: -50...+50

* **LS SETUP**

Selects the used speakers. Chooses the speaker sizes of the used speakers, for optimal sound reproduction. The distance between the usual listening position and the speakers defines the delay time for the surround sound.

Note: When using the 6 CHANNEL / DVD IN input, these values cannot be changed.

— **CENTER LS**

Center speaker present: yes/no

— **REAR LS**

Rear speakers present: yes/no

— **CENTR SIZE**

Center speaker: small/large

— **DIST L/R**

Distance to front speakers: 1...10 m

— **DIST REAR**

Distance to rear speakers: 1...10 m

* **TUNER**

Setup for preset radio stations (see "TUNER" for details).

— **AUTO INST**

Stores radio stations automatically

— **MAN INST**

Stores radio stations manually

— **GIVE NAME**

Allows to assign names to stored radio stations

— **RESHUFFLE**

Resorts stored radio stations

INSTRUCTIONS FOR USE

MENUS

TV menu

If the receiver is connected to a Philips CINEMA LINK TV via the CINEMA LINK system control bus sockets (see "CONNECTIONS"), you may use the TV to set up the system. An option called RECEIVER will be added to the TV menu.

If CINEMA LINK is on, adjustments on the receiver will be shown on the TV screen for a few seconds. Consult the instruction booklet of your TV on how to use the TV menu. The options offered may vary by TV model.

Switching the connection

- Press CINEMA LINK to switch the connection between the receiver and the TV either on or off.
 - If the connection is switched on, **CINEMA LINK ON** is displayed.

Note: We recommend switching CINEMA LINK off during recording. This avoids unwanted interruptions due to switching TV functions.

If CINEMA LINK is switched on and the TV menu is active, **TV MENU** is displayed and the menu and sound functions on the receiver are locked.

INSTRUCTIONS FOR USE

SOURCE SELECTION

SOURCE SELECTOR

When selecting a source by turning SOURCE SELECTOR, the audio inputs – and video inputs (FR 760 only) – with the corresponding name are activated. The incoming signal is reproduced by all audio and – if the source includes a video signal – video outputs of the receiver.

Source selectedConnectors used

6 CH / DVD	6 CHANNEL / DVD INPUT audio input and DVD IN video input (FR 760 only)
TUNER	The tuner part of the receiver is used, all inputs are switched off.
CD	CD IN audio input
CDR/TAPE	CDR/TAPE IN audio input
TV	TV IN audio input and TV IN video input (FR 760 only)
VCR	VCR IN audio input and VCR IN video input (FR 760 only)

About 6 CHANNEL / DVD INPUT

The 6 CHANNEL / DVD INPUT can be used to connect a device with a built-in multichannel decoder (e.g. Dolby Digital, DTS, etc.) and 6-channel output connector, i. e. a high end DVD player.

When using the 6 CHANNEL / DVD INPUT audio input, the receiver works as a multichannel amplifier. The source reproduces surround sound and sends it to the receiver divided into the necessary channels. Therefore the SURROUND ON/OFF, HALL and SURR. MODE button have no effect since the provided signal is already multichannel.

From a source which is connected to the 6 CHANNEL / DVD INPUT audio input cannot be recorded.

INSTRUCTIONS FOR USE

PLAYBACK, RECORDING

Playing a source

- 1 Press POWER / STANDBY to switch on the receiver.
- 2 Turn SOURCE SELECTOR to select a source.
→ The name of the source is displayed.
- You can select the FRONT AV/GAME input by pressing FRONT AV (FR 760 only).
- 3 Start playback of the source as usual.

Adjusting the sound

- Turn VOLUME to adjust the volume.
→ VOLUME and the volume level between 0 and 50 is displayed.
- 1 Press BASS or TREBLE.
→ BASS or TREBLE and the actual value are displayed briefly. Then TURN VOLUME KNOB TO CHANGE is scrolled.
- 2 Turn VOLUME to adjust the bass or treble.
→ BASS or TREBLE and the actual value are displayed.

Note : If VOLUME is not turned within 5 seconds or if any other control is used, the bass or treble adjustment is switched off.

- Press  SMART SOUND on the remote control to scroll through the built-in smart sounds: MOVIE, SPEECH, MUSIC, MULTIMEDIA and PERSONAL.
(PERSONAL is the userdefined bass and treble setting.)
→ SMART SOUND is displayed and the name of the chosen sound profile is scrolled once if smart sound is on.
- Press LOUDNESS to switch loudness either on or off.
→ LOUDNESS is displayed if loudness is on.

Recording from a source

If you wish to record from a source you must select it with SOURCE SELECTOR. The incoming signal is reproduced by all audio and – if the source includes a video signal – video outputs of the receiver. The sound settings do not affect the recording.

- 1 Turn SOURCE SELECTOR (or press FRONT AV – FR 760 only) to select the source you want to record from.
→ The name of the source is displayed.
- 2 Prepare the desired recording appliance. It must be connected to one of the outputs of the receiver.
- 3 Start recording on the recording appliance.
- 4 Start the playback of the source as usual.

*Notes: – The audio and video signal of VCR IN is not reproduced by VCR OUT. The same applies to the audio signal of CDR/TAPE IN to CDR/TAPE OUT.
– From a source which is connected to the 6 CHANNEL / DVD IN audio input cannot be recorded.*

INSTRUCTIONS FOR USE

SURROUND SOUND

About surround sound

Surround sound gives you a complete new listening sensation. You will have the feeling of being in the middle of the action, because sound is coming from everywhere around you. Look out for TV broadcasts, audio and video tapes and discs with the  or  marks which are encoded for multichannel surround sound.

Notice that DVD discs do not always carry full multichannel surround. To be sure that a disc is multichannel encoded consult your dealer.

Most ordinary stereo tapes and discs can be replayed using surround sound settings with good results. If the reproduction is distorted in surround mode, switch to normal stereo mode.

The availability of the various surround sound modes described depends on the number of speakers used and the incoming sound information.

Switching surround sound

With surround sound on, you can switch through the different surround modes. Note that the possibilities are related to speaker setup defined in the receivers menu.

- 1 Press SURROUND ON/OFF to switch on the surround sound.
→ The surround mode in use is scrolled.
- 2 Press SURR. MODE repeatedly to listen to the different surround modes (if available).
→ The surround mode in use is scrolled.
- 3 Press HALL to switch hall either on or off.
→ HALL is displayed if hall is on.
- 4 Press SURROUND ON/OFF to switch off the surround sound.
→ SURROUND OFF is scrolled.

Note: Switching surround sound has no effect when using the 6 CHANNEL / DVD IN input.

Surround sound settings

HALL

The sound reproduction is enhanced and a slight echo is added. This gives the impression of being in a large room.

SURROUND (PRO LOGIC)

The surround mode enables normal surround sound reproduction with 4 or 5 speakers.

FRONT-3 STEREO (PRO LOGIC)

The surround sound is muted. 3 Stereo lets you listen to surround sound without using the surround speakers.

STEREO

All sound is reproduced and played through the front left and right speakers. This enables standard stereo reproduction.

INSTRUCTIONS FOR USE

TUNER

Tuning to radio stations

You can search for radio stations by scanning the frequency band. You can also key in the frequency of a known radio station. If an FM station is being broadcast and received in stereo,  is shown.

Searching for radio stations

- 1 Turn SOURCE SELECTOR to select the tuner.
→ **TUNER** is displayed.
 - 2 Select a waveband by pressing TUNER AM/FM repeatedly.
→ The selected waveband is displayed.
 - 3 Keep ◀ or ▶ pressed for approximately 1 second.
→ **SEARCH** is displayed and the tuner tunes to a station with sufficient strength.
 - 4 Repeat this procedure until you find the desired station.
- To fine tune to a weak transmitter, briefly press ◀ or ▶ as often as necessary for optimum reception.

Tuning to a radio station by frequency (with the remote control only)

- 1 Press TUNER.
→ **TUNER** is displayed.
- 2 Press FR. D..
→ **_** is displayed.
- 3 Use 1-0 to key in the frequency of a radio station.

Note: Only valid numbers within the frequency range of the tuner can be keyed in.

Switching FM sensitivity

You can switch the tuner to a lower search sensitivity, to search for stations with a strong signal only (FM only).

- 1 Turn SOURCE SELECTOR to select the tuner.
→ **TUNER** is displayed.
- 2 Press SENS. on the receiver.
→ Either **SENS HI** or **SENS LO** is displayed for 5 seconds.

*Note: While searching for radio stations, the actual sensitivity is displayed. In this case, **SENS LO** means the tuner is only looking for radio stations with a strong signal.*

Storing radio stations

You may store up to 30 radio stations in the memory. The receiver can select and program radio stations by itself or you can choose them yourself.

Automatic programming

- 1 Choose * **TUNER** from the menu and press NEXT ▶.
- 2 Choose **AUTO INST** and press NEXT ▶.
→ The preset number where programming will start, the waveband and **AUTO** are displayed.
- 3 Turn TUNER PRESET ◀ to change the preset number where programming should start.
- 4 Use TUNER AM/FM to switch to the desired waveband.
- 5 Press ENTER / OK to start programming.
→ **AUTO INST** flashes and all available radio stations are programmed, this may take a few minutes. Programming is done when **AUTO INST** stops flashing.

Manual programming

- 1 Choose * **TUNER** from the menu and press NEXT ▶.
- 2 Choose **MAN INST** and press NEXT ▶.
→ A preset number, the waveband and the frequency are displayed.
- 3 Turn TUNER PRESET ◀ to change to the preset number where the radio station should be stored.
- 4 Tune to the desired radio station (see "Searching for radio stations").
- 5 Press ENTER / OK to confirm your selection.
→ **STORED** is displayed briefly. The radio station is programmed at the chosen preset number.
- 6 Select and store all desired radio stations this way.

INSTRUCTIONS FOR USE

TUNER

Tuning to stored radio stations

- 1 Turn SOURCE SELECTOR to TUNER to select the tuner.
→ TUNER is displayed.
- 2 Turn TUNER PRESET $\blacklozenge$ to select a preset radio station.
→ PRESET, the preset number and station are displayed.

Resorting stored radio stations

After programming radio stations, you might want to change their sequence. *RESHUFFLE* allows you to exchange the positions of presets.

- 1 Choose * TUNER from the menu and press NEXT $\blacktriangleright$.
- 2 Choose *RESHUFFLE* and press NEXT $\blacktriangleright$.
→ PRESET, a preset number and station are displayed.
- 3 Turn TUNER PRESET $\blacklozenge$ to select a preset station.
- 4 Press ENTER / OK to confirm the selection.
→ The selected preset number (--) and a second preset number are displayed.
- 5 Turn TUNER PRESET $\blacklozenge$ to select the other preset station.
- 6 Press ENTER / OK to confirm the exchange.
→ *RESHUFFLE* is displayed briefly and these two preset numbers are swapped.

Naming radio stations

It is possible to assign a name to any of the preset radio stations. RDS station names also can be overwritten.

- 1 Choose * TUNER from the menu and press NEXT $\blacktriangleright$.
- 2 Choose *GIVE NAME* and press NEXT $\blacktriangleright$.
→ A preset radio station is displayed.
- 3 Turn TUNER PRESET $\blacklozenge$ to select the preset to be renamed.
- 4 Press ENTER / OK to confirm your selection.
→ The existing name or ----- is displayed.
- 5 Turn TUNER PRESET $\blacklozenge$ to select a letter and NEXT $\blacktriangleright$ or $\blacktriangleleft$ PREV. to move to the next or previous position.
- 6 After you have entered the entire name, press ENTER / OK to confirm.
→ *STORE* is displayed and the name is stored.

Note: If you want to use the transmitted RDS station name again, simply clear the given name.

Clearing station names

- 1 Use the menu option * TUNER, choose *GIVE NAME*.
→ A preset radio station is displayed.
- 2 Turn $\blacklozenge$ MENU NAVIGATOR to select the name to be cleared.
- 3 Press ENTER / OK to confirm your selection.
- 4 Press $\blacktriangleleft$ PREV. while the first letter is flashing.
→ CL is flashing to the left of the station name.
- 5 Press ENTER / OK to clear the station name.
Or, if you have changed your mind,
press $\blacktriangleleft$ PREV. to leave the station name as it is.

INSTRUCTIONS FOR USE

TUNER

RDS

Radio Data System is a service that allows FM stations to send additional information. If you are receiving an RDS station,  and the station name are displayed.

Switching through different RDS information

- Press RADIO TEXT on the receiver repeatedly to switch through the following information (if available):
 - Radio text messages
 - RDS clock
 - Frequency
 - Station name

Note: The time signal broadcasted from certain radio stations may not always be accurate.

RDS News and Traffic Announcement


It is possible to set up the tuner in such a way that any playback is interrupted by news or traffic information of a chosen RDS station. Announcement functions only work if the necessary RDS signals are being broadcast.

If RDS stations are also carrying an EON signal (**Enhanced Other Networks**), **EON** is displayed. This signal enables the tuner to search not only the chosen RDS station, but the whole EON station network for news and traffic information.



- 1 Tune to the desired RDS station.
- 2 Press NEWS/TA:
 - Once** to display **NEWS**, this switches on the news announcement function.
 - Twice** to display **TA**, this switches on the traffic announcement function.
 - Three times** to display **TA** and **NEWS**, this switches on both announcement functions.
- 3 Select and play any other source as usual.
 - While news or traffic information is being broadcast the receiver will switch to tuner and **NEWS** or **TA** will flash.
- 4 Press NEWS/TA until the display indication disappears to switch off the function(s).
 - or**
 - Press NEWS/TA during an announcement to switch off the function(s).


Note: Be sure to switch the news and traffic announcement off during recording, otherwise these announcements will also be recorded.

WIRING DIAGRAM

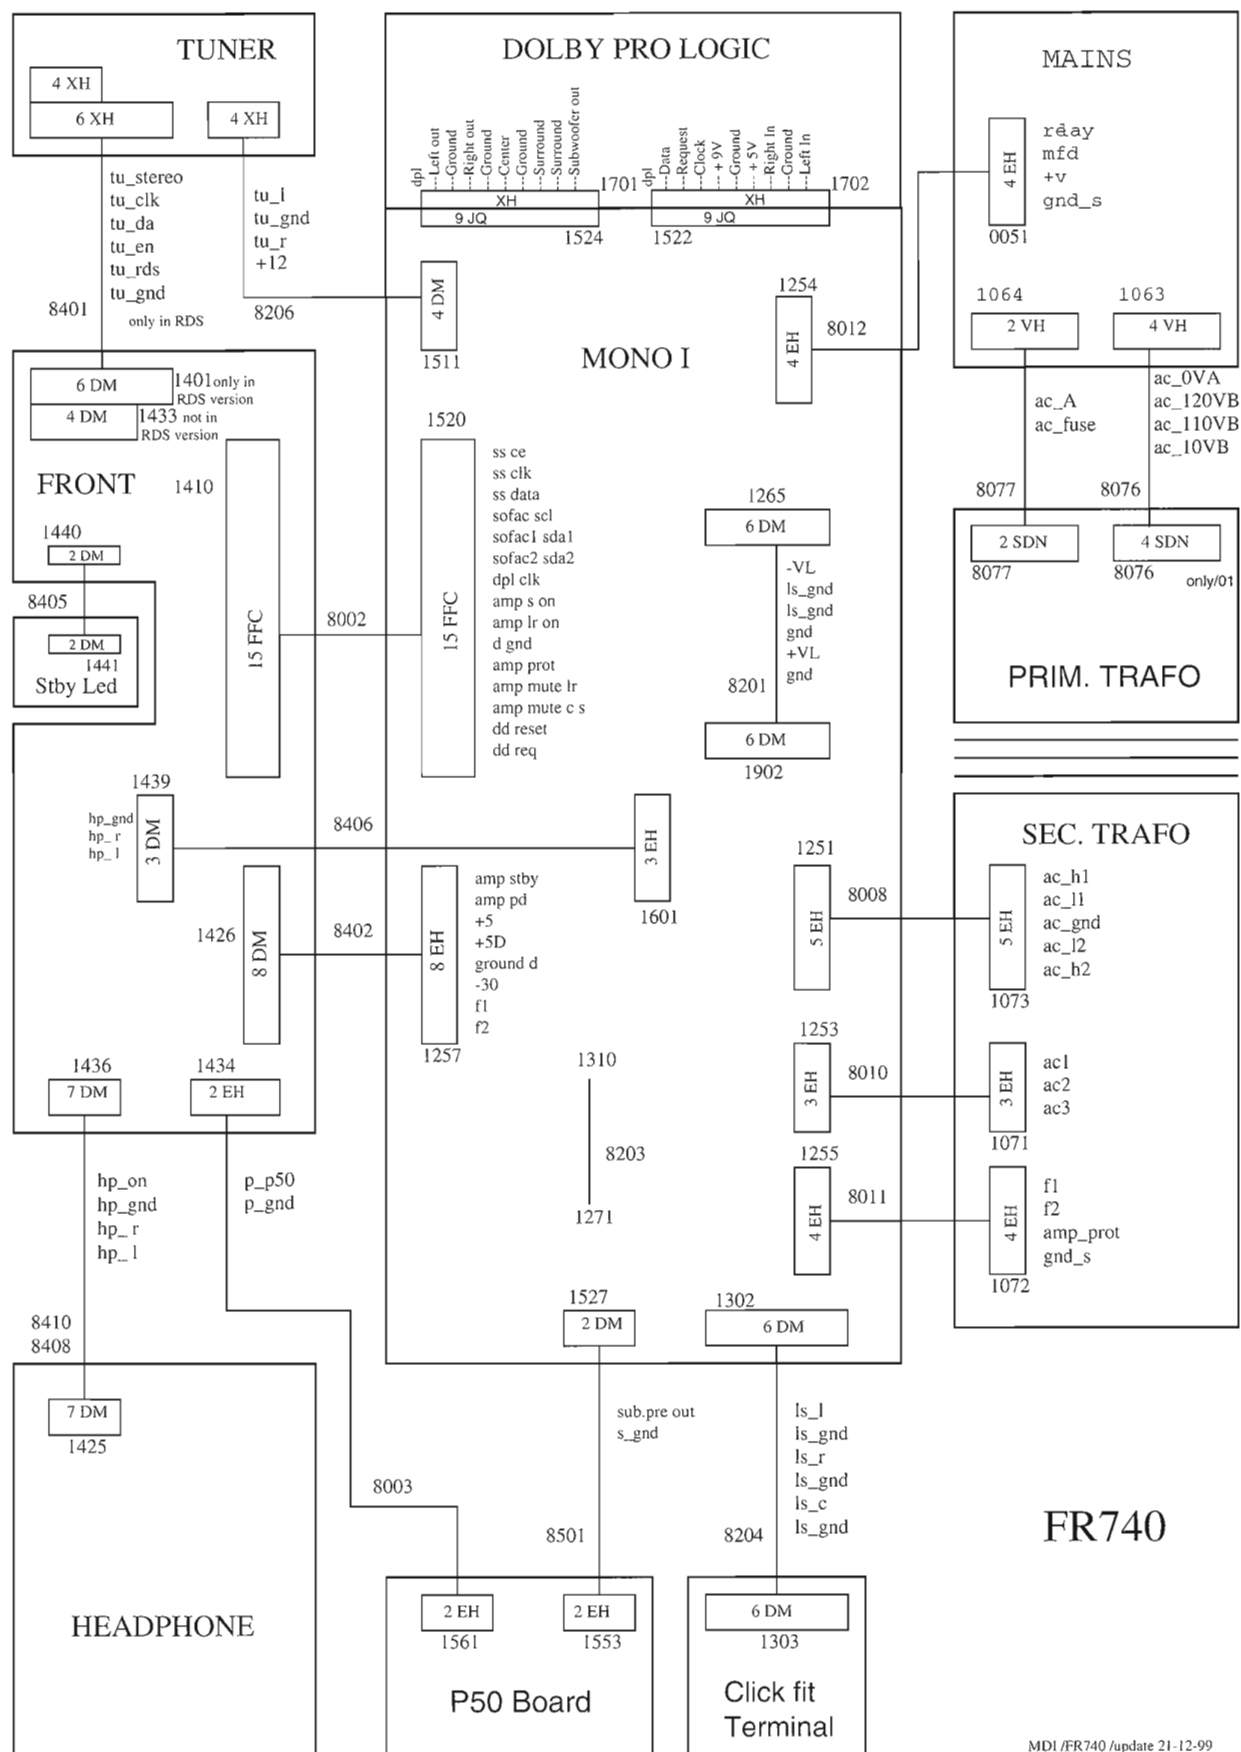


BLOCKDIAGRAM

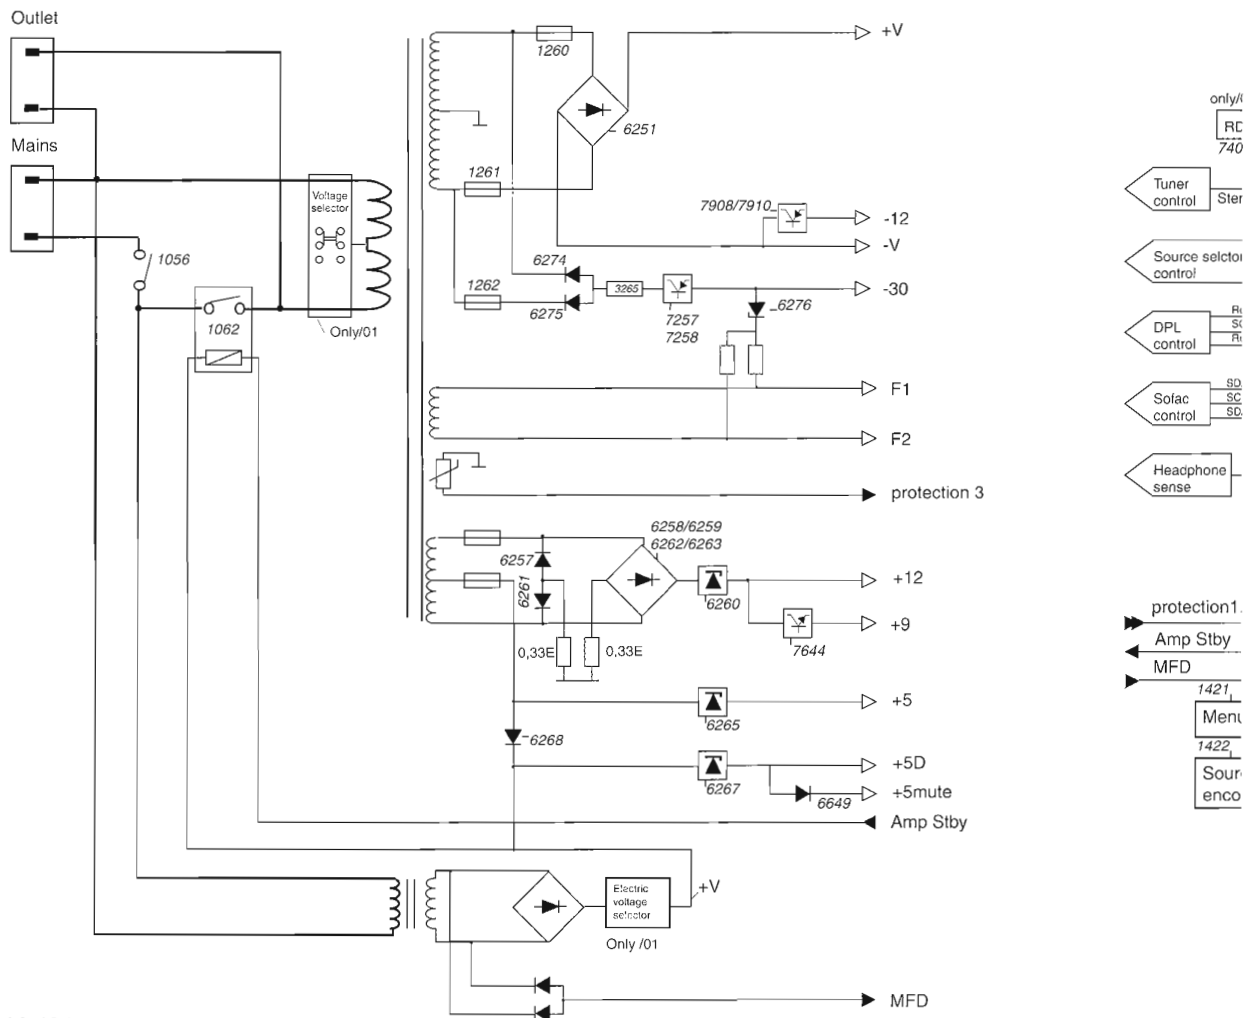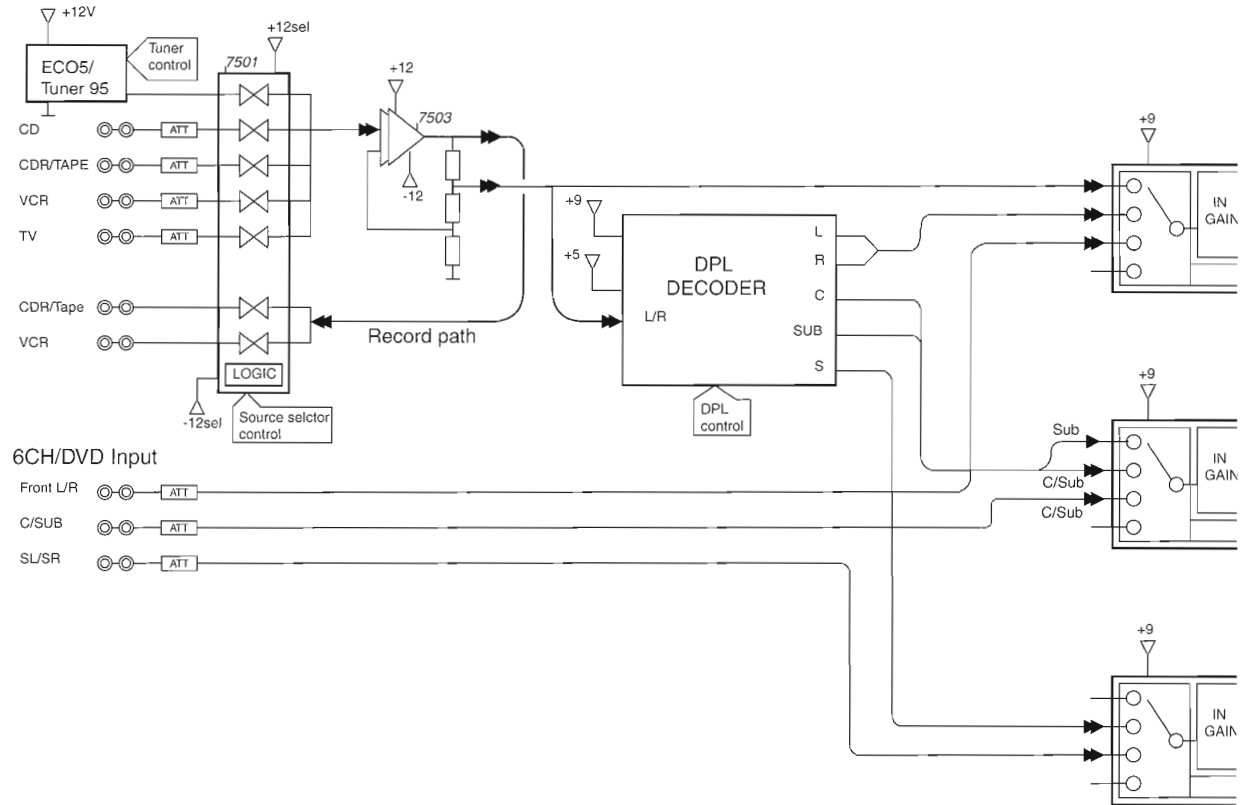

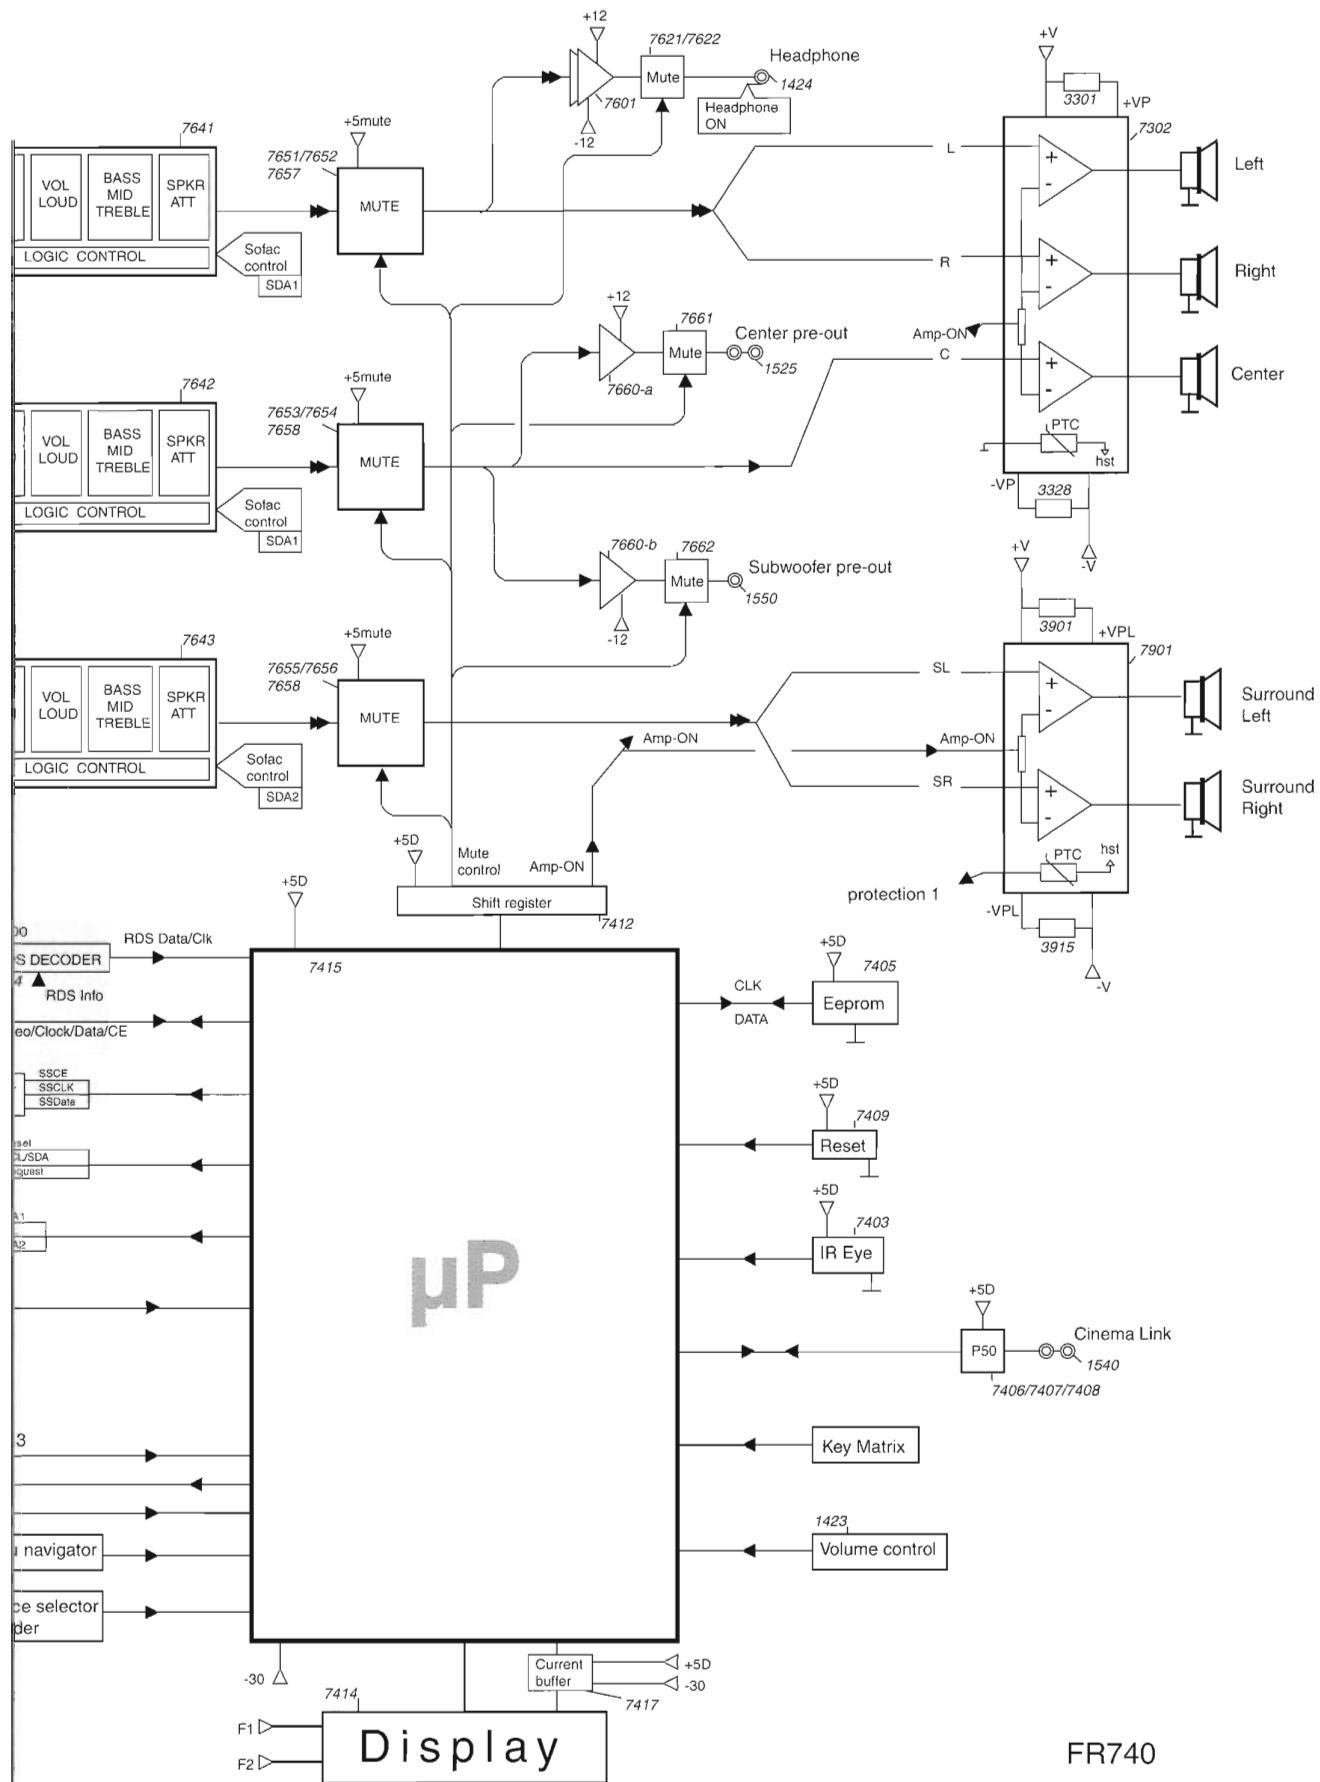

FR740

SERVICE TEST PROGRAM

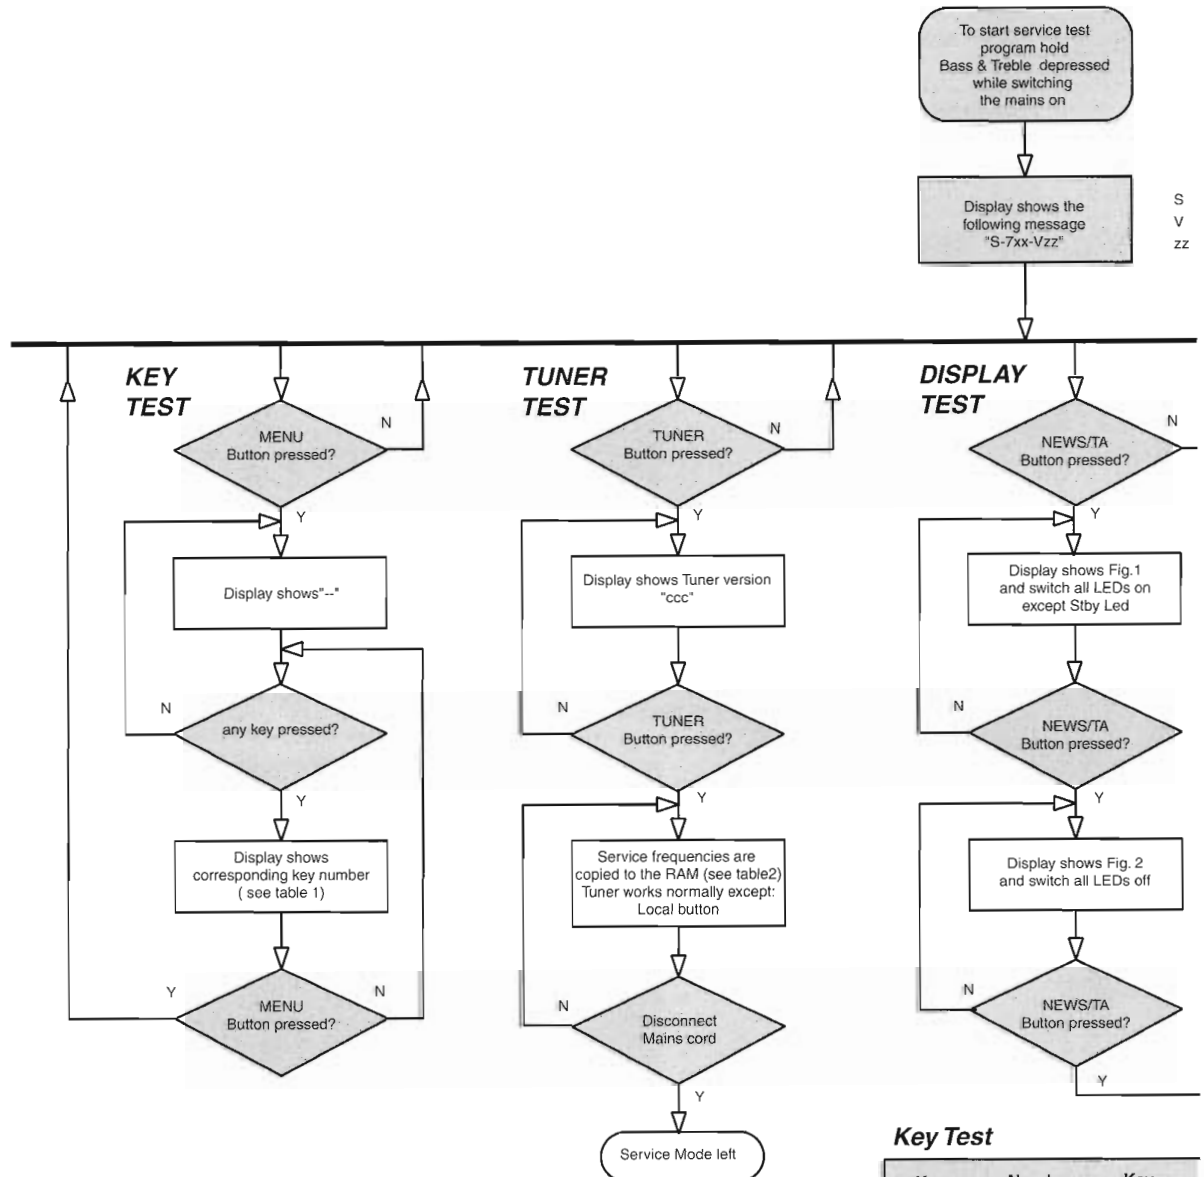

Tuner Test

Display info Version	Europe "EUR" /00	East Eur. 3-band "EEL" /14	East Eur. 2-band "EEU" /14	USA "USA" /17	Oversea "OSE" /01
Preset 1	87.5MHz	65.81MHz	65.81MHz	87.5MHz	87.5MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	74MHz	74MHz	530kHz	531kHz
4	1602kHz	87.5MHz	87.5MHz	1700kHz	1602kHz
5	558kHz	531kHz	531kHz	560kHz	558kHz
6	1494kHz	1602kHz	1602kHz	1500kHz	1494kHz
7	153kHz	558kHz	558kHz	98MHz	----
8	279kHz	1494kHz	1494kHz	----	----
9	198kHz	153kHz	98MHz	----	----
10	98MHz	279kHz	70.01MHz	----	----
11	----	198kHz	----	----	98MHz

Table 2

This table is valid for all types of tuners.

Customer presets will not be changed after this Tuner test.

If a station is tuned then the display flag "OK" will be ON otherwise it will be OFF.

If the tuned frequency is carrying RDS information, the display flag "RDS" will be ON.


Oversea version: the tuning grid can be switched between 9kHz and 10kHz by pressing the key "TUNER" for longer than 2 seconds. "Grid 9" or "Grid 10" will be shown accordingly.

Grid 9kHz is in FM 50kHz, Grid 10kHz is in FM 100kHz

Europe version: the LW can be switched On and Off by pressing the key "TUNER" for longer than 2 seconds. LW OFF or LW ON will be shown accordingly.


Key Test

Key	Number	Key
Cinema	1	Sens
Surr. on/off	2	News / TA
Surr. Mode	3	Prev.Exit
Hall	4	SetupMenu
Tuner	5	Next
Radio Text	6	Enter/OK

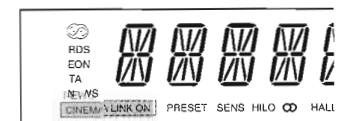

stands for Service Testprogram
stands for Software Version
version number counted from 01 upwards

TEMP. TEST

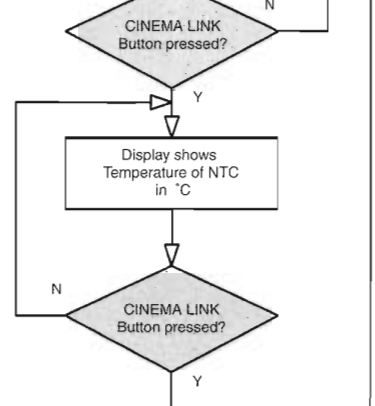

Various
other Tests

TEST	Activated with	ACTION
EEPROM	PREV Button PREV Button to exit	A test pattern will be sent to the Eeprom. "PASS" is displayed if the µProcessor read back the test pattern correctly, otherwise "ERR" will be displayed.
EEPROM FORMAT	ENTER/OK Button	Load default data . Display shows "NEW" for 1 second. Caution! All presets from the customer will be Lost

Default Data

Source =Tuner---Mode=stereo---Volume=10
SubwooferVol=0---Left Volume=0---Center Volume=0
Right Volume=0---RearL Volume=0---RearR Volume=0
Bass=0---Treble=0---Loudness=Off---Smart Sound=Personal
Center Present=Yes---Rear Present=Yes
Center Size=Small---Rear Size=Small
Front Dist = 4 meter---Rear Dist = 2 meter

Number	Key	Number
7	Loudness	13
8	Bass	14
9	Treble	15
--		
11		
12		

Table 1




Figure 1




Figure 2

MDI 01-02-00


7)

DISMANTLING HINTS

Dismantling of Front

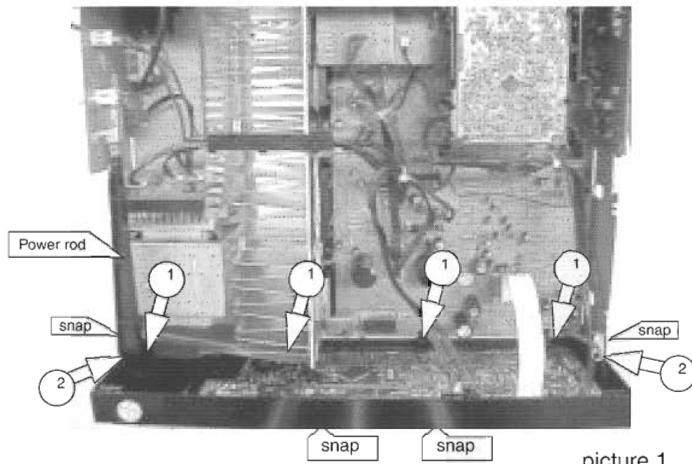


- 1) Remove top cover
- 2) Remove power rod
- 3) Remove 6 x screw as shown in picture 1
- 4) Release two snaps (left & right side front)
- 5) Release two snaps on the bottom side front
- 6) Tilt down front as shown in picture 2

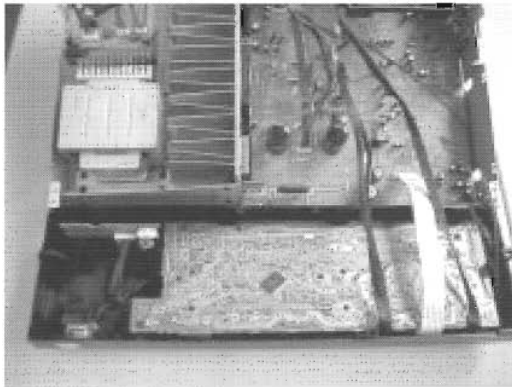

picture 2

Dismantling of mainstrafo

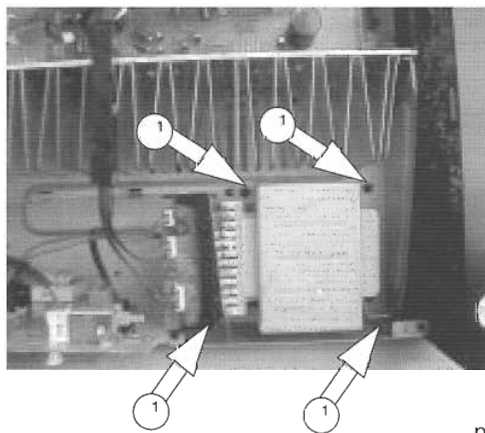


picture 8


- 1) Remove power rod
- 2) Remove 4x screw as shown in picture 8

Dismantling of mono board


- 1) Remove front . See picture 1
- 2) Remove whole front (disconnect the wires on the board coming from front)

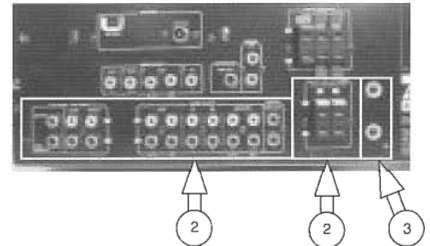


- 3) Remove 10 x screws shown in mentioned area .

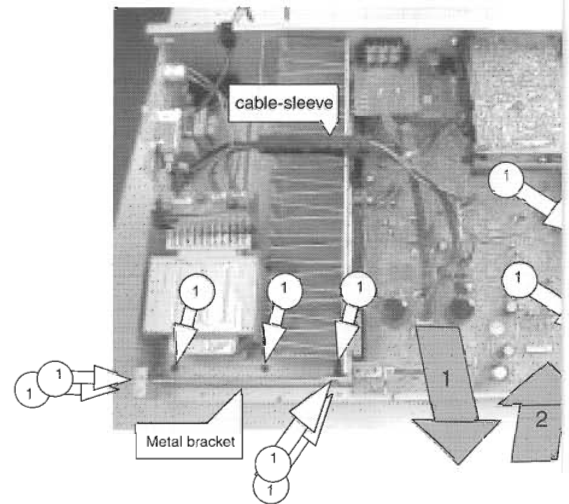

- 4) Remove DPL bracket. See picture 4a
- 5) Remove wires out the cable-sleeve.
- 4) Remove 7 x screw and remove metal bracket
- 5) Remove 2 x screw on mono board . See picture 4
- 6) Remove mono board as shown arrow 1 & 2 . See picture 4
- 7) Bring the mono board in the service position as shown in picture 4a

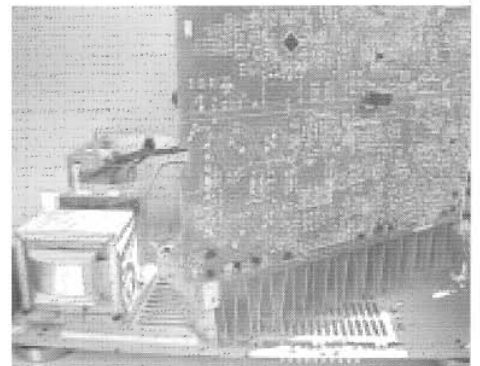


Legend

-  = Torx M3x6mm (screw with big head)
 = Torx 3x10mm
 = Torx 3x10mm


Service position monoboard

- 1) Bring front in position as shown in picture 6
 - 2) Snap nok of front in bottom to make front stable . See picture 7
 - 3) Connect front wiring back to monoboard.
- *The tuner module doesn't have to be connected. Use an other source (pe.CD)

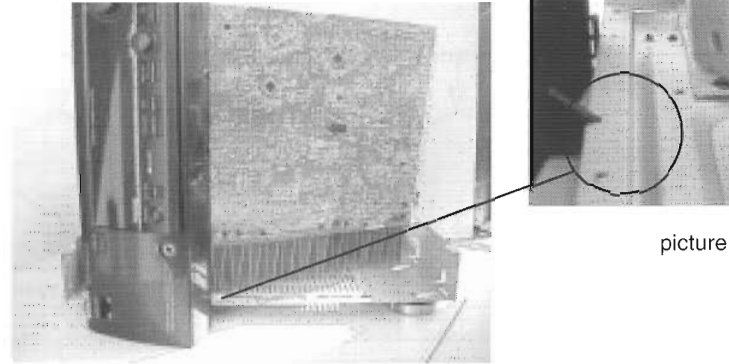

picture 3


See picture 3

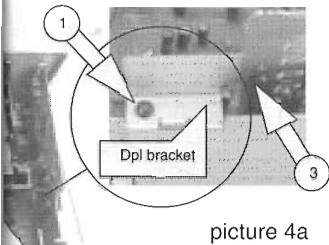

picture 4a

Service position main trafo


picture 6

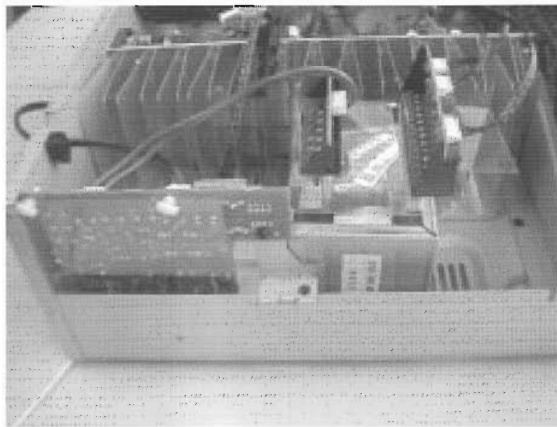

- 1) Put main trafo as shown in picture 9

picture 9

Handling service cover

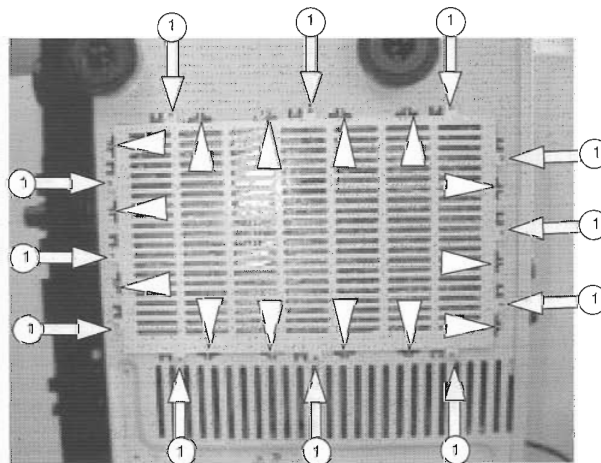


picture 10

- 1) To open the service cover cut 14 x lugs between cover and bottom . See picture 10 (▽)
 - 2) To close the service cover put 12 x screw in mentionned holes. See picture 10
- Service codenumber 12x Torx M3x6mm screw with big head = 4822 502 14659

picture 5

ead)

= Torx M3x6mm


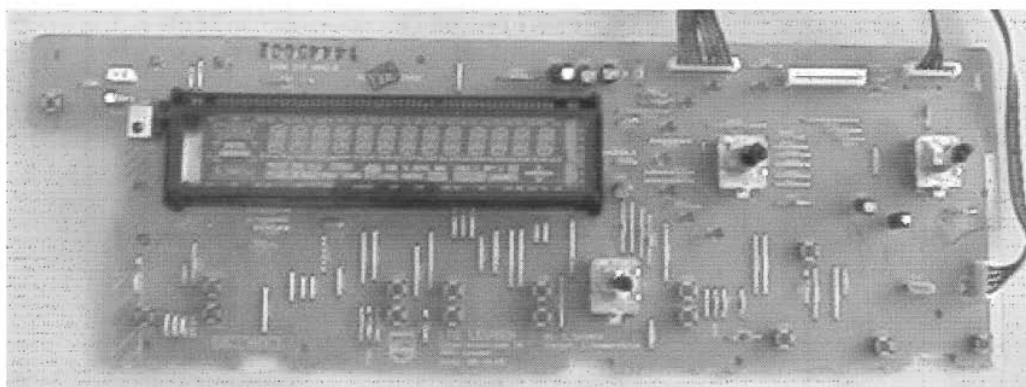


FRONT BOARD

TABLE OF CONTENTS

FTD Display pin connections.....	6-2
Headphone & Led board layout	6-3
Circuit diagram	6-4
Component layout	6-5
Partslist	6-6

FTD DISPLAY PIN CONNECTIONS

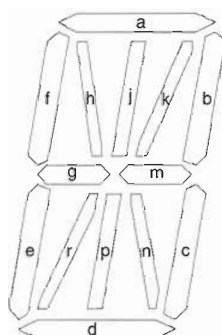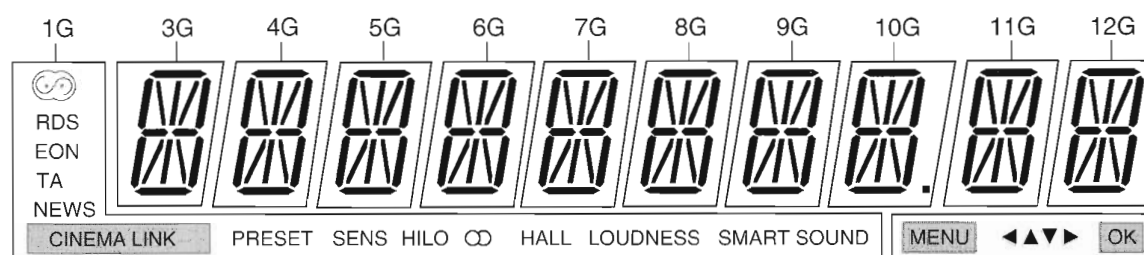


	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G
P1	LOUDNESS	▼	a	a	a	a	a	a	a	a	a	a
P2	-	MENU	j p	j p	j p	j p	j p	j p	j p	j p	j p	j p
P3	-	►	h	h	h	h	h	h	h	h	h	h
P4	LO	OK	k	k	k	k	k	k	k	k	k	k
P5	CINEMA LINK	◀	b	b	b	b	b	b	b	b	b	b
P6	EON	▲	f	f	f	f	f	f	f	f	f	f
P7	HALL	-	m	m	m	m	m	m	m	m	m	m
P8	HI	-	g	g	g	g	g	g	g	g	g	g
P9	NEWS	-	c	c	c	c	c	c	c	c	c	c
P10	PRESET	-	e	e	e	e	e	e	e	e	e	e
P11	RDS	-	r	r	r	r	r	r	r	r	r	r
P12	SMART SOUND	-	n	n	n	n	n	n	n	n	n	n
P13	∅	-	d	d	d	d	d	d	d	d	d	d
P14	TA	-	-	-	-	-	-	-	-	■	-	-
P15	SENS	-	-	-	-	-	-	-	-	-	-	-

Pin Connection


Pin numbers	4444444333333333222222222222111111111111
Connection	FFNNNNNNN123456789012NNNNNNN1111111PPPPPPPPPPNNFF 22PPCCCCGGGGGGGGGGGGCCCCCC543210987654321PP11

Note: NC ----- No connection
 NP ----- No pin
 FI , F2 ----- Filament
 1G ~ 12G ----- Grid


LED BOARD - COMPONENT VIEW

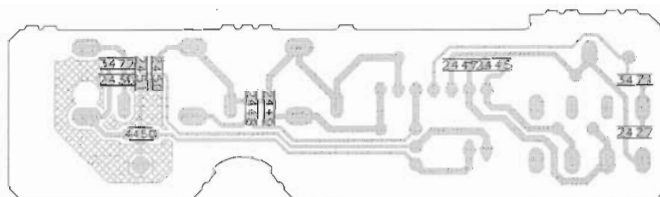

LED BOARD - COMPONENT VIEW




FRONT PART FR740 - FR760

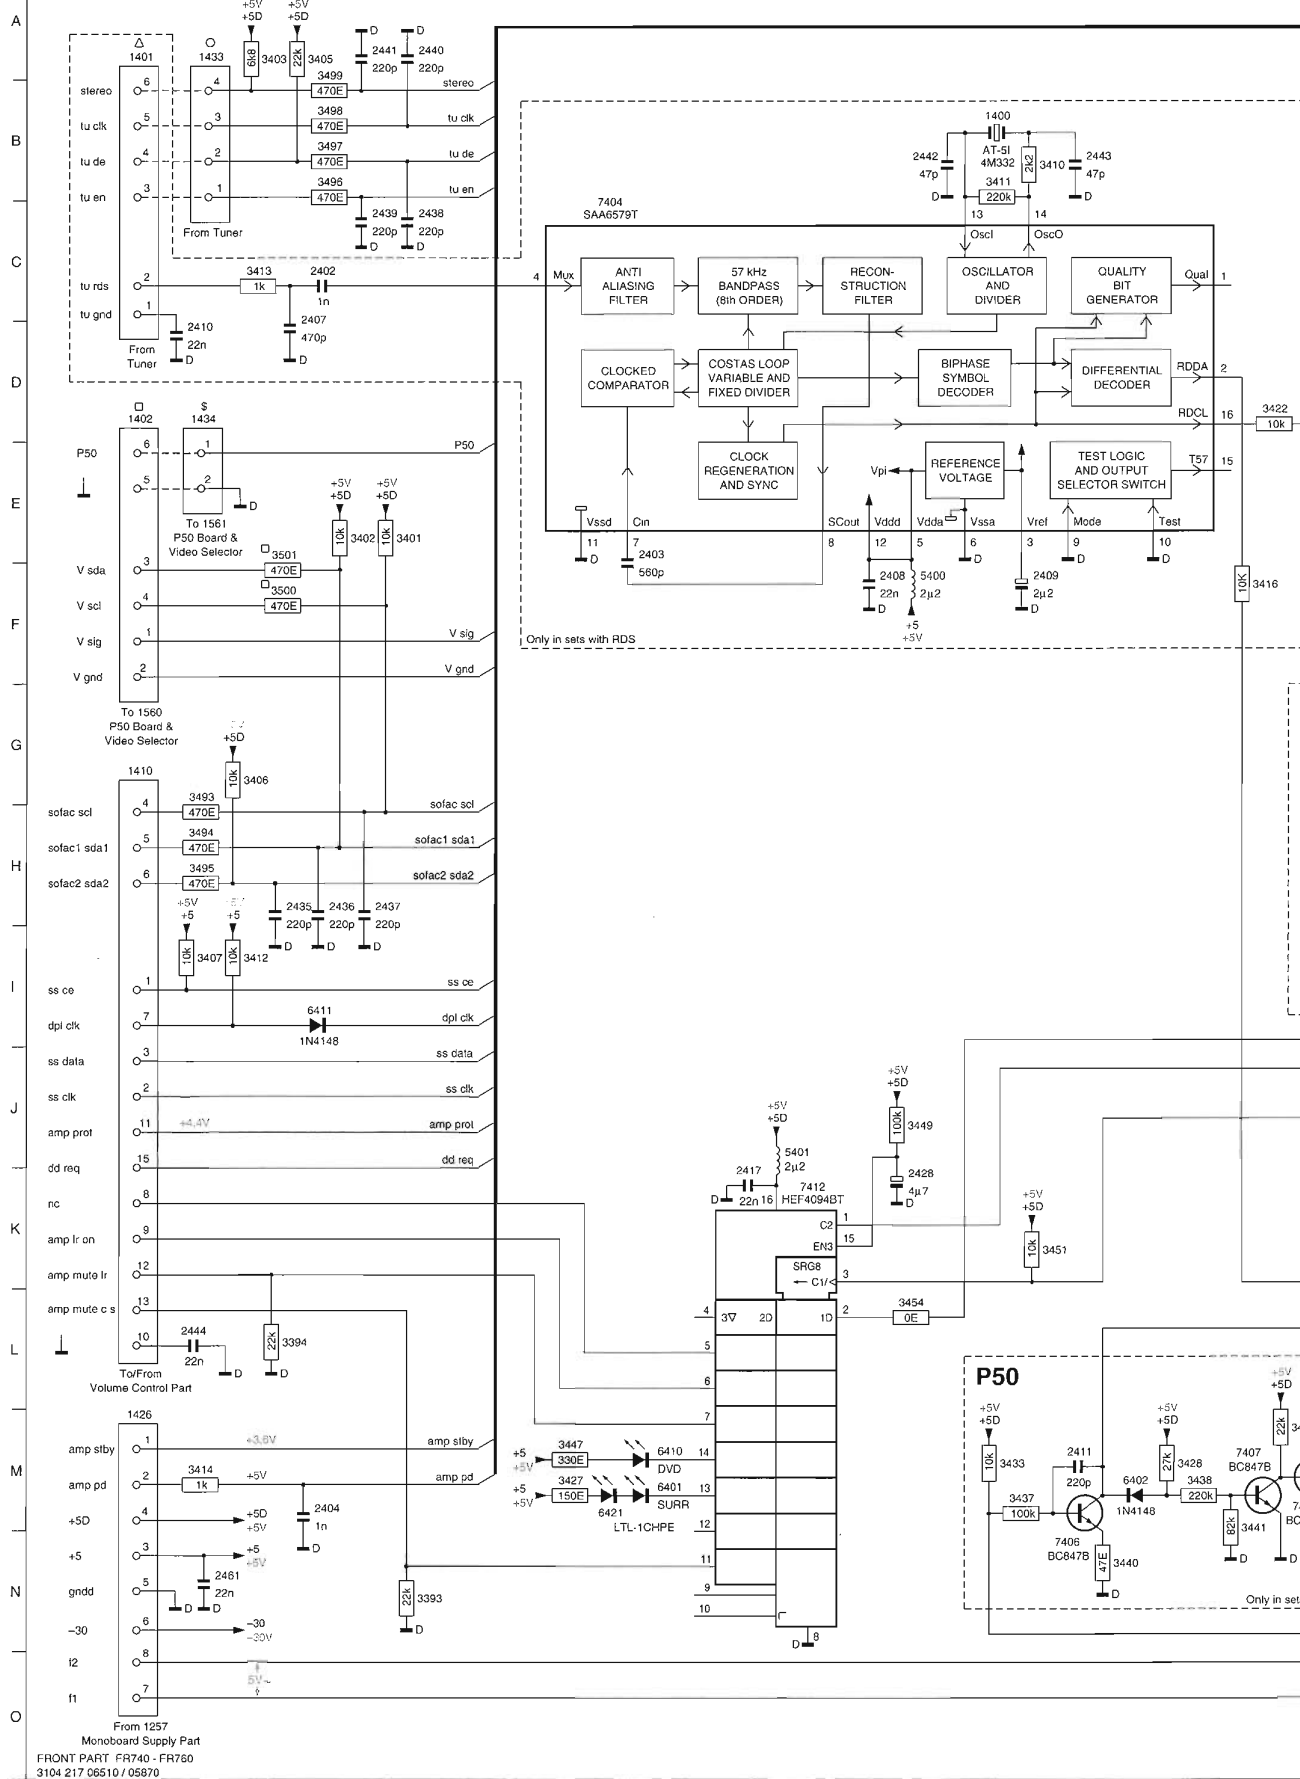







**SOURCE
SELECTOR**

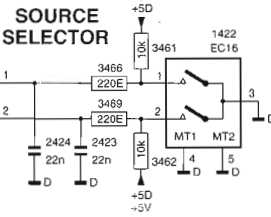

**VOLUME
CONTROL**

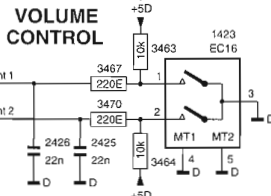

NAVIGATOR


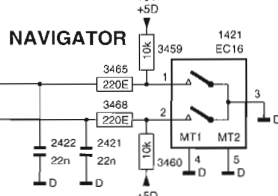




1400	B8	3424	C27
1401	A1	3426	F15
1402	D1	3427	M5
1403	N17	3428	M10
1404	E23	3429	M11
1405	E24	3430	M11
1406	E25	3431	M11
1407	F23	3432	N19
1408	F24	3433	M9
1409	F25	3434	E21
1410	F26	3435	E21
1411	F23	3436	E22
1412	F24	3437	M9
1413	F25	3438	M10
1414	G23	3439	M13
1415	G24	3440	N11
1416	G25	3441	N11
1417	H23	3442	M13
1418	H24	3443	E22
1419	H25	3444	F22
1420	I23	3447	M10
1421	I31	3449	J9
1422	G28	3451	K9
1423	H28	3452	G22
1424	A30	3453	H3
1425	A28	3454	L8
1426	M1	3455	E14
1427	E28	3457	H22
1428	D30	3458	I22
1433	A2	3459	J30
1434	D2	3460	J30
1435	E28	3461	G28
1436	A28	3462	H28
1437	A27	3463	I28
1439	A27	3464	I28
1440	H27	3465	K27
1441	C12	3466	G27
2000	E12	3467	I27
2002	C3	3468	J30
2003	F6	3469	G27
2004	M3	3470	J27
2005	B24	3471	C29
2007	D3	3472	C20
2008	F8	3473	O21
2009	F9	3474	N21
2100	D2	3475	E20
2111	M9	3476	N16
2112	N19	3477	F19
2113	M12	3478	N19
2114	M14	3483	I15
2115	N18	3486	I11
2116	N17	3487	G12
2117	K6	3488	N22
2120	B15	3489	O22
2121	J30	3490	L22
2122	J29	3491	E20
2123	H27	3493	H2
2124	H27	3494	G2
2125	J27	3496	H2
2126	J27	3498	B3
2127	C29	3499	B3
2128	C29	3499	B3
2129	O22	3499	B3
2130	F29	3500	F3
2133	L21	3501	E3
2134	M13	3755	K23
2135	H3	3756	L23
2136	H3	3765	M23
2137	H3	3766	M23
2138	C4	3767	K28
2139	C3	3768	K28
2140	A4	3769	L28
2141	A3	3779	M28
2142	B8	3780	M28
2143	B8	3781	M28
2144	L2	3400	F8
2145	B29	5401	J7
2146	B29	5403	B15
2147	B29	5403	B15
2148	D29	6400	C12
2149	E29	6401	M16
2150	E29	6401	M16
2151	E29	6401	M16
2152	E29	6401	M16
2153	E29	6401	M16
2154	E29	6401	M16
2155	E29	6401	M16
2156	E29	6401	M16
2157	E29	6401	M16
2158	E29	6401	M16
2159	E29	6401	M16
2160	E29	6401	M16
2161	E29	6401	M16
2162	E29	6401	M16
2163	E29	6401	M16
2164	E29	6401	M16
2165	E29	6401	M16
2166	E29	6401	M16
2167	E29	6401	M16
2168	E29	6401	M16
2169	E29	6401	M16
2170	E29	6401	M16
2171	E29	6401	M16
2172	E29	6401	M16
2173	E29	6401	M16
2174	E29	6401	M16
2175	E29	6401	M16
2176	E29	6401	M16
2177	E29	6401	M16
2178	E29	6401	M16
2179	E29	6401	M16
2180	E29	6401	M16
2181	E29	6401	M16
2182	E29	6401	M16
2183	E29	6401	M16

- △ Only in sets with RDS
- Not in sets with RDS
- Only in FR760
- ▲ Not in sets with P50 function
- Not in sets with RDS
- \$ Only in FR740

-V - Voltage measured during normal operation
- Source position: Tuner FM
- No special features ON

FRONT BOARD - COMPONENT & COPPER SIDE VIEW

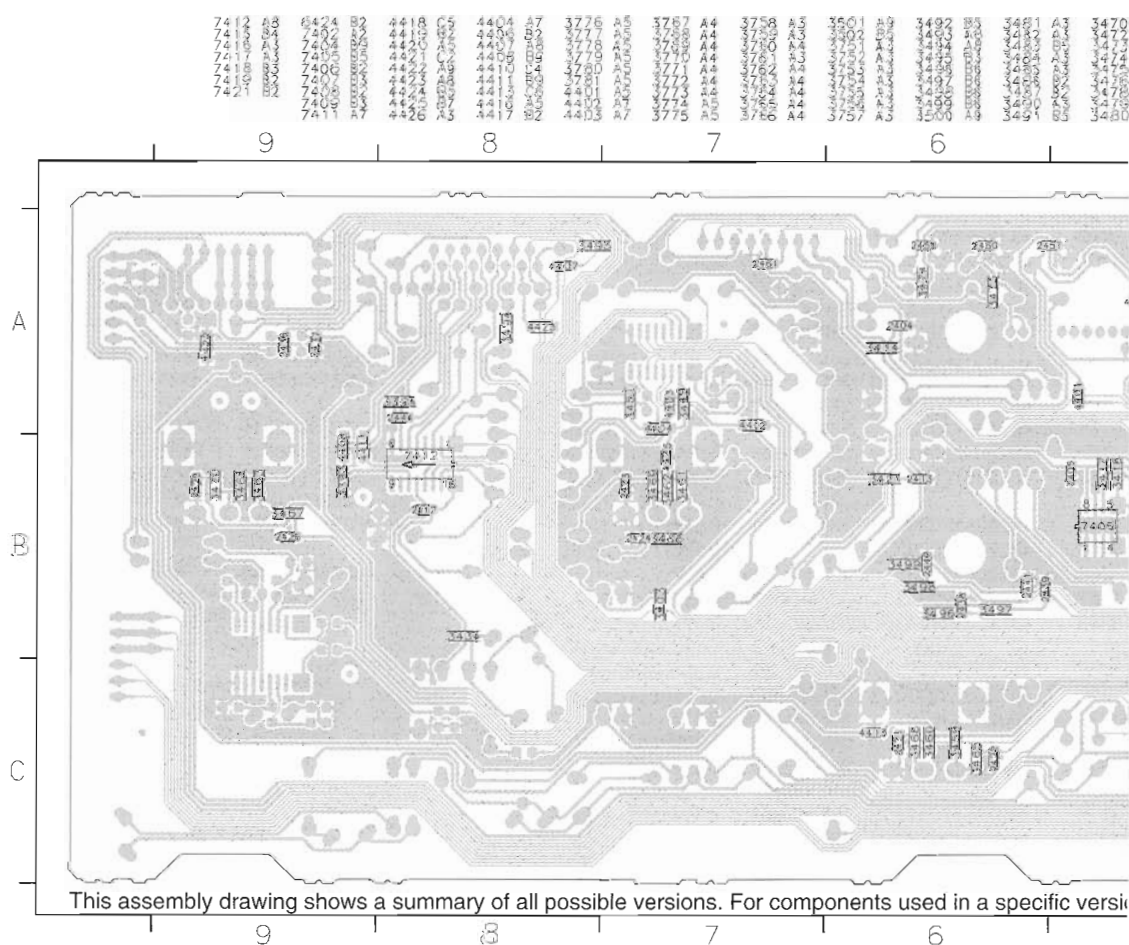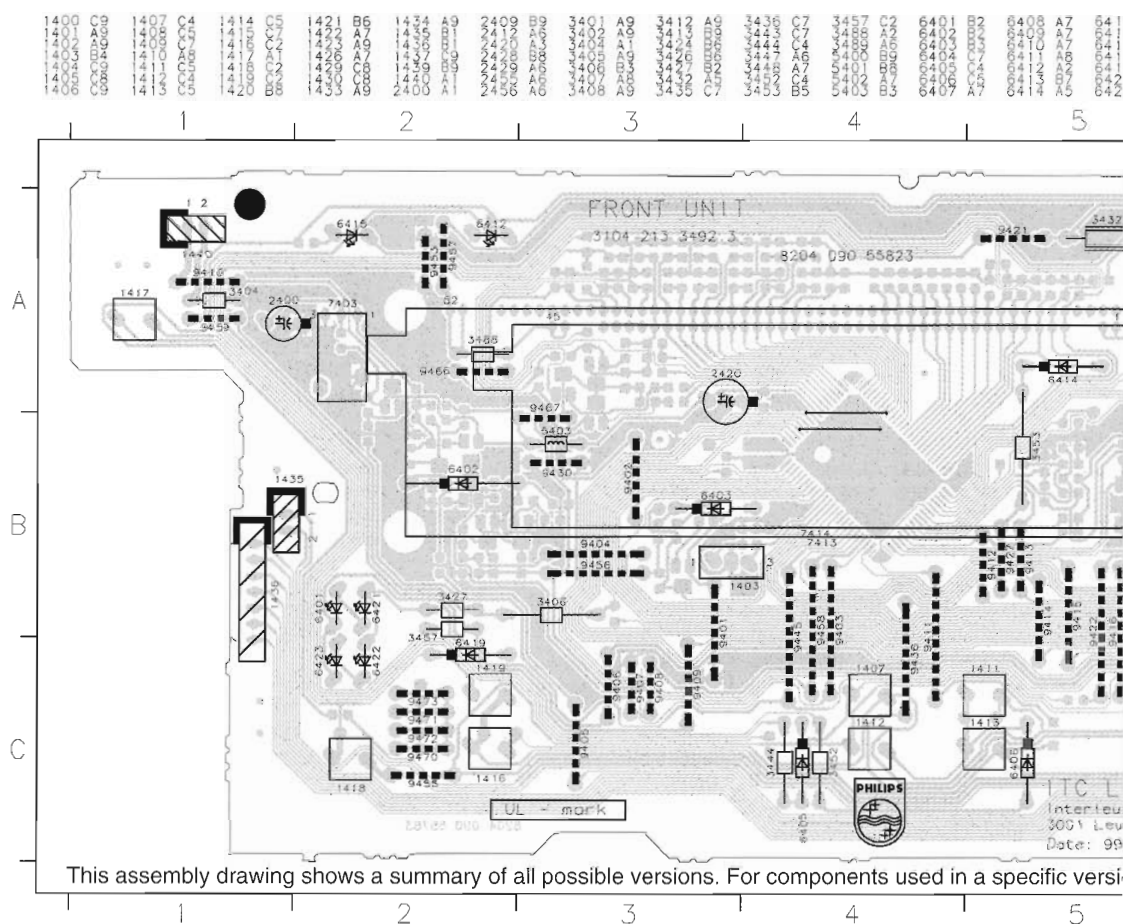

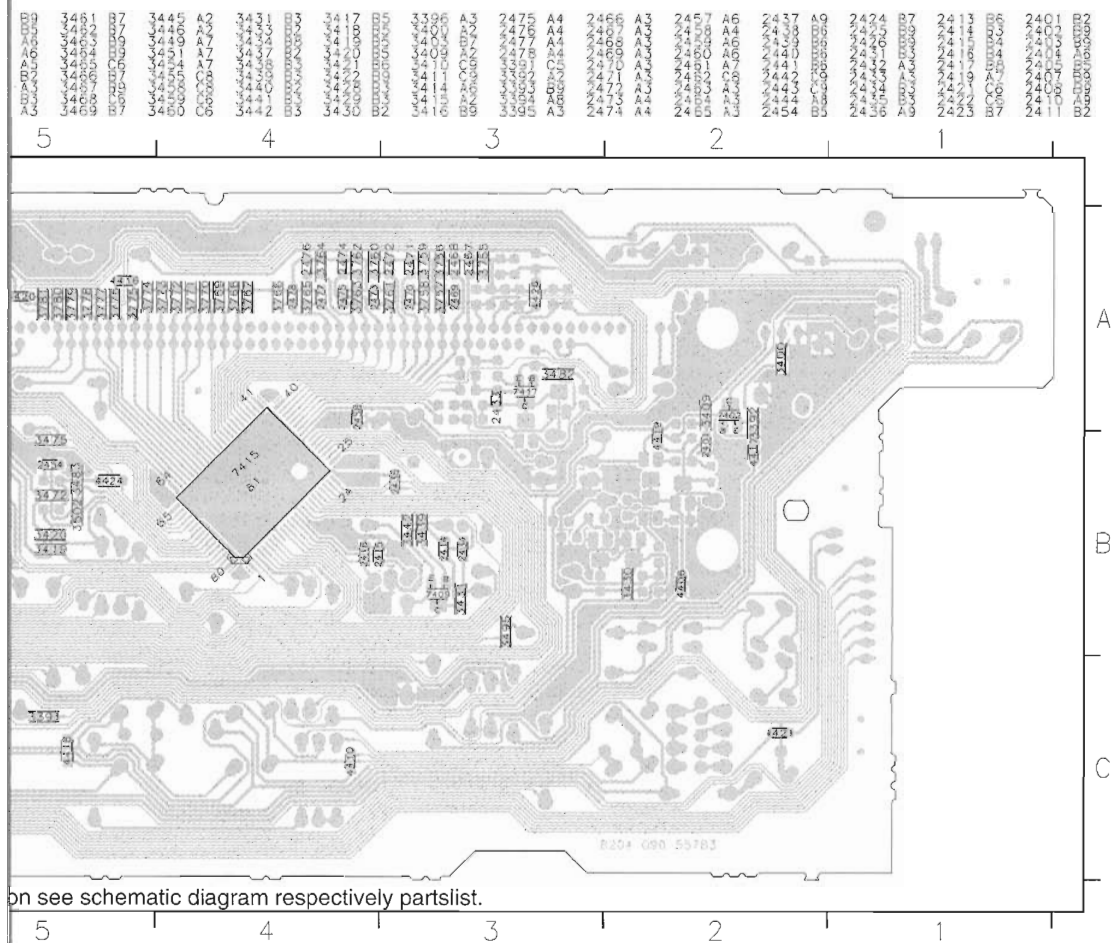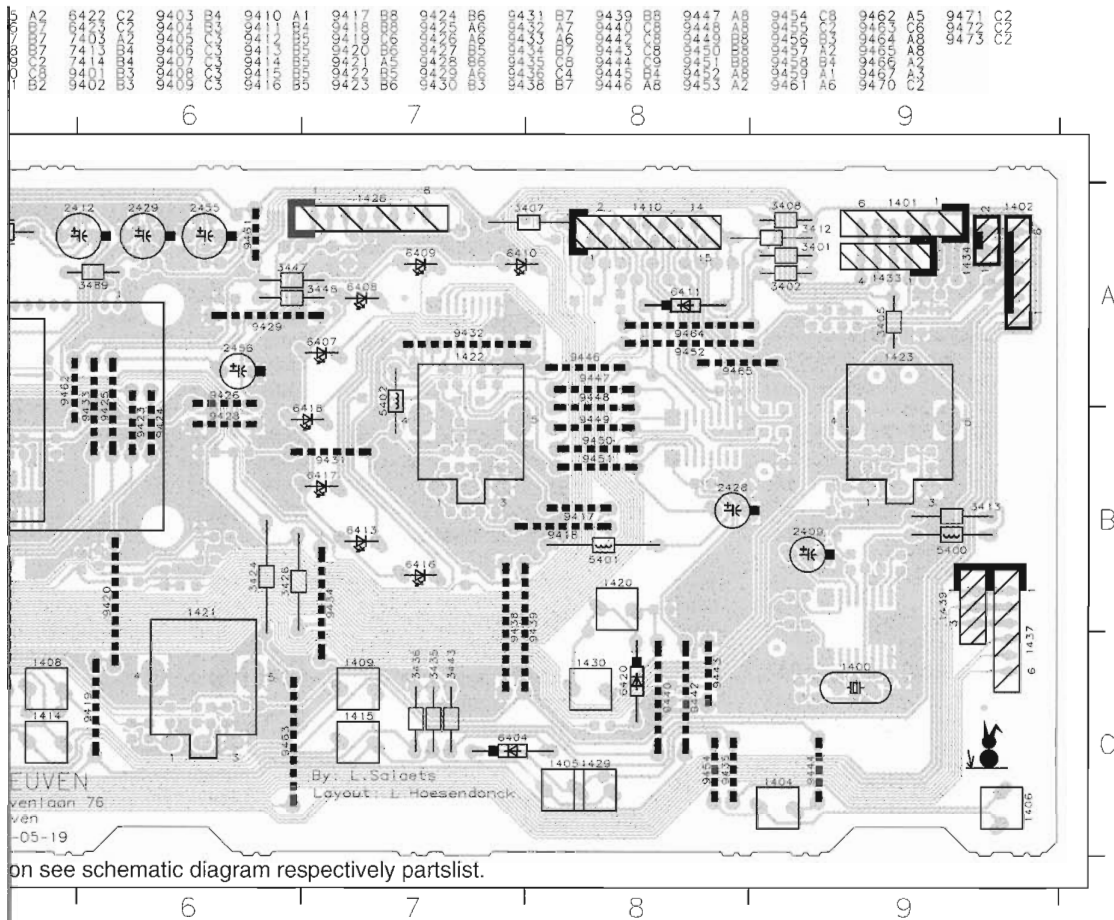

ELECTRICAL PARTSLIST - FRONT BOARD**MISCELLANEOUS**

1400	482224211033	CRYSTAL 4,332MH
1403	482224272066	CRYSTAL 8,00MH
1404	482227613114	SWITCH, PUSH BUTTON
1405	482227613114	SWITCH, PUSH BUTTON
1406	482227613114	SWITCH, PUSH BUTTON
1407	482227613114	SWITCH, PUSH BUTTON
1408	482227613114	SWITCH, PUSH BUTTON
1409	482227613114	SWITCH, PUSH BUTTON
1410	482226510981	15FE-BT-VK-N
1411	482227613114	SWITCH, PUSH BUTTON
1412	482227613114	SWITCH, PUSH BUTTON
1413	482227613114	SWITCH, PUSH BUTTON
1414	482227613114	SWITCH, PUSH BUTTON
1415	482227613114	SWITCH, PUSH BUTTON
1416	482227613114	SWITCH, PUSH BUTTON
1417	482227613114	SWITCH, PUSH BUTTON
1418	482227613114	SWITCH, PUSH BUTTON
1419	482227613114	SWITCH, PUSH BUTTON
1421	482227310372	SWITCH ROTARY
1422	482227310372	SWITCH ROTARY
1423	482227310365	ROTARY ENCODER 24P
1424	482226511584	1P YKB21-5209
8002	482232012706	FLEXIBLE FOIL 15P - 220MM

CAPACITORS


2400	482212441584	100UF 20% 10V
2402	532212231647	1NF10% X7R 63V
2403	532211680853	560PF 5% NP0 63V
2404	532212231647	1NF10% X7R 63V
2405	532212232654	22NF10% X7R 63V
2407	532212234099	470PF10% X7R 63V
2408	532212232654	22NF10% X7R 63V
2409	482212422652	2,2UF20% 50V
2410	532212232654	22NF10% X7R 63V
2411	482212233575	220PF 5% NP0 63V
2412	482212441751	47UF 20% 50V
2413	532212232654	22NF10% X7R 63V
2414	532212232654	22NF10% X7R 63V
2415	532212232658	22PF 5% 50V
2416	532212232658	22PF 5% 50V
2417	532212232654	22NF10% X7R 63V
2420	482212423432	100UF20% 10V
2421	532212232654	22NF10% X7R 63V
2422	532212232654	22NF10% X7R 63V
2423	532212232654	22NF10% X7R 63V
2424	532212232654	22NF10% X7R 63V
2425	532212232654	22NF10% X7R 63V
2426	532212232654	22NF10% X7R 63V
2427	532212231647	1NF10% X7R 63V
2428	482212440769	4,7UF20% 100V
2429	482212441751	47UF 20% 50V
2433	532212232531	100PF 5% NP0 50V
2434	482212614076	220N 25V. P8020
2435	482212233575	220PF 5% NP0 63V
2436	482212233575	220PF 5% NP0 63V
2437	482212233575	220PF 5% NP0 63V
2438	482212233575	220PF 5% NP0 63V
2439	482212233575	220PF 5% NP0 63V
2440	482212233575	220PF 5% NP0 63V
2441	482212233575	220PF 5% NP0 63V
2442	482212613692	47PF 1% NP0 63V
2443	482212613692	47PF 1% NP0 63V
2444	532212232654	22NF10% X7R 63V
2445	532212610223	4,7NF10% X7R 63V
2447	532212610223	4,7NF10% X7R 63V

2454	532212232654	22NF10% X7R 63V
2455	482212441751	47UF 20% 50V
2456	482212441751	47UF 20% 50V
2457	532212232654	22NF10% X7R 63V
2458	532212232654	22NF10% X7R 63V
2459	532212232654	22NF10% X7R 63V
2460	532212232654	22NF10% X7R 63V
2461	532212232654	22NF10% X7R 63V
2462	532212231647	1NF10% X7R 63V
2467	532212232531	100PF 5% NP0 50V
2468	532212232531	100PF 5% NP0 50V
2469	532212232531	100PF 5% NP0 50V
2470	532212232531	100PF 5% NP0 50V
2471	532212232531	100PF 5% NP0 50V
2472	532212232531	100PF 5% NP0 50V
2473	532212232531	100PF 5% NP0 50V
2474	532212232531	100PF 5% NP0 50V
2475	532212232531	100PF 5% NP0 50V
2476	532212232531	100PF 5% NP0 50V
2477	532212232531	100PF 5% NP0 50V
2478	532212232531	100PF 5% NP0 50V

RESISTORS

3391	482205110102	1K00 2% 0,25W
3392	482205120223	22K00 5% 0,1W
3393	482205120223	22K00 5% 0,1W
3394	482205120223	22K00 5% 0,1W
3396	482205110102	1K00 2% 0,25W
3400	482205120479	47R00 5% 0,1W
3401	482205021003	10K00 1% 0,6W
3402	482205021003	10K00 1% 0,6W
3403	482211711507	6K8 1% 0,1W
3404	482211652219	330E 5% 0,5W
3405	482211652257	22K 5% 0,5W
3406	482205021003	10K00 1% 0,6W
3407	482205021003	10K00 1% 0,6W
3408	482205021003	10K00 1% 0,6W
3409	482205110102	1K00 2% 0,25W
3410	482211711449	2K2 1% 0,1W
3411	482211713579	220K 1% 0,1W RC12H
3412	482205021003	10K00 1% 0,6W
3413	482205011002	1K00 1% 0,4W
3414	482205110102	1K00 2% 0,25W
3415	482205120008	0R00 JUMP.
3416	482211710833	10K 1% 0,1W
3417	482211710833	10K 1% 0,1W
3418	482211710833	10K 1% 0,1W
3419	482211710833	10K 1% 0,1W
3420	482211710833	10K 1% 0,1W
3421	482211710833	10K 1% 0,1W
3422	482211710833	10K 1% 0,1W
3424	482205011002	1K00 1% 0,4W
3426	482205011002	1K00 1% 0,4W
3427	482211683868	150R 5% 0,5W
3428	482205120273	27K00 5% 0,1W
3429	482205120223	22K00 5% 0,1W
3430	482205120223	22K00 5% 0,1W
3431	482211710833	10K 1% 0,1W
3432	▲ 482205210478	4R70 5% 0,33W
3433	482211710833	10K 1% 0,1W
3434	482205120223	22K00 5% 0,1W
3435	482211652257	22K 5% 0,5W
3436	482211652257	22K 5% 0,5W
3437	482211710837	100K 1% 0,1W
3438	482211713579	220K 1% 0,1W RC12H
3439	482211710833	10K 1% 0,1W
3440	482205120479	47R00 5% 0,1W

3441	482211711149	82K	1%	0,1W	3780	482205120333	33K00	5%	0,1W
3442	482211710837	100K	1%	0,1W	3781	482205120333	33K00	5%	0,1W
3443	482211652219	330E	5%	0,5W	4401	482205120008	0R00 JUMP.	(0805)	
3444	482211652219	330E	5%	0,5W	4402	482205120008	0R00 JUMP.	(0805)	
3447	482211652219	330E	5%	0,5W	4403	482205120008	0R00 JUMP.	(0805)	
3449	482211710837	100K	1%	0,1W	4404	482205120008	0R00 JUMP.	(0805)	
3451	482211710833	10K	1%	0,1W	4406	482205120008	0R00 JUMP.	(0805)	
3452	482211652219	330E	5%	0,5W	4407	482205120008	0R00 JUMP.	(0805)	
3453	482211652219	330E	5%	0,5W	4408	482205120008	0R00 JUMP.	(0805)	
3454	482205120008	0R00 JUMP.	(0805)		4410	482205120008	0R00 JUMP.	(0805)	
3457	482211652219	330E	5%	0,5W	4411	482205120008	0R00 JUMP.	(0805)	
3459	482211710833	10K	1%	0,1W	4413	482205120008	0R00 JUMP.	(0805)	
3460	482211710833	10K	1%	0,1W	4416	482205120008	0R00 JUMP.	(0805)	
3461	482211710833	10K	1%	0,1W	4417	482205120008	0R00 JUMP.	(0805)	
3462	482211710833	10K	1%	0,1W	4418	482205120008	0R00 JUMP.	(0805)	
3463	482211710833	10K	1%	0,1W	4420	482205120008	0R00 JUMP.	(0805)	
3464	482211710833	10K	1%	0,1W	4421	482205120008	0R00 JUMP.	(0805)	
3465	482211711503	220R	1%	0,1W	4422	482205120008	0R00 JUMP.	(0805)	
3466	482211711503	220R	1%	0,1W	4423	482205120008	0R00 JUMP.	(0805)	
3467	482211711503	220R	1%	0,1W	4424	482205120008	0R00 JUMP.	(0805)	
3468	482211711503	220R	1%	0,1W	4425	482205120008	0R00 JUMP.	(0805)	
3469	482211711503	220R	1%	0,1W	4426	482205120008	0R00 JUMP.	(0805)	
3470	482211711503	220R	1%	0,1W	4450	482205120008	0R00 JUMP.	(0805)	
3471	482205110102	1K00	2%	0,25W	FILTERS				
3472	482205110102	1K00	2%	0,25W	5400	482215711477	LAL02TB2R2J		
3473	482205120008	0R00 JUMP.	(0805)		5401	482215711477	LAL02TB2R2J		
3474	482205120008	0R00 JUMP.	(0805)		5403	482215711477	LAL02TB2R2J		
3475	482211710837	100K	1%	0,1W	DIODES				
3482	482211710837	100K	1%	0,1W	6400	932210014682	LED STBY		
3483	482211710837	100K	1%	0,1W	6401	482213082978	SURROUND LED		
3488	482205024708	4R70	1%	0,6W	6402	482213030621	1N4148		
3489	482205024708	4R70	1%	0,6W	6403	482213030621	1N4148		
3490	482205120008	0R00 JUMP.	(0805)		6404	482213030621	1N4148		
3491	482211710837	100K	1%	0,1W	6405	482213030621	1N4148		
3493	482205120471	470R00	5%	0,1W	6406	482213030621	1N4148		
3494	482205120471	470R00	5%	0,1W	6410	482213082978	SURROUND LED		
3495	482205120471	470R00	5%	0,1W	6411	482213030621	1N4148		
3496	482205120471	470R00	5%	0,1W	6414	482213030621	1N4148		
3497	482205120471	470R00	5%	0,1W	6419	482213030621	1N4148		
3498	482205120471	470R00	5%	0,1W	6421	482213082978	6CH/DVD LED		
3499	482205120471	470R00	5%	0,1W	TRANSISTORS & ICs				
3755	482205120333	33K00	5%	0,1W	7402	482213011607	PDTA144ET		
3756	482205120333	33K00	5%	0,1W	7403	482213010165	GP1U28XP		
3757	482205120333	33K00	5%	0,1W	7404	482220931981	SAA6579T		
3758	482205120333	33K00	5%	0,1W	7405	482220917445	M24C08-MN6		
3759	482205120333	33K00	5%	0,1W	7406	482213060511	BC847B		
3760	482205120333	33K00	5%	0,1W	7407	482213060511	BC847B		
3761	482205120333	33K00	5%	0,1W	7408	482213060511	BC847B		
3762	482205120333	33K00	5%	0,1W	7409	482213060511	BC847B		
3763	482205120333	33K00	5%	0,1W	7412	532220911306	HEF4094BT		
3764	482205120333	33K00	5%	0,1W	7414	482213500275	DISPLAY		
3765	482205120333	33K00	5%	0,1W	7415	482220917446	TMP87CS71F/FR755.1		
3766	482205120333	33K00	5%	0,1W	7417	482213060511	BC847B		
3767	482205120333	33K00	5%	0,1W					
3768	482205120333	33K00	5%	0,1W					
3769	482205120333	33K00	5%	0,1W					
3770	482205120333	33K00	5%	0,1W					
3771	482205120333	33K00	5%	0,1W					
3772	482205120333	33K00	5%	0,1W					
3773	482205120333	33K00	5%	0,1W					
3774	482205120333	33K00	5%	0,1W					
3775	482205120333	33K00	5%	0,1W					
3776	482205120333	33K00	5%	0,1W					
3777	482205120333	33K00	5%	0,1W					
3778	482205120333	33K00	5%	0,1W					
3779	482205120333	33K00	5%	0,1W					

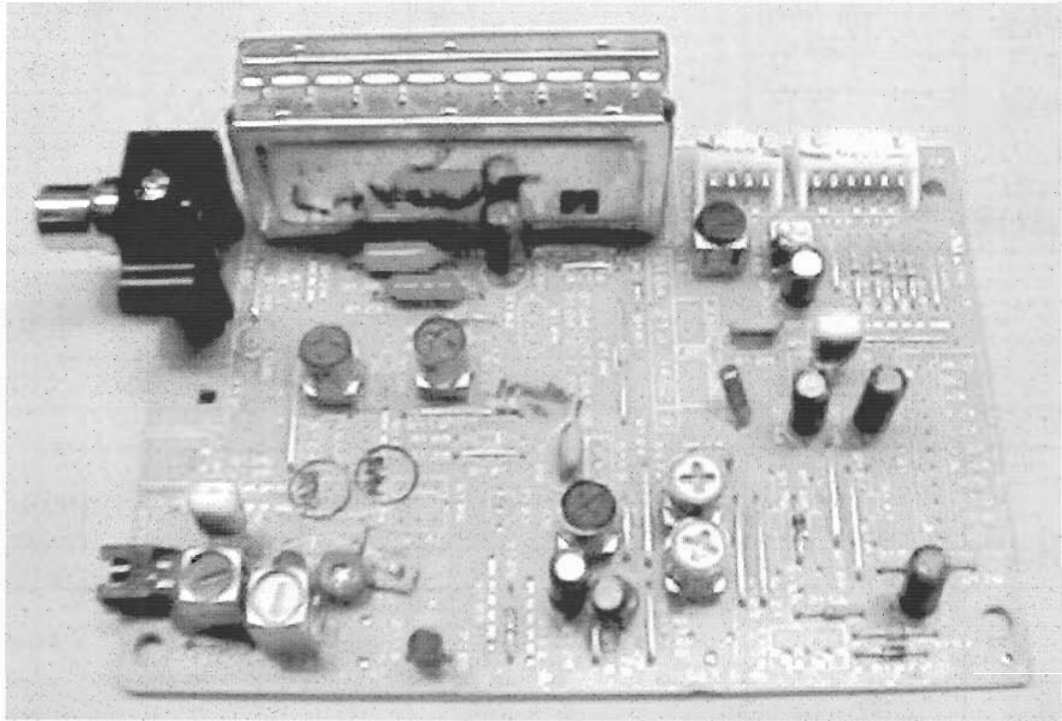

TUNER 95 BOARD

TABLE OF CONTENTS

Adjustment table	7A-2
Blockdiagram	7A-3
Component layout	7A-4
Circuit diagram	7A-5
Partslist	7A-6

TUNER 95 bis Adjustment Table (FM, MW, LW with Frame antenna)


Waverange	Input frequency	Input	Set tuned to	Adjust	Output	Scope / Voltmeter
VARICAP ALIGNMENT						
FM (50) 87.5 - 108 MHz			108 MHz	check	6	7 ... 9V
			87.5 MHz	check		1.3 ... 2V
MW (9) 531 - 1602 kHz			1602 kHz	5123		8.3V ± 0.2V
			531 kHz	check		1V ± 0.4V
LW (3) 153 - 279 kHz			279 kHz	5122		8.3V ± 0.2V
			153 kHz	check		1V ± 0.4V
FM – DETECTION						
FM	98 Mhz 1mV continuous wave short pin 21 (IC7101) to ground	A	98 MHz	5107	1 2	0mV ± 3mV
FM – VCO						
FM	98 Mhz 1 mV continuous wave	A	98 MHz	3142	3	152kHz ± 1 kHz
DISTORTION						
FM	98 Mhz 1 mV 90 % L + 9 % pilot mod = 1kHz	A	98MHz	mixcoil inside Tuner 1110	4	Distortion minimum
AM – IF						
MW	450kHz Δf = 10kHz Low as possible Swept signal		MW	5111	7	symmetrical and max. height
	5112					
	450kHz continuous wave			C	5114	1 2
AM - RF						
MW	558kHz Mod = 1kHz 30 % AM 1494 kHz	B	558kHz	5102	7	MAX
			1494kHz	2106		
LW	198kHz mod = 1kHz 30 % AM		*	198kHz		5103


* Signal send via a frame antenna
(..) = tuning grid in kHz

repeat

adjtable for 3104 217 04121/04341


BLOCKDIAGRAM

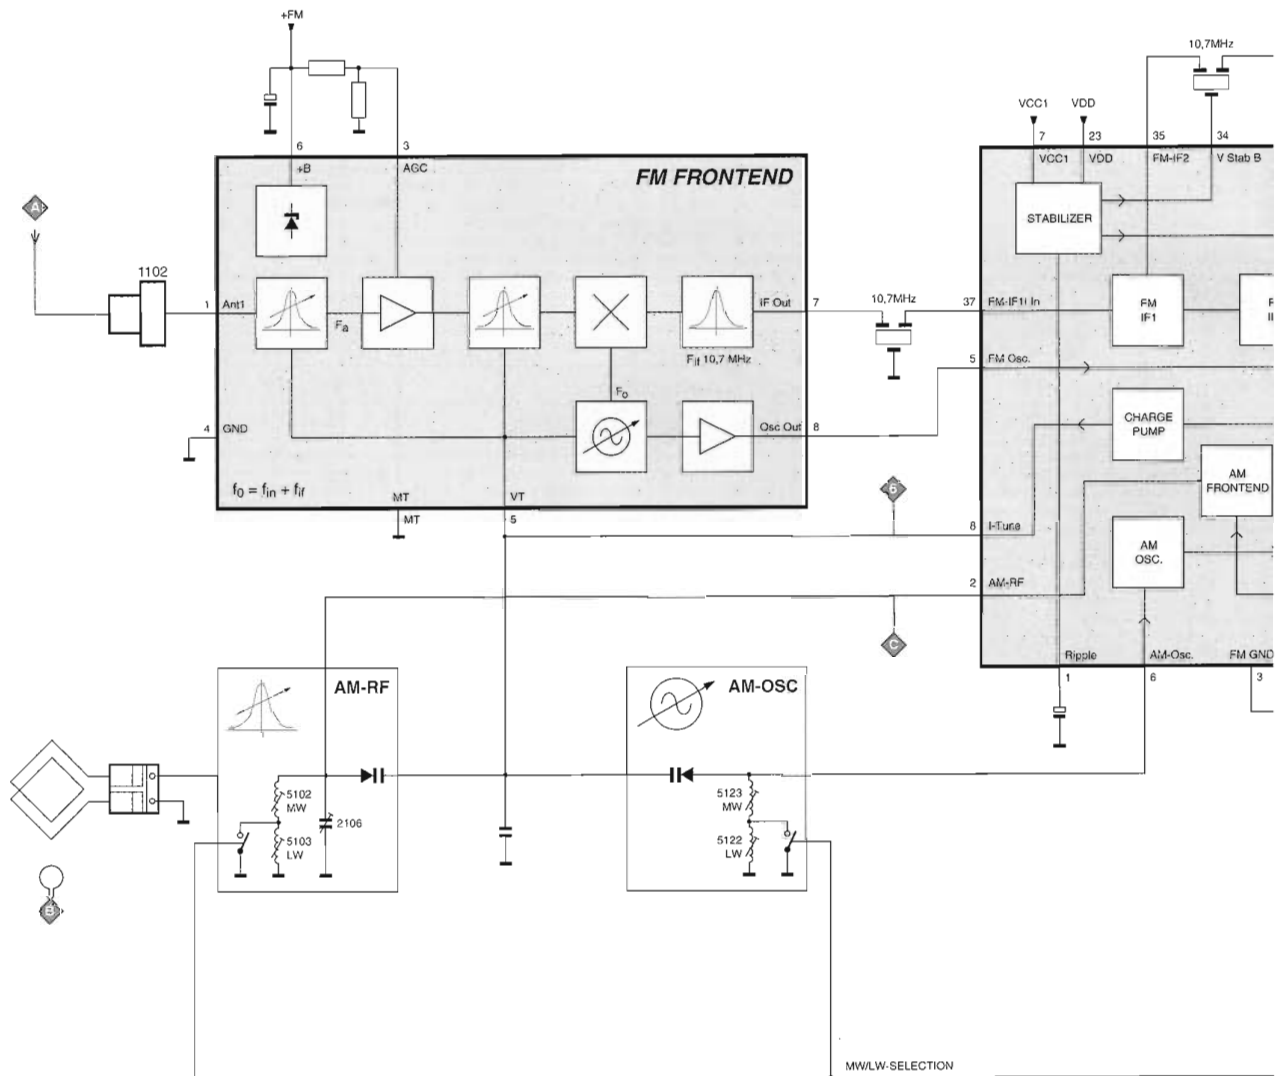

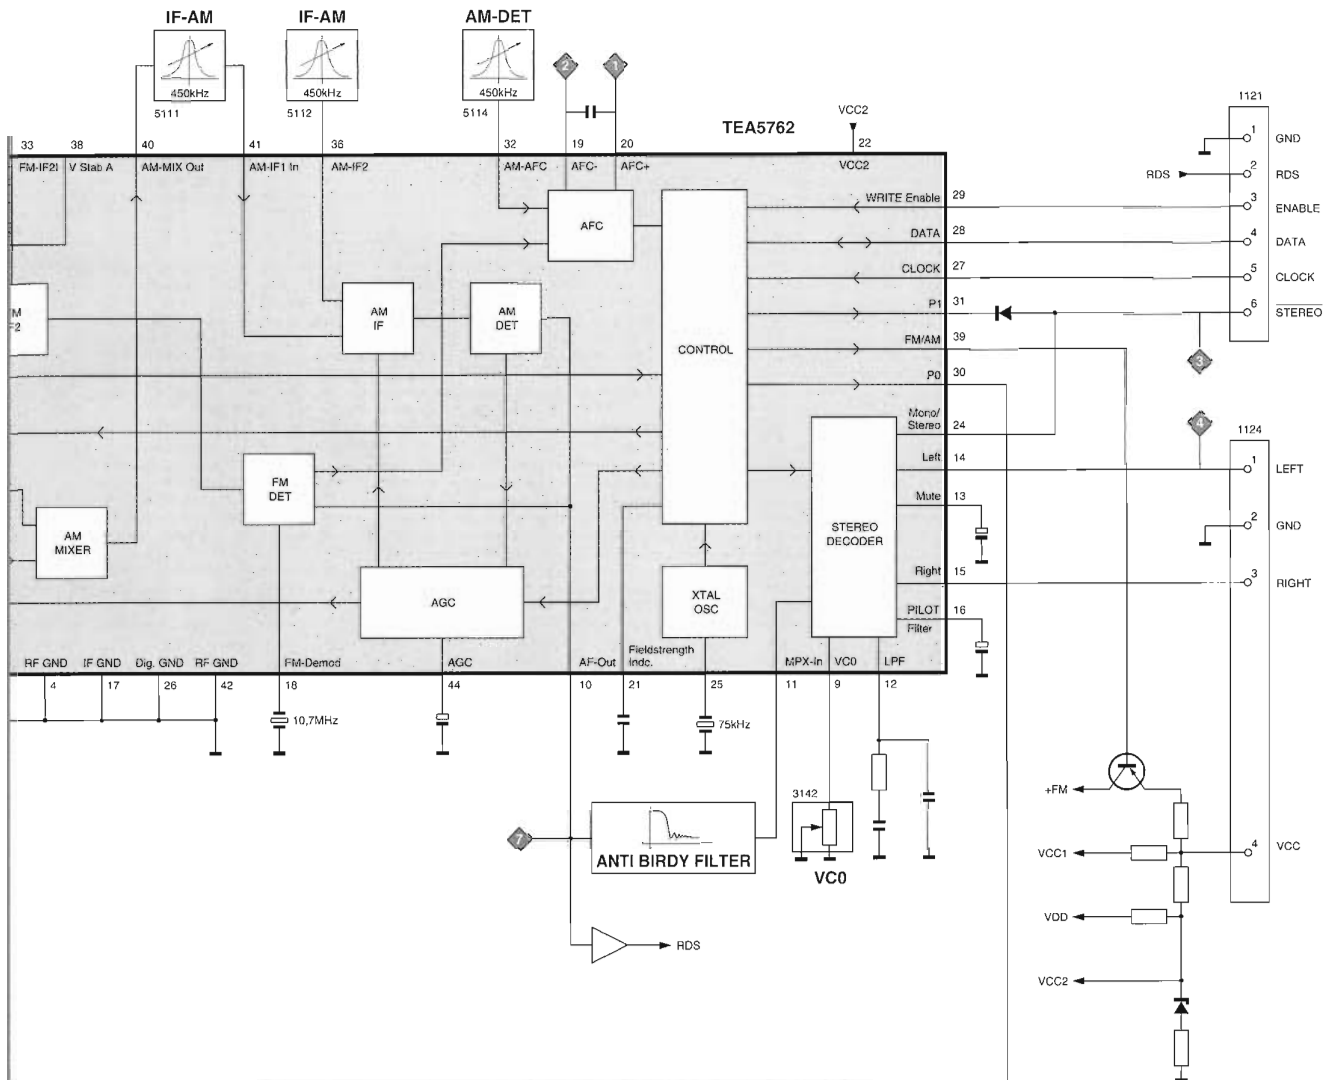


1102	F4	2107	C4	2128	C7	2136	G10	2144	E10	2160	E9	3120	D6	3132	E5	3143	G8	3153
1103	C4	2108	C6	2129	C8	2137	E11	2145	G11	2161	E9	3123	E4	3134	E5	3144	H9	3154
1110	G7	2109	C5	2130	F8	2138	E10	2147	G11	2162	C11	3124	E5	3137	G5	3145	F9	3155
1121	H11	2120	F5	2131	F9	2139	E8	2148	E9	3103	H6	3125	C7	3138	D9	3146	B10	3158
1124	H9	2122	E6	2132	F9	2140	F10	2150	F8	3104	G6	3128	F6	3139	F8	3147	H9	3159
1126	G10	2123	F6	2133	F10	2141	E10	2151	F9	3107	G7	3129	E6	3140	H8	3150	C11	3160
2102	G7	2125	G6	2134	G10	2142	E9	2152	F9	3108	C6	3130	E6	3141	G9	3151	C10	3161
2106	C5	2127	F9	2135	G11	2143	C10	2158	D10	3109	B7	3131	C6	3142	G10	3152	G9	3162

TUNER 95 bis Combi: Copper side view

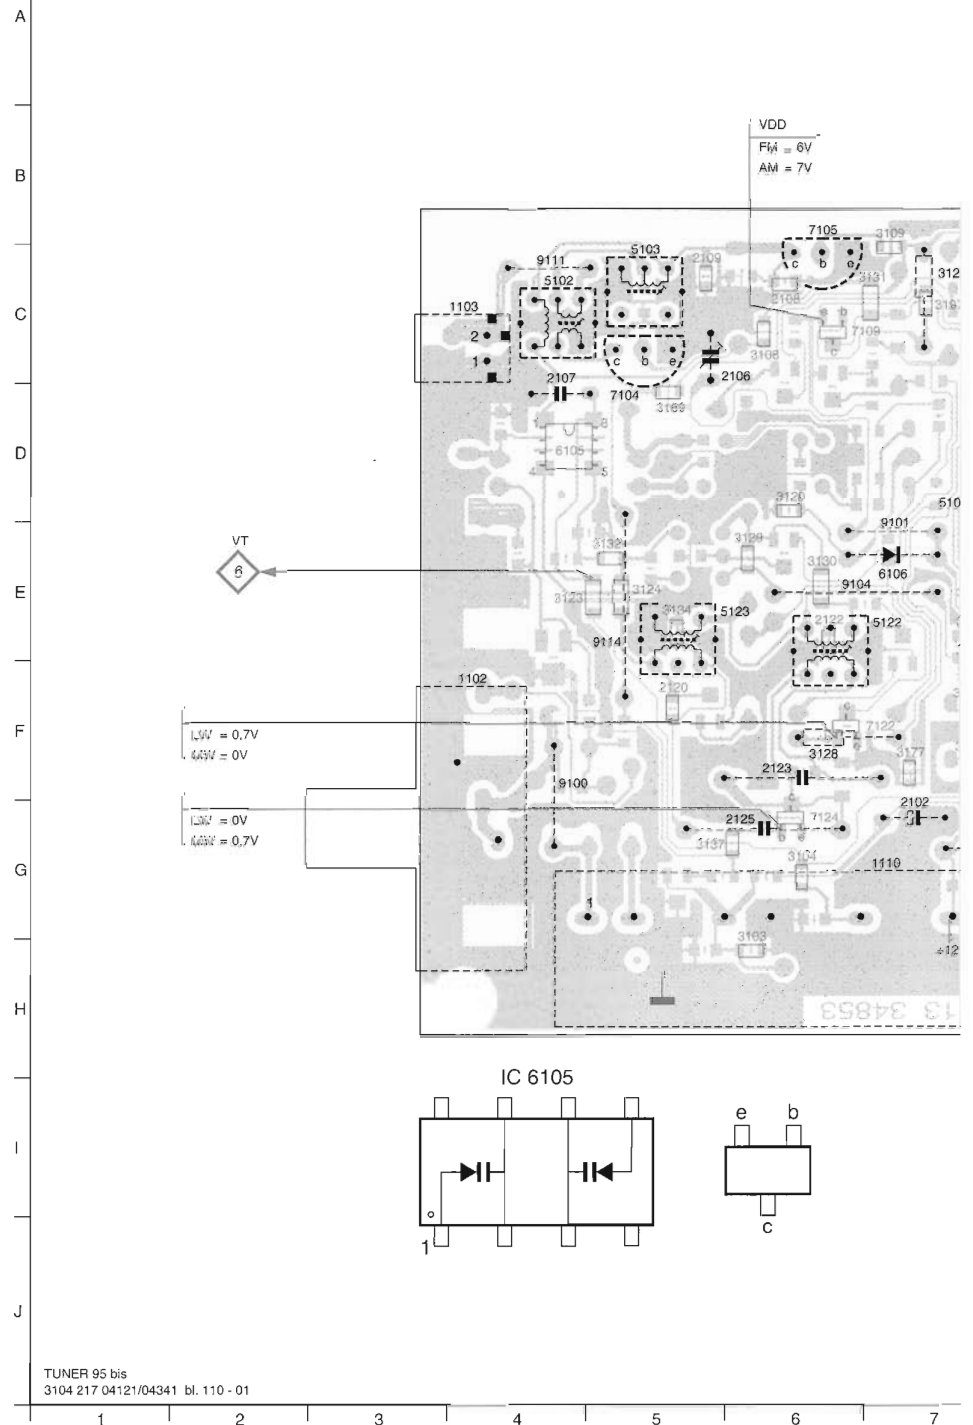


G9	3163	F8	3176	D9	3188	G11	5111	C8	6106	E7	7110	D11	9108	G11	9121	D9
C10	3164	C11	3177	F7	3192	D8	5112	C9	6107	B10	7122	F7	9111	C4	9123	D9
C10	3165	D8	3178	B6	3197	C7	5114	D8	6120	D10	7124	G6	9114	E5	9125	D8
G11	3167	F8	3181	D8	5102	C4	5115	G9	7101	E9	9100	F4	9115	C8	9126	C8
G11	3169	D5	3183	E7	5103	C5	5121	E9	7103	G9	9101	E7	9116	G8		
G11	3171	D11	3184	E7	5107	F10	5122	E7	7104	D5	9102	D10	9118	G10		
G11	3172	F7	3185	E7	5109	D7	5123	E5	7105	B6	9104	E6	9119	G7		
D9	3173	F7	3186	G8	5110	E9	6105	D4	7109	C6	9107	F11	9120	D10		

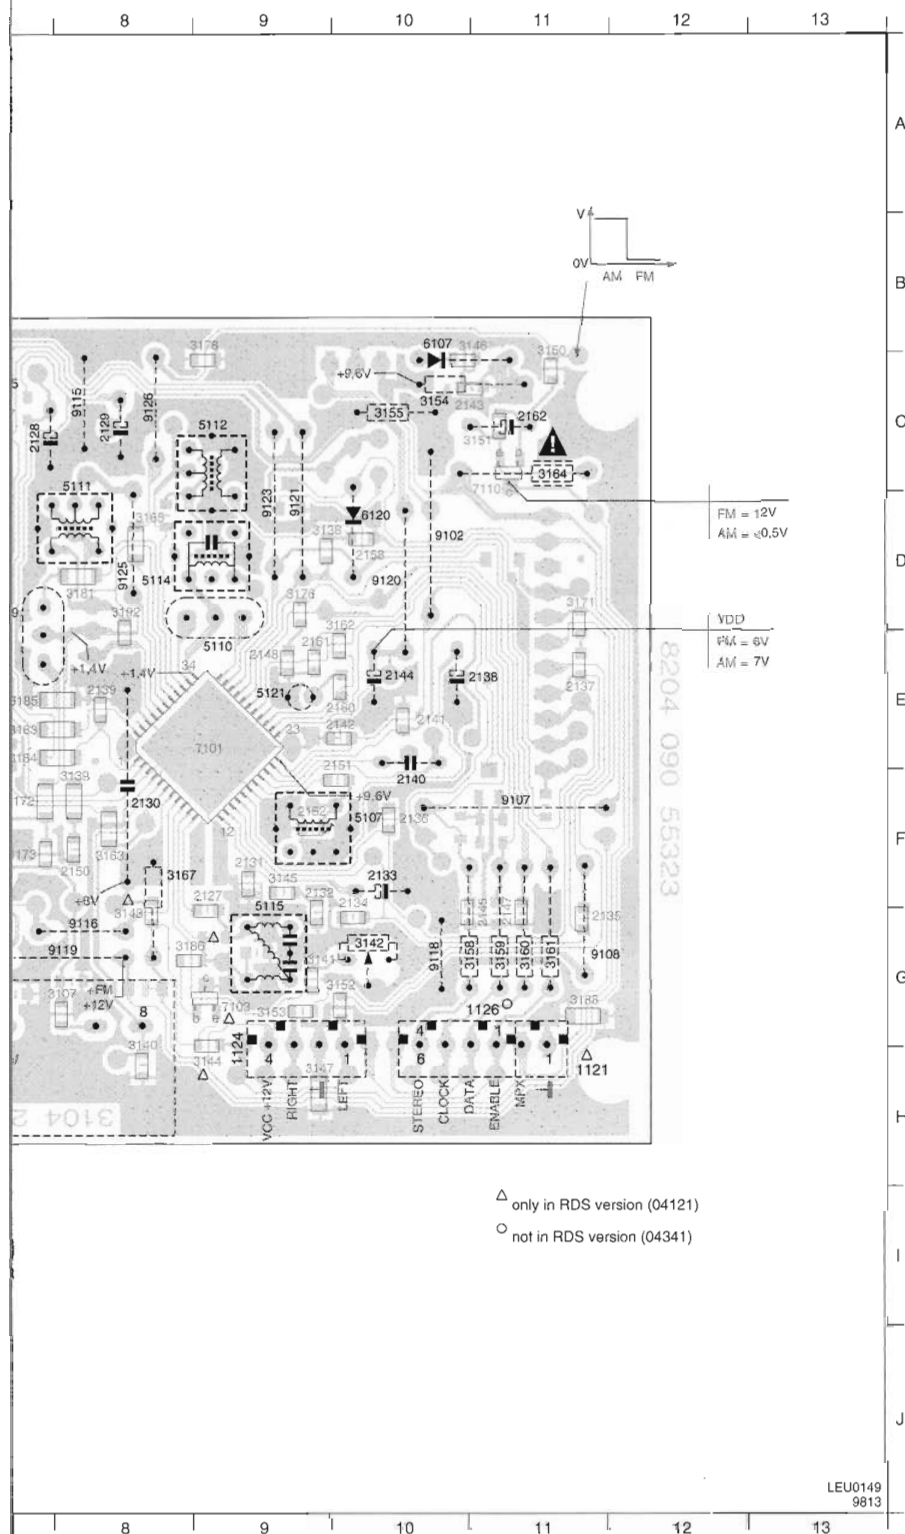



3141 I16 3145 I17 3151 I20 3155 J20 3161 D19 3167 I20 3177 M10 3184 I8 3192 C12 5107 J12 5112 C12 5122 L7 6106 H5 7103 K17 7110 I19
 3142 I16 3146 L20 3152 F20 3158 E19 3162 I15 3169 L5 3178 N20 3185 I13 3197 L11 5109 B6 5114 C13 5123 K7 6107 K20 7104 J2 7122 L9
 3143 K17 3147 N20 3153 G20 3159 E19 3163 J8 3172 B6 3181 C7 3186 K16 5102 I3 5110 C9 5115 J15 6105a I5 6120 E17 7105 K2 7124 L6
 3144 K17 3150 H19 3154 J20 3160 D19 3164 I20 3173 B6 3183 I13 3188 M20 5103 L4 5111 C11 5121 I15 6105b I6 7101 C15 7109 L10

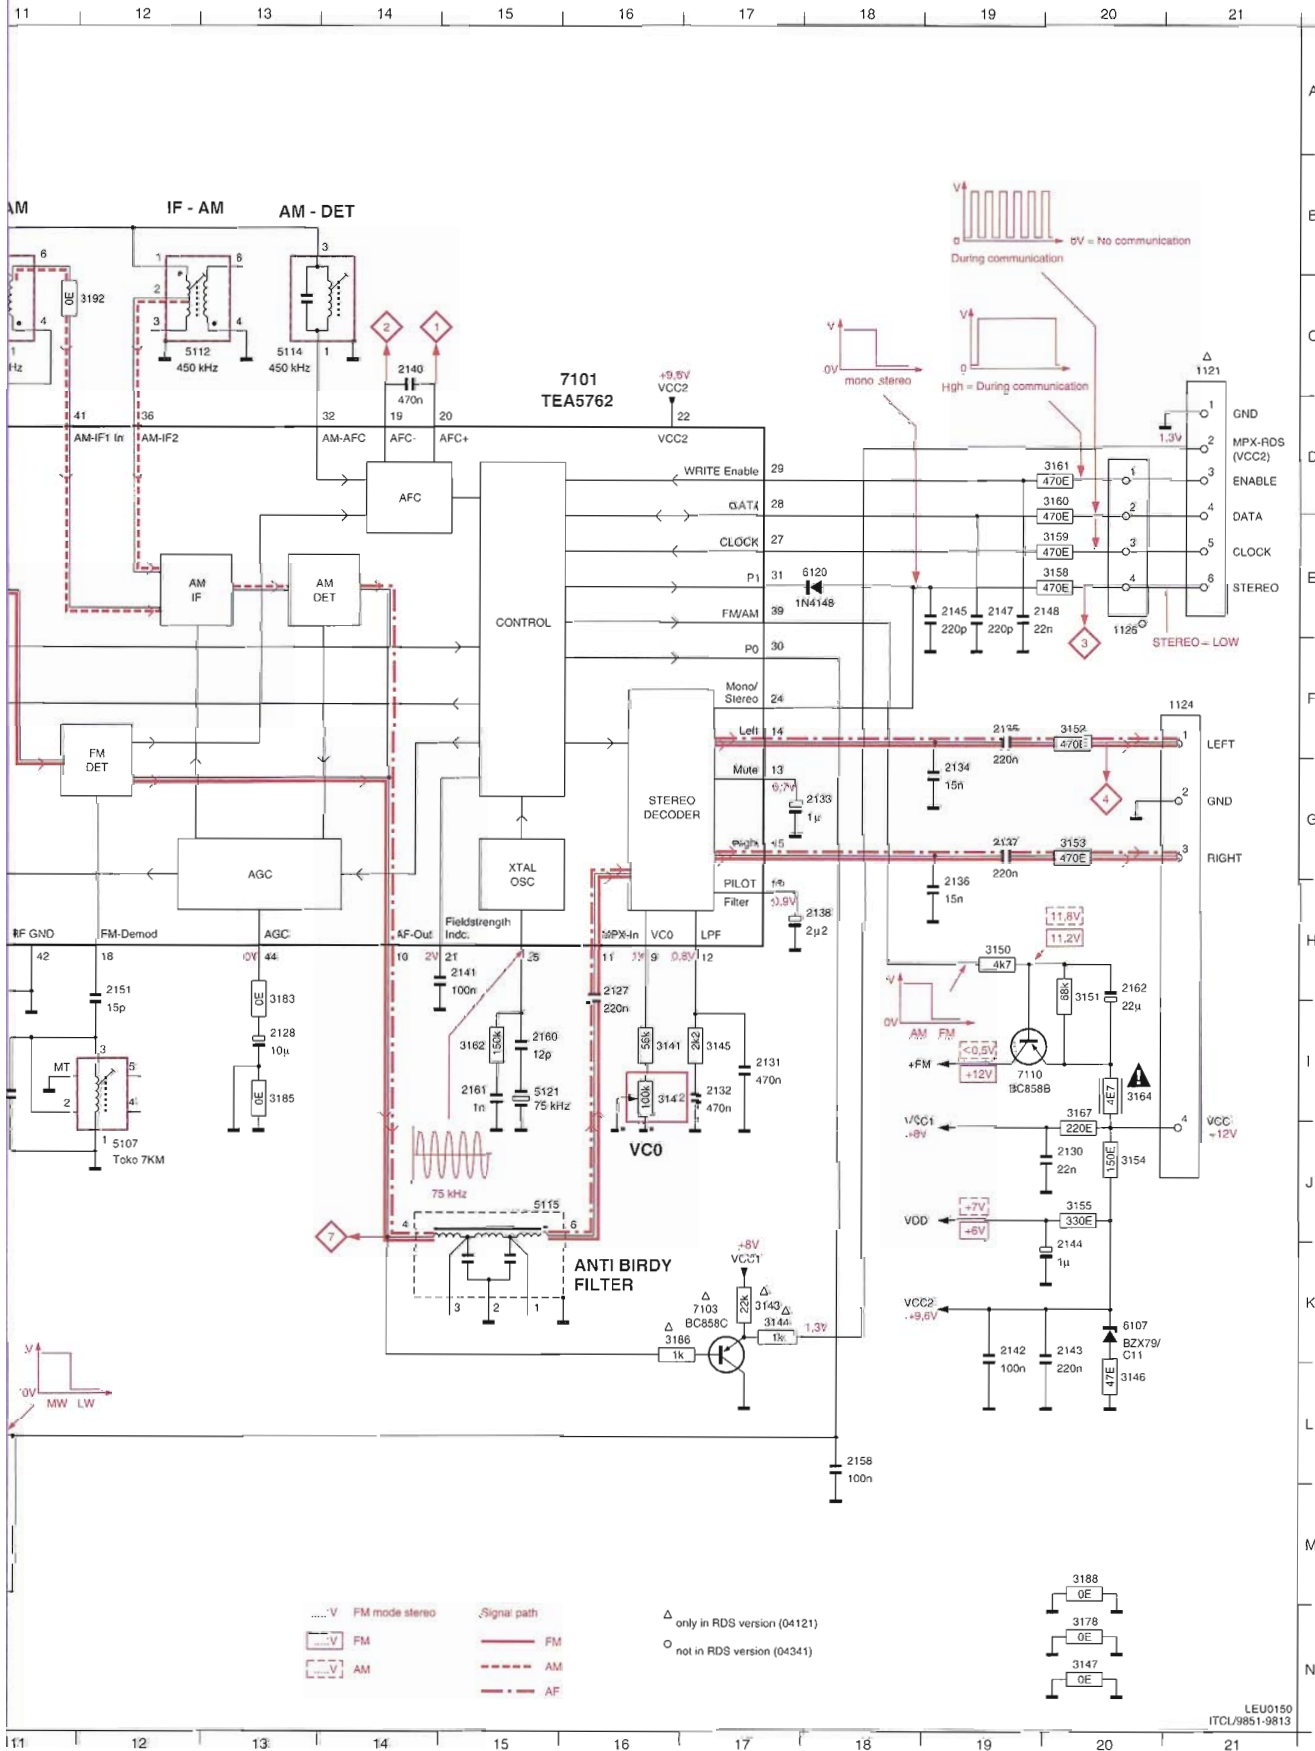LEU0150
ITCL/9851-9813

ELECTRICAL PARTSLIST - TUNER 95 BOARD**MISCELLANEOUS**

1102 4822 267 10283 YKD31-0432
 1103 4822 265 31184 S2B-XH-A-BK
 1110 4822 210 10739 FE415-G23

CAPACITORS

2102 4822 124 80791 470UF20%16V
 2106 4822 125 60102 5P2-30P N750100V
 2107 4822 121 51252 470NF 5%63V
 2108 4822 126 13695 82PF 1% NP063V
 2109 5322 122 32658 22PF 5% 50V

 2120 5322 122 32659 33PF5%50V
 2122 5322 126 10465 3,9NF 10% X7R 50V 08
 2123 4822 121 10766 390PF 1% 630V KP464
 2125 4822 121 10578 560P1%630V
 2127 4822 122 32927 220NF +80-20%Y5V 50V

 2128 4822 124 41579 10UF 20% 50V
 2129 4822 124 40242 1UF20%63V
 2130 4822 126 11585 22NF+80-20% Y5V 25V
 2131 4822 122 33325 470NF 16V
 2132 4822 122 33325 470NF 16V

 2133 4822 124 40242 1UF20%63V
 2134 4822 126 13188 15NF 5% X7R63V
 2135 4822 122 32927 220NF +80-20%Y5V 50V
 2136 4822 126 13188 15NF 5% X7R63V
 2137 4822 122 32927 220NF +80-20%Y5V 50V

 2138 4822 124 41576 2,2UF 20% 50V
 2139 4822 126 10002 100NF20%Y5V 25V
 2140 4822 121 51252 470NF 5%63V
 2141 4822 122 31947 100NF20%Y5V 63V
 2142 4822 122 31947 100NF20%Y5V 63V

 2143 4822 122 32927 220NF +80-20%Y5V 50V
 2144 4822 124 40242 1UF20%63V
 2145 4822 122 33575 220PF5%NPO50V
 2147 4822 122 33575 220PF5%NPO50V
 2148 4822 122 33809 22NF20%Y5V 50V

 2150 4822 122 31947 100NF20%Y5V 63V
 2151 4822 126 14236 50V 15P 5%
 2152 4822 126 13695 82PF 1% NP063V
 2158 4822 122 31947 100NF20%Y5V 63V
 2160 4822 122 32139 12PF 2%NP0 63V

 2161 5322 122 34123 1NF10%X7R 50V
 2162 4822 124 81151 22UF 50V

RESISTORS

3103 4822 051 20008 0R00 JUMP. (0805)
 3104 4822 051 10102 1K002% 0,25W
 3107 4822 051 20829 82R005%0,1W
 3108 4822 117 11449 2K2 1%0,1W
 3109 4822 117 11449 2K2 1%0,1W

 3110 4822 051 20008 0R00 JUMP. (0805)
 3111 4822 051 20008 0R00 JUMP. (0805)
 3120 4822 051 20008 0R00 JUMP. (0805)
 3123 4822 051 10008 0R005% 0,25W
 3124 4822 051 10008 0R005% 0,25W

 3125 4822 116 83864 10K5%0,5W
 3128 4822 116 52256 2K2 5%0,5W
 3129 4822 051 20008 0R00 JUMP. (0805)
 3130 4822 051 10008 0R005% 0,25W
 3131 4822 051 10008 0R005% 0,25W

 3132 4822 051 20008 0R00 JUMP. (0805)
 3134 4822 051 20223 22K005%0,1W
 3135 4822 051 20008 0R00 JUMP. (0805)
 3137 4822 117 10833 10K1%0,1W
 3138 4822 051 20008 0R00 JUMP. (0805)

 3139 4822 051 10008 0R005% 0,25W
 3140 4822 051 20331 330R005%0,1W
 3141 4822 117 11148 56K1%0,1W
 3142 4822 100 11163 100K30%LIN0,1W
 3143 4822 051 20223 22K005%0,1W

 3144 4822 051 10102 1K002% 0,25W
 3145 4822 117 11449 2K2 1%0,1W
 3146 4822 051 20479 47R005%0,1W
 3147 4822 051 10008 0R005% 0,25W
 3150 4822 051 20472 4K705%0,1W

 3151 4822 051 20683 68K005%0,1W
 3152 4822 051 20471 470R005%0,1W
 3153 4822 051 20471 470R005%0,1W
 3154 4822 116 83868 150R5%0,5W
 3155 4822 116 52219 330E5%0,5W

 3158 4822 116 83883 470R5%0,5W
 3159 4822 116 83883 470R5%0,5W
 3160 4822 116 83883 470R5%0,5W
 3161 4822 116 83883 470R5%0,5W
 3162 4822 051 20224 220K005%0,1W

 3163 4822 051 10008 0R005% 0,25W
 3164 4822 052 10478 4R705% 0,33W
 3165 4822 051 10008 0R005% 0,25W
 3167 4822 116 83872 220R5%0,5W
 3169 4822 051 20008 0R00 JUMP. (0805)

 3171 4822 051 20008 0R00 JUMP. (0805)
 3172 4822 051 10008 0R005% 0,25W
 3173 4822 051 20008 0R00 JUMP. (0805)
 3176 4822 051 20008 0R00 JUMP. (0805)
 3177 4822 051 20223 22K005%0,1W

ELECTRICAL PARTSLIST - TUNER 95 BOARD**RESISTORS**

3178	4822 051 10008	0R005% 0,25W
3181	4822 051 10008	0R005% 0,25W
3183	4822 051 10008	0R005% 0,25W
3184	4822 051 10008	0R005% 0,25W
3185	4822 051 10008	0R005% 0,25W

3186	4822 051 10102	1K002% 0,25W
3188	4822 051 10008	0R005% 0,25W
3192	4822 051 20008	0R00 JUMP. (0805)
3197	4822 051 20472	4K705%0,1W

COILS & FILTERS

5102	4822 157 71634	MW AERIAL
5103	4822 157 71635	LW AERIAL
5107	4822 157 11443	2U4 10M7
5109	4822 157 71639	SFE10,7MJA10H-A-TF21
5110	4822 242 70665	SFE10,7MS3-A

5111	4822 158 60511	AM-1F
5112	4822 157 70302	F7MCS-12216N
5114	4822 157 70302	F7MCS-12216N
5115	4822 157 71636	BIRDIE COIL
5121	4822 242 10261	T6252F00 (75KHZ)

5122	4822 157 60517	110,00 UH8%
5123	4822 157 60517	110,00 UH8%


DIODES

6105	4822 130 83075	HN1V02H-B
6106	4822 130 30621	1N4148
6107	4822 130 34488	BZX79-B11
6120	4822 130 30621	1N4148

TRANSISTORS & INTERGRATED CIRCUITS

7101	4822 209 90315	TEA5762H/V1
7103	4822 130 42513	BC858C
7104	5322 130 44779	BC338-40
7105	5322 130 44779	BC338-40
7109	5322 130 41983	BC858B

7110	5322 130 41983	BC858B
7122	5322 130 42136	BC848C
7124	5322 130 42136	BC848C

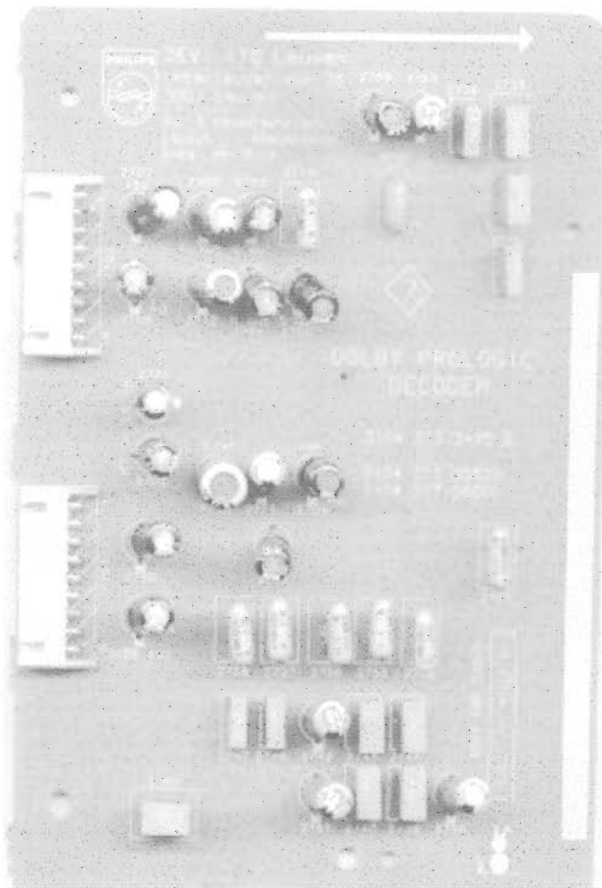

DOLBY PROLOGIC BOARD

TABLE OF CONTENTS

Test description	8-2
Circuit diagram	8-5
Component layout	8-6
Partslist	8-7

DOLBY PROLOGIC TEST DESCRIPTION

- The intention of this description is to explain the most important performance measurements for **DPL (Dolby Pro-Logic)** sets for service.
- Test instruments (recommended) :
 - Dolby Prologic test CD 4822 395 10216
 - AC mv meters (4x) L, C, R, S
 - Oscilloscope (double beam)
 - Distortion meter
 - CD player.

WARNING: Be sure that the ground connection (-) of each instrument is not connected with the safety earth $\perp$ connection. To avoid damage to output amplifiers (balance type) Use only cinch (input) ground connection

STARTING CONDITION :

- Replace the loudspeakers for all four output amplifiers with loud resistors according the output impedance for each amplifier (or use 8 Ω as standard loudresistor).
- Set volume to min. position
- Set Bass + Treble at 0 db .
- Select Surround <Prologic> .
- Select "LARGE" size for Center channel.
- Set time delay in Surround channel at 20 msec.
- Dolby Prologic test CD in CD player.

SERVICE TEST DESCRIPTION

Test 1 : Output and balance setting for all four channels

Select track 2 :

Adjust L, C, R and S for $\approx 1W$ output on the loudresistor with master volume. Adjust with L/R balance and Centre/Surround "TRIM" all four channels to equal level (equal meter readings)

Note: 1Watt output corresponds with 2.83V across 8 Ω

$$P = U^2/R \rightarrow U = \sqrt{P \times R} = \sqrt{1 \times 8} = 2,83V$$

Test 2 : Frequency response for Left and Right channel

Requirement : -3 dB points at ≤ 50 Hz and ≥ 15 kHz

Select track 3:

measure (and note) the overall gain of Left channel across the load resistor.

Select track 4:

measure (and note) the overall gain on Right channel across the load resistor.

Test 3 : Frequency response for Center channel

2 possibilities :

1- Center size "LARGE" requirements : -3 dB at ≤ 50 Hz and ≥ 15 kHz (same as L/R requirements)

2- Center size "SMALL" requirements : -3 dB point at ± 100 Hz and ≥ 15 kHz (the difference is the roll-off behaviour of the bass frequencies).

Select track 5 :

measure (and note) the overall gain of Center channel across the load resistor in "LARGE" size (only in sets with this option) and repeat this measurement in "SMALL" size.

Test 4 : Frequency response for Surround channel

Surround requirements : -3 dB point at ≤ 100 Hz and ± 7 kHz (6 kHz ... 8 kHz)

The difference is the roll-off behaviour of the high treble frequencies.

Select track 6 :

measure (and note) the overall gain of Surround channel across the loud resistor.

Test 5 : *Modified Dolby B type NR decoding freq. response of the Surround channel*

Requirement : Roll off behaviour at ± 5 kHz related to 100 Hz. In this case use 100 Hz as 0 dB reference gain.

Select track 14:

measure (and note) the overall gain of Surround channel across the load resistor.

Note : The output level on track 14 = -35 dB below the 1W output reference of the Surround channel.

Test 6 : *Total harmonic distortion measurements for Left, Center, Right, Surround channels for 1 Watt output*

Note : If necessary use a special CD test filter 20 Hz ... 20 kHz between the output channel and the distortion meter to prevent spurious products out of audio waves (> 20 kHz) from to the CD player in test.

Select track 3 :

Measure distortion at 1 kHz across the Left channel.

Output load resistor : requirement THD $< 0,3$ %

Select track 4 :

Measure distortion at 1 kHz across the Right channel.

Output load resistor : requirement THD $< 0,3$ %

Select track 5 :

Measure distortion at 1 kHz across the Center channel.

Output load resistor : requirements THD $< 0,3$ %

Center size "LARGE" (if exists) and repeat for center size "SMALL"

Select track 6 :

Measure distortion at 1 kHz across the Surround channel load resistor.

Note : time delay setting = 20 msec.

Requirement THD = $< 0,5$ %

Test 7: *Signal to noise measurements for Left output amplifier*

Select track 3 :

Use 1W output at 1 kHz on the Left channel output loud resistor as 0 dB reference.

Select track 13 :

(silence) and measure the S/N ratio. ---> with ccir/arm filter

Requirements for Left channel ≤ -65 dB

Test 8 : *Signal to noise measurements for Right output amplifier*

Select track 4 :

Use 1W output at 1 kHz on the Right channel output loud resistor as 0 dB reference.

Select track 13 :

(silence) and measure the S/N ratio.

Requirement for Right channel ≤ -65 dB

Test 9 : *Signal to noise measurements for Center output amplifier*

Select track 5 :

Use 1W output at 1 kHz on the Center channel (size "SMALL" or "LARGE")

Select track 13 :

(silence) and measure the S/N ratio.

Requirement for Center channel (size "SMALL" or "LARGE") ≤ -65 dB

Test 10 : *Signal to noise measurements for Surround output amplifier*

Select track 6 :

Use 1W output at 1 kHz on the Surround channel output loud resistor as 0 dB reference.

Select track 13 :

(silence) and measure the S/N ratio.

Requirement for Surround channel ≤ -55 dB (in all positions between 15 msec ... 30 msec in sets with variable time delay).

Cross-talk (channel separation) between adjacent and opposite channels

2 possibilities :

1- Centre size "LARGE" (use 1 kHz tone)

Test 11a:

Select track 3 :

For 1 kHz in Left channel and measure the crosstalk in Center, Right, Surround.

Requirement : < -25 dB

Test 12a :

Select track 4 for 1 kHz in Right channel and measure the crosstalk in Surround, Left, Center.

Requirement : < -25 dB

Test 13a :

Select track 5 :
For 1 kHz in Center channel and measure the crosstalk in Left, Right, Surround.

Requirement : < -25 dB

Test 14a :

Select track 6 :
For 1 kHz in Surround channel and measure the crosstalk in Left, Center, Right.
Requirement : < -25 dB

2- Centre mode "normal" (use 3 kHz or 1 kHz tone)

Test 11b :

Select track 3 :
For 3 kHz in Left channel and measure the crosstalk in Center, Right, Surround
Requirement : < -25 dB

Test 12b :

Select track 4 :
For 3 kHz in Right channel and measure the crosstalk in Surround, Left, Center
Requirement : < -25 dB

Test 13b :

Select track 5 :
For 3 kHz in Centre channel and measure the crosstalk in Left, Right, Surround
Requirement : < -25 dB

Test 14b :

Select track 6 :
For 1 kHz in Surround channel and measure the crosstalk in Left, Center, Right
Requirement : < -25 dB

Inputs overload test (headroom to visible clipping)**General :**

Before starting these tests set Master Volume -15 dB lower to make a new output reference (1W on loudresistors).
Requirement : check on scope for no visible signal clipping or measure THD <1,5 %

Test 15 :

Select track 7 :
Check the Left output signal between 20 Hz ... 20 kHz

Test 16 :

Select track 8 :
Check the Right output signal between 20 Hz ... 20 kHz

Test 17 :

Select track 9 :
Check the Center output signal
CENTER "SMALL" between 100 Hz ... 20 kHz
CENTER "LARGE" between 20 Hz ... 20 kHz

Test 18 :

Select track 11 :
Check the Surround output signal between 50 Hz ... 7 kHz

Test 19 : Center Mode Check

Select Center size "SMALL".
a - Select track 5 at 1 kHz :
Adjust the Center output again with master volume for 1W output as 0 dB reference.
b - Select on track 5 the 100 Hz :
Signal to check the roll-off behaviour at -3 dB on the Center output
c - Select on track 5 the 50 Hz :
Signal and measure on the Left and Right output channels.
The lost 50 Hz signal on the Center output is equally splitted and added to the L and R channels.

Test 20 : Center Mode Check

Select Center size "LARGE"
Repeat test 19 a,b and c
The difference is no roll off behaviour at 100 Hz (Center) and no splitted bass (50 Hz signal) added to L and R.

Test 21 : Center Mode Check

Select Center mode phantom = Center speaker "No"

Select track 5 (20 Hz ... 20 kHz) :

No output signals on the Center output or at least minimum -40 dB related to 1W outputs.

Measure now on the Left and Right output channels : the lost Center signals are equally splitted and added to these left and right channels (-3 dB)

Test 22 : 3 CH mode control

Select Front 3 stereo (Rear speaker "No")

Select track 6 (100 Hz ... 7 kHz):

No output signals on the Surround output channel or at least minimum -40 dB related to 1W output.

Measure now at the Left and Right output channels : the lost Surround signals are equally splitted and added to the Left and Right output channels (-3 dB)

Test 23 : 2 CH mode control (stereo)

Select Surround "OFF"

Select track 5 :

No output on Centre output channel

Select track 6 :

No output on Surround output channel

Test 24 : Time delay control in Surround channel

Principle description encoded burst signal spots (see fig. 1)

1- Tone burst 1 kHz during 1 msec with interval time at 20 msec are given at the same time to the L; R inputs.
(in phase 0°)

2- The next tone burst is given at the same time to the L R input, but in reverse phase to the R input (180°).

These 2 tone bursts are repeated continuously during 2 minutes.

Principle description decoded signal spots in Center/Surround channel

- In case of 20 msec time delay mode the results are shown in fig. 1 in Center and Surround channel.

The center spots in Center channel can be used as "Marker" spots (trigger signal) → repeated every 40 msec.

The delayed surround spots occur at the same time as the center spots (markers)

- When time delay mode is changed to 15 msec the delayed surround spots move to the left with respect to the centre mark spots.

- When time delay mode is changed to 25 msec or 30 msec the delayed surround spots move to the right with respect to the center spots.

- In case of no time delay ! (faulty condition) the surround spots fall just between 2 center markers spots (20 msec)

How to check with a double beam scope

WARNING: Be sure that the ground connection (-) of each instrument is not connected with the safety earth $\perp$ connection. To avoid damage to output amplifiers (balance type) Use only cinch (input) ground connection

- Select Pro Logic size "LARGE" or "SMALL" (phantom in case of no Center output.)

- Select 20 msec time delay in Surround channel.

- Adjust scope at 5 msec/division and trigger at A input

- Connect input A to Center channel (or L or R in case of phantom mode)

- Connect input B to Surround channel


- Adjust trigger level and the X position to set pulse A in the middle of the scope . see fig.2 (if L or R used in phantom mode choose the largest (amplitude) pulse. see fig 3

Select track 24:


Pulse A = 20 msec marker

Pulse B = delayed surround signal pulse

marker = A (adjust with X position)

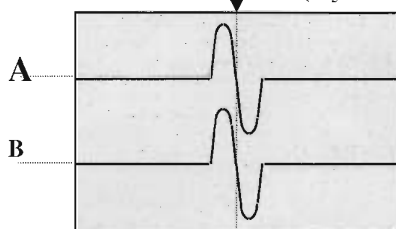

20msec time delay

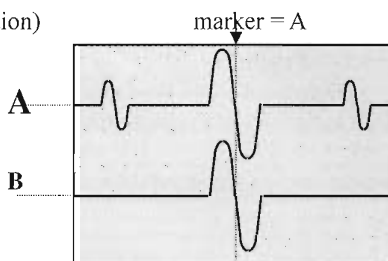

20msec in case of phantom mode

Fig 2

Fig 3

Change time delay to 15 msec (only in versions with variable delay).

the surround pulse in channel B moves to the left with respect to side from center marker (channel A) position.

Change time delay to 25 or 30 msec (versions with variable delay).

The surround pulse in channel B moves to the right with respect to center marker (channel A) position.

Time delay with track 6

Alternative methode :

The functional operation of the time delay can be made visible with a lisajous figure, with an single beam scope.

Connect X-direction on Surround output

Connect Y-direction on Left or Right output/input.

Note : be careful and use only 1 ground connected to scope.

Select track 6 (surround test) :

Make the lisajous figure visible on the scope (amplitude adjust) see fig. 4

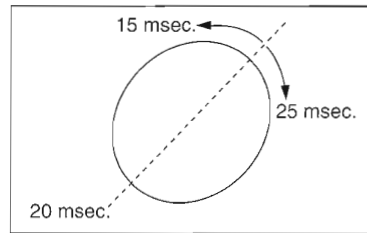


Fig 4

Lisajous out of phase
Time delay = OK

Note : in sets with variable time delay the ellipse of the lisajous figure must be always open. Changing the time delay changes the direction of the circle accordingly.

CHANNEL modes:

Surround OFF (Stereo) 2 channel mode

Signal on : L out (2703) and R out (2704)

Surround ON

-Prologic 4 channel mode → all four outputs are used

Signal on : L out (2703), R out (2704), Center out (2705), Surround (2706).

-Front 3 stereo → No surround speaker available

The surround information is equelly to the left and right outputs.

Signal on : L out (2703), R out (2704), Center out (2705).


-HALL

Signal on : L out (2703), R out (2704), Surround (2706).


Subwoufer out. not in all versions


Signal on : Subwoofer out (2788).

(....) as indicated on the component side of the DPL decoder board.

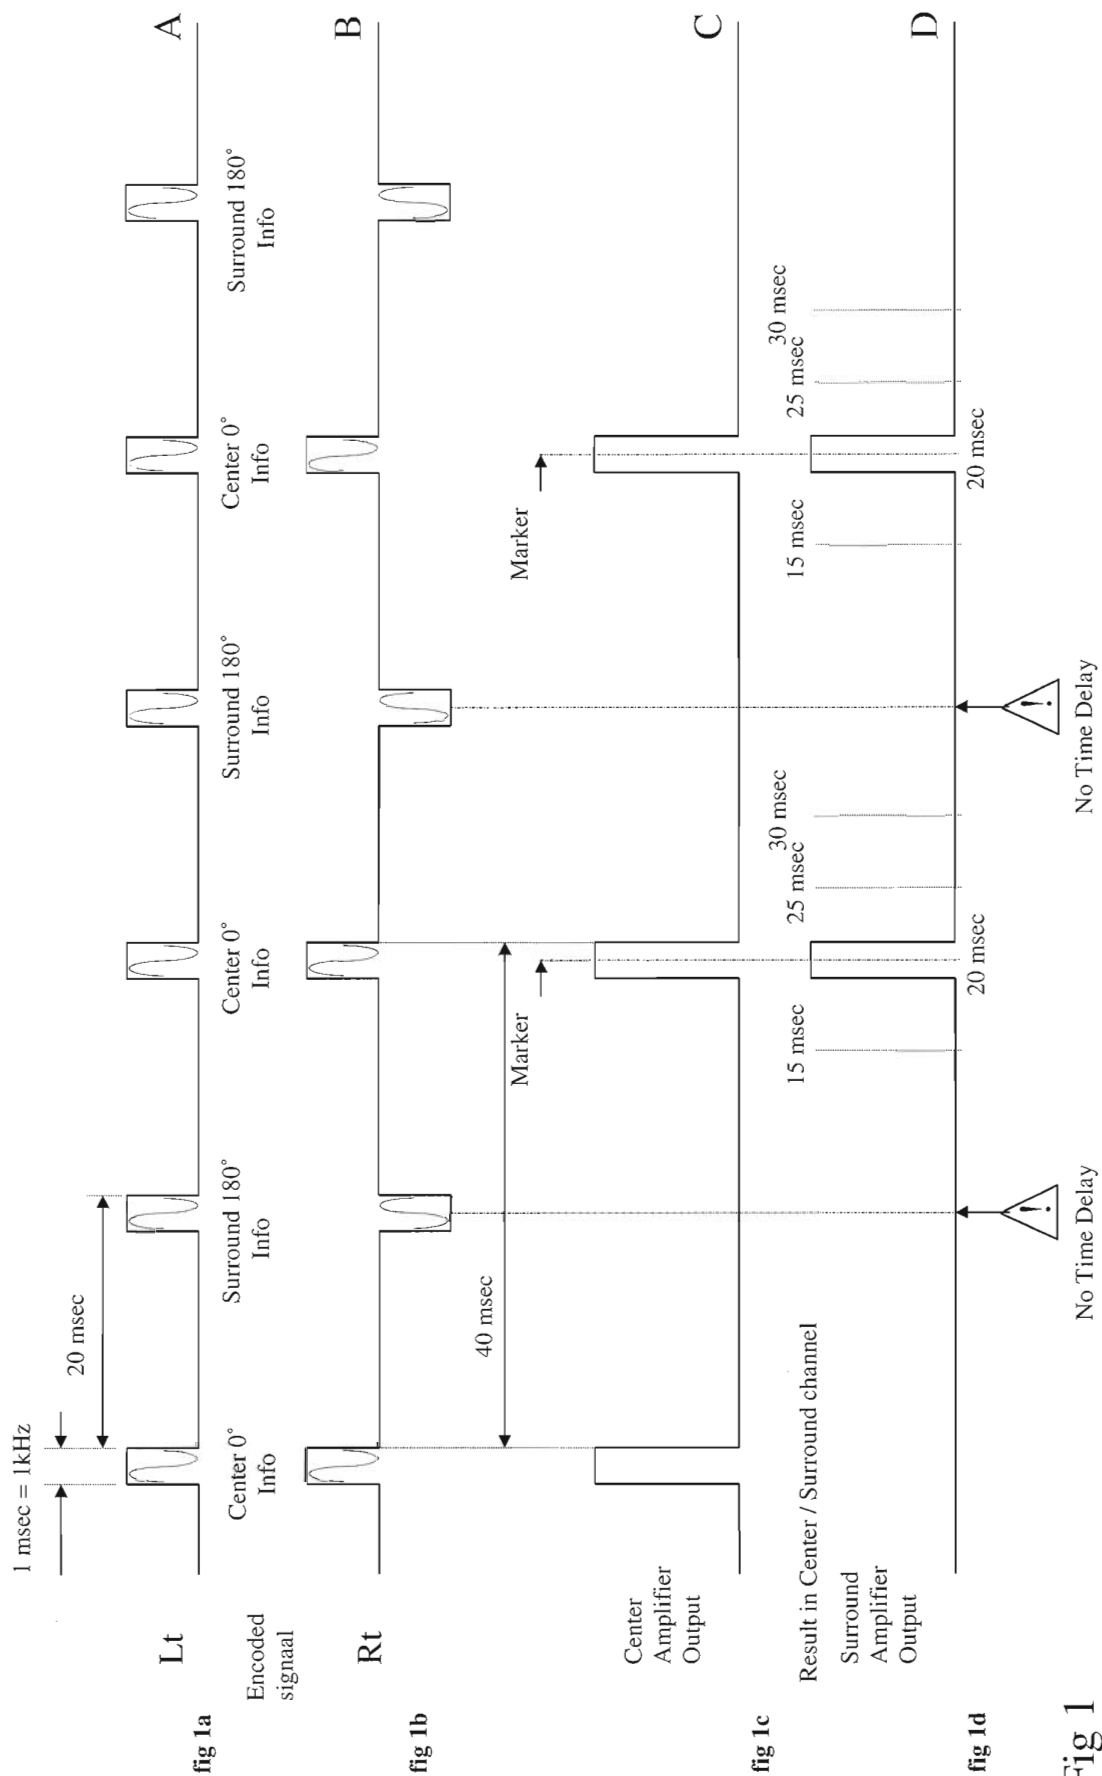


DOLBY PROLOGIC - CIRCUIT DIAGRAM

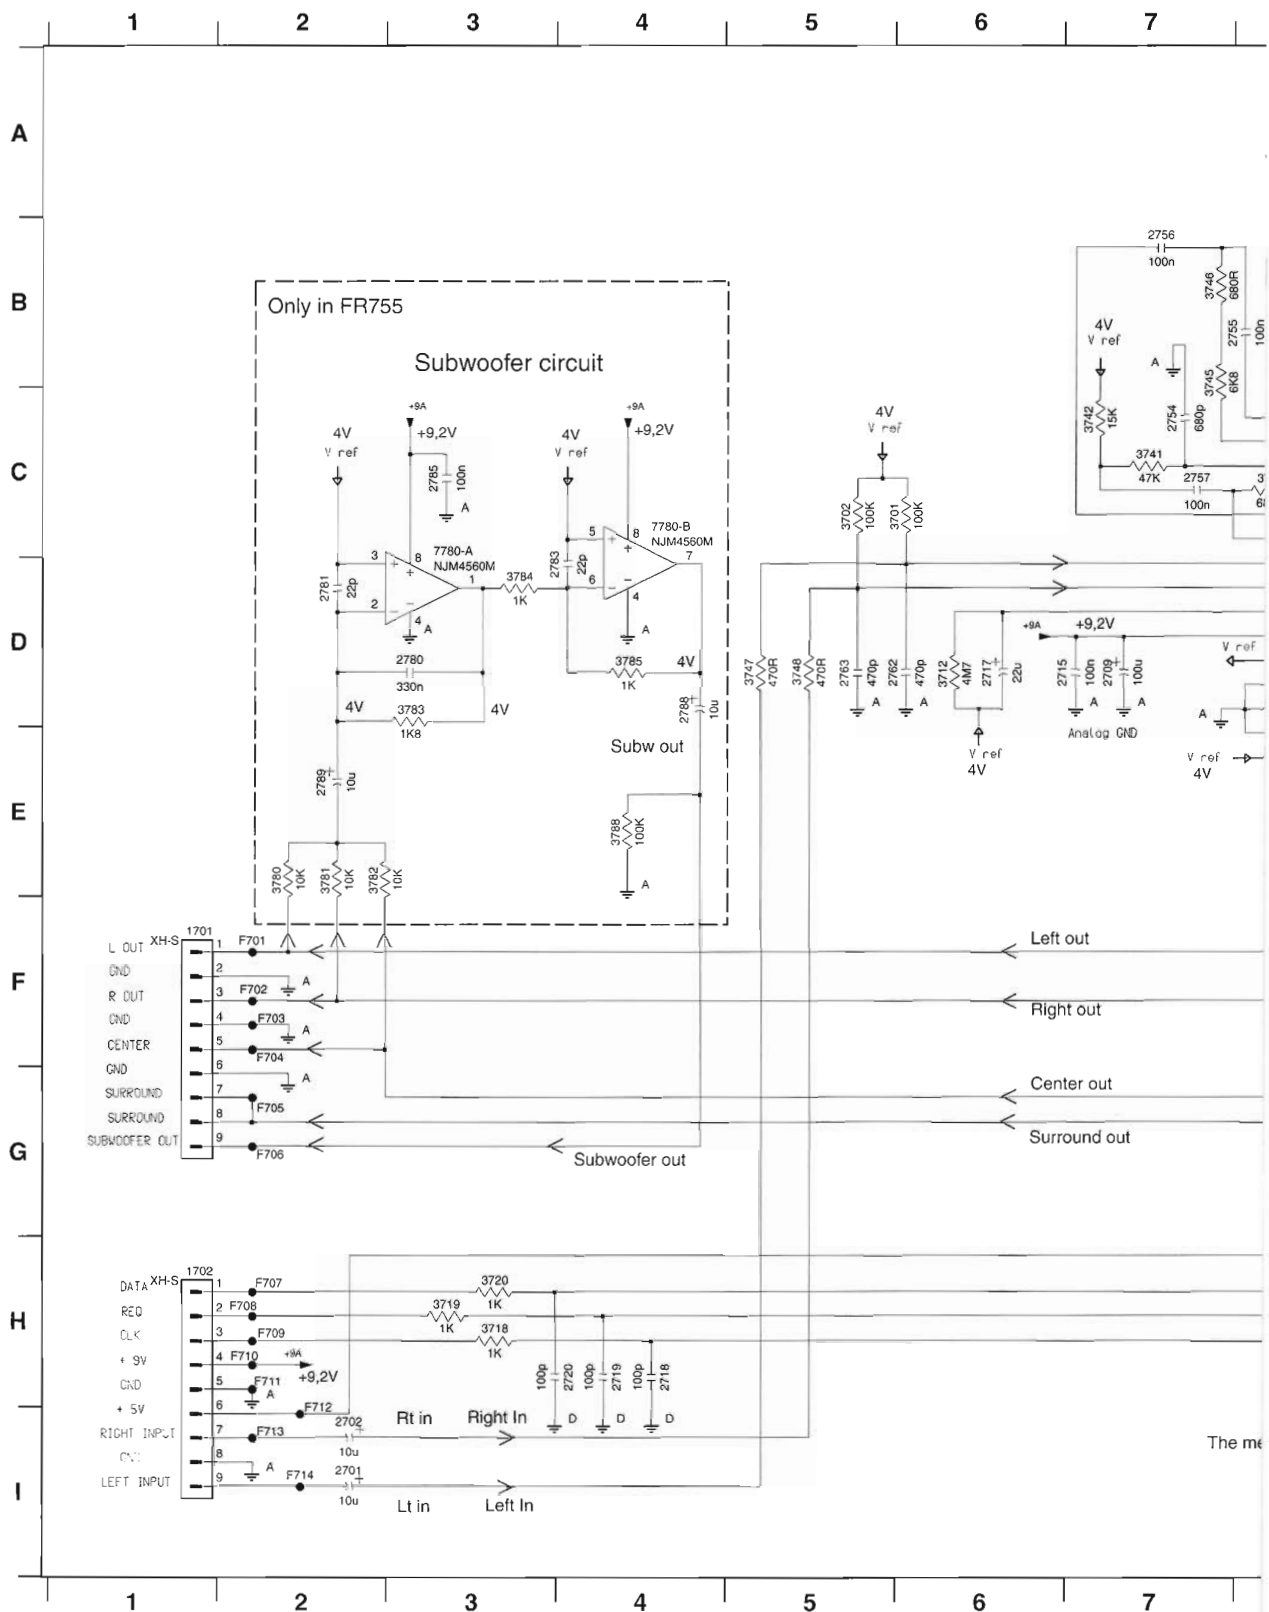


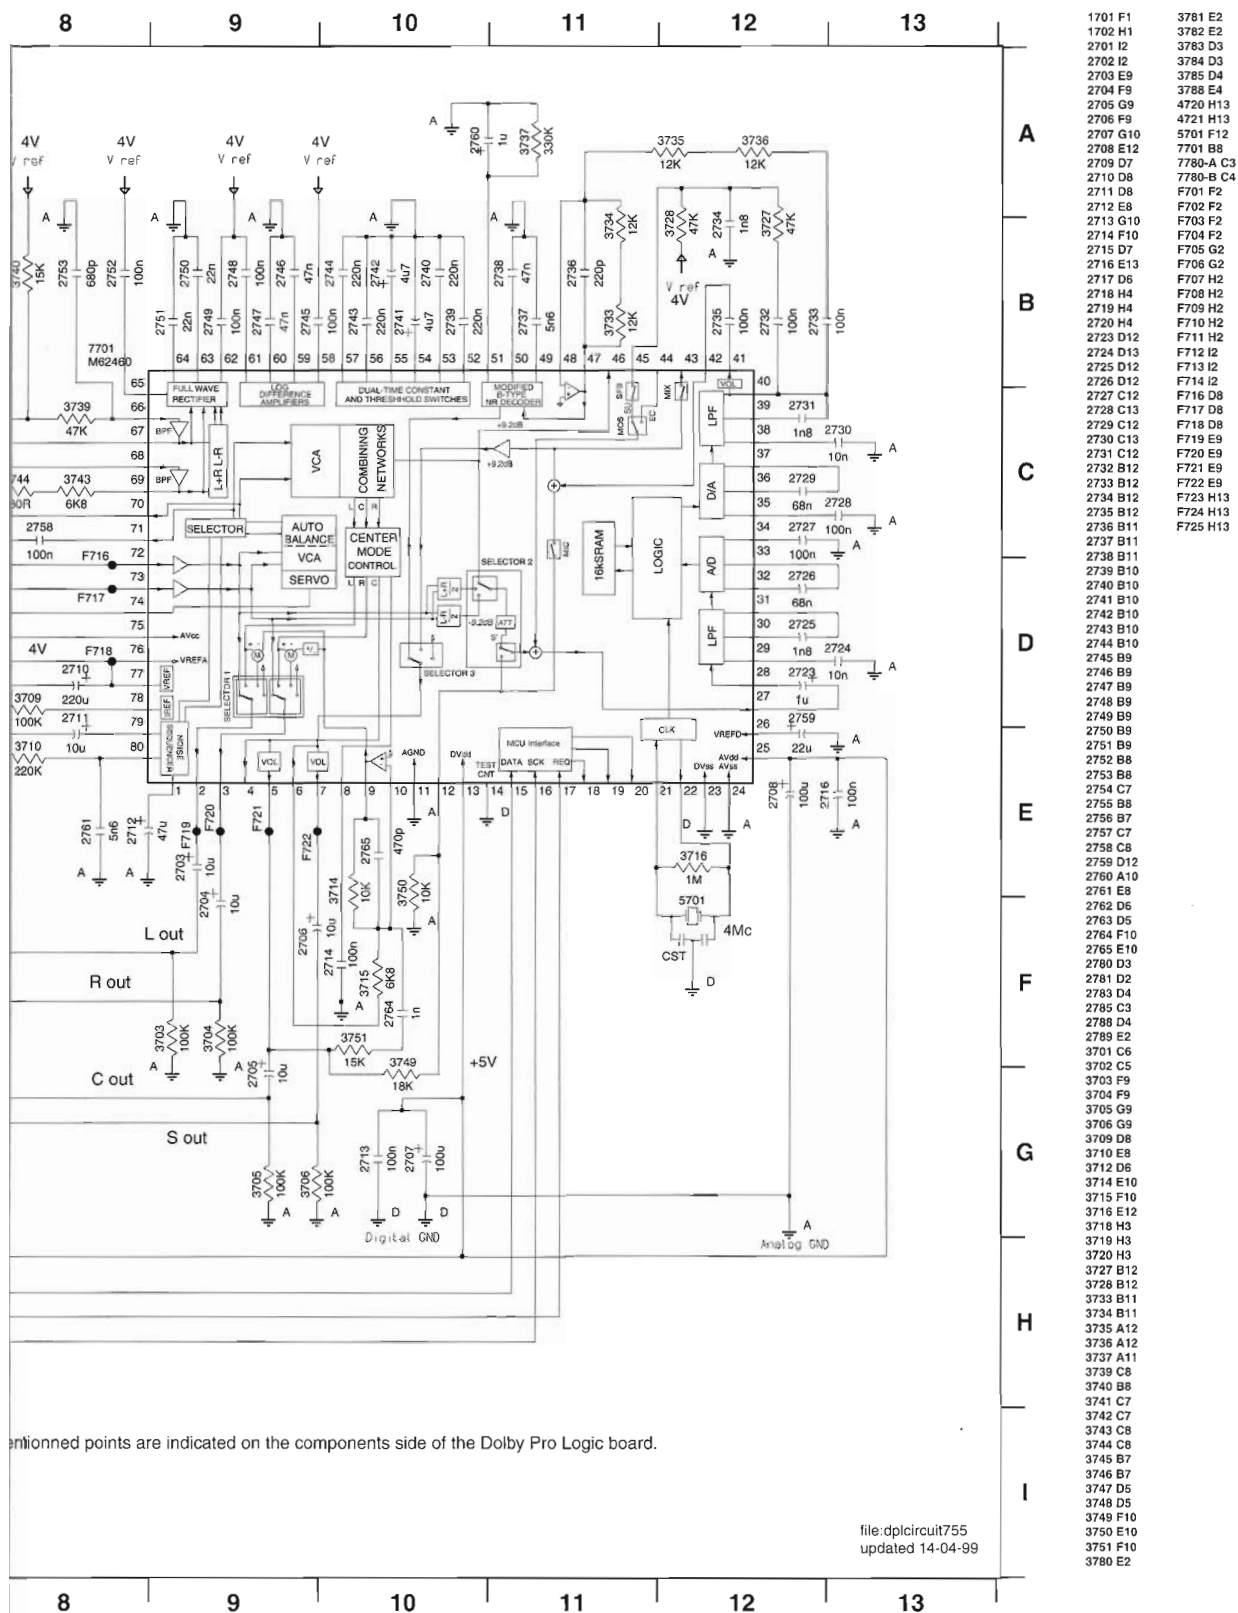

DOLBY PROLOGIC BOARD - COMPONENT VIEW

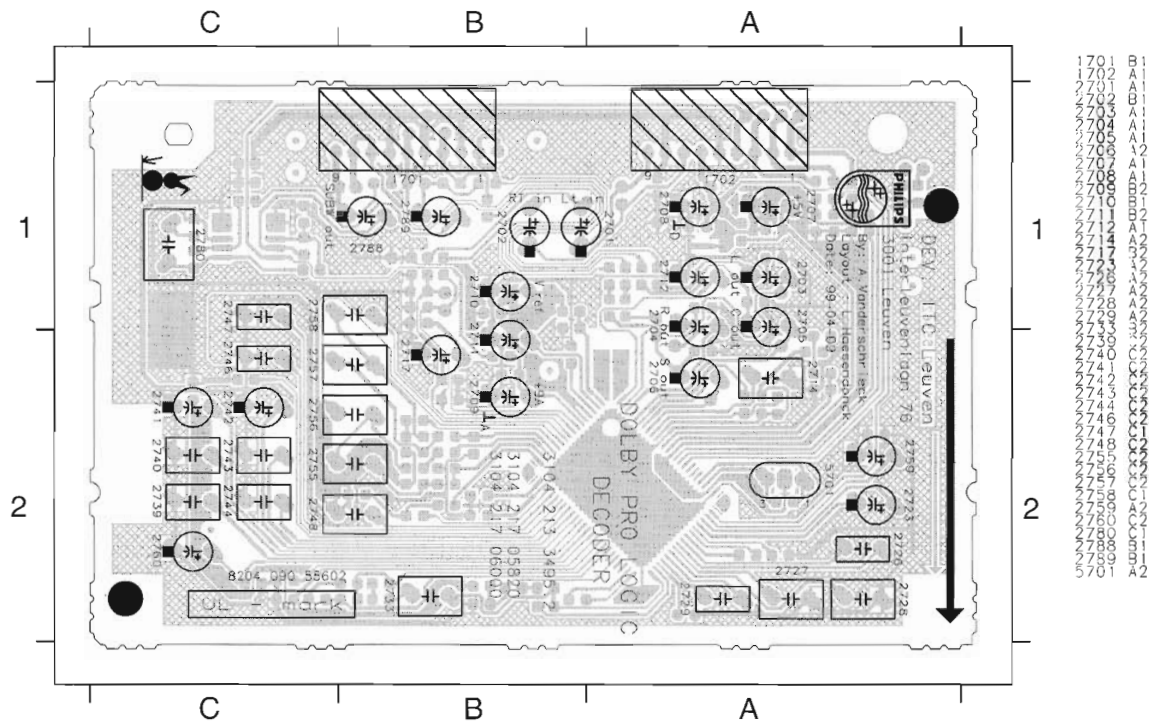

DOLBY PROLOGIC BOARD - COPPER SIDE VIEW

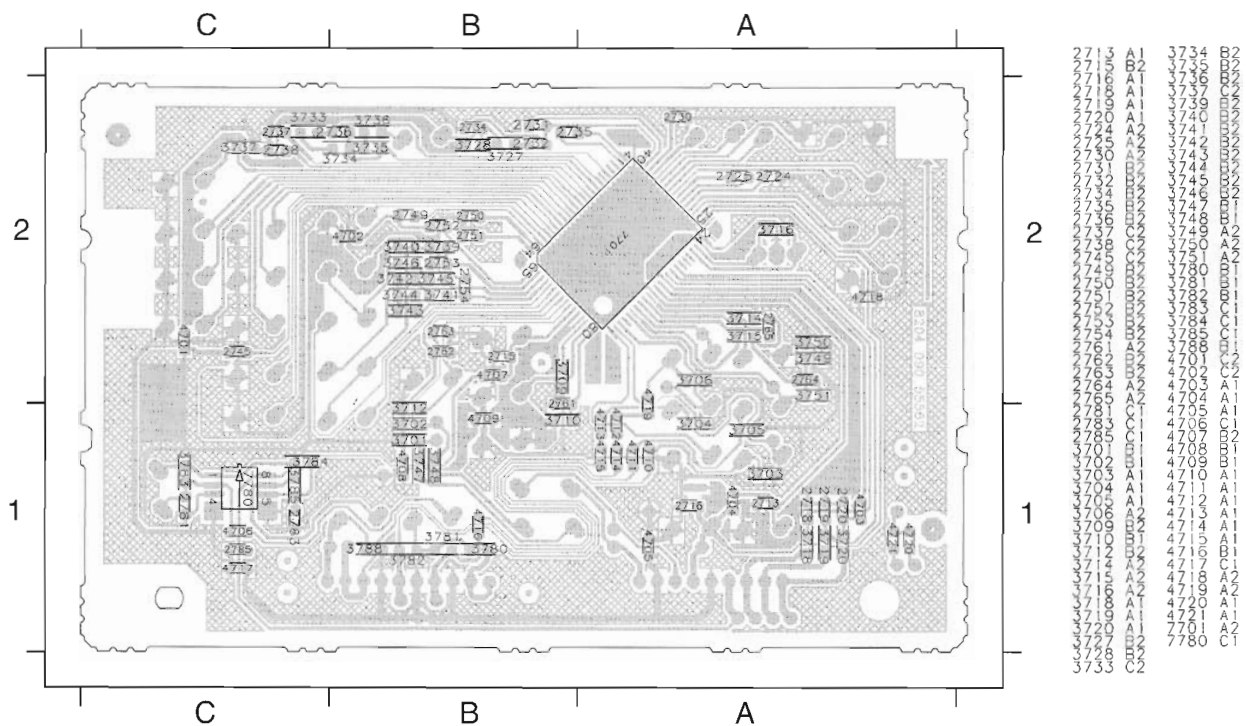

ELECTRICAL PARTSLIST - DOLBY PROLOGIC BOARD**MISCELLANEOUS**

1003 4822 214 13051 DPL MODULE

CAPACITORS

2701	4822 124 41579	10UF 20%	50V
2702	4822 124 41579	10UF 20%	50V
2703	4822 124 41579	10UF 20%	50V
2704	4822 124 41579	10UF 20%	50V
2705	4822 124 41579	10UF 20%	50V
2706	4822 124 41579	10UF 20%	50V
2707	4822 124 41584	100UF 20%	10V
2708	4822 124 41584	100UF 20%	10V
2709	4822 124 41584	100UF 20%	10V
2710	4822 124 11912	220UF 20%	6,3V
2711	4822 124 41579	10UF 20%	50V
2712	4822 124 40433	47UF20%	25V
2713	4822 126 13196	100NF 10%	0805 X7R 2
2714	5322 121 42386	100NF 5%	63V
2715	4822 126 13196	100NF 10%	0805 X7R 2
2716	4822 126 13196	100NF 10%	0805 X7R 2
2717	4822 124 81151	22UF	50V
2718	5322 122 32531	100PF 5%NPO	50V
2719	5322 122 32531	100PF 5%NPO	50V
2720	5322 122 32531	100PF 5%NPO	50V
2723	4822 124 40242	1UF20%	63V
2724	4822 122 33177	10NF 20%	X7R 50V
2725	4822 126 10847	1,8NF10%	X7R 63V
2726	5322 121 42465	68NF 5%	63V
2727	5322 121 42386	100NF 5%	63V
2728	5322 121 42386	100NF 5%	63V
2729	5322 121 42465	68NF 5%	63V
2730	4822 122 33177	10NF 20%	X7R 50V
2731	4822 126 10847	1,8NF10%	X7R 63V
2732	4822 126 13196	100NF 10%	0805 X7R 2
2733	5322 121 42386	100NF 5%	63V
2734	4822 126 10847	1,8NF10%	X7R 63V
2735	4822 126 13196	100NF 10%	0805 X7R 2
2736	4822 122 33575	220PF 5%NPO	50V
2737	4822 122 32646	5,6NF10%	X7R 50V
2738	4822 122 33797	47NF20%Y5V	50V
2739	4822 121 42408	220NF 5%	63V
2740	4822 121 42408	220NF 5%	63V
2741	4822 124 40769	4,7UF20%	100V
2742	4822 124 40769	4,7UF20%	100V
2743	4822 121 42408	220NF 5%	63V
2744	4822 121 42408	220NF 5%	63V
2745	4822 126 13196	100NF 10%	0805 X7R 2
2746	4822 121 43526	47NF 5%	250V
2747	4822 121 43526	47NF 5%	250V
2748	5322 121 42386	100NF 5%	63V
2749	4822 126 13196	100NF 10%	0805 X7R 2
2750	5322 122 32654	22NF10%	X7R 63V
2751	5322 122 32654	22NF10%	X7R 63V
2752	4822 126 13196	100NF 10%	0805 X7R 2
2753	4822 122 32535	680PF10%	X7R 63V
2754	5322 126 10184	680P 5%	NPO 50V.
2755	5322 121 42386	100NF 5%	63V
2756	5322 121 42386	100NF 5%	63V
2757	5322 121 42386	100NF 5%	63V
2758	5322 121 42386	100NF 5%	63V
2759	4822 124 81151	22UF	50V
2760	4822 124 40242	1UF20%	63V
2761	4822 122 32646	5,6NF10%	X7R 50V
2762	5322 122 32268	470PF 10%	50V

2763	5322 122 32268	470PF 10%	50V
2764	5322 122 34123	1NF	50V
2765	5322 122 32268	470PF	50V
2780	5322 121 42661	330NF 5%	63V
2781	5322 122 32658	22PF 5%	50V
2783	5322 122 32658	22PF 5%	50V
2785	4822 126 13196	100NF 10%	0805 X7R 2
2788	4822 124 41579	10UF 20%	50V
2789	4822 124 41579	10UF 20%	50V

RESISTORS


3701	4822 051 20104	100K00	5%	0,1W
3702	4822 051 20104	100K00	5%	0,1W
3703	4822 051 20104	100K00	5%	0,1W
3704	4822 051 20104	100K00	5%	0,1W
3705	4822 051 20104	100K00	5%	0,1W
3706	4822 051 20104	100K00	5%	0,1W
3709	4822 051 20104	100K00	5%	0,1W
3710	4822 117 13579	220K 1%	0,1W	RC12H 0
3712	4822 051 20475	4M70	5%	0,1W
3714	4822 117 10833	10K	1%	0,1W
3715	4822 117 11507	6K8	1%	0,1W
3716	4822 051 20105	1M00	5%	0,1W
3718	4822 051 10102	1K00	2%	0,25W
3719	4822 051 10102	1K00	2%	0,25W
3720	4822 051 10102	1K00	2%	0,25W
3727	4822 117 10834	47K	1%	0,1W
3728	4822 117 10834	47K	1%	0,1W
3733	4822 117 11383	12K	1%	0,1W
3734	4822 117 11383	12K	1%	0,1W
3735	4822 117 11383	12K	1%	0,1W
3736	4822 117 11383	12K	1%	0,1W
3737	4822 051 20334	330K00	5%	0,1W
3739	4822 117 10834	47K	1%	0,1W
3740	4822 051 20153	15K00	5%	0,1W
3741	4822 117 10834	47K	1%	0,1W
3742	4822 051 20153	15K00	5%	0,1W
3743	4822 117 11507	6K8	1%	0,1W
3744	4822 051 20681	680R00	5%	0,1W
3745	4822 117 11507	6K8	1%	0,1W
3746	4822 051 20681	680R00	5%	0,1W
3747	4822 051 20471	470R00	5%	0,1W
3748	4822 051 20471	470R00	5%	0,1W
3749	4822 117 10965	18k	1%	0,1W
3750	4822 117 10833	10k	1%	0,1W
3751	4822 051 20153	15k	1%	0,1W
3780	4822 117 10833	10K	1%	0,1W
3781	4822 117 10833	10K	1%	0,1W
3782	4822 117 10833	10K	1%	0,1W
3783	4822 051 20182	1K80	5%	0,1W
3784	4822 051 10102	1K00	2%	0,25W
3785	4822 051 10102	1K00	2%	0,25W
3788	4822 051 20104	100K00	5%	0,1W

JUMPERS

4701	4822 051 20008	0R00 JUMP. (0805)
to		
4720	4822 051 20008	0R00 JUMP. (0805)

FILTERS

5701	4822 242 72527	CST4,00MGW-TF01
ICs		
7701	4822 209 17347	M62460FP
7780	4822 209 83357	NJM4560M JRC

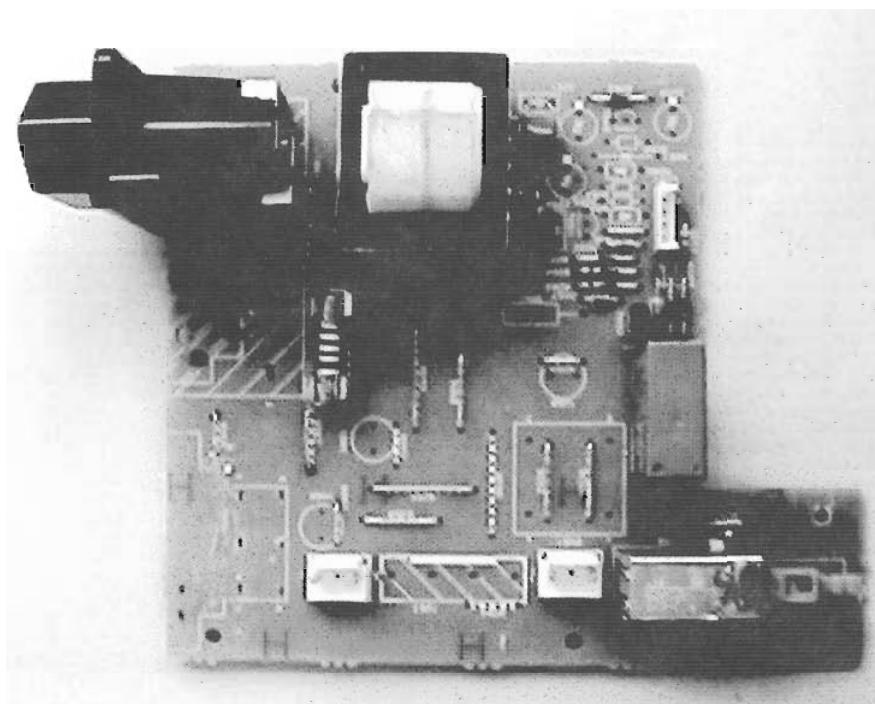


MAINS BOARD

TABLE OF CONTENTS


Circuit diagram	9-2
Component layout	9-3
Partslist	9-5

100




[illegible]

PCS 102 388

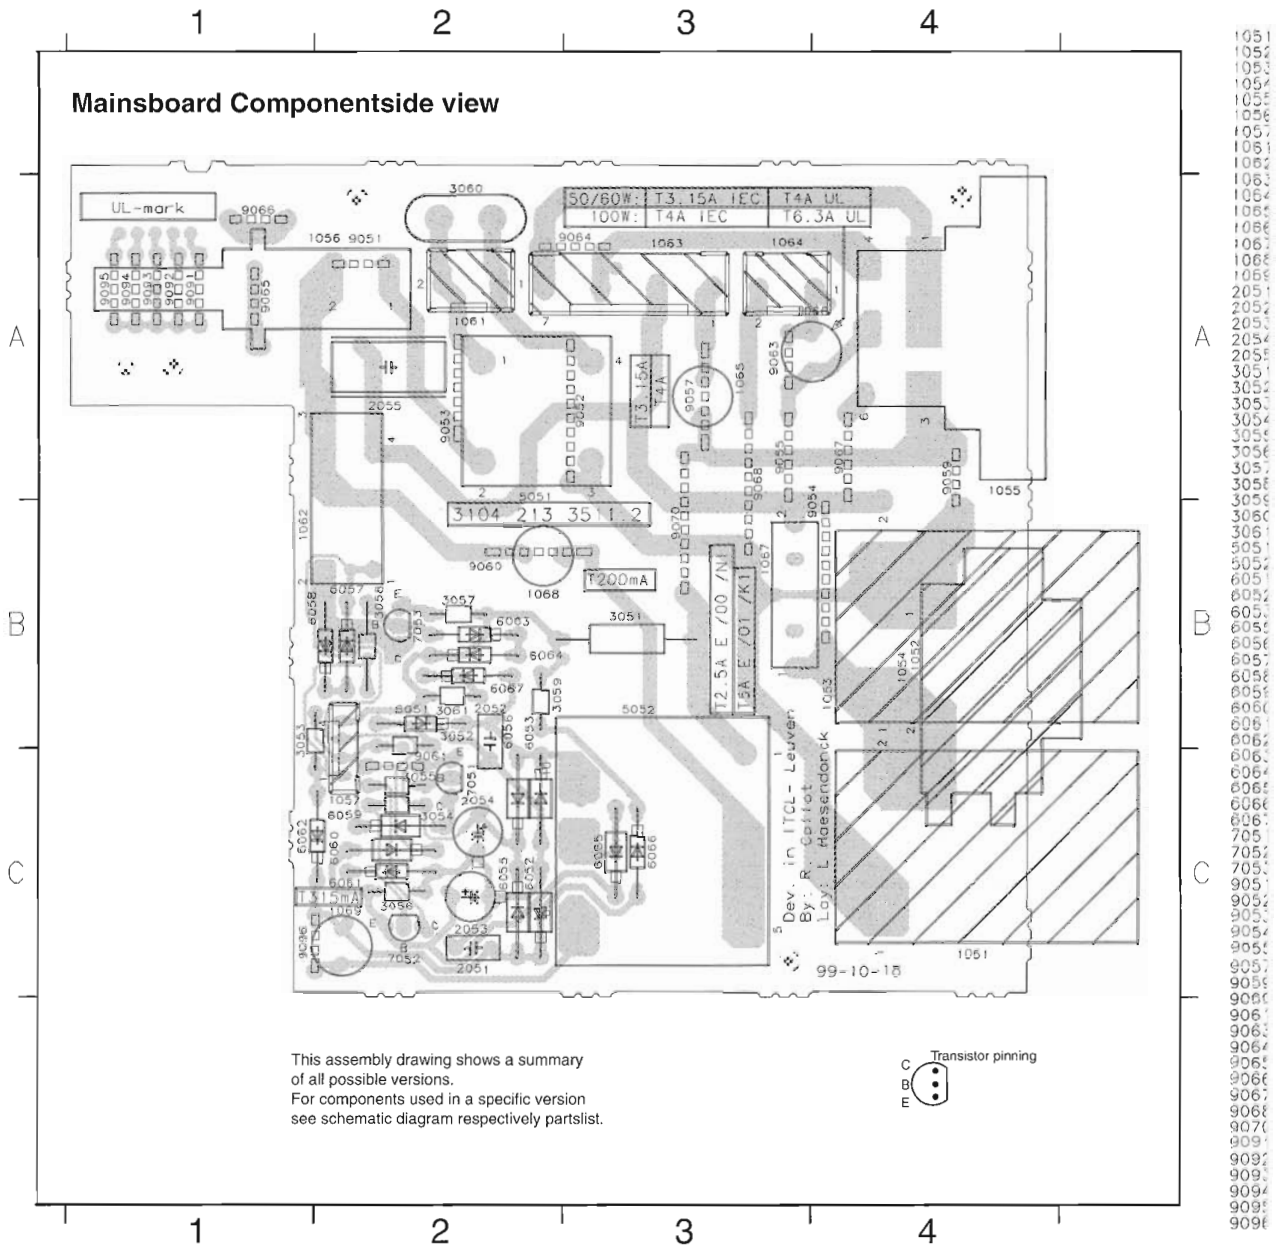MAINS BOARD - COMPONENTSIDE VIEW & COPPERSIDE VIEW

4 3 2 1

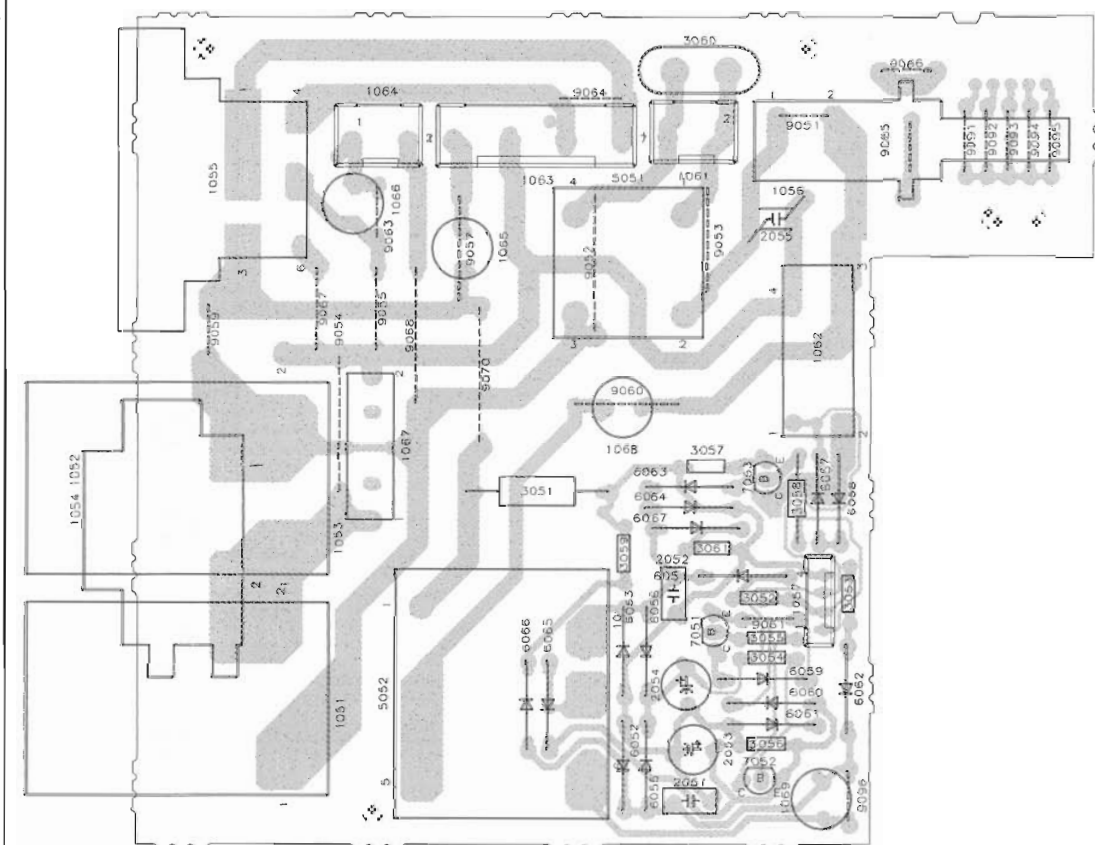

This assembly drawing shows a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.




TRAFO BOARD



Copperside view

Componentside view


Interconnection Board
Transformer secondary

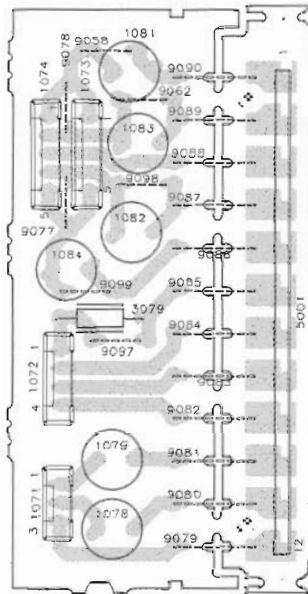

Interconnection Board
Transformer secondary

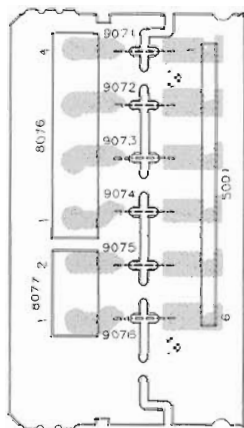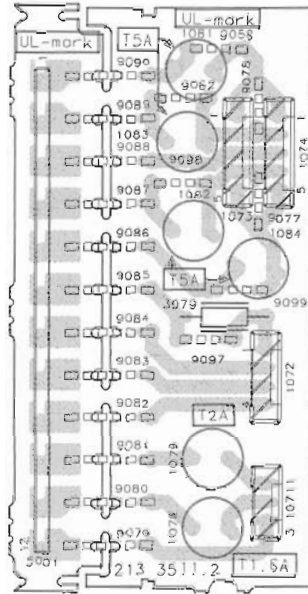

Interconnection Board
Transformer primary

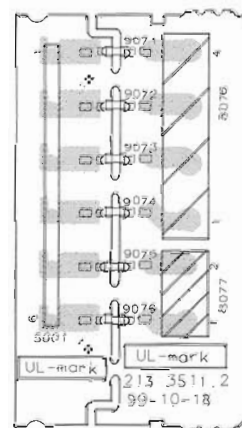

Interconnection Board
Transformer primary

ELECTRICAL PARTSLIST - MAINS BOARD**MISCELLANEOUS**

1051	▲ 482226731994	MAINS OUTLET
1056	▲ 482227613224	MAINS SWITCH
1061	▲ 482226520723	MAINS INLET
1062	482228010391	RELAY
1064	▲ 482226520723	B2P3-VH

1067	▲ 242208610912	FUSE 2,5A
1069	▲ 482207153151	FUSE 315MA
1078	▲ 482207151602	FUSE 1.6A
1079	▲ 482207152002	FUSE 2A

CAPACITORS

2051	482212143526	47NF 5% 250V
2052	482212143526	47NF 5% 250V
2055	▲ 482212614084	4,7NF 20% 250V

RESISTORS

3052	482205011002	1K00 1% 0,4W
3053	482205011002	1K00 1% 0,4W
3057	482205210129	12R00 5% 0,33W
3058	482211652256	2K2 5% 0,5W
3059	482205021003	10K00 1% 0,6W

3061	482205021003	10K00 1% 0,6W
------	--------------	---------------

TRAFO

5052	▲ 482214611143	STBY TRAFO
------	----------------	------------

DIODES


6051	482213030621	1N4148
6052	482213031878	1N4003G
6053	482213031878	1N4003G
6055	482213031878	1N4003G
6056	482213031878	1N4003G

6057	482213030621	1N4148
6058	482213030621	1N4148
6062	482213030621	1N4148
6063	482213030621	1N4148
6064	482213030621	1N4148

6066	482213030621	1N4148
6067	482213030621	1N4148

TRANSISTORS

7053	482213040981	BC337-25
------	--------------	----------

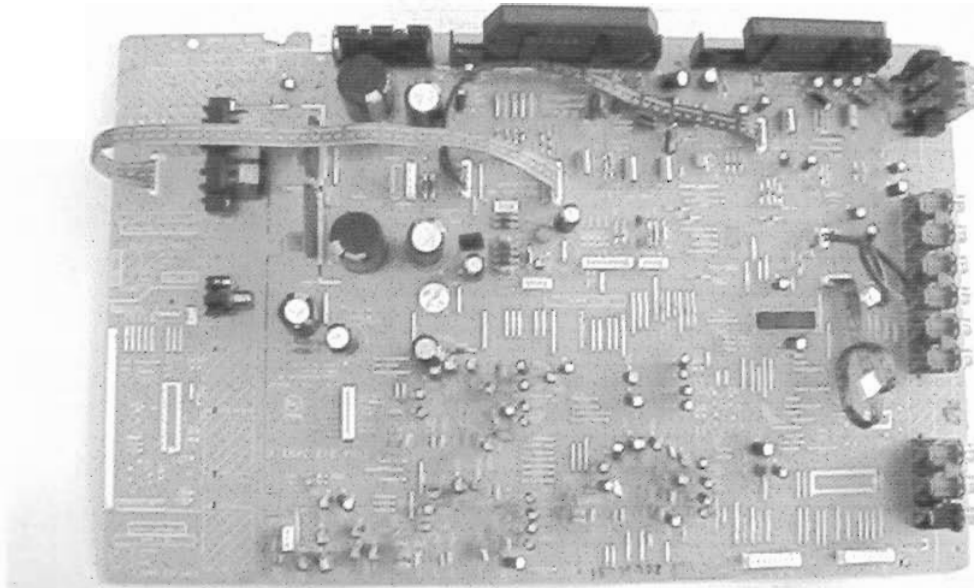

MONO BOARD

TABLE OF CONTENTS

Measurement hint	10-1a-2
P50/Speaker/Video Selector layout	10-3
Circuit diagram Source selector	10-4
Circuit diagram Volume controle	10-5
Circuit diagram Supply	10-6
Circuit diagram Amplifier	10-7
Component layout	10-8
Mappings Components & Chips side.....	10-9
Chips layout	10-10

MEASUREMENT REFERENCES TO LAYOUT ON PAGE 10-8

IC7643

IC 7643 Pin	Can be measure via Test point on component side monoboard	Funtionality
17	TP 47	DPL Surround L in
18	TP 48	6 CH Surround L in
9	TP 50	DPL Surround R in
10	TP 51	6 CH Surround R in
3	TP 52	4,7V
2	TP 53	4,7V
4	TP 54	4,7V
26	TP 55	4,7V
27	TP 56	4,7V
33	TP 57	Surround Right out
36/40/43	TP 58	Ground
41/42	TP 59	9,4V
39	TP 60	4,7V
19	TP 61	8,7V
34	TP 63	Surround Left out
25	TP 64	4,7V
24	TP 65	4,7V
12	TP 66	4,7V
20	TP 67	4,7V
21	TP 68	4,7V

IC7504

IC 7504 Pin	Can be measure via Test point on component side monoboard	Funtionality
5	TP 77	Rec - in Right
4	TP 78	-13,5V
7	TP 79	Rec - out Right
8	TP 80	12V
3	TP 81	Rec - in Left
1	TP 82	Rec - out Left

MEASUREMENT REFERENCES TO LAYOUT ON PAGE 10-8

IC7641

IC 7641 Pin	Can be measure via Test point on component side monoboard	Funtionality
16	TP 1	Left in
17	TP 2	Dpl Left in
18	TP 3	Front Left in
8	TP 4	Right in
9	TP 5	Dpl Right in
10	TP 6	Front Right in
3	TP 7	4,7V
2	TP 8	4,7V
4	TP 9	4,7V
26	TP 10	4,7V
27	TP 11	4,7V
33	TP 12	Right out
36/40/43	TP 13	Ground
41/42	TP 14	9,4V
39	TP 15	4,7V
19	TP 16	8,7V
34	TP 18	Left out
25	TP 19	4,7V
24	TP 20	4,7V
12	TP 21	4,7V
20	TP 22	4,7V
21	TP 23	4,7V

IC7642

IC 7642 Pin	Can be measure via Test point on component side monoboard	Funtionality
16	TP 24	not used
17	TP 25	Dpl Center in
18	TP 26	6 CH Center in
8	TP 27	Subwoofer in
9	TP 28	Subwoofer in
10	TP 29	6 CH Subwoofer in
3	TP 30	4,7V
2	TP 31	4,7V
4	TP 32	4,7V
26	TP 33	4,7V
27	TP 34	4,7V
33	TP 35	Subwoofer L out
36/43	TP 36	Ground
40/41/42	TP 37	9,4V
39	TP 38	4,7V
19	TP 39	8,7V
34	TP 40	Center out
25	TP 41	4,7V
24	TP 42	4,7V
12	TP 43	4,7V
20	TP 44	4,7V
21	TP 45	4,7V

IC7601

IC 7601 Pin	Can be measure via Test point on component side monoboard	Funtionality
5	TP 69	Headphone Amp L in
4	TP 70	-13,5V
8	TP 71	12V
3	TP 72	Headphone Amp R in

Tr 7622

Tr7622	Can be measure via Test point on component side monoboard	Funtionality
B	TP 99	-0,5V
C	TP 100	Ground
E	TP 101	Headphone Amp R out

IC7503

IC 7503 Pin	Can be measure via Test point on component side monoboard	Funtionality
5	TP 73	Right in
4	TP 74	-12V
8	TP 75	11V
3	TP 76	Left in

Tr 7653

Tr7653	Can be measure via Test point on component side monoboard	Funtionality
B	TP 86	-1,8V
E	TP 88	0V


Tr 7621


Tr7621	Can be measure via Test point on component side monoboard	Funtionality
B	TP 96	-1,5V
C	TP 97	Ground
E	TP 98	Headphone Amp L out

Tr 7658

Tr7658	Can be measure via Test point on component side monoboard	Funtionality
B	TP 83	5V
C	TP 84	-13V
E	TP 85	5V

SOURCE SELECTOR PART FR735 - FR740 - FR755 - FR760

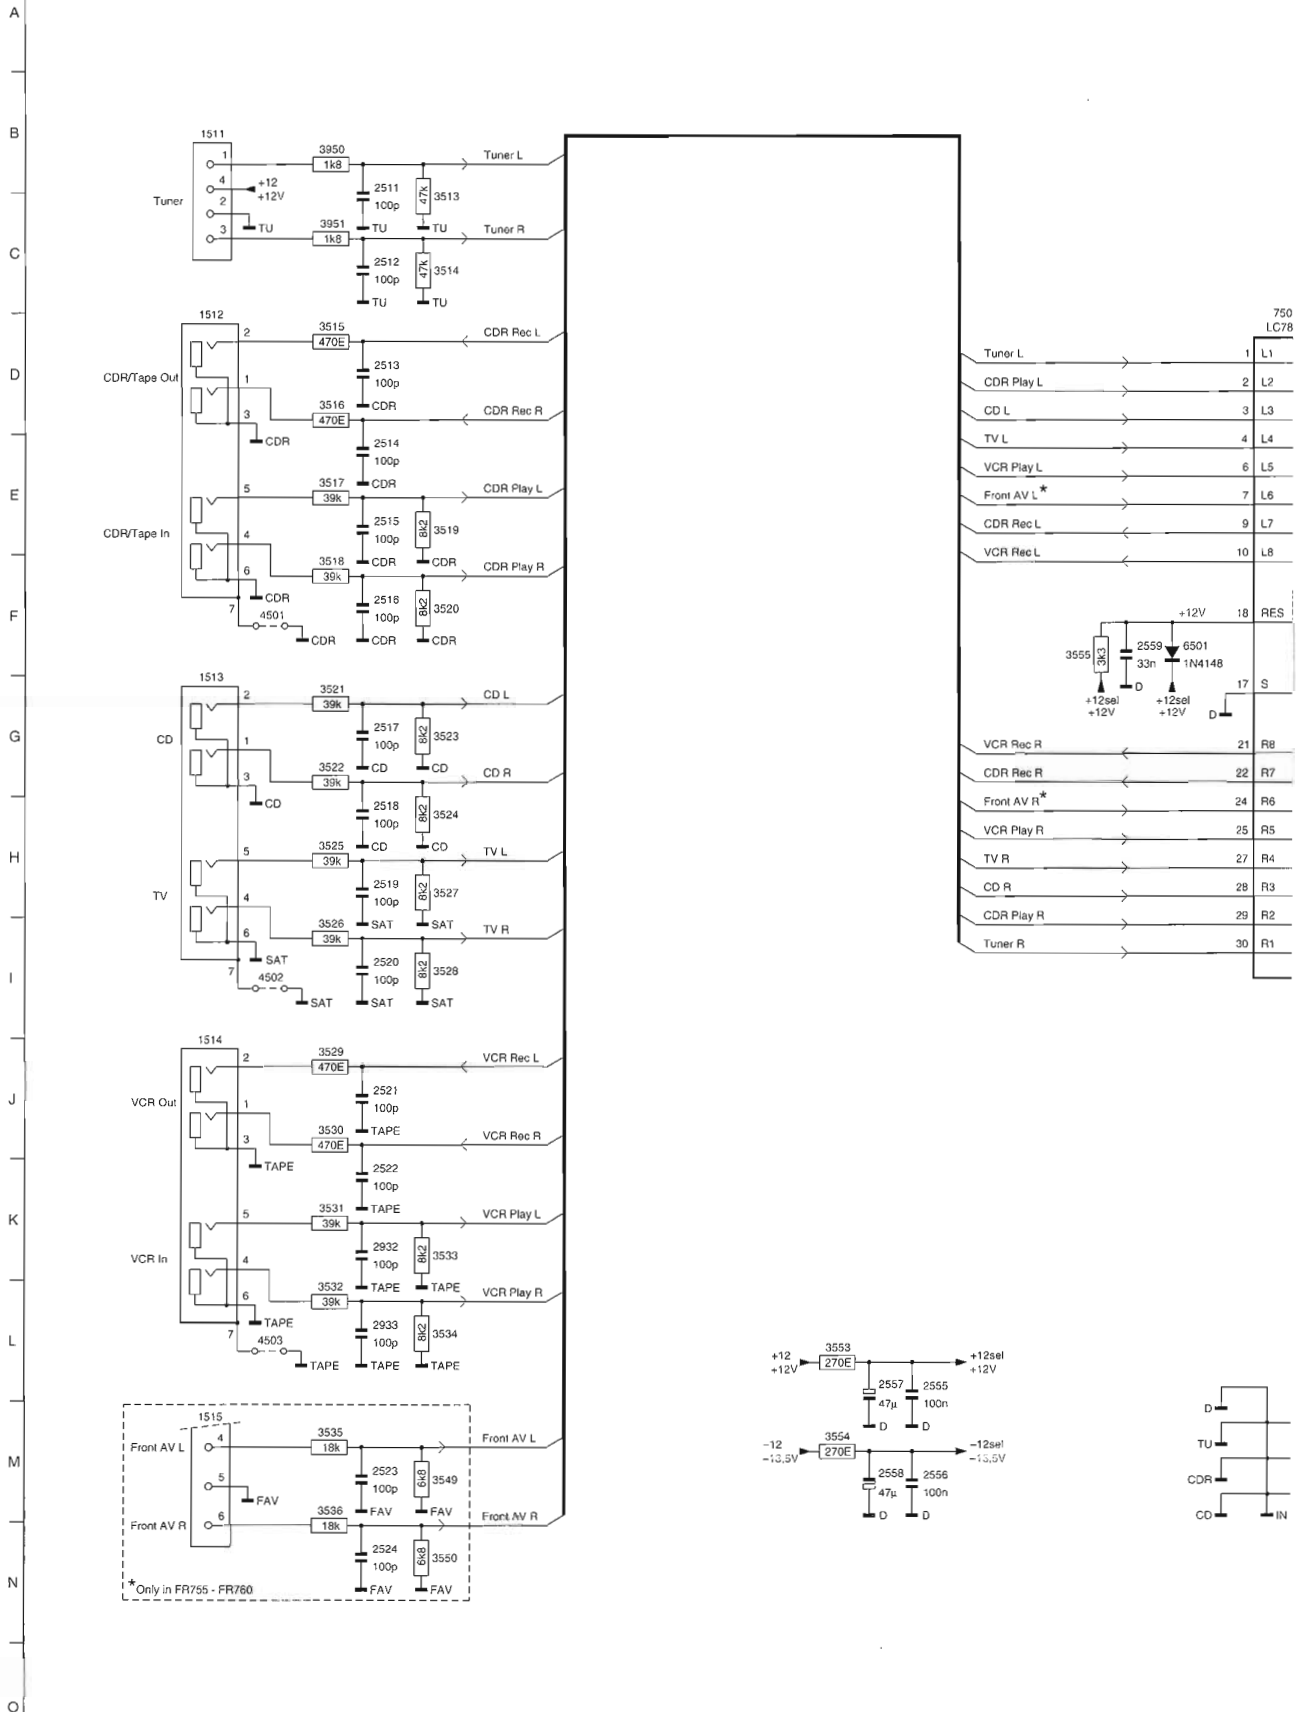

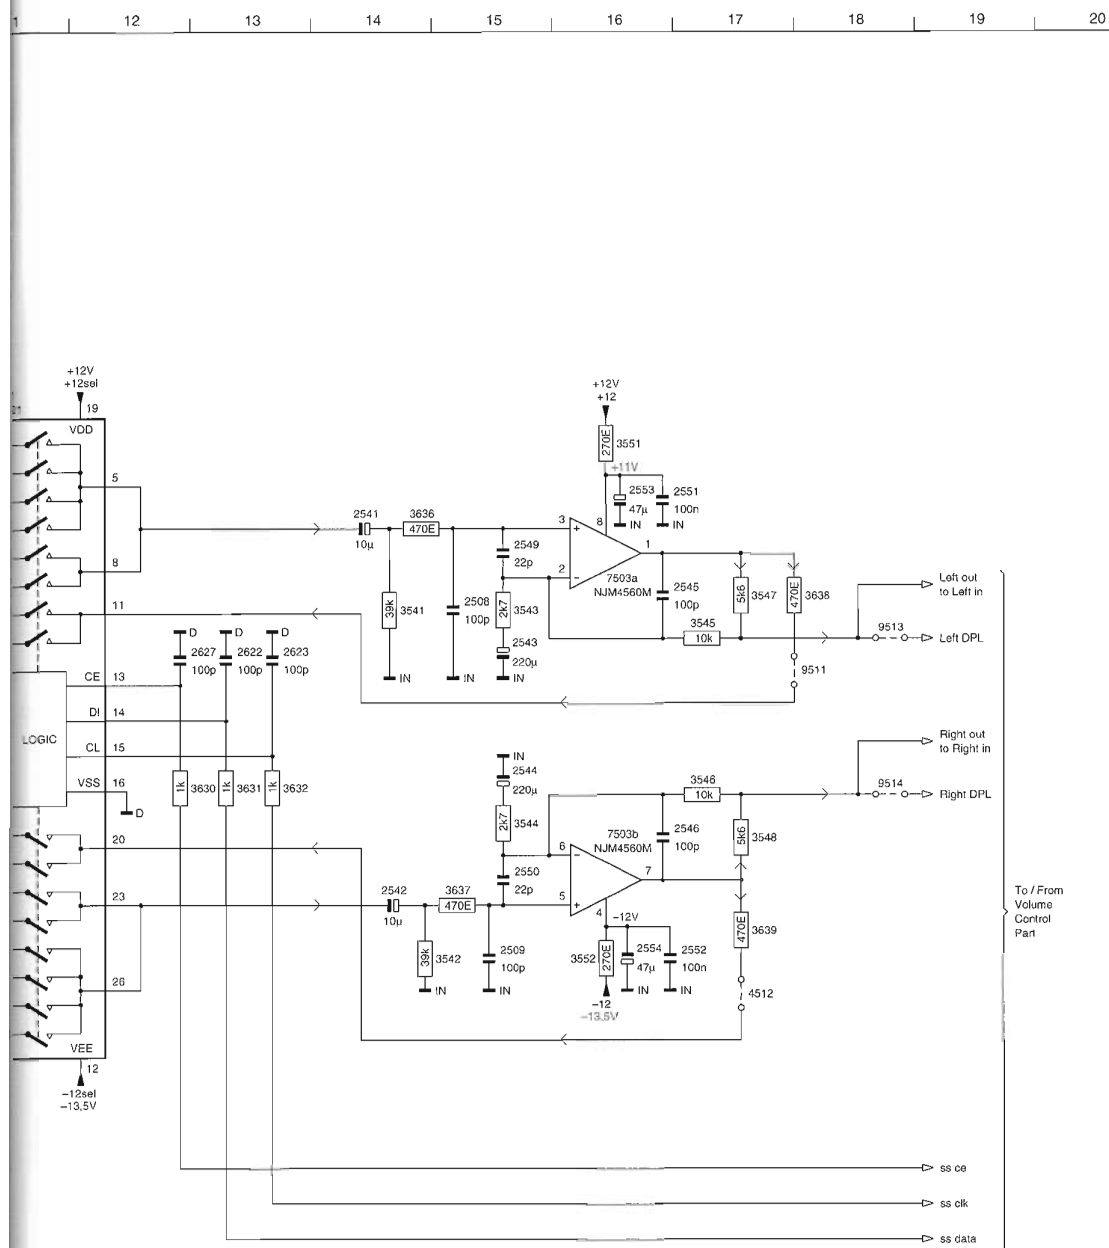



1511	B2
1512	D2
1513	G2
1514	J2
1515	M2
2508	E15
2509	H15
2511	B3
2512	C3
2513	D3
2514	E3
2515	E3
2516	F3
2517	G3
2518	H3
2519	H3
2520	I3
2521	J3
2522	K3
2523	M3
2524	N3
2541	E14
2542	H14
2543	F15
2544	G15
2545	E17
2546	G17
2549	E15
2550	G15
2551	D17
2552	H17
2553	D18
2554	H16
2555	L8
2556	M8
2557	L8
2558	M8
2559	F10
2622	F13
2623	F13
2627	F13
2628	K3
2633	L3
3513	C4
3514	C4
3515	D3
3516	D3
3517	E3
3518	F3
3519	E4
3520	F4
3521	G3
3522	G3
3523	G4
3524	H4
3525	H3
3526	I3
3527	H4
3528	I4
3529	J3
3530	J3
3531	K3
3532	L3
3533	K4
3534	L4
3535	M3
3536	M3
3541	E14
3542	H15
3543	E15
3544	G15
3545	E17
3546	G17
3547	E17
3548	G17
3549	M4
3550	N4
3551	D16
3552	H16
3553	L7
3554	M7
3555	F9
3630	G13
3631	G13
3632	G13
3636	E14
3637	H15
3638	E18
3639	H17
3950	B3
3951	C3
4501	F2
4502	I2
4503	L2
4512	H17
6501	F10
7501	D11
7503a	E16
7503b	G16
9511	F18
9513	E18
9514	G18


* Only in FR755 - FR760

.....V - Voltage measured during normal operation.
 - Source position: Tuner FM
 - No special features ON

VOLUME CONTROL PART FR740 - FR760

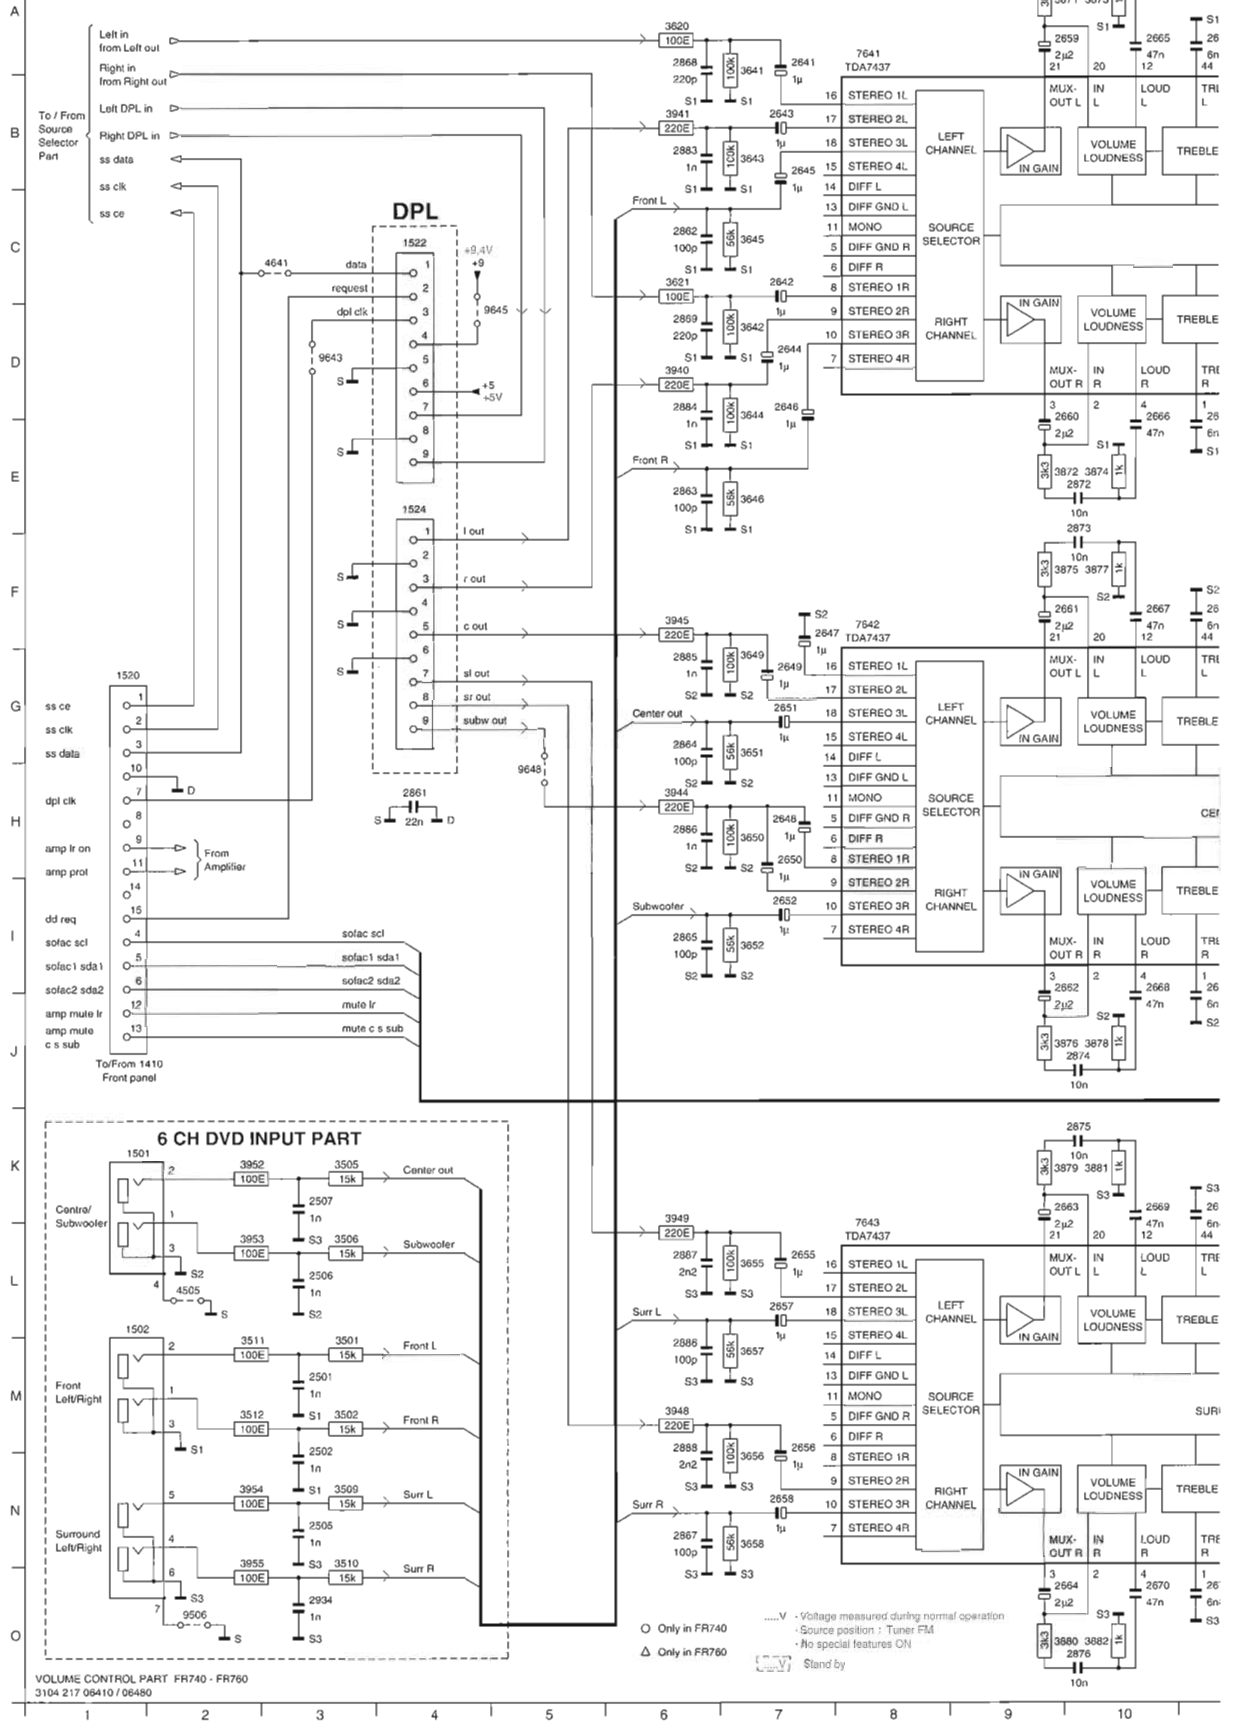


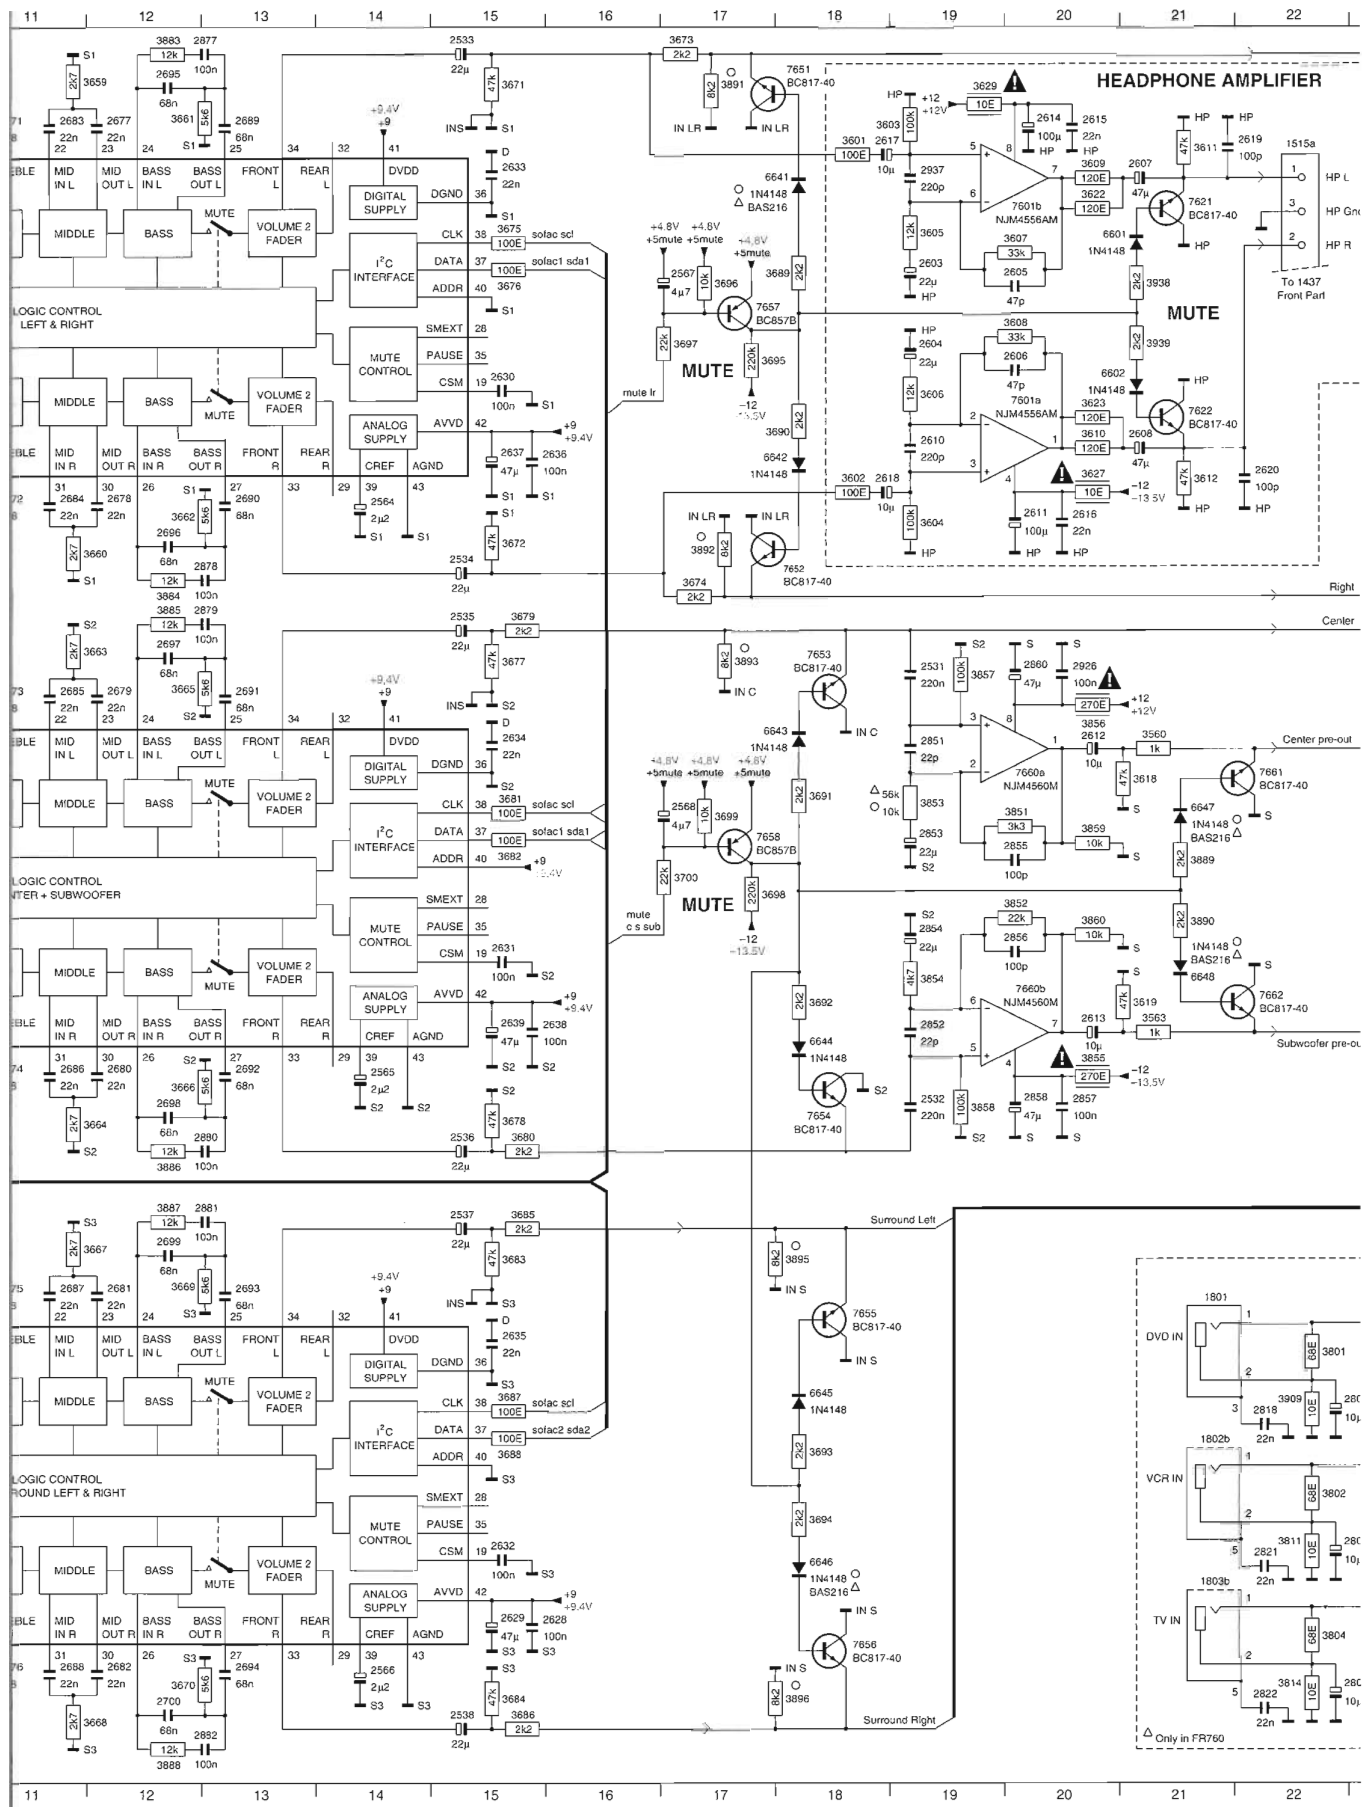

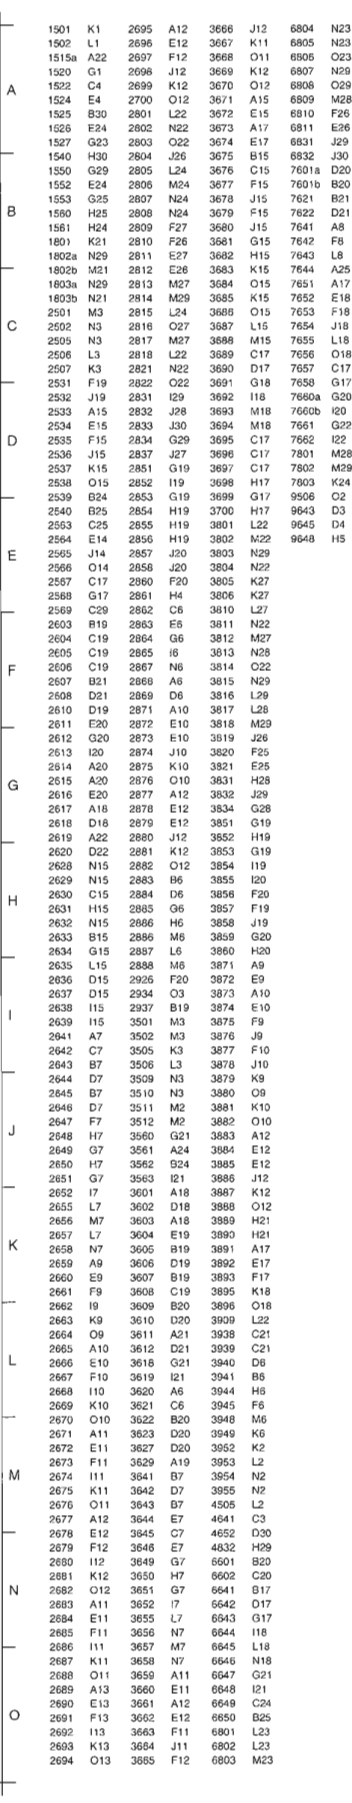


1251	A1	1260	B3	2259	D7	2271	I6	2277	L6	2290	H5	3266	E7	3292	H7	6258	I3	6265	J6	6260	E6	7910	G6
1253	I1	1261	C3	2260	C7	2272	K4	2278	M3	2295	H6	3268	E5	3293	H6	6259	I4	6267	L6	6281	F6	9251	B2
1254	L1	1262	D2	2266	I3	2273	K5	2281	H5	3254	J5	3269	E5	3294	H6	6260	H6	6268	K2	7253	M3	9252	C2
1255	F1	1265	G9	2268	J4	2274	K6	2282	H7	3256	M4	3270	E7	3295	I7	6261	J3	6274	D3	7257	D5	9260	E3
1257	L9	2251	B3	2269	J5	2275	K4	2283	E4	3257	L3	3271	E8	6251	B4	6262	J3	6275	D2	7258	D6	9285	C3
1258	E3	2254	C5	2270	I5	2276	L5	2287	K3	3258	M3	3291	G4	6257	I3	6263	J4	6276	E6	7908	H6		


MONOBOARD SUPPLY FR740 - FR965/17

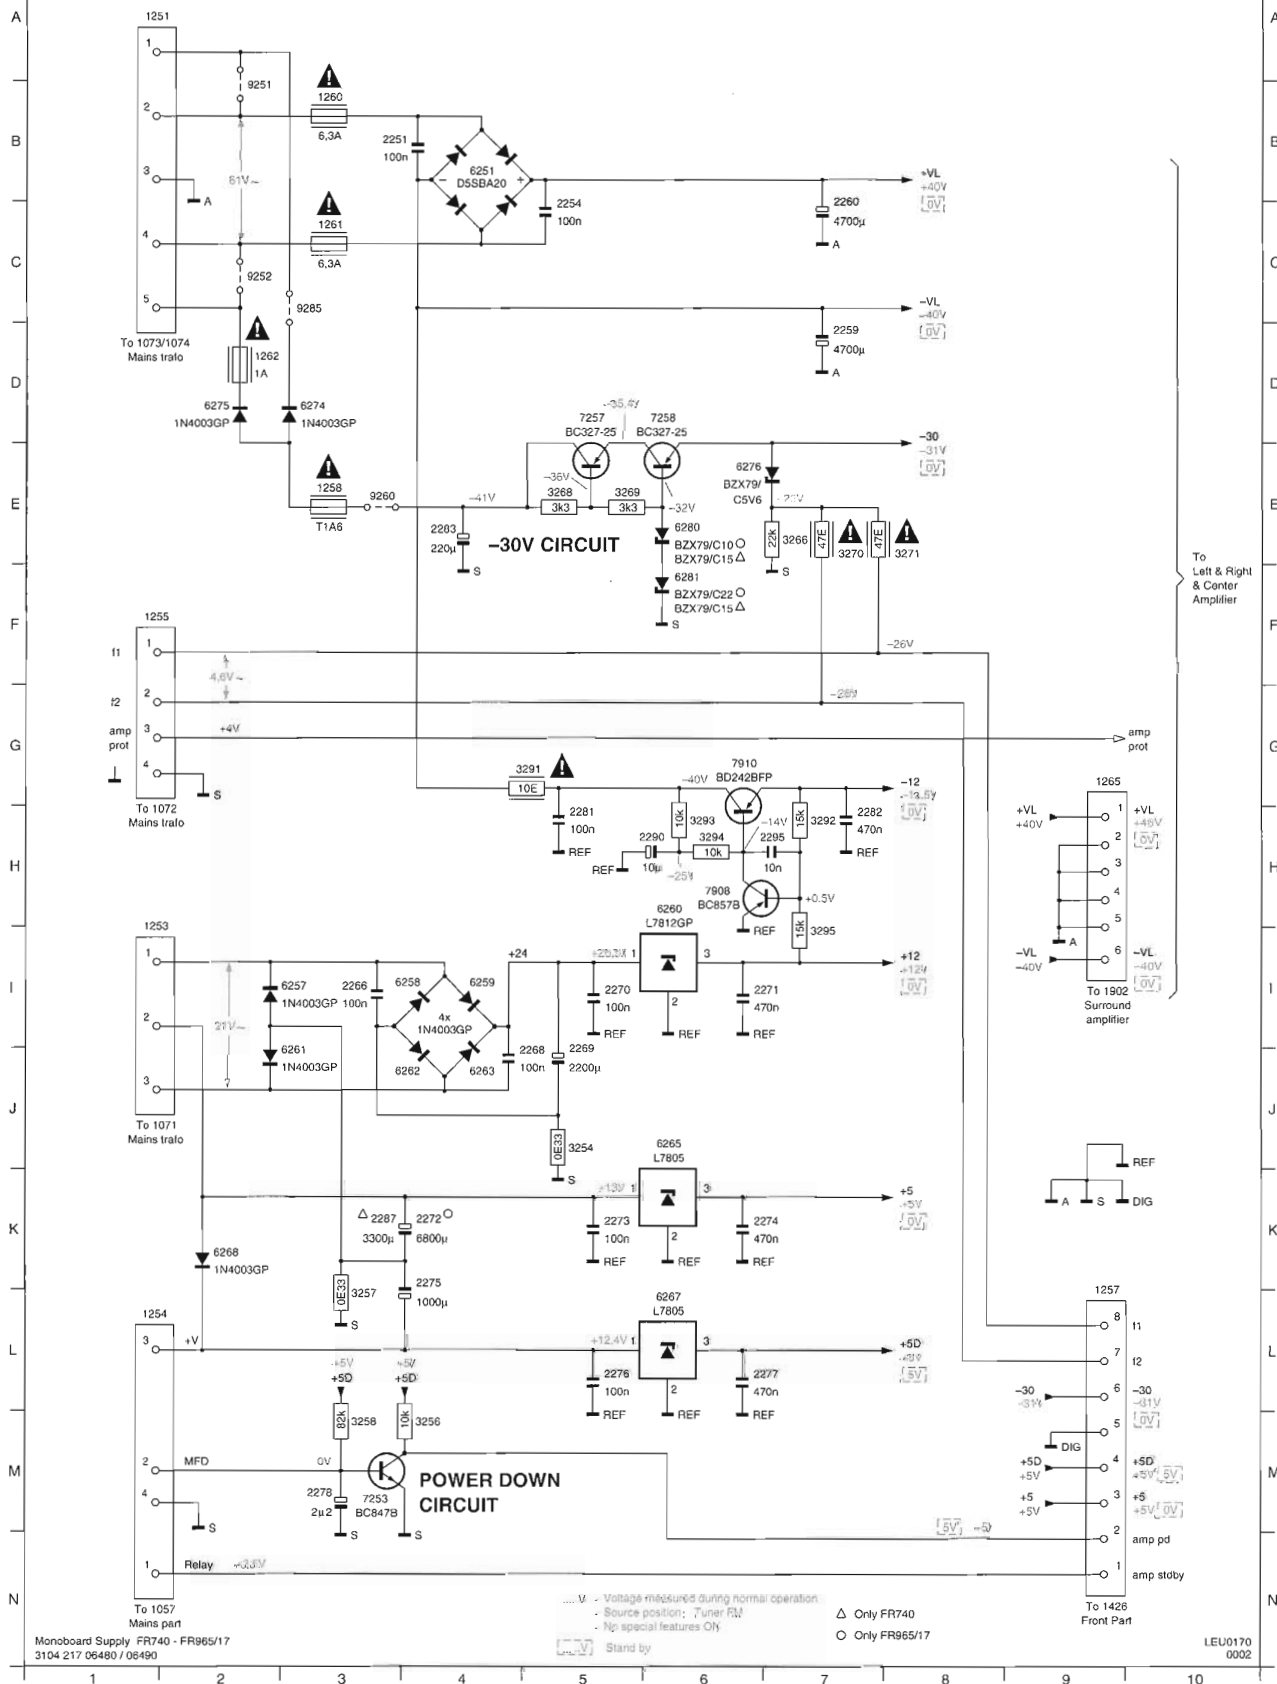

1	2	3	4	5	6	7	8	9	10	11
---	---	---	---	---	---	---	---	---	----	----

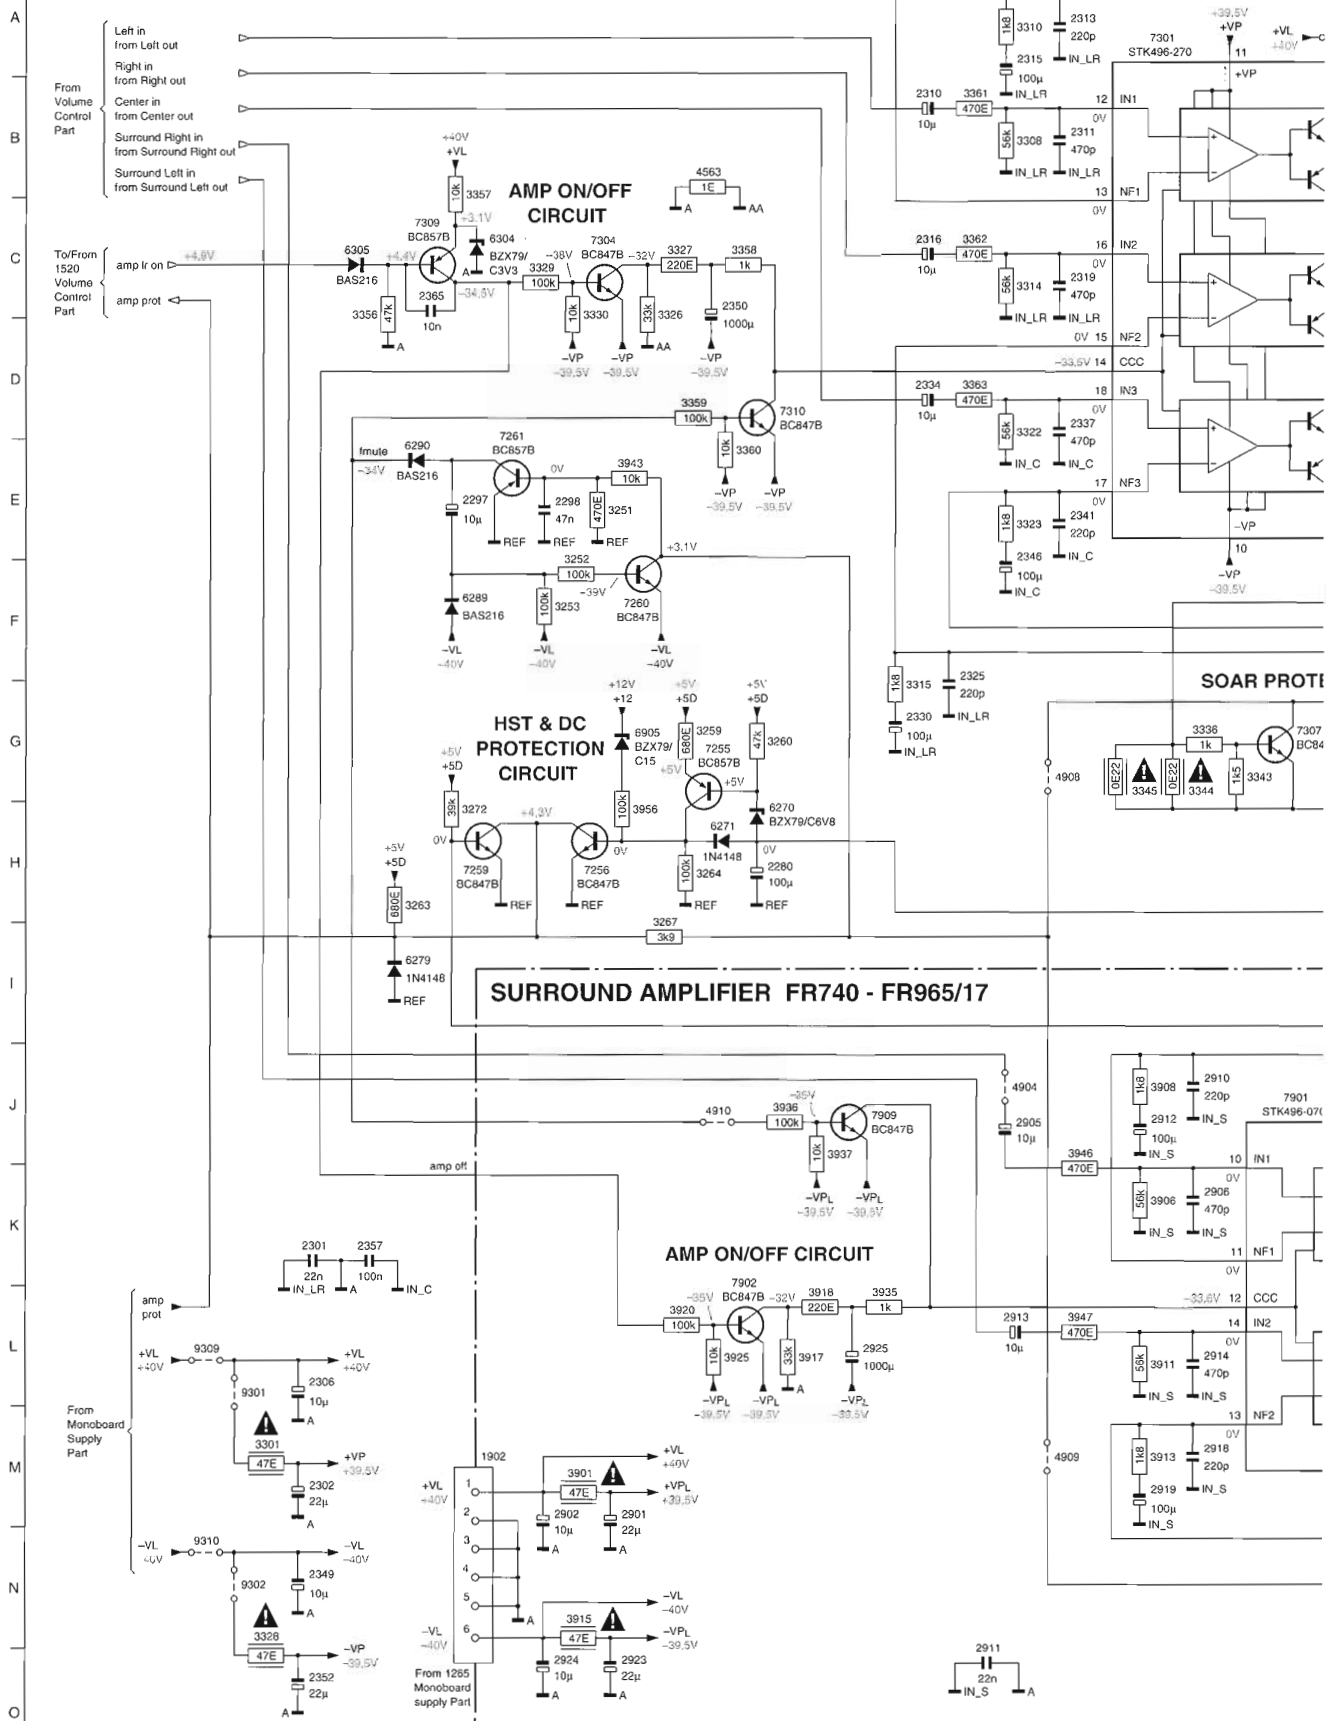


A horizontal number line with tick marks at every integer from 1 to 11. The segments between the tick marks are numbered 1 through 10 above the line. The segment between 9 and 10 is shaded gray.

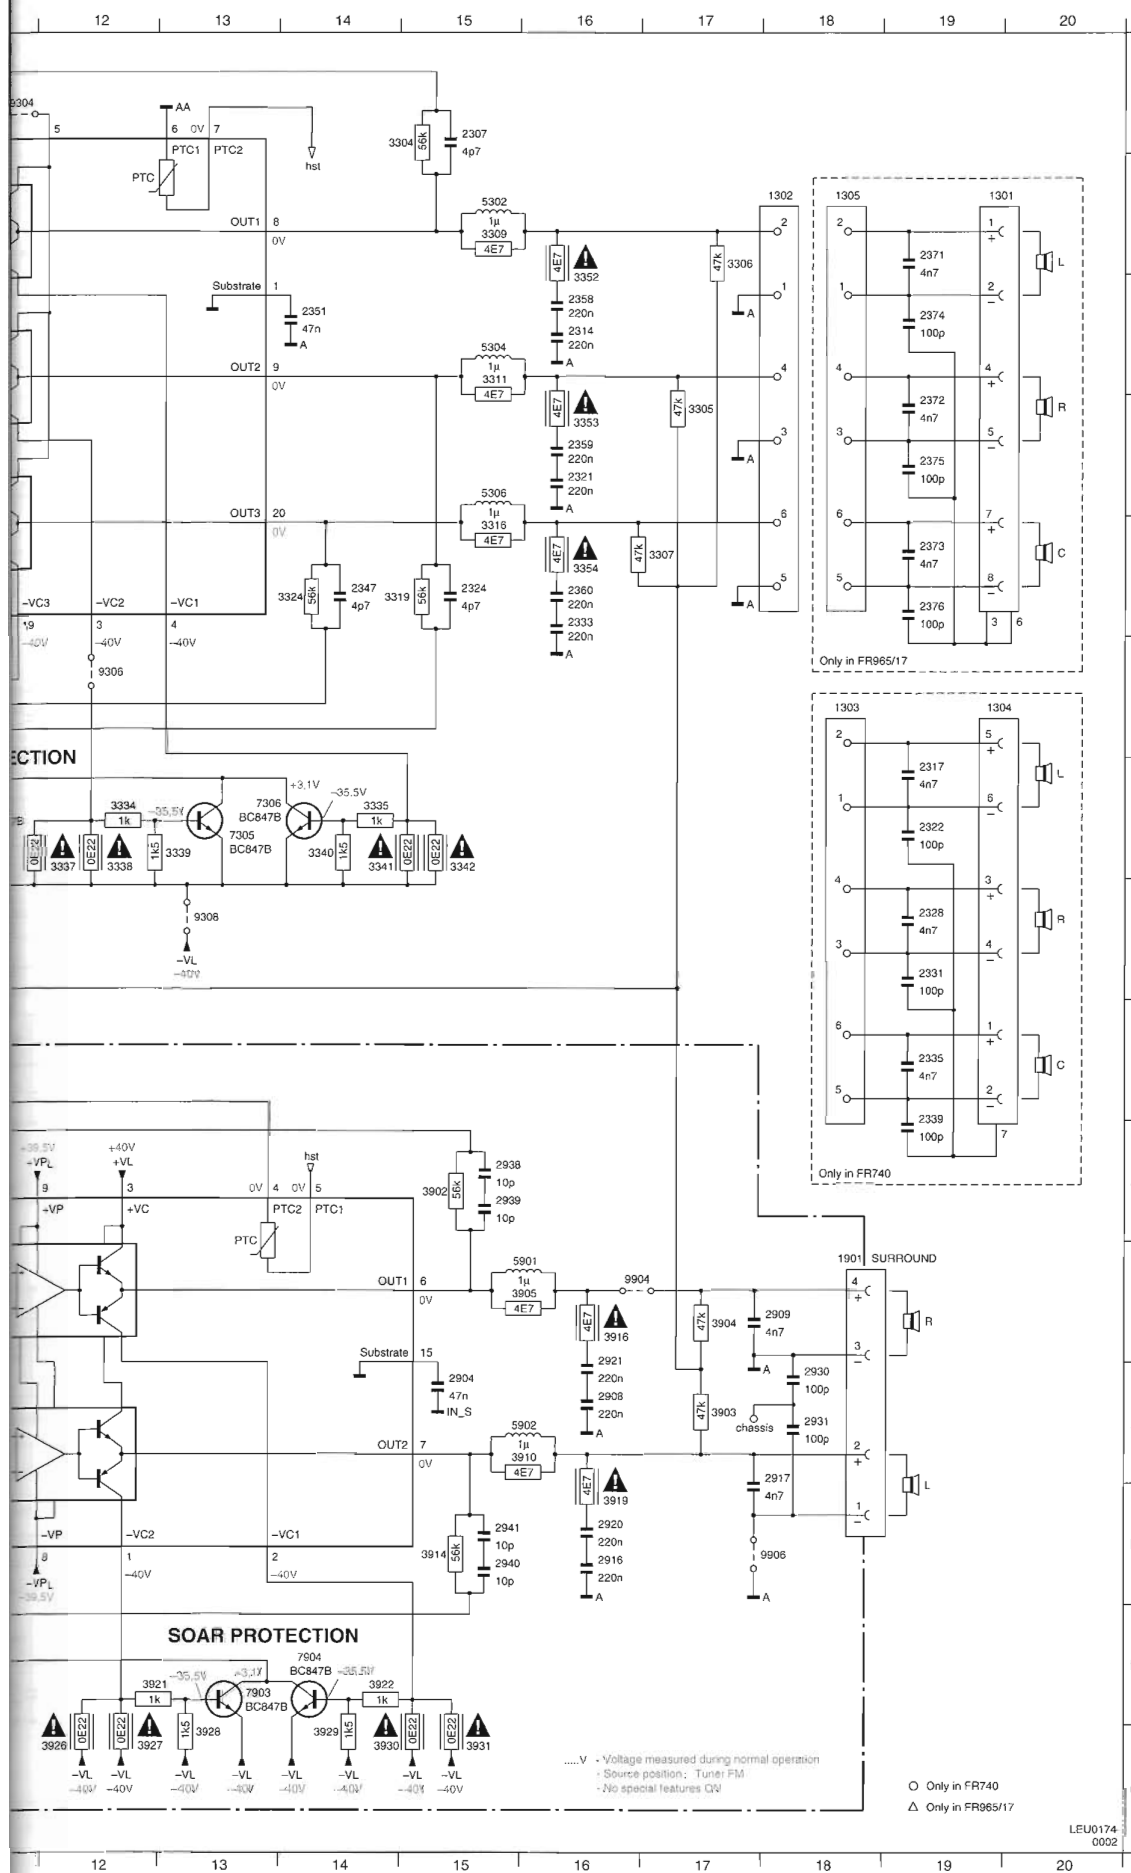

1301	B19	3352	C16
1302	B18	3353	D16
1303	F18	3354	E16
1304	F19	3356	D3
1305	B18	3357	C4
1901	K18	3358	C6
1902	M4	3359	D6
2280	H7	3360	E6
2297	E4	3361	B8
2298	E5	3362	C8
2301	K3	3363	D8
2302	M3	3901	M5
2306	L3	3902	J15
2307	A15	3903	L17
2310	B8	3904	K17
2311	B9	3905	K15
2313	A9	3906	K10
2314	C16	3908	J10
2315	A9	3910	L15
2316	C8	3911	L10
2317	G19	3913	M10
2319	C9	3914	M15
2321	D16	3915	N5
2322	G19	3916	K16
2324	E15	3917	L7
2325	F8	3918	L7
2328	H19	3919	M16
2330	G8	3920	L6
2331	H19	3921	N12
2333	E16	3922	N14
2334	D8	3925	L6
2335	I19	3926	O12
2337	D9	3927	O12
2339	J19	3928	O13
2341	E9	3929	O14
2346	F9	3930	O14
2347	E14	3931	O15
2349	N3	3935	L8
2350	C6	3936	J7
2351	C14	3937	J7
2352	O3	3943	E5
2357	K3	3946	J9
2358	C16	3947	L9
2359	D16	3956	H6
2360	E16	4563	B6
2365	C4	4904	J9
2371	B19	4908	G9
2372	D19	4909	M9
2373	E19	4910	J6
2374	C19	5302	B15
2375	D19	5304	C15
2376	E19	5306	D15
2901	M5	5901	K15
2902	M5	5902	L15
2904	L15	6270	H7
2905	J9	6271	H6
2906	K10	6279	I4
2908	L16	6289	F4
2909	K18	6290	E4
2910	J10	6304	C4
2911	O8	6305	C3
2912	J10	6905	G6
2913	L9	7255	G6
2914	L10	7256	H5
2916	M16	7259	H4
2917	L18	7260	F5
2918	M10	7261	E4
2919	M10	7301	A10
2920	M16	7304	C5
2921	L16	7305	G13
2923	O5	7306	G13
2924	O5	7307	G11
2925	L7	7309	C4
2930	L18	7310	D7
2931	L18	7901	J11
2938	J15	7902	L6
2939	J15	7903	N13
2940	M15	7904	N14
2941	M15	7909	J8
3251	E5	9301	L2
3252	F5	9302	N2
3253	F5	9304	A11
3259	G6	9306	F12
3260	G7	9308	H13
3263	H4	9309	L2
3264	H6	9310	N2
3267	I6	9904	K16
3272	H4	9906	M18
3301	M2		
3304	A14		
3305	D17		
3306	B17		
3307	E17		
3308	B9		
3309	B15		
3310	A9		
3311	C15		
3314	C9		
3315	G8		
3316	E15		
3319	E14		
3322	D9		
3323	E9		
3324	E13		
3326	D6		
3327	C6		
3328	N2		
3329	C5		
3330	D5		
3334	G12		
3335	G14		
3336	G10		
3337	G12		
3338	G12		
3339	G13		
3340	G14		
3341	G14		
3342	G15		
3343	G11		
3344	G11		
3345	G10		

G



Downloaded from www.Manualslib.com manuals search engine



013


MONO BOARD - MAPPING COMPONENT SIDE VIEW

1251	E7	2302	F5	2639	B5	3297	F8	5902	F2	9257	G2	9525	B2	9606	C8
1252	E8	2303	F5	2641	C6	3298	E7	6251	F9	9258	D9	9526	B2	9608	D6
1253	E6	2305	G7	2642	C6	3299	E7	6252	F9	9259	D8	9527	B3	9609	D6
1254	D6	2306	G7	2643	C6	3301	F4	6253	E9	9260	E5	9528	B2	9610	D6
1255	D4	2310	F4	2644	C6	3303	G7	6254	E9	9261	E4	9529	B2	9611	D6
1257	D5	2315	F4	2645	B6	3309	F5	6257	E6	9262	F5	9530	C2	9613	C5
1258	E6	2316	G4	2646	C6	3311	F4	6258	E6	9263	F2	9531	B2	9614	C5
1259	E8	2330	G4	2647	B4	3316	F4	6259	D6	9265	E4	9532	C2	9615	D5
1260	F8	2334	G4	2648	B4	3325	G7	6260	G8	9267	E4	9533	C2	9616	D5
1261	F8	2346	G5	2649	A4	3328	F5	6261	E6	9268	E4	9534	C2	9617	C5
1262	F8	2349	F7	2650	B4	3337	F6	6262	E6	9269	E7	9535	C2	9618	D4
1265	F7	2350	G4	2651	A4	3338	F6	6263	D6	9271	F7	9536	C1	9619	D4
1270	A2	2352	F5	2652	B4	3341	F6	6265	G7	9272	F8	9537	D1	9621	D4
1271	E5	2353	F5	2653	A6	3342	F6	6267	E7	9273	F8	9538	D1	9624	D7
1272	E6	2354	F6	2654	A6	3344	F6	6268	D6	9274	E9	9539	D1	9625	C7
1302	E6	2356	G5	2655	A6	3345	F6	6270	E3	9275	F8	9540	D2	9626	D4
1310	G5	2357	G5	2656	A6	3349	F6	6271	E3	9276	D8	9541	D2	9627	D4
1501	A1	2365	F3	2657	A6	3350	F6	6274	E7	9278	D8	9542	C2	9628	D5
1502	B1	2527	B3	2658	A6	3351	F6	6275	E7	9279	F8	9543	D2	9629	E2
1503	A1	2528	C3	2659	B6	3352	F5	6276	E4	9280	D8	9544	D1	9630	D4
1511	D2	2531	F1	2660	C7	3353	F5	6279	E3	9281	D3	9545	D1	9631	D4
1512	E1	2532	D2	2661	A4	3354	E4	6280	E5	9285	E8	9546	D2	9632	D4
1513	D1	2533	C7	2662	B4	3357	F3	6281	E5	9286	F8	9548	D3	9633	A2
1514	C1	2534	C7	2663	A6	3505	A4	6285	E5	9287	F8	9549	D3	9643	A6
1515	A9	2535	B5	2664	B7	3506	A3	6286	E5	9288	F8	9550	A3	9645	A1
1516	C1	2536	B5	2665	B6	3535	D3	6287	E5	9301	G7	9551	A3	9647	A3
1520	B8	2537	A7	2666	C6	3536	D3	6288	E5	9302	F7	9552	A3	9648	A3
1521	A2	2538	A7	2667	A4	3561	B3	6289	E3	9303	G7	9553	A3	9651	A7
1522	A2	2539	B3	2668	B4	3566	C2	6290	E3	9304	G6	9555	B3	9654	D2
1523	A3	2540	B3	2669	A6	3567	B2	6301	G7	9305	G6	9556	B3	9655	C8
1524	A3	2541	C4	2670	B6	3583	C2	6302	G7	9306	G6	9557	B3	9656	C7
1525	F1	2542	C4	2689	B7	3584	B2	6303	E3	9307	G6	9558	C3	9657	B8
1526	E2	2543	C4	2690	B8	3588	A1	6304	F3	9308	F7	9559	C3	9901	F2
1527	E2	2544	C4	2691	A5	3597	A2	6305	F4	9309	G7	9560	C3	9903	E4
1530	D5	2553	C5	2692	B5	3598	A2	6501	C2	9310	F7	9561	C3	9904	F2
1545	B2	2554	C5	2693	A7	3620	C6	6601	A9	9311	F5	9562	C3	9905	F1
1546	C1	2557	C3	2694	A7	3627	B9	6602	B9	9312	F5	9563	C3	9906	G1
1601	A9	2558	D3	2695	B7	3629	A9	6641	E4	9313	F5	9564	C4	9907	D5
1901	G1	2561	C2	2696	B8	3630	D3	6642	E4	9314	F5	9566	A4	9910	F2
1902	F3	2562	B2	2697	A5	3631	C3	6643	D4	9316	G5	9567	A4	9911	F2
2251	F9	2563	D7	2698	A5	3632	C3	6644	D2	9318	G5	9568	A4	9912	F2
2252	E8	2564	C7	2699	A7	3691	D4	6645	F2	9319	G5	9569	A5	9913	F3
2253	E8	2565	B5	2700	A7	3694	E2	6646	F2	9320	G6	9570	A5	9914	F3
2254	F9	2566	B7	2853	F1	3697	B6	6647	E2	9321	G6	9571	A5	9916	F2
2255	E8	2567	C5	2854	E1	3855	E1	6648	E2	9322	G6	9573	B5	9917	F4
2256	E8	2568	C6	2858	E1	3901	G2	6649	D7	9323	G7	9574	B6	9920	F2
2258	E7	2571	B1	2860	E2	3904	F1	6650	B3	9324	E6	9577	B6	9921	D8
2259	E7	2572	B1	2877	B7	3905	F2	6901	G3	9325	E7	9578	B6	9923	E8
2260	F7	2575	C1	2878	C8	3907	F1	6902	F3	9326	E6	9579	B6		
2261	F7	2576	B1	2879	A5	3909	F1	6903	F3	9501	A1	9580	B6		
2262	E8	2581	C2	2880	A5	3910	F1	6904	F4	9502	A1	9581	B6		
2263	E8	2582	B2	2881	A7	3912	G1	6905	E3	9503	A2	9583	C5		
2264	G8	2593	C3	2882	A7	3915	G2	7257	E4	9504	A2	9584	B5		
2265	G8	2594	B3	2901	G2	3916	F3	7258	E4	9505	A2	9585	C5		
2266	E6	2603	A8	2902	F3	3917	G3	7301	G5	9507	A2	9586	C5		
2268	D6	2604	A8	2905	G2	3919	F2	7302	G6	9508	A2	9588	B7		
2269	D9	2607	A8	2912	G2	3926	G3	7303	G5	9509	B1	9589	A8		
2272	C8	2608	A8	2913	G1	3927	G3	7501	D3	9510	B2	9590	A8		
2275	D7	2611	A8	2919	G1	3930	G3	7571	B1	9511	C3	9591	A8		
2278	D6	2612	F1	2923	G2	3931	G3	7572	B2	9513	A2	9592	B8		
2280	F2	2613	E2	2924	F3	3933	F3	7644	B3	9514	A2	9593	B8		
2283	E5	2614	A9	2925	G4	3956	E3	7901	G2	9515	D3	9594	C1		
2287	C8	2617	A8	3254	C9	5301	F5	7910	G8	9516	B5	9595	C2		
2288	E5	2618	A8	3257	C9	5302	F5	9251	E7	9517	B5	9599	C8		
2290	G9	2629	B7	3265	E6	5303	F5	9252	F7	9520	D3	9600	C8		
2292	G8	2630	B7	3270	E4	5304	F5	9253	E4	9521	B2	9601	C8		
2293	E8	2631	A4	3271	E4	5305	F4	9254	E4	9522	B2	9603	D6		
2297	F2	2632	A6	3291	G9	5306	F4	9255	D5	9523	B2	9604	D6		
2299	F2	2637	C7	3296	F8	5901	F2	9256	D6	9524	B3	9605	D6		

MONO BOARD - MAPPING COPPER SIDE VIEW

2270	G8	2552	C4	2868	C6	3319	F4	3556	C4	3656	A6	3889	E2	4520	C2	7305	F6
2271	G8	2555	D3	2869	C6	3320	E3	3557	B3	3657	A6	3890	E2	4521	D2	7306	F6
2273	G7	2556	D3	2871	B6	3322	G5	3560	F1	3658	A6	3891	F4	4522	D2	7307	F6
2274	G7	2559	C3	2872	C6	3323	G4	3562	B3	3659	B7	3892	G4	4523	D2	7309	F4
2276	E6	2569	F1	2873	A4	3324	G5	3563	E2	3660	B8	3893	D4	4524	D2	7310	G4
2277	E7	2570	B3	2874	B4	3326	G4	3571	B1	3661	B7	3894	D2	4526	E2	7503	C4
2281	G8	2573	B1	2875	A6	3327	G4	3572	B1	3662	B8	3895	F2	4528	D3	7504	B3
2282	G8	2574	B1	2876	B6	3329	G4	3573	B1	3663	A4	3896	F2	4529	D3	7601	A8
2295	G8	2577	C1	2883	B6	3330	G4	3574	B1	3664	A5	3902	G2	4530	C2	7621	A8
2298	F2	2578	B1	2884	C6	3334	F6	3575	B1	3665	A5	3903	F1	4531	C2	7622	A8
2301	F4	2579	C1	2885	B4	3335	F6	3576	B1	3666	A5	3906	G2	4532	C2	7641	C7
2304	G6	2580	B1	2886	B4	3336	F6	3577	C1	3667	A7	3908	G2	4533	C2	7642	B4
2307	F4	2583	C2	2887	A6	3339	F6	3578	B1	3668	A7	3911	G2	4537	A3	7643	A7
2308	G4	2584	B2	2888	A6	3340	F6	3579	C1	3669	A7	3913	G2	4538	A4	7651	F4
2309	G4	2585	B1	2903	G2	3343	F6	3580	B1	3670	A8	3914	G2	4539	B4	7652	F4
2311	G5	2586	B1	2904	G2	3356	F3	3581	C1	3671	C7	3918	G3	4540	A3	7653	D4
2312	G5	2595	C3	2906	G2	3358	G4	3582	B2	3672	C7	3920	G3	4541	A6	7654	D2
2313	G5	2596	B3	2907	G2	3359	G4	3585	C2	3673	D4	3921	G3	4542	A6	7655	F2
2314	F5	2599	C3	2908	G2	3360	G4	3586	B2	3674	D4	3922	G3	4543	A6	7656	F2
2319	G5	2600	B3	2909	F1	3361	F4	3587	B2	3675	C7	3925	G3	4544	A6	7657	C5
2320	G5	2605	A8	2910	G2	3362	G5	3589	B2	3676	C7	3928	G3	4545	B8	7658	C5
2321	F5	2606	A8	2911	G2	3363	G4	3590	B2	3677	B5	3929	G3	4548	C8	7660	E1
2324	F4	2610	A8	2914	G2	3501	B6	3591	C3	3678	B5	3932	F3	4550	C6	7661	E1
2325	G5	2615	A8	2915	G2	3502	C6	3592	B3	3679	D4	3934	G3	4551	C6	7662	E2
2326	G4	2616	A8	2916	G2	3509	A6	3593	C3	3680	D4	3935	G3	4552	C6	7902	G3
2327	G4	2619	A8	2917	G1	3510	A6	3594	B3	3681	B5	3936	G4	4553	C5	7903	G3
2333	F4	2620	A8	2918	G2	3511	B1	3595	C3	3682	B5	3937	G4	4555	C4	7904	G3
2337	G5	2622	D3	2920	F2	3512	B1	3596	B3	3683	A7	3938	B8	4556	C5	7906	F3
2338	G5	2623	D3	2921	G2	3513	D2	3601	A8	3684	A7	3939	B8	4557	C4	7908	G8
2341	G5	2624	B2	2922	G2	3514	D2	3602	A8	3685	F2	3940	C6	4558	C4	7909	G3
2345	G5	2625	B2	2926	E1	3515	E1	3603	A8	3686	E2	3941	B6	4559	C5		
2347	G5	2626	B2	2927	G3	3516	E1	3604	A8	3687	A7	3943	E2	4560	E1		
2348	G4	2627	D3	2928	F3	3517	E1	3605	A8	3688	A7	3944	B4	4563	G6		
2351	G6	2628	B7	2929	G3	3518	E1	3606	A8	3689	E4	3945	A4	4564	A1		
2358	F5	2633	C7	2930	G1	3519	E1	3607	A8	3690	E4	3946	G2	4565	C4		
2359	F5	2634	B5	2931	G1	3520	E1	3608	A8	3692	E2	3947	G1	4566	C4		
2360	F4	2635	A7	2932	C1	3521	D1	3609	A8	3693	F1	3948	A6	4641	A6		
2363	F5	2636	C7	2933	C1	3522	D1	3610	A8	3695	D8	3949	A6	4642	A5		
2501	B1	2638	B5	2934	B1	3523	D1	3611	A8	3696	C5	3950	D2	4643	D7		
2502	B1	2671	C7	2935	F6	3524	D1	3612	A8	3698	E2	3951	D2	4644	A6		
2505	B1	2672	C7	2936	F6	3525	D1	3613	C3	3699	C5	3952	A1	4649	B8		
2506	A1	2673	B5	2937	A8	3526	D1	3614	B3	3700	B6	3953	A1	4650	B5		
2507	A1	2674	B4	3251	F2	3527	D1	3615	C3	3851	E2	3954	B1	4651	C7		
2508	C4	2675	B7	3252	E2	3528	D1	3616	B3	3852	E1	3955	A1	4652	F1		
2509	C4	2676	B7	3253	E2	3529	D1	3618	F1	3853	F1	4251	E7	4653	A6		
2510	C3	2677	B7	3255	G8	3530	C1	3619	E2	3854	E1	4252	E3	4901	G3		
2511	D2	2678	B7	3256	D5	3531	C1	3621	C6	3856	E1	4253	E7	4902	G2		
2512	D2	2679	A5	3258	D5	3532	C1	3622	A8	3857	F1	4254	D5	4903	G2		
2513	E1	2680	A5	3259	E2	3533	C1	3623	A8	3858	E1	4255	F5	4904	F2		
2514	E1	2681	A7	3260	E2	3534	C1	3633	B2	3859	E2	4256	D2	4905	B3		
2515	E1	2682	A7	3263	E2	3537	C1	3634	B2	3860	E2	4257	F3	4906	C5		
2516	E1	2683	B7	3264	E3	3538	C1	3635	B2	3871	B6	4258	E5	4907	F4		
2517	D1	2684	B7	3266	E4	3539	C1	3636	C4	3872	C6	4259	D5	4908	E3		
2518	D1	2685	A4	3267	E3	3540	C1	3637	C4	3873	B6	4260	C8	4909	F3		
2519	D1	2686	B5	3268	E5	3541	C4	3638	C4	3874	C6	4283	D8	4910	F4		
2520	D1	2687	A7	3269	E5	3542	C4	3639	C4	3875	A4	4284	D8	4912	E7		
2521	D1	2688	A7	3272	E2	3543	C4	3641	C6	3876	B4	4285	D8	4913	G7		
2522	C1	2851	E1	3292	G8	3544	C4	3642	C6	3877	A4	4287	D5	4914	C8		
2523	D3	2852	E1	3293	G8	3545	C4	3643	C6	3878	B4	4320	G5	4915	G4		
2524	D3	2855	E1	3294	G8	3546	C4	3644	C6	3879	A6	4505	A1	4916	C8		
2525	C1	2856	E1	3295	G8	3547	C4	3645	B6	3880	B6	4506	A3	4917	C8		
2526	C1	2857	E1	3304	F4	3548	C4	3646	C6	3881	A6	4512	B4	4918	B7		
2529	B3	2861	A2	3305	F5	3549	D3	3649	A4	3882	B6	4513	A1	7253	D6		
2530	B3	2862	B6	3306	F5	3550	D3	3650	B4	3883	B7	4514	B1	7255	E3		
2545	C4	2863	C6	3307	F4	3551	C5	3651	A4	3884	B8	4515	B1	7256	E2		
2546	C4	2864	A4	3308	G5	3552	C5	3652	B4	3885	A5	4516	B1	7259	F2		
2549	C4	2865	B4	3310	F4	3553	C2	3653	A6	3886	A5	4517	B2	7260	E2		
2550	C4	2866	A6	3314	G5	3554	D3	3654	A6	3887	A7	4518	B2	7261	F2		
2551	C4	2867	A6	3315	G4	3555	C3	3655	A6	3888	A7	4519	C1	7304	G4		


MONO BOARD - COPPER SIDE VIEW

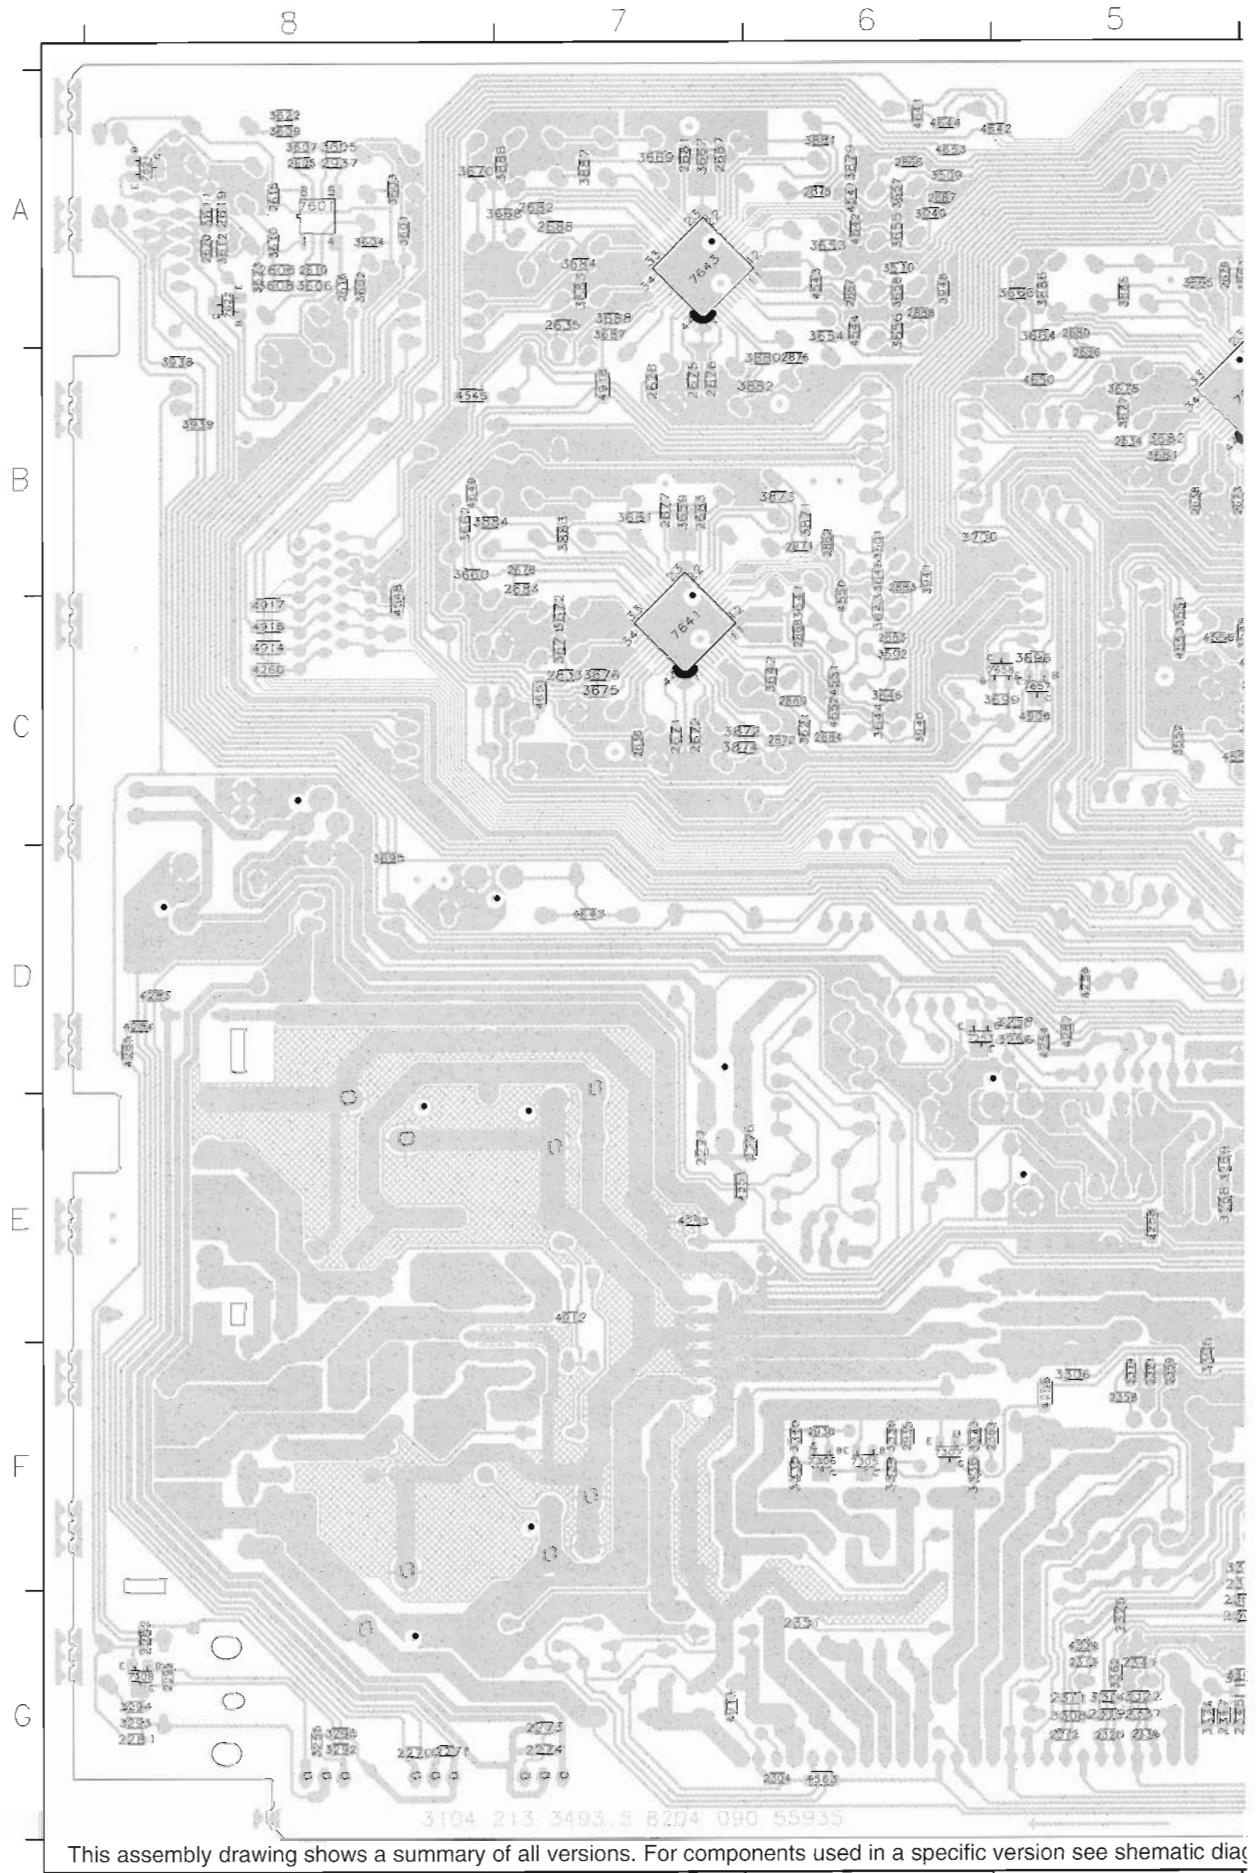




gram and respective partslist.

EXPLODED VIEW

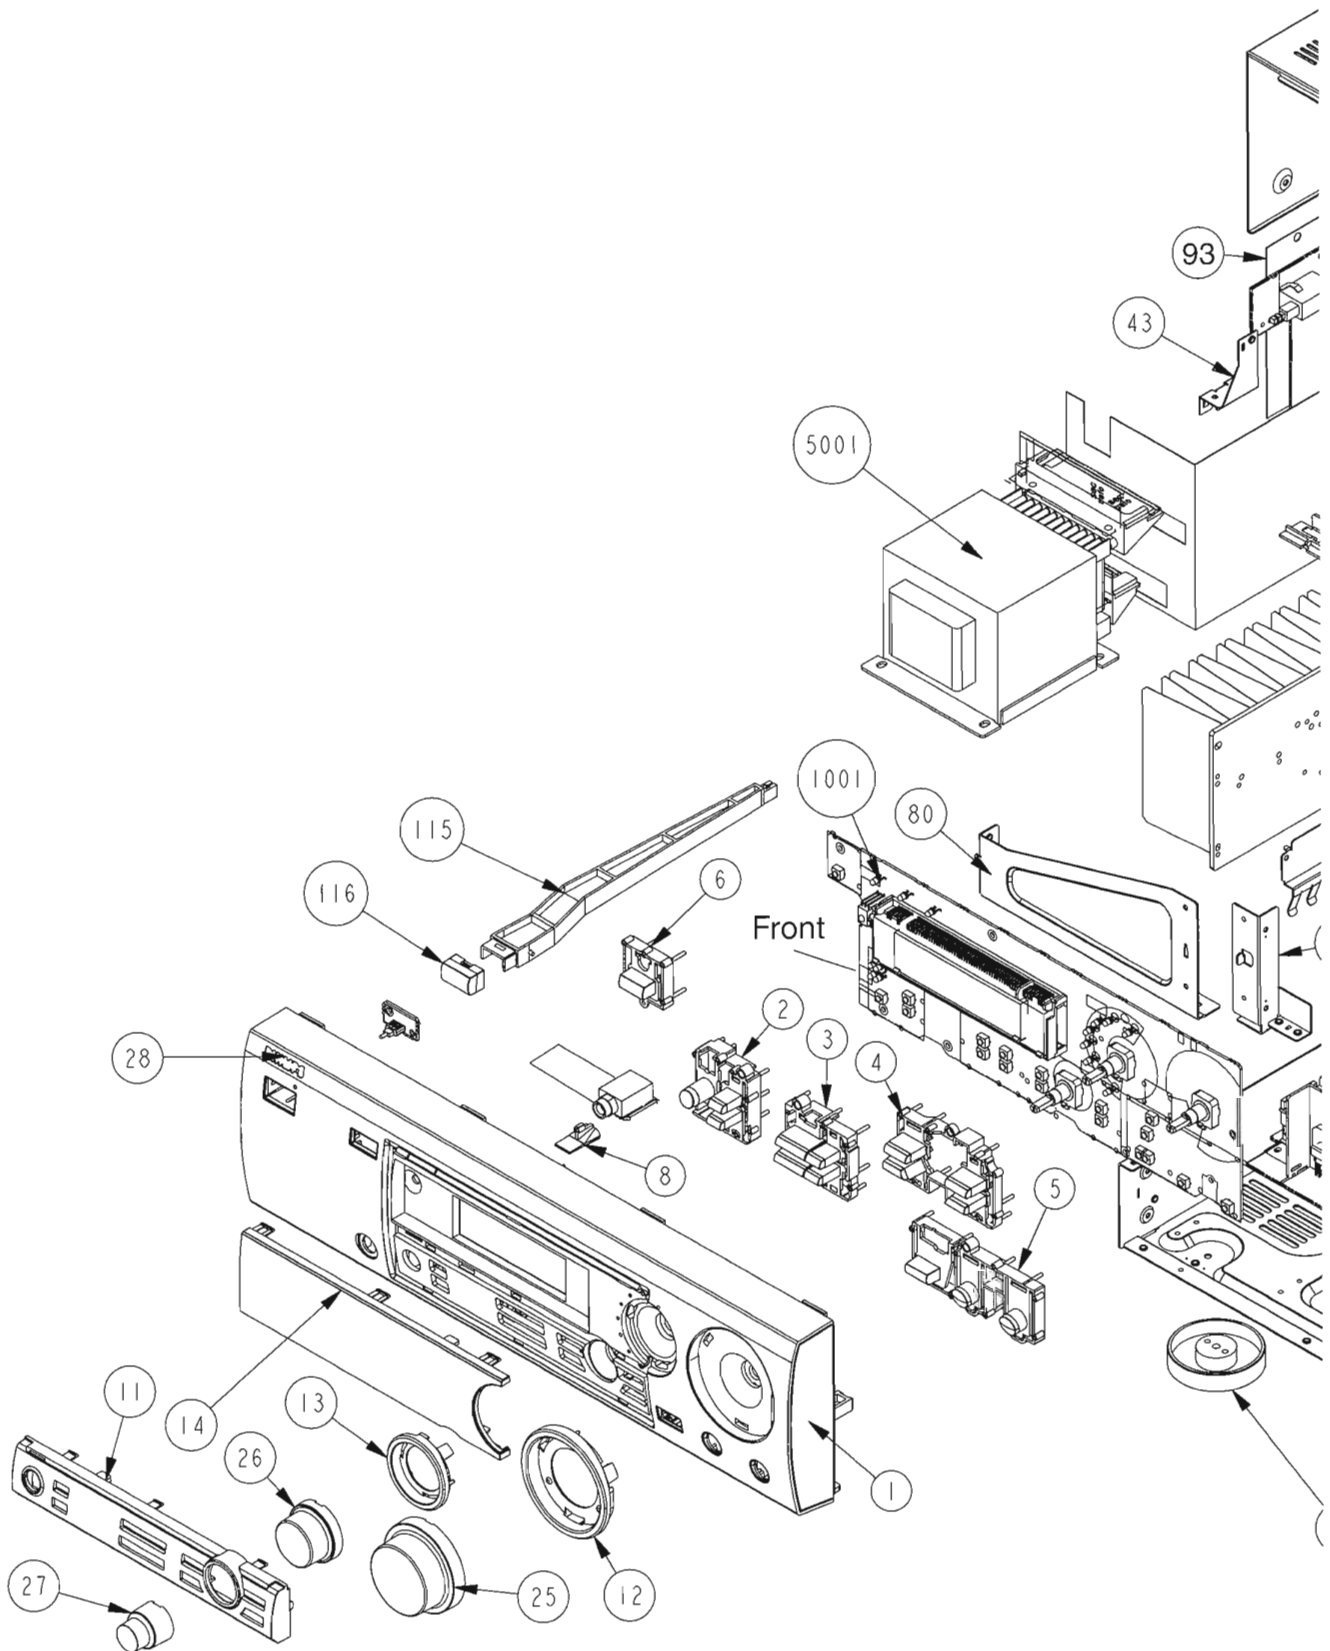

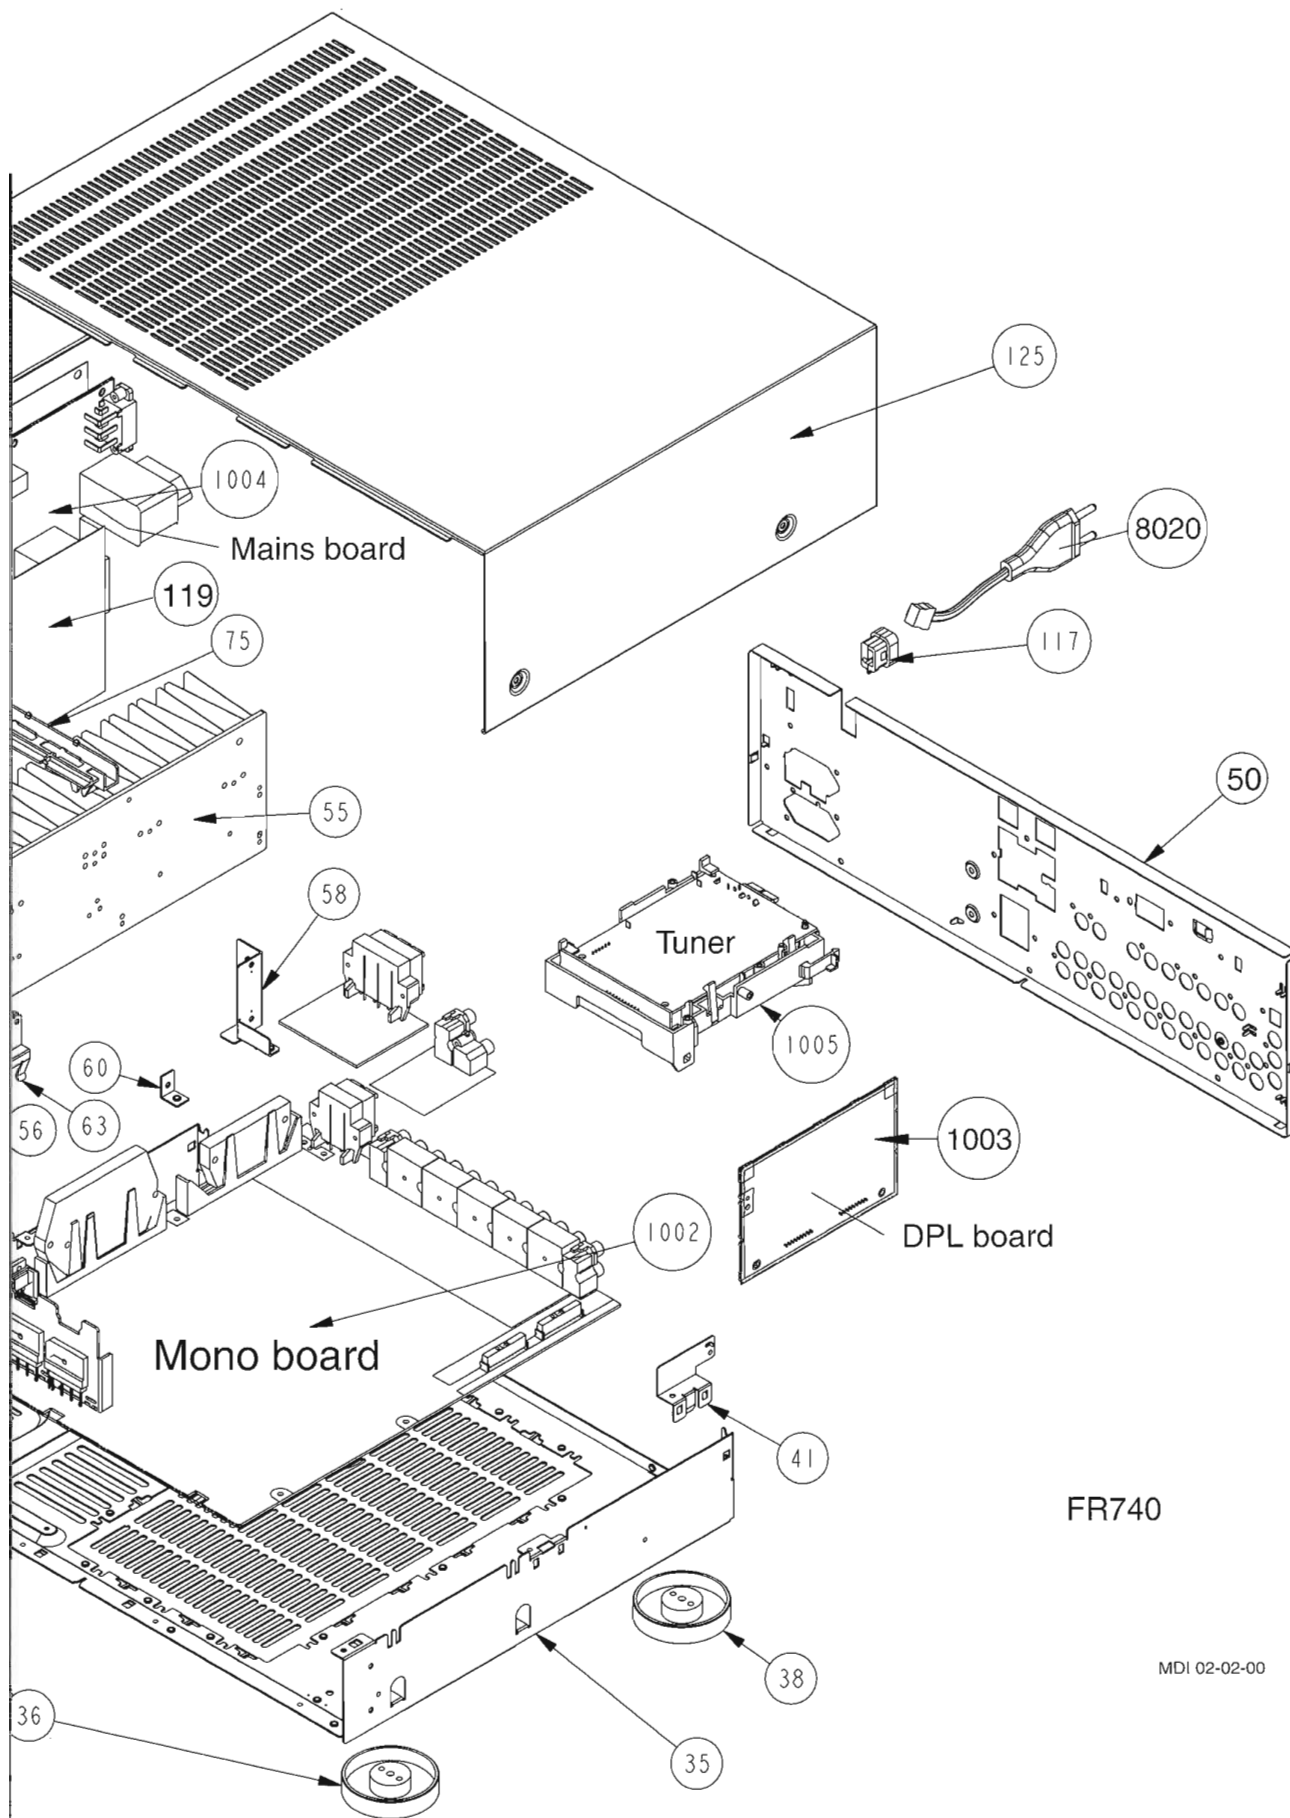

FR740

MDI 02-02-00

SCALE 0.250

Note: Only the parts mentioned in this list are normal service parts.

PARTSLIST - EXPLODED VIEW**MECHANICAL PARTS**


1	310421752750	FRONT CAB ASSY FR740
2	482241012442	BUTTON HINGE ASSY SURROUND
3	482241012435	BUTTONS HINGE TUNER
4	482241012443	BUTTON HINGE ASSY MENU
5	482241012436	BUTTONS HINGE BT
6	482241012437	BUTTONS EASY LINK
8	482238010274	LIGHT GUIDE SURROUND
10	482238010277	LIGHT GUIDE SELECTOR
11	482245413472	ORN. PLATE ASSY (BL)
12	482253213147	RING KNOB VOLUME (BL)
13	482253213148	RING KNOB SOURCE SELECTOR (BL)
14	482245010664	WINDOW DISPLAY ASSY
25	482241012438	KNOB VOLUME (BL)
26	482241012439	KNOB SOURCE SELECTOR (BL)
27	482241012441	KNOB MENU NAV (BL)
28	482245910887	BADGE PHILIPS ASSY
36	482269110773	LEG SILVER
38	482246242158	FOOT BLACK
115	482253510638	POWER ROD
116	482246211176	POWER CAP
117	482253260948	BUSH
125	482244201817	COVERPLATE

ELECTRICAL PARTS

5001	310421830980	TRAFO FR740/00 5 X 50W
8020	482232111139	POWER CORD

MISCELLANEOUS

310421904210	HOME CINEMA SPEAKER 60W
482232012719	CORD SET L/R BOX
310421904200	HOME CINEMA CENTER SPEAKER 60W
482232012721	CORD SET CENTER SPEAKER
310421904190	HOME CINEMA SURR.SPEAKER 60W
482232012722	CORD SET SURROUND SPEAKER
482221910707	RC2526/01
310330616980	INSTR.F.USE FR740/00P

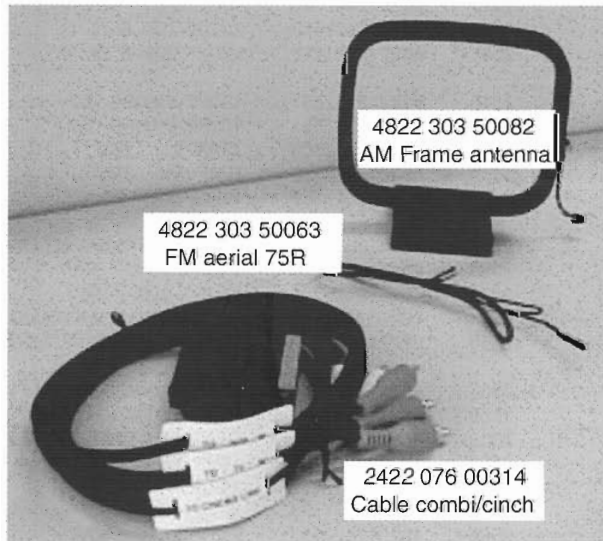

ELECTRICAL PARTSLIST - MONO BOARD**MISCELLANEOUS**

1258 ▲ 482207151602 FUSE 1,6A
 1260 ▲ 482225251123 FUSE 6,3A
 1261 ▲ 482225251123 FUSE 6,3A
 1262 ▲ 482225251173 FUSE 1A
 1304 482226511607 CLICK FIT 6P LS

1501 482226511586 2P YKC21-4052
 1502 482226731823 YKC21-3424
 1512 482226731823 YKC21-3424
 1513 482226731823 YKC21-3424
 1514 482226731823 YKC21-3424

1520 482226510981 15FE-BT-VK-N
 1525 482226511608 2P YKC21-4053
 1540 482226520542 CINCIN 2P
 1550 482226731729 CINCIN 1P
 1901 482226511609 CLICK FIT 4P LS

CAPACITORS

2251 532212142578 100NF 5% 250V
 2254 532212142578 100NF 5% 250V
 2259 482212480415 4700UF20% 50V
 2260 482212480415 4700UF20% 50V
 2266 532212142386 100NF 5% 63V
 2268 532212142386 100NF 5% 63V
 2269 482212411583 2200UF 20% 35V
 2270 482212613838 100NF Y5V 50V P80M20
 2271 482212614583 470NF 10% 16V XTR 0805
 2273 482212614585 100NF 10% X7R 0805 50V

2274 482212614583 470NF 10% 16V XTR 0805
 2275 482212481144 1000U 16V
 2276 482212614585 100NF 10% X7R 0805 50V
 2277 482212614583 470NF 10% 16V XTR 0805
 2278 482212422652 2,2UF20% 50V
 2280 482212441584 100UF 20% 10V
 2281 482212613838 100NF Y5V 50V P80M20
 2282 482212614583 470NF 10% 16V XTR 0805
 2283 482212411769 220UF 20% 50V
 2287 482212440784 3300UF 20% 16V

2290 482212440248 10UF20% 63V
 2295 482212233177 10NF 20% X7R 50V
 2297 482212440248 10UF20% 63V
 2298 482212613751 47NF10% X7R 63V
 2301 532212232654 22NF10%X7R 63V

2302 482212481151 22UF 50V
 2306 482212440248 10UF20% 63V
 2307 532212232287 4,7PF 5%NP0 50V
 2310 482212440248 10UF20% 63V
 2311 532212232268 470PF 10% 50V

2313 482212233575 220PF 5% NP0 63V
 2314 482212613473 220NF80-20% 50V
 2315 482212441584 100UF 20% 10V
 2316 482212440248 10UF20% 63V
 2317 532212610223 4,7NF10%X7R 63V

2319 532212232268 470PF 10% 50V
 2321 482212613473 220NF80-20% 50V
 2322 532212232531 100PF 5%NP0 50V
 2324 532212232287 4,7PF 5%NP0 50V
 2325 482212233575 220PF 5% NP0 63V

2328 532212610223 4,7NF10%X7R 63V
 2330 482212441584 100UF 20% 10V
 2331 532212232531 100PF 5%NP0 50V
 2333 482212613473 220NF80-20% 50V
 2334 482212440248 10UF20% 63V

2335 532212610223 4,7NF10%X7R 63V
 2337 532212232268 470PF 10% 50V
 2339 532212232531 100PF 5%NP0 50V

CAPACITORS

2341 482212233575 220PF 5% NP0 63V
 2346 482212441584 100UF 20% 10V
 2347 532212232287 4,7PF 5%NP0 50V
 2349 482212440248 10UF20% 63V
 2350 482212440181 220UF20% 10V

2351 482212613751 47NF10% X7R 63V
 2352 482212481151 22UF 50V
 2357 482212612882 100NF+80-20% 50V
 2358 482212613473 220NF80-20% 50V
 2359 482212613473 220NF80-20% 50V

2360 482212613473 220NF80-20% 50V
 2365 482212141857 10NF 5% 250V
 2501 532212610511 1NF 5%NP0 50V
 2502 532212610511 1NF 5%NP0 50V
 2505 532212610511 1NF 5%NP0 50V

2506 532212610511 1NF 5%NP0 50V
 2507 532212610511 1NF 5%NP0 50V
 2508 532212232531 100PF 5%NP0 50V
 2509 532212232531 100PF 5%NP0 50V
 2511 532212232531 100PF 5%NP0 50V

2512 532212232531 100PF 5%NP0 50V
 2513 532212232531 100PF 5%NP0 50V
 2514 532212232531 100PF 5%NP0 50V
 2515 532212232531 100PF 5%NP0 50V
 2516 532212232531 100PF 5%NP0 50V

2517 532212232531 100PF 5%NP0 50V
 2518 532212232531 100PF 5%NP0 50V
 2519 532212232531 100PF 5%NP0 50V
 2520 532212232531 100PF 5%NP0 50V
 2521 532212232531 100PF 5%NP0 50V

2522 532212232531 100PF 5%NP0 50V
 2531 482212142408 220NF 5% 63V
 2532 482212142408 220NF 5% 63V
 2533 482212481151 22UF 50V
 2534 482212481151 22UF 50V

2535 482212481151 22UF 50V
 2536 482212481151 22UF 50V
 2537 482212481151 22UF 50V
 2538 482212481151 22UF 50V
 2539 482212440207 100UF20% 25V

2540 482212440433 47UF20% 25V
 2541 482212440248 10UF20% 63V
 2542 482212440248 10UF20% 63V
 2543 482212411912 220UF 20% 6,3V
 2544 482212411912 220UF 20% 6,3V

2545 532212232531 100PF 5%NP0 50V
 2546 532212232531 100PF 5%NP0 50V
 2549 532212232658 22PF 5% 50V
 2550 532212232658 22PF 5% 50V
 2551 482212613838 100NF Y5V 50V P80M20

2552 482212613838 100NF Y5V 50V P80M20
 2553 482212441751 47UF 20% 50V
 2554 482212441751 47UF 20% 50V
 2555 482212613838 100NF Y5V 50V P80M20
 2556 482212613838 100NF Y5V 50V P80M20

2557 482212441751 47UF 20% 50V
 2558 482212441751 47UF 20% 50V
 2559 482212612105 CER2 X7R 50V 33NF PM5
 2563 482212314025 16V 2200U 20%
 2564 482212422652 2,2UF20% 50V

2565 482212422652 2,2UF20% 50V
 2566 482212422652 2,2UF20% 50V
 2567 482212440769 4,7UF20% 100V
 2568 482212440769 4,7UF20% 100V
 2569 532212232531 100PF 5%NP0 50V

ELECTRICAL PARTSLIST - MONO BOARD**CAPASITORS**

2603	482212481151	22UF	50V
2604	482212481151	22UF	50V
2605	482212613692	47PF 1% NP0	63V
2606	482212613692	47PF 1% NP0	63V
2607	482212441751	47UF	20% 50V
2608	482212441751	47UF	20% 50V
2610	482212233575	220PF 5% NP0	63V
2611	482212440207	100UF20%	25V
2612	482212440248	10UF20%	63V
2613	482212440248	10UF20%	63V
2614	482212440207	100UF20%	25V
2615	532212232654	22NF10%X7R	63V
2616	532212232654	22NF10%X7R	63V
2617	482212440248	10UF20%	63V
2618	482212440248	10UF20%	63V
2619	532212232531	100PF 5%NP0	50V
2620	532212232531	100PF 5%NP0	50V
2622	532212232531	100PF 5%NP0	50V
2623	532212232531	100PF 5%NP0	50V
2627	532212232531	100PF 5%NP0	50V
2628	482212614585	100NF 10% X7R	50V
2629	482212441751	47UF	20% 50V
2630	532212142386	100NF 5%	63V
2631	532212142386	100NF 5%	63V
2632	532212142386	100NF 5%	63V
2633	532212232654	22NF10%X7R	63V
2634	532212232654	22NF10%X7R	63V
2635	532212232654	22NF10%X7R	63V
2636	482212614585	100NF 10% X7R	50V
2637	482212441751	47UF	20% 50V
2638	482212614585	100NF 10% X7R	50V
2639	482212441751	47UF	20% 50V
2641	482212421913	1UF20%	63V
2642	482212421913	1UF20%	63V
2643	482212421913	1UF20%	63V
2644	482212421913	1UF20%	63V
2645	482212421913	1UF20%	63V
2646	482212421913	1UF20%	63V
2647	482212421913	1UF20%	63V
2648	482212421913	1UF20%	63V
2649	482212421913	1UF20%	63V
2650	482212421913	1UF20%	63V
2651	482212421913	1UF20%	63V
2652	482212421913	1UF20%	63V
2655	482212421913	1UF20%	63V
2656	482212421913	1UF20%	63V
2657	482212421913	1UF20%	63V
2658	482212421913	1UF20%	63V
2659	482212422652	2,2UF20%	50V
2660	482212422652	2,2UF20%	50V
2661	482212422652	2,2UF20%	50V
2662	482212422652	2,2UF20%	50V
2663	482212422652	2,2UF20%	50V
2664	482212422652	2,2UF20%	50V
2665	482212143526	47NF 5%	250V
2666	482212143526	47NF 5%	250V
2667	482212143526	47NF 5%	250V
2668	482212143526	47NF 5%	250V
2669	482212143526	47NF 5%	250V
2670	482212143526	47NF 5%	250V

2671	532212231866	6,8NF10%X7R	63V
2672	532212231866	6,8NF10%X7R	63V
2673	532212231866	6,8NF10%X7R	63V
2674	532212231866	6,8NF10%X7R	63V
2675	532212231866	6,8NF10%X7R	63V

CAPACITORS

2676	532212231866	6,8NF10%X7R	63V
2677	532212232654	22NF10%X7R	63V
2678	532212232654	22NF10%X7R	63V
2679	532212232654	22NF10%X7R	63V
2680	532212232654	22NF10%X7R	63V
2681	532212232654	22NF10%X7R	63V
2682	532212232654	22NF10%X7R	63V
2683	532212232654	22NF10%X7R	63V
2684	532212232654	22NF10%X7R	63V
2685	532212232654	22NF10%X7R	63V
2686	532212232654	22NF10%X7R	63V
2687	532212232654	22NF10%X7R	63V
2688	532212232654	22NF10%X7R	63V
2689	532212142465	68NF 5%	63V
2690	532212142465	68NF 5%	63V
2691	532212142465	68NF 5%	63V
2692	532212142465	68NF 5%	63V
2693	532212142465	68NF 5%	63V
2694	532212142465	68NF 5%	63V
2695	532212142465	68NF 5%	63V
2696	532212142465	68NF 5%	63V
2697	532212142465	68NF 5%	63V
2698	532212142465	68NF 5%	63V
2699	532212142465	68NF 5%	63V
2700	532212142465	68NF 5%	63V
2831	532212232531	100PF 5%NP0	50V
2832	482212614585	100NF 10% X7R	50V
2833	532212232654	22NF10%X7R	63V
2834	532212232531	100PF 5%NP0	50V
2851	532212232658	22PF 5%	50V
2852	532212232658	22PF 5%	50V
2853	482212481151	22UF	50V
2854	482212481151	22UF	50V
2855	532212232531	100PF 5%NP0	50V
2856	532212232531	100PF 5%NP0	50V
2857	482212614585	100NF 10% X7R	50V
2858	482212441751	47UF	20% 50V
2860	482212441751	47UF	20% 50V
2861	532212232654	22NF10%X7R	63V
2862	532212232531	100PF 5%NP0	50V
2863	532212232531	100PF 5%NP0	50V
2864	532212232531	100PF 5%NP0	50V
2865	532212232531	100PF 5%NP0	50V
2866	532212232531	100PF 5%NP0	50V
2867	532212232531	100PF 5%NP0	50V
2868	482212233575	220PF 5% NP0	63V
2869	482212233575	220PF 5% NP0	63V
2871	482212233177	10NF 20% X7R	50V
2872	482212233177	10NF 20% X7R	50V
2873	482212233177	10NF 20% X7R	50V
2875	482212233177	10NF 20% X7R	50V
2876	482212233177	10NF 20% X7R	50V
2877	532212142386	100NF 5%	63V
2878	532212142386	100NF 5%	63V
2879	532212142386	100NF 5%	63V
2880	532212142386	100NF 5%	63V
2881	532212142386	100NF 5%	63V
2882	532212142386	100NF 5%	63V
2883	532212610511	1NF 5%NP0	50V
2884	532212610511	1NF 5%NP0	50V
2885	532212610511	1NF 5%NP0	50V
2886	532212610511	1NF 5%NP0	50V
2887	482212233127	2,2NF10%X7R	63V
2888	482212233127	2,2NF10%X7R	63V

ELECTRICAL PARTSLIST - MONO BOARD**CAPACITORS**

2901	482212481151	22UF	50V
2902	482212440248	10UF20%	63V
2903	532212232287	4,7PF 5%NP0	50V
2904	482212613751	47NF10% X7R	63V
2905	482212440248	10UF20%	63V
2906	532212232268	470PF 10%	50V
2908	482212613473	220NF80-20%	50V
2909	532212610223	4,7NF10%X7R	63V
2910	482212233575	220PF 5% NP0	63V
2911	532212232654	22NF10%X7R	63V
2912	482212441584	100UF 20%	10V
2913	482212440248	10UF20%	63V
2914	532212232268	470PF 10%	50V
2916	482212613473	220NF80-20%	50V
2917	532212610223	4,7NF10%X7R	63V
2918	482212233575	220PF 5% NP0	63V
2919	482212441584	100UF 20%	10V
2920	482212613473	220NF80-20%	50V
2921	482212613473	220NF80-20%	50V
2922	532212232287	4,7PF 5%NP0	50V
2923	482212481151	22UF	50V
2924	482212440248	10UF20%	63V
2925	482212440181	220UF20%	10V
2926	482212614585	100NF 10% X7R	50V
2930	532212232531	100PF 5%NP0	50V
2931	532212232531	100PF 5%NP0	50V
2932	532212232531	100PF 5%NP0	50V
2933	532212232531	100PF 5%NP0	50V
2934	532212610511	1NF 5%NP0	50V
2937	482212233575	220PF 5% NP0	63V

RESISTORS

3251	482205120471	470R00	5%	0,1W
3252	482211710837	100K	1%	0,1W
3253	482211710837	100K	1%	0,1W
3254	▲ 482211711342	0R33	5%	2W
3256	482211710833	10K	1%	0,1W
3257	▲ 482211711342	0R33	5%	2W
3258	482211711149	82K	1%	0,1W
3259	482211710361	680R	1%	0,1W
3260	482211710834	47K	1%	0,1W
3263	482211710361	680R	1%	0,1W
3264	482211710837	100K	1%	0,1W
3266	482205120223	22K00	5%	0,1W
3267	482205120392	3K90	5%	0,1W
3268	482205120332	3K30	5%	0,1W
3269	482205120332	3K30	5%	0,1W
3270	▲ 482205210479	47R00	5%	0,33W
3271	▲ 482205210479	47R00	5%	0,33W
3272	482205120393	39K00	5%	0,1W
3291	▲ 482205210109	10R00	5%	0,33W
3292	482211683933	15K	1%	0,1W
3293	482211710833	10K	1%	0,1W
3294	482211710833	10K	1%	0,1W
3295	482211683933	15K	1%	0,1W
3301	▲ 482205210479	47R00	5%	0,33W
3304	482211711148	56K	1%	0,1W
3305	482211710834	47K	1%	0,1W
3306	482211710834	47K	1%	0,1W
3307	482211710834	47K	1%	0,1W
3308	482211711148	56K	1%	0,1W
3309	482205024708	4R70	1%	0,6W
3310	482205120182	1K80	5%	0,1W
3311	482205024708	4R70	1%	0,6W
3314	482211711148	56K	1%	0,1W

RESISTORS

3315	482205120182	1K80	5%	0,1W
3316	482205024708	4R70	1%	0,6W
3319	482211711148	56K	1%	0,1W
3322	482211711148	56K	1%	0,1W
3323	482205120182	1K80	5%	0,1W
3324	482211711148	56K	1%	0,1W
3326	482205120333	33K00	5%	0,1W
3327	482211711503	220R	1%	0,1W
3328	482205210479	47R00	5%	0,33W
3329	482211710837	100K	1%	0,1W
3330	482211710833	10K	1%	0,1W
3334	482205110102	1K00	2%	0,25W
3335	482205110102	1K00	2%	0,25W
3336	482205110102	1K00	2%	0,25W
3337	▲ 482211711744	0R22	5%	1W
3338	▲ 482211711744	0R22	5%	1W
3339	482211711139	1K5	1%	0,1W
3340	482211711139	1K5	1%	0,1W
3341	▲ 482211711744	0R22	5%	1W
3342	▲ 482211711744	0R22	5%	1W
3343	482211711139	1K5	1%	0,1W
3344	▲ 482211711744	0R22	5%	1W
3345	▲ 482211711744	0R22	5%	1W
3352	▲ 482205310478	4R70	5%	1W
3353	▲ 482205310478	4R70	5%	1W
3354	▲ 482205310478	4R70	5%	1W
3356	482211710834	47K	1%	0,1W
3357	482205021003	10K00	1%	0,6W
3358	482205110102	1K00	2%	0,25W
3359	482211710837	100K	1%	0,1W
3360	482211710833	10K	1%	0,1W
3361	482205120471	470R00	5%	0,1W
3362	482205120471	470R00	5%	0,1W
3363	482205120471	470R00	5%	0,1W
3501	482211683933	15K	1%	0,1W
3502	482211683933	15K	1%	0,1W
3505	482211652244	15K	5%	0,5W
3506	482211652244	15K	5%	0,5W
3509	482211683933	15K	1%	0,1W
3510	482211683933	15K	1%	0,1W
3511	482205120101	100R00	5%	0,1W
3512	482205120101	100R00	5%	0,1W
3513	482211710834	47K	1%	0,1W
3514	482211710834	47K	1%	0,1W
3515	482205120471	470R00	5%	0,1W
3516	482205120471	470R00	5%	0,1W
3517	482205120393	39K00	5%	0,1W
3518	482205120393	39K00	5%	0,1W
3519	482205120822	8K20	5%	0,1W
3520	482205120822	8K20	5%	0,1W
3521	482205120393	39K00	5%	0,1W
3522	482205120393	39K00	5%	0,1W
3523	482205120822	8K20	5%	0,1W
3524	482205120822	8K20	5%	0,1W
3525	482205120393	39K00	5%	0,1W
3526	482205120393	39K00	5%	0,1W
3527	482205120822	8K20	5%	0,1W
3528	482205120822	8K20	5%	0,1W
3529	482205120471	470R00	5%	0,1W
3530	482205120471	470R00	5%	0,1W
3531	482205120393	39K00	5%	0,1W
3532	482205120393	39K00	5%	0,1W
3533	482205120822	8K20	5%	0,1W
3534	482205120822	8K20	5%	0,1W
3541	482205120393	39K00	5%	0,1W

ELECTRICAL PARTSLIST - MONO BOARD**RESISTORS**

3542	482205120393	39K00	5%	0,1W
3543	482211712955	2K7	1%	0,1W 0805
3544	482211712955	2K7	1%	0,1W 0805
3545	482211710833	10K	1%	0,1W
3546	482211710833	10K	1%	0,1W
3547	482205120562	5K6	5%	0,1W 0805
3548	482205120562	5K6	5%	0,1W 0805
3551	482211711504	270R	1%	0,1W
3552	482211711504	270R	1%	0,1W
3553	482211711504	270R	1%	0,1W
3554	482211711504	270R	1%	0,1W
3555	482205120332	3K30	5%	0,1W
3560	482205110102	1K00	2%	0,25W
3561	▲ 482205210478	4R70	5%	0,33W
3562	482205120471	470R00	5%	0,1W
3563	482205110102	1K00	2%	0,25W
3601	482205120101	100R00	5%	0,1W
3602	482205120101	100R00	5%	0,1W
3603	482211710837	100K	1%	0,1W
3604	482211710837	100K	1%	0,1W
3605	482211711383	12K	1%	0,1W
3606	482211711383	12K	1%	0,1W
3607	482205120333	33K00	5%	0,1W
3608	482205120333	33K00	5%	0,1W
3609	482205120121	120R00	5%	0,1W
3610	482205120121	120R00	5%	0,1W
3611	482211710834	47K	1%	0,1W
3612	482211710834	47K	1%	0,1W
3618	482211710834	47K	1%	0,1W
3619	482211710834	47K	1%	0,1W
3620	482211652175	100E	5%	0,5W
3621	482205120101	100R00	5%	0,1W
3622	482205120121	120R00	5%	0,1W
3623	482205120121	120R00	5%	0,1W
3627	▲ 482205210109	10R00	5%	0,33W
3629	▲ 482205210109	10R00	5%	0,33W
3630	482205011002	1K00	1%	0,4W
3631	482205011002	1K00	1%	0,4W
3632	482205011002	1K00	1%	0,4W
3636	482205120471	470R00	5%	0,1W
3637	482205120471	470R00	5%	0,1W
3638	482205120471	470R00	5%	0,1W
3639	482205120471	470R00	5%	0,1W
3641	482211710837	100K	1%	0,1W
3642	482211710837	100K	1%	0,1W
3643	482211710837	100K	1%	0,1W
3644	482211710837	100K	1%	0,1W
3645	482211711148	56K	1%	0,1W
3646	482211711148	56K	1%	0,1W
3649	482211710837	100K	1%	0,1W
3650	482211710837	100K	1%	0,1W
3651	482211711148	56K	1%	0,1W
3652	482211711148	56K	1%	0,1W
3655	482211710837	100K	1%	0,1W
3656	482211710837	100K	1%	0,1W
3657	482211711148	56K	1%	0,1W
3658	482211711148	56K	1%	0,1W
3659	482211712955	2K7	1%	0,1W 0805
3660	482211712955	2K7	1%	0,1W 0805
3661	482205120562	5K6	5%	0,1W 0805
3662	482205120562	5K6	5%	0,1W 0805
3663	482211712955	2K7	1%	0,1W 0805
3664	482211712955	2K7	1%	0,1W 0805
3665	482205120562	5K6	5%	0,1W 0805
3666	482205120562	5K6	5%	0,1W 0805

RESISTORS

3667	482211712955	2K7	1%	0,1W 0805
3668	482211712955	2K7	1%	0,1W 0805
3669	482205120562	5K6	5%	0,1W 0805
3670	482205120562	5K6	5%	0,1W 0805
3671	482211710834	47K	1%	0,1W
3672	482211710834	47K	1%	0,1W
3673	482211711449	2K2	1%	0,1W
3674	482211711449	2K2	1%	0,1W
3675	482205120101	100R00	5%	0,1W
3676	482205120101	100R00	5%	0,1W
3677	482211710834	47K	1%	0,1W
3678	482211710834	47K	1%	0,1W
3679	482211711449	2K2	1%	0,1W
3680	482211711449	2K2	1%	0,1W
3681	482205120101	100R00	5%	0,1W
3682	482205120101	100R00	5%	0,1W
3683	482211710834	47K	1%	0,1W
3684	482211710834	47K	1%	0,1W
3685	482211711449	2K2	1%	0,1W
3686	482211711449	2K2	1%	0,1W
3687	482205120101	100R00	5%	0,1W
3688	482205120101	100R00	5%	0,1W
3689	482211711449	2K2	1%	0,1W
3690	482211711449	2K2	1%	0,1W
3691	482211652256	2K2	5%	0,5W
3692	482211711449	2K2	1%	0,1W
3693	482211711449	2K2	1%	0,1W
3694	482211652256	2K2	5%	0,5W
3695	482211713579	220K	1%	0,1W RC12H
3696	482211710833	10K	1%	0,1W
3697	482211652257	22K	5%	0,5W
3698	482211713579	220K	1%	0,1W RC12H
3699	482211710833	10K	1%	0,1W
3700	482205120223	22K00	5%	0,1W
3831	482205120101	100R00	5%	0,1W
3832	482205120479	47R00	5%	0,1W
3834	482205120101	100R00	5%	0,1W
3851	482205120332	3K30	5%	0,1W
3852	482205120223	22K00	5%	0,1W
3853	482211710833	10K	1%	0,1W
3854	482205120472	4K70	5%	0,1W
3855	482211683876	270R	5%	0,5W
3856	482211711504	270R	1%	0,1W
3857	482211710837	100K	1%	0,1W
3858	482211710837	100K	1%	0,1W
3859	482211710833	10K	1%	0,1W
3860	482211710833	10K	1%	0,1W
3871	482205120332	3K30	5%	0,1W
3872	482205120332	3K30	5%	0,1W
3873	482205110102	1K00	2%	0,25W
3874	482205110102	1K00	2%	0,25W
3875	482205120332	3K30	5%	0,1W
3877	482205110102	1K00	2%	0,25W
3878	482205110102	1K00	2%	0,25W
3879	482205120332	3K30	5%	0,1W
3880	482205120332	3K30	5%	0,1W
3881	482205110102	1K00	2%	0,25W
3882	482205110102	1K00	2%	0,25W
3883	482211711383	12K	1%	0,1W
3884	482211711383	12K	1%	0,1W
3885	482211711383	12K	1%	0,1W
3886	482211711383	12K	1%	0,1W
3887	482211711383	12K	1%	0,1W
3888	482211711383	12K	1%	0,1W

ELECTRICAL PARTSLIST - MONO BOARD**RESISTORS**

3889	482211711449	2K2	1%	0,1W
3890	482211711449	2K2	1%	0,1W
3891	482205120822	8K20	5%	0,1W
3892	482205120822	8K20	5%	0,1W
3893	482205120822	8K20	5%	0,1W
3895	482205120822	8K20	5%	0,1W
3896	482205120822	8K20	5%	0,1W
3901 ▲	482205210479	47R00	5%	0,33W
3902	482211711148	56K	1%	0,1W
3903	482211710834	47K	1%	0,1W
3904	482211683884	47K	5%	0,5W
3905	482205024708	4R70	1%	0,6W
3906	482211711148	56K	1%	0,1W
3908	482205120182	1K80	5%	0,1W
3910	482205024708	4R70	1%	0,6W
3911	482211711148	56K	1%	0,1W
3913	482205120182	1K80	5%	0,1W
3914	482211711148	56K	1%	0,1W
3915 ▲	482205210479	47R00	5%	0,33W
3916 ▲	482205310478	4R70	5%	1W
3917	482205023303	33K00	1%	0,6W
3918	482211711503	220R	1%	0,1W
3919 ▲	482205310478	4R70	5%	1W
3920	482211710837	100K	1%	0,1W
3921	482205110102	1K00	2%	0,25W
3922	482205110102	1K00	2%	0,25W
3925	482211710833	10K	1%	0,1W
3926 ▲	482211711744	0R22	5%	1W
3927 ▲	482211711744	0R22	5%	1W
3928	482211711139	1K5	1%	0,1W
3929	482211711139	1K5	1%	0,1W
3930 ▲	482211711744	0R22	5%	1W
3931 ▲	482211711744	0R22	5%	1W
3935	482205110102	1K00	2%	0,25W
3936	482211710837	100K	1%	0,1W
3937	482211710833	10K	1%	0,1W
3938	482211711449	2K2	1%	0,1W
3939	482211711449	2K2	1%	0,1W
3940	482211711503	220R	1%	0,1W
3941	482211711503	220R	1%	0,1W
3943	482211710833	10K	1%	0,1W
3944	482211711503	220R	1%	0,1W
3945	482211711503	220R	1%	0,1W
3946	482205120471	470R00	5%	0,1W
3947	482205120471	470R00	5%	0,1W
3948	482211711503	220R	1%	0,1W
3949	482211711503	220R	1%	0,1W
3950	482205120182	1K80	5%	0,1W
3951	482205120182	1K80	5%	0,1W
3952	482205120101	100R00	5%	0,1W
3953	482205120101	100R00	5%	0,1W
3954	482205120101	100R00	5%	0,1W
3955	482205120101	100R00	5%	0,1W
4251	482205120008	0R00 JUMP.	(0805)	
4252	482205120008	0R00 JUMP.	(0805)	
4254	482205120008	0R00 JUMP.	(0805)	
4255	482205120008	0R00 JUMP.	(0805)	
4256	482205120008	0R00 JUMP.	(0805)	
4257	482205120008	0R00 JUMP.	(0805)	
4258	482205120008	0R00 JUMP.	(0805)	
4259	482205120008	0R00 JUMP.	(0805)	
4260	482205120008	0R00 JUMP.	(0805)	
4283	482205120008	0R00 JUMP.	(0805)	
4284	482205120008	0R00 JUMP.	(0805)	

RESISTORS

4285	482205120008	0R00 JUMP.	(0805)
4287	482205120008	0R00 JUMP.	(0805)
4320	482205120008	0R00 JUMP.	(0805)
4505	482205120008	0R00 JUMP.	(0805)
4506	482205120008	0R00 JUMP.	(0805)
4512	482205120008	0R00 JUMP.	(0805)
4513	482205120008	0R00 JUMP.	(0805)
4514	482205120008	0R00 JUMP.	(0805)
4515	482205120008	0R00 JUMP.	(0805)
4516	482205120008	0R00 JUMP.	(0805)
4517	482205120008	0R00 JUMP.	(0805)
4518	482205120008	0R00 JUMP.	(0805)
4519	482205120008	0R00 JUMP.	(0805)
4520	482205120008	0R00 JUMP.	(0805)
4521	482205120008	0R00 JUMP.	(0805)
4522	482205120008	0R00 JUMP.	(0805)
4523	482205120008	0R00 JUMP.	(0805)
4524	482205120008	0R00 JUMP.	(0805)
4526	482205120008	0R00 JUMP.	(0805)
4528	482205120008	0R00 JUMP.	(0805)
4529	482205120008	0R00 JUMP.	(0805)
4530	482205120008	0R00 JUMP.	(0805)
4531	482205120008	0R00 JUMP.	(0805)
4532	482205120008	0R00 JUMP.	(0805)
4533	482205120008	0R00 JUMP.	(0805)
4537	482205120008	0R00 JUMP.	(0805)
4538	482205120008	0R00 JUMP.	(0805)
4539	482205120008	0R00 JUMP.	(0805)
4540	482205120008	0R00 JUMP.	(0805)
4541	482205120008	0R00 JUMP.	(0805)
4542	482205120008	0R00 JUMP.	(0805)
4543	482205120008	0R00 JUMP.	(0805)
4544	482205120008	0R00 JUMP.	(0805)
4545	482205120008	0R00 JUMP.	(0805)
4548	482205120008	0R00 JUMP.	(0805)
4550	482205120008	0R00 JUMP.	(0805)
4551	482205120008	0R00 JUMP.	(0805)
4552	482205120008	0R00 JUMP.	(0805)
4553	482205120008	0R00 JUMP.	(0805)
4555	482205120008	0R00 JUMP.	(0805)
4556	482205120008	0R00 JUMP.	(0805)
4557	482205120008	0R00 JUMP.	(0805)
4558	482205120008	0R00 JUMP.	(0805)
4559	482205120008	0R00 JUMP.	(0805)
4560	482205120008	0R00 JUMP.	(0805)
4563 ▲	482211711151	1R	5%
4564	482205120008	0R00 JUMP.	(0805)
4641	482205120008	0R00 JUMP.	(0805)
4651	482205120008	0R00 JUMP.	(0805)
4652	482205120008	0R00 JUMP.	(0805)
4832	482205120008	0R00 JUMP.	(0805)
4902	482205120008	0R00 JUMP.	(0805)
4903	482205120008	0R00 JUMP.	(0805)
4904	482205120008	0R00 JUMP.	(0805)
4905	482205120008	0R00 JUMP.	(0805)
4907	482205120008	0R00 JUMP.	(0805)
4908	482205120008	0R00 JUMP.	(0805)
4909	482205120008	0R00 JUMP.	(0805)
4910	482205120008	0R00 JUMP.	(0805)
4914	482205120008	0R00 JUMP.	(0805)
4915	482205120008	0R00 JUMP.	(0805)
4916	482205120008	0R00 JUMP.	(0805)
4917	482205120008	0R00 JUMP.	(0805)
4918	482205120008	0R00 JUMP.	(0805)

ELECTRICAL PARTSLIST - MONO BOARD

FILTERS			TRANSISTORS		
5302	482215762255	COIL	7641	482220917386	TDA7437T
5304	482215762255	COIL	7642	482220917386	TDA7437T
5306	482215762255	COIL	7643	482220917386	TDA7437T
5901	482215762255	COIL	7644	482213040855	BC337
5902	482215762255	COIL	7651	482213042615	BC817-40
DIODES			7652	482213042615	BC817-40
6251	482213082078	D5SBA20	7653	482213042615	BC817-40
6257	482213031878	1N4003G	7654	482213042615	BC817-40
6258	482213031878	1N4003G	7655	482213042615	BC817-40
6259	482213031878	1N4003G	7656	482213042615	BC817-40
6260	482220933575	L7812CP	7657	482213060373	BC856B
6261	482213031878	1N4003G	7658	482213060373	BC856B
6262	482213031878	1N4003G	7660	482220983357	NJM4560M
6263	482213031878	1N4003G	7661	482213042615	BC817-40
6265	482220931841	L7805CP	7662	482213042615	BC817-40
6267	482220931841	L7805CP	7901	482220917385	STK496-070
6268	482213031878	1N4003G	7902	482213060511	BC847B
6270	482213034278	BZX79-B6V8	7903	482213060511	BC847B
6271	482213030621	1N4148	7904	482213060511	BC847B
6274	482213031878	1N4003G	7908	482213060373	BC856B
6275	482213031878	1N4003G	7909	482213060511	BC847B
6276	482213034173	BZX79-B5V6	7910	932213922687	BD242BFP
6279	482213030621	1N4148			
6280	482213034281	BZX79-B15			
6281	482213034281	BZX79-B15			
6289	482213030621	1N4148			
6290	482213030621	1N4148			
6304	532213031504	BZX79-B3V3			
6305	482213030621	1N4148			
6501	482213030621	1N4148			
6601	482213030621	1N4148			
6602	482213030621	1N4148			
6641	482213030621	1N4148			
6642	482213030621	1N4148			
6643	482213030621	1N4148			
6644	482213030621	1N4148			
6645	482213030621	1N4148			
6646	482213030621	1N4148			
6647	482213030621	1N4148			
6648	482213030621	1N4148			
6649	482213031878	1N4003G			
6650	▲ 482213061219	BZX79-B10			
6831	482213030621	1N4148			
6832	482213030621	1N4148			
TRANSISTORS					
7253	482213060511	BC847B			
7255	482213060373	BC856B			
7256	482213060511	BC847B			
7257	482213041246	BC327-25			
7258	482213041246	BC327-25			
7259	482213060511	BC847B			
7260	482213060511	BC847B			
7261	482213060373	BC856B			
7301	482220917447	STK496-270			
7304	482213060511	BC847B			
7305	482213060511	BC847B			
7306	482213060511	BC847B			
7307	482213060511	BC847B			
7309	482213060373	BC856B			
7310	482213060511	BC847B			
7501	482220972748	LC7821			
7503	482220983357	NJM4560M			
7601	482220931378	NJM4556MB			
7621	482213042615	BC817-40			
7622	482213042615	BC817-40			