


Service Manual

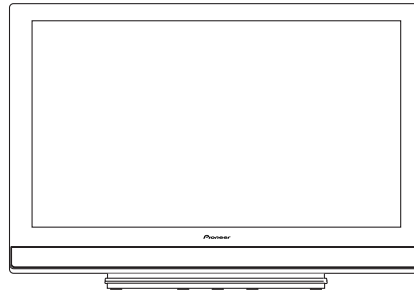

PDP-427XD

ORDER NO.
ARP3391

PLASMA TELEVISION

PDP-427XD

PDP-4270XD

PDP-427XA

PDP-4270XA

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-427XD	WYVIXK5	AC 220 V to 240 V	
PDP-4270XD	WYVIXK5	AC 220 V to 240 V	
PDP-427XA	WYVIXK5	AC 220 V to 240 V	
	WYV5	AC 220 V to 240 V	
PDP-4270XA	WYVIXK5	AC 220 V to 240 V	
	WYV5	AC 220 V to 240 V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
PDP-427XD, PDP-4270XD, PDP-427XA, PDP-4270XA	ARP3392	SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM



For details, refer to "Important Check Points for good servicing".

1. NOTES ON SERVICE VISIT

1.1 SAFETY INFORMATION



This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

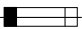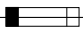Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

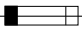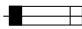Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis.

The following precautions should be observed :

1. When service is required, even though the PDP UNIT an isolation transformer should be inserted between the power line and the set in safety before any service is performed.
2. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
4. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
5. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing. Therefore, the following checks should be performed for the continued protection of the customer and servicetechnician.

6. Perform the following precautions against unwanted radiation and rise in internal temperature.
 - Always return the internal wiring to the original styling.
 - Attach parts (Gasket, Ferrite Core, Ground, Rear Cover, Shield Case etc.) surely after disassembly.
7. Perform the following precautions for the PDP panel.
 - When the front case is removed, make sure nothing hits the panel face, panel corner, and panel edge (so that the glass does not break).
 - Make sure that the panel vent does not break. (Check that the cover is attached.)
 - Handle the FPC connected to the panel carefully. Twisting or pulling the FPC when connecting it to the connector will cause it to peel off from the panel.
8. Pay attention to the following.
 - Pay extreme caution when the front case and rear panel are removed because this may cause a high risk of disturbance to TVs and radios in the surrounding.

Leakage Current Cold Check

With the AC plug removed from an AC power source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of $4\text{ M}\Omega$.


The below $4\text{ M}\Omega$ resistor value indicate an abnormality which require corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into an AC power source (do not use an isolation transformer for this check).

Turn the AC power switch on.

Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 1 mA .

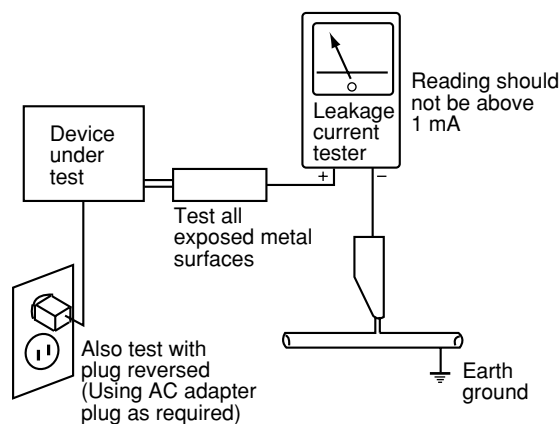

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

A ■ Charged Section

The places where the commercial AC power is used without passing through the power supply transformer.

If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

- B 1. Power cord
- 2. AC inlet
- 3. Power switch (S1)
- 4. Fuse (In the POWER SUPPLY Unit)
- 5. STB transformer and Converter transformer (In the POWER SUPPLY Unit)
- 6. Other primary side of the POWER SUPPLY Unit

■ High Voltage Generating Point

The places where voltage is 100 V or more except for the charged places described above. If the places are touched, there is a risk of electric shock.

The VSUS voltage remains for several minutes after the power to the unit is turned off. These places must not be touched until about 10 minutes after the power is turned off, or it is confirmed with a tester that there is no residual VSUS voltage.

If the procedures described in “10.3 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM” are performed before the power is turned off, the voltage will be discharged in about 30 seconds.

POWER SUPPLY Unit.....	(205 V)
42 X DRIVE Assy.....	(-180 V to 205 V)
42 Y DRIVE Assy.....	(500 V)
42 SCAN A Assy.....	(500 V)
42 SCAN B Assy.....	(500 V)
SUS CLAMP 1 Assy.....	(-180 V to 205 V)
SUS CLAMP 2 Assy.....	(-180 V to 205 V)

- C ■ : Part is Charged Section.
- : Part is the High Voltage Generating Points other than the Charged Section.

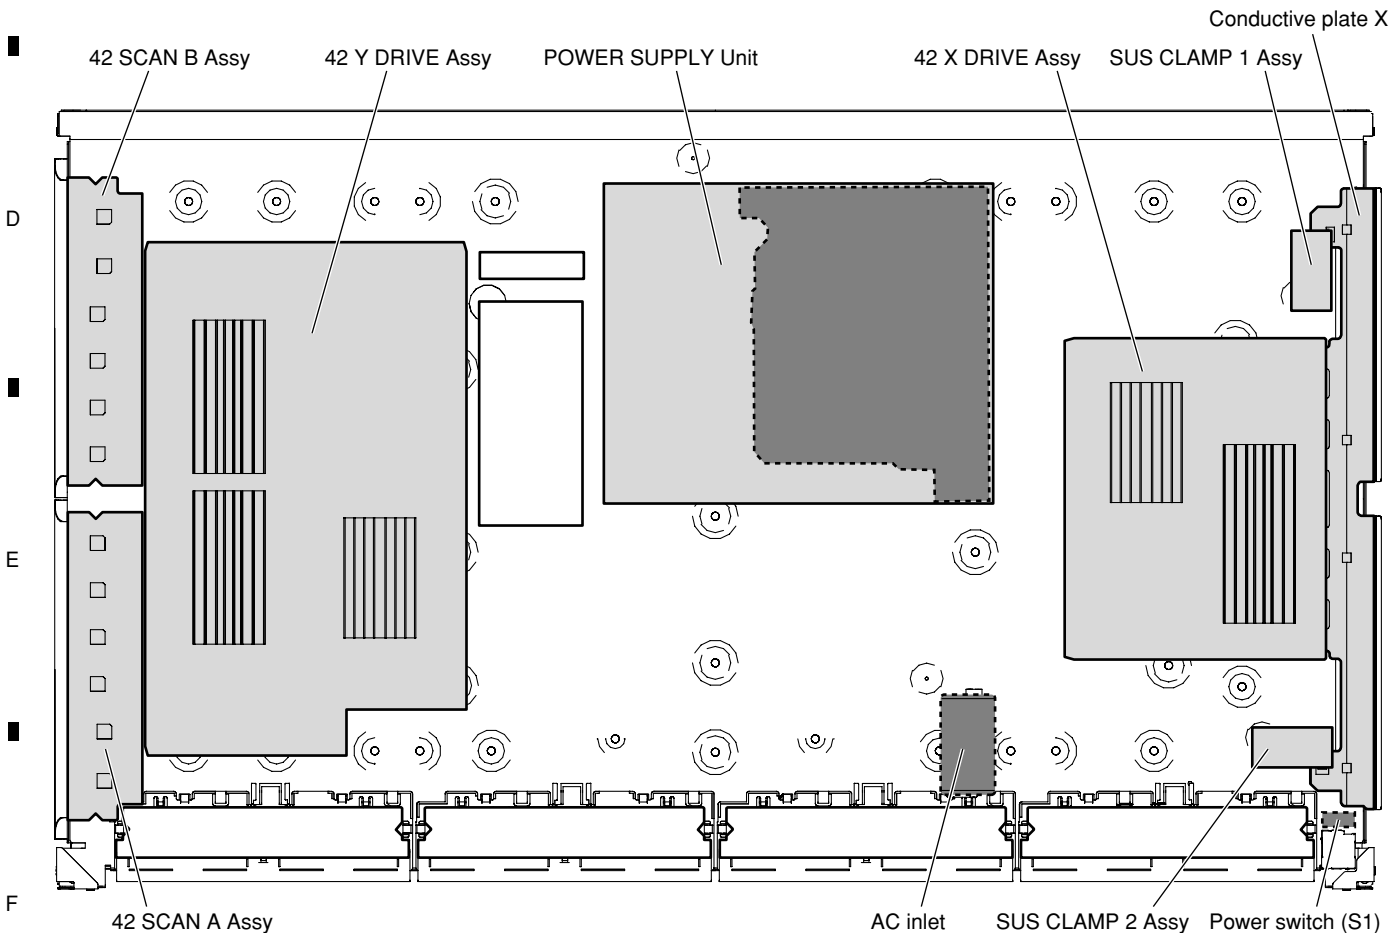


Fig. High Voltage Generating Point (Rear view)

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol. Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris. Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs. In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages. If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries. Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification. Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance. Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

1.2 QUICK REFERENCE UPON SERVICE VISIT

Quick Reference upon Service Visit ① Notes, PD/SD diagnosis, and methods for various settings

Notes when visiting for service

1. Notes when disassembling/reassembling

① Rear case

When reassembling the rear case, the screws must be tightened in a specific order. Be careful not to tighten them in the wrong order forcibly. For details, see "Rear Case" in "6. DISASSEMBLY"

② Attaching screws for the HDMI connector

When attaching the HDMI connector after replacing the Main Assy, secure the HDMI connector manually with a screwdriver, but not with an electric screwdriver. If you tighten the screws too tightly with an electric screwdriver, the screw heads may be damaged, in which case the screws cannot be untightened/tightened any more.

2. On parts replacement

① How to discharge before replacing the Assys

A charge of significant voltage remains in the Plasma Panel even after the power is turned off. Safely discharge the panel before replacement of parts, in either manner indicated below:

A: Let the panel sit at least for 3 minutes after the power is turned off.
B: Turn the Large Signal System off before the power is turned off then, after 1 minute, turn the power off.

For details, see "10.2 Power ON/OFF Function for the Large-Signal System."

② On the settings after replacement of the Assys

Some boards need settings made after replacement of the Assys. For details, see "7. ADJUSTMENT"

3. On various settings

① SR+

After a repair using a PC, be sure to restore the setting for the RS-232C connector to SR+.

② Setting in Factory mode

After a Mask indication into the panel is performed, be sure to set the Mask setting to "OFF" then exit Factory mode.

PD/SD		No. of LEDs flashing	
Item		Red	Blue
Panel section	Communication with the panel drive IC		Blue 1
	Communication with the module IIC		Blue 2
	DIGITAL-RST2		Blue 3
	Panel high temperature		Blue 4
Main section	Audio		Blue 5
	Communication with the Module microcomputer		Blue 6
	Main 3-wire serial communication		Blue 7
	Main IIC communication		Blue 8
	Communication with the Main microcomputer		Blue 9
	FAN		Blue 10
	Unit high temperature		Blue 11
	Communication with the D-TUNER		Blue 12
	MTB-RST2/RST4		Blue 13
	POWER	Red 2	
SCAN	Red 3		
SCN-5V	Red 4		
Y-DRIVE	Red 5		
Y-DCDC	Red 6		
Y-SUS	Red 7		
ADRS	Red 8		
X-DRIVE	Red 9		
X-DCDC	Red 10		
X-SUS	Red 11		
UNKNOWN	Red 15		

Change of settings	
How to enter Factory mode using the supplied remote control unit	
In the same way as with the remote control unit supplied with the 6th-generation model	
How to enter Integrator mode using the supplied remote control unit	
① Enter the Standby mode. ② Press [MENU]. ③ Press [TV Ⓞ].	
How to switch UART ① (Integrator)	
① Enter the Integrator mode. ② Display "OFF" using [→]. ③ Change the communication speed using [↓], then [→].	
How to switch UART ② (During Standby)	
① Enter the Standby mode. ② Hold [VOL +] or [VOL -] pressed for 3 seconds. ③ Hold [SPLIT] pressed for 3 seconds. ④-1 To set to 232C, press [ENTER]. ⑤-2 To set to SR+, press [HOME MENU].	
Note: If switching is completed successfully, the red LED will flash twice. Note 1: Use a remote control unit supplied with the 6th-generation models or later. Note 2: Do not hold a key pressed for more than 5 seconds.	

How to locate several items on the Factory menu

{ } : Item on the Factory menu
[] : Key on the remote control unit
" " : Screen indication

1. Confirmation of accumulated power-on time and power-on count

Select {INFORMATION} then {HOUR METER}.
(After entering Factory mode, press [↓] four times.)

2. Confirmation of the Power-down and Shutdown histories

① Panel system

PD: Select {PANEL FACTORY} then {POWER DOWN}.
(After entering Factory mode, press [MUTING] once, press [ENTER], then press [↓] three times.)

SD: Select {PANEL FACTORY} then {SHUT DOWN}.
(After entering Factory mode, press [MUTING] once, press [ENTER], then press [↓] four times.)

② Main Assy

Select {INFORMATION} then {MAIN NG}.
(After entering Factory mode, press [↓] three times.)

3. How to display the Mask indication

① Mask indication in the panel side

1. Select {PANEL FACTORY} then {RASTER MASK SETUP}.
(After entering Factory mode, press [MUTING] once, press [ENTER], then press [↓] 8 times.)
2. Press [ENTER], then select a Mask indication, using [↑] or [↓].

② Mask (SG screen) indication in the Main Assy (MAIN VDEC)

1. Select either Input 1 or 2, to which no signal is input (black screen).
2. Select {INITIALIZE} then {SG MODE}. Press [←]. (After entering Factory mode, press [MUTING] three times, then press [↓] once.)
Then, the indication at the lower right of the screen changes from "OFF" to "ANA AD YCBCR".

3. You can change Mask patterns by pressing [↓] to select {SG PATTERN} then using [←] or [→].

Note: When you switch "SG MODE" routes, some displays become monochrome, as they are in Y-signal only mode.

Adjustments and Settings after replacement of the Assys (Procedures in Factory mode)

1. Digital Video Assy: Transfer of backup data

- Select {PANEL FACTORY}, {ETC}, then {BACKUP DATA}. (After entering Factory mode, press [MUTING] once, press [ENTER], press [↓] seven times, then press [ENTER].)
- Select {TRANSFER}, using [→], then hold [SET] pressed for at least 5 seconds.
- After transfer of backup data is completed, {ETC} is automatically selected, and the LED on the front panel returns to normal lighting.

2. MAIN Assy : Switching to SR+ from RS-232C

- Enter the Integrator mode. (The way is described above.)
- As SR+ <=> is [OFF] state, switch to [ON] state by using [→].
- Turn the POWER switch of the main unit off by the remote control.

3. POWER SUPPLY Unit: Clearance of the accumulated power-on count and maximum temperature value





- Select {PANEL FACTORY}, {ETC}, then {P COUNT INFO}. (After entering Factory mode, press [MUTING] once, press [ENTER], press [↓] seven times, press [ENTER], then press [↓] six times.)
- Press [→] to select "CLEAR". Hold [SET] pressed for at least 5 seconds. After clearance is completed, "ETC" is automatically selected. Clear the maximum temperature value (MAX TEMP) in the same manner.

4. Other Assys: Clearance of the maximum temperature value

- Select {PANEL FACTORY}, {ETC}, then {MAX TEMP}. (After entering Factory mode, press [MUTING] once, press [ENTER], press [↓] seven times, press [ENTER], then press [↓] seven times.)
- Press [→] to select "CLEAR". Hold [SET] pressed for at least 5 seconds. After clearance is completed, "ETC" is automatically selected.

Quick Reference upon Service Visit ②

Mode transition and structure of layers in Service Factory mode

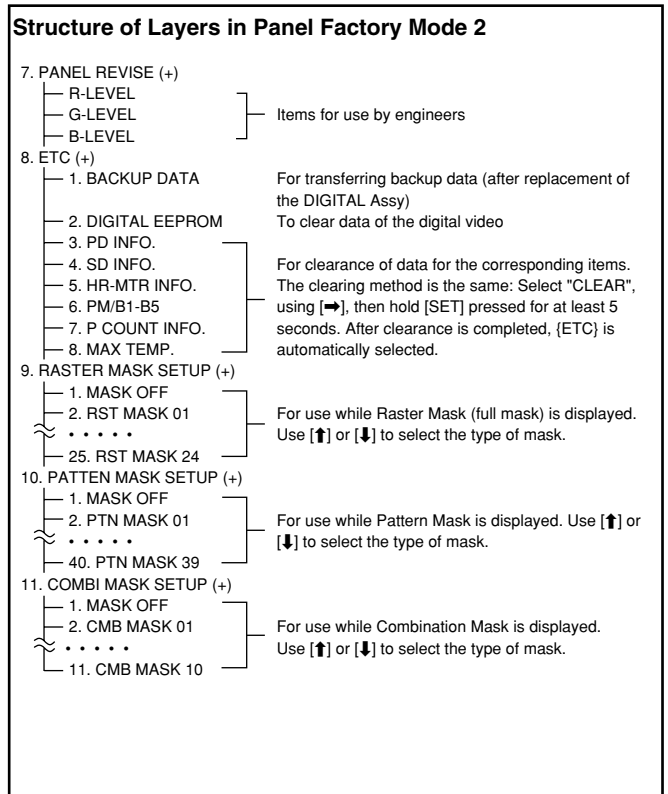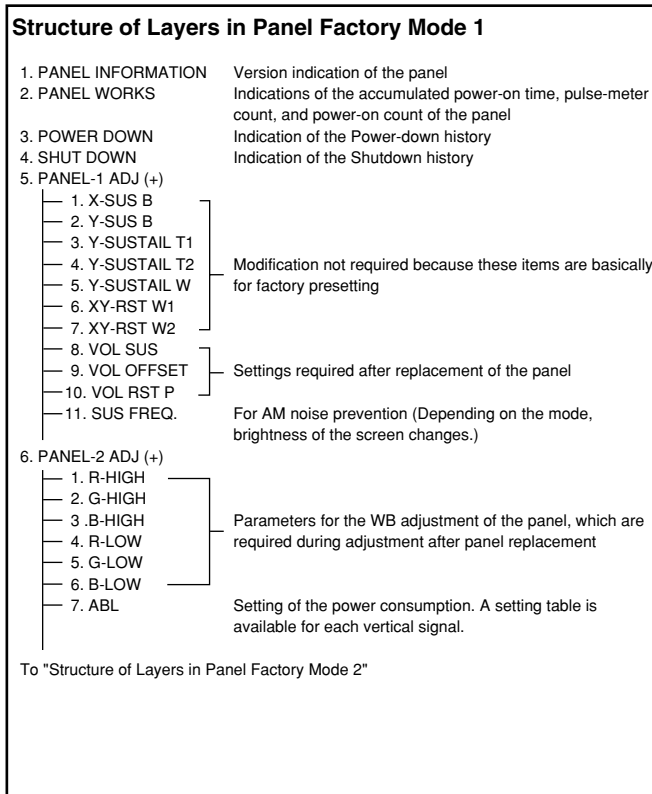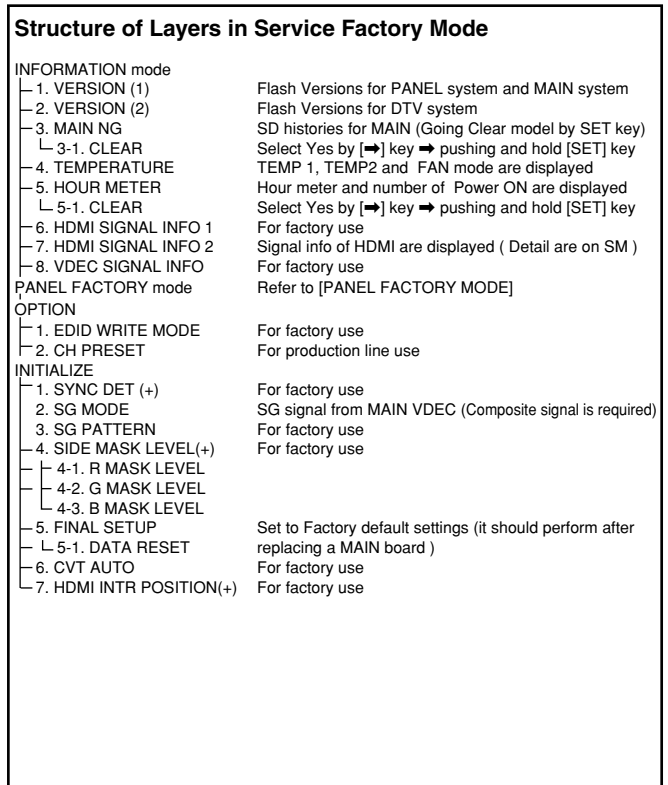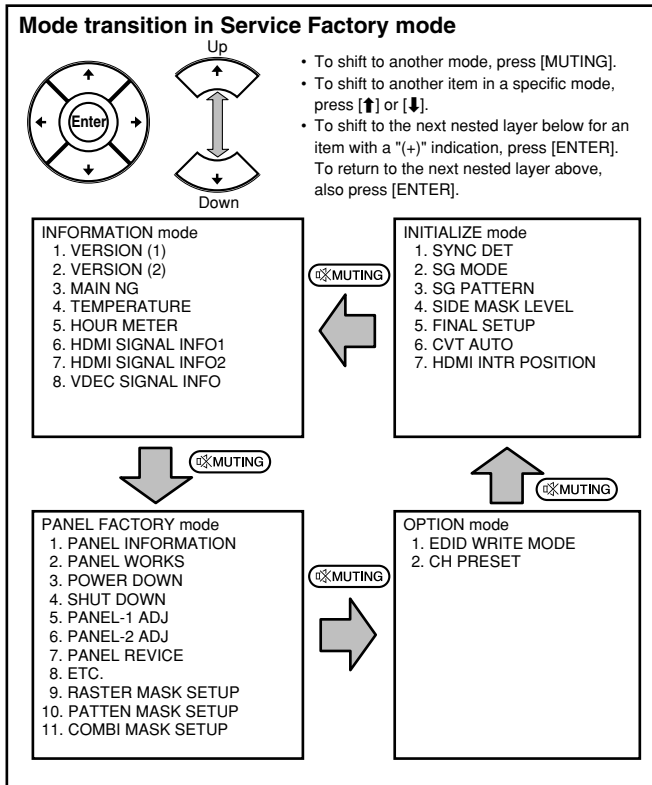

1.3 JIGS LIST



■ Cleaning


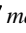
Name	Part No.	Remarks
Cleaning liquid	GEM1004	Used to fan cleaning. Refer to "2.4 CHASSIS SECTION (1/2).
Cleaning paper	GED-008	

CONTENTS


- 1. NOTES ON SERVICE VISIT2
- 1.1 SAFETY INFORMATION2
- 1.2 QUICK REFERENCE UPON SERVICE VISIT6
- 1.3 JIGS LIST8
- 2. EXPLODED VIEWS AND PARTS LIST10
- 2.1 PACKING SECTION10
- 2.2 REAR SECTION12
- 2.3 FRONT SECTION14
- 2.4 CHASSIS SECTION (1/2)16
- 2.5 CHASSIS SECTION (2/2)18
- 2.6 PANEL CHASSIS SECTION20
- 2.7 MULTI BASE SECTION22
- 2.8 PDP SERVICE PANEL ASSY 427 (AWU1208)24
- 2.9 TABLE TOP STAND (PDP-4270XD and PDP-4270XA ONLY)25
- 3. PCB PARTS LIST26
- 4. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM42
- 4.1 OVERALL WIRING DIAGRAM (1/2)42
- 4.2 OVERALL WIRING DIAGRAM (2/2)44
- 4.3 OVERALL BLOCK DIAGRAM (1/2)46
- 4.4 OVERALL BLOCK DIAGRAM (2/2)48
- 4.5 POWER SUPPLY UNIT49
- 4.6 42 X DRIVE, SUS CLAMP 1 and SUS CLAMP 2 ASSYS50
- 4.7 42 Y DRIVE ASSY51
- 4.8 POWER SUPPLY BLOCK of 42 X DRIVE and 42 Y DRIVE ASSYS52
- 4.9 42 SCAN A and 42 SCAN B ASSYS53
- 4.10 42 ADDRESS ASSY54
- 4.11 42 DIGITAL ASSY55
- 4.12 SIGNAL BLOCK DIAGRAM56
- 4.13 R07 DT ASSY (PDP-4270XD and PDP-427XD ONLY)58
- 4.14 POWER SUPPLY BLOCK of MAIN ASSY59
- 4.15 42E AUDIO ASSY60
- 4.16 POWER SUPPLY BLOCK of 42E AUDIO, LED IR and SIDE KEY ASSYS61
- 4.17 VOLTAGES62
- 4.18 WAVEFORMS70
- 5. DIAGNOSIS74
- 5.1 TROUBLE SHOOTING74
- 5.1.1 FLOWCHART OF FAILURE ANALYSIS FOR THE WHOLE UNIT74
- 5.1.2 FLOWCHART OF FAILURE ANALYSIS FOR THE POWER SUPPLY UNIT76
- 5.1.3 FLOWCHART OF FAILURE ANALYSIS FOR THE DIGITAL ASSY77
- 5.1.4 FLOWCHART OF FAILURE ANALYSIS FOR THE DRIVE ASSY78
- 5.1.5 FLOWCHART OF FAILURE ANALYSIS FOR THE MAIN ASSY82
- 5.1.6 FLOWCHART OF FAILURE ANALYSIS FOR THE VIDEO SYSTEM83
- 5.1.7 FLOWCHART OF FAILURE ANALYSIS FOR THE AUDIO SYSTEM90
- 5.2 DIAGNOSIS OF PD (POWER-DOWN)93
- 5.2.1 BLOCK DIAGRAM OF THE POWER-DOWN SIGNAL93
- 5.2.2 DIAGNOSIS OF THE PD (POWER-DOWN)94
- 5.3 DIAGNOSIS OF SD (SHUTDOWN)97
- 5.3.1 BLOCK DIAGRAM OF THE SHUTDOWN SIGNAL97
- 5.3.2 SD (SHUTDOWN) DIAGNOSIS98
- 5.4 INFORMATION ON SYMPTOMS THAT DO NOT CONSTITUTE FAILURE99
- 6. DISASSEMBLY100
- 6.1 PCB LOCATION100

6.2 DISASSEMBLY	101
7. ADJUSTMENT	107
7.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED.....	107
7.2 ADJUSTMENT REQUIRED WHEN PART IS REPLACED	108
7.3 BACKUP WHEN THE PANEL UNIT IS ADJUSTED	109
7.4 HOW TO CLEAR HISTORY DATA	112
7.5 ADJUSTMENT WHEN THE SERVICE PANEL ASSY IS REPLACED	113
8. SERVICE FACTORY MODE	115
8.1 OUTLINE OF THE SERVICE FACTORY	115
8.1.1 SERVICE FACTORY MODE TRANSITION CHART.....	115
8.1.2 HOW TO ENTER/EXIT SERVICE FACTORY MODE.....	115
8.1.3 OPERATION OF SERVICE FACTORY MODE.....	115
8.1.4 REMOTE CONTROL CODE	116
8.1.5 FACTORY HIERARCHICAL TABLE	117
8.1.6 INDICATIONS IN SERVICE FACTORY MODE	118
8.2 FACTORY MENU.....	120
8.2.1 INFORMATION.....	120
8.2.2 PANEL FACTORY	128
8.2.3 OPTION.....	138
8.2.4 INITIALIZE.....	138
9. RS-232C	141
9.1 OUTLINE OF RS-232C COMMAND	141
9.1.1 PREPARED TOOLS	141
9.1.2 USING RS-232C COMMANDS.....	141
9.1.3 COMMAND PROTOCOL.....	142
9.1.4 COMMAND DEFINITION	143
9.2 LIST OF RS-232C COMMANDS.....	145
9.3 OUTLINE OF EACH COMMANDS.....	151
9.3.1 ACQUISITION OF PANEL STATUS ... [QS1]	151
9.3.2 ACQUISITION OF PANEL OPERATION DATA ... [QS2]	152
9.3.3 ACQUISITION OF OTHER DATA ON THE PANEL ... [QIP]	153
9.3.4 ACQUISITION OF PANEL ADJUSTMENT DATA (COMMON DATA) ... [QAJ]	153
9.3.5 ACQUISITION OF ABL/WB ADJUSTMENT DATA ... [QPW]	154
9.3.6 ACQUISITION OF PULSE METER VALUE ... [QPM]	154
9.3.7 ACQUISITION OF PD LOGS ... [QPD].....	155
9.3.8 ACQUISITION OF SD LOGS ... [QSD].....	156
9.3.9 QS6	157
9.3.10 QMT	157
9.3.11 QNG	158
9.3.12 DRV	159
9.3.13 OTHER COMMANDS	160
10. GENERAL INFORMATION	161
10.1 POWER ON SEQUENCE.....	161
10.2 POWER SUPPLY TRANSITION STATUS.....	164
10.3 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM	165
10.4 LED INFORMATION	166
10.5 SPECIFICATION ABOUT THE THERMAL PROTECTION.....	167
10.6 PROCESSING IN ABNORMALITY	168
11. SPECIFICATIONS	170
11.1 SPECIFICATIONS	170
11.2 ACCESSORIES	171
11.3 PANEL FACILITIES.....	172
11.3.1 PDP-427XD, PDP-4270XD	172
11.3.2 PDP-427XA, PDP-4270XA.....	177
12. IC INFORMATION	182

2. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to  mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING SECTION

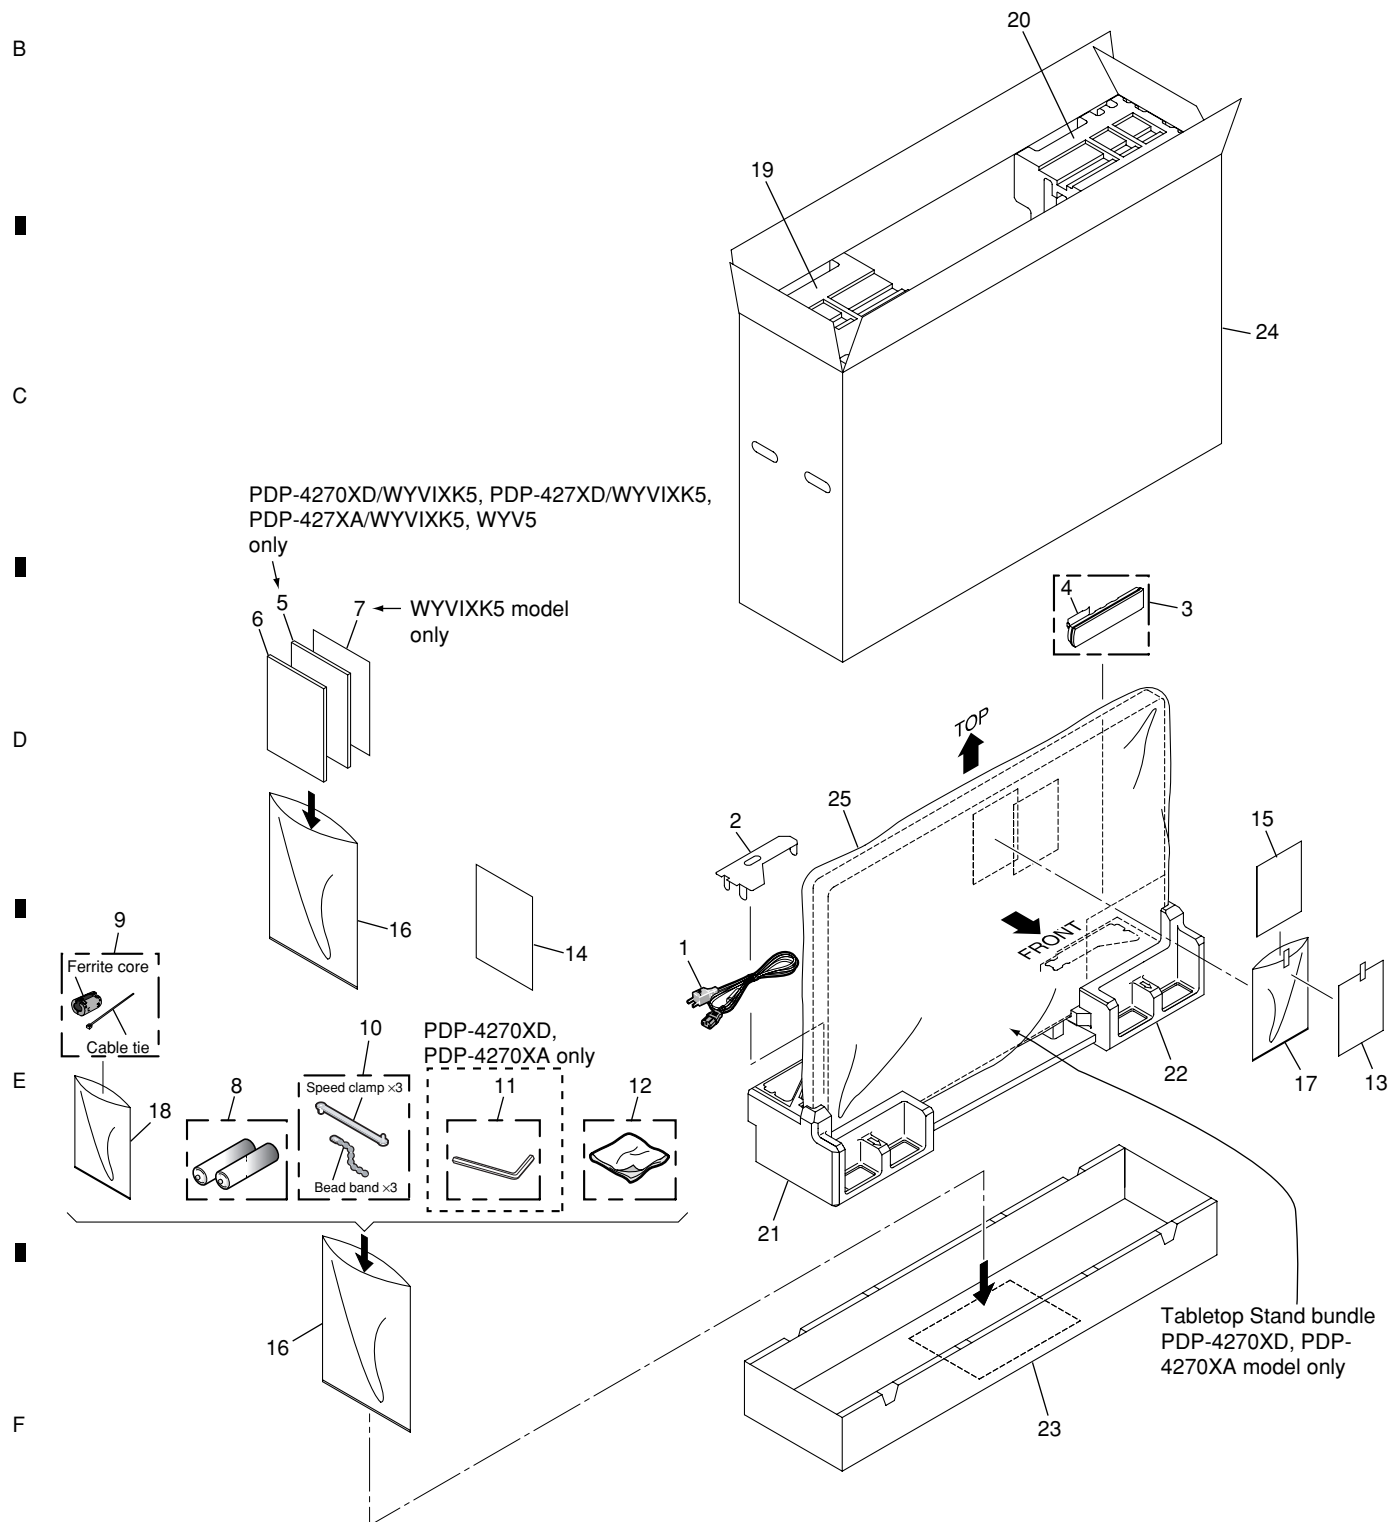

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
△ 1	Power Cord (2 m)	ADG1214	NSP 15	Warranty Card	ARY1114
2	Power Cord Lid	See Contrast table (2)	16	Polyethylene Bag	AHG1340
3	Remote Control Unit	See Contrast table (2)	17	Polyethylene Bag	AHG1326
4	Battery Cover	See Contrast table (2)	18	Polyethylene Bag	AHG1337
5	Operating Instructions (Italian,Dutch,Spanish)	See Contrast table (2)	19	Pad (427 T-L)	See Contrast table (2)
6	Operating Instructions (English,French,German)	See Contrast table (2)	20	Pad (427 T-R)	See Contrast table (2)
7	Block Diagram	See Contrast table (2)	21	Pad (427 B-L)	See Contrast table (2)
NSP 8	Dry Cell Battery (R06, AA)	VEM1031	22	Pad (427 B-R)	See Contrast table (2)
△ 9	Ferrite Core (L5321)	ATX1039	23	Under Carton (427)	See Contrast table (2)
10	Binder Assy	AEC1908	24	Upper Carton	See Contrast table (2)
NSP 11	Hexagonal Wrench (6 mm)	See Contrast table (2)	25	Mirror Mat	See Contrast table (2)
12	Cleaning Cloth	AED1285			
13	Caution Card	See Contrast table (2)			
14	Cleaning Caution	See Contrast table (2)			

(2) CONTRAST TABLE

PDP-427XD/WYVIXK5, PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5, WYV5, PDP-427XA/WYVIXK5 and WYV5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
NSP	2	Power Cord Lid	AHC1087	AHC1087	AHC1087	AHC1087	AHC1085	AHC1085
	3	Remote Control Unit	AXD1532	AXD1515	AXD1541	AXD1540	AXD1541	AXD1540
	4	Battery Cover	AZA7626	AZA7424	AZA7424	AZN2626	AZA7424	AZN2626
	5	Operating Instructions (Italian,Dutch,Spanish)	ARC1562	ARC1565	Not used	ARC1564	Not used	ARC1563
	6	Operating Instructions (English,French,German)	ARE1428	ARE1431	ARE1433	ARE1430	ARE1432	ARE1429
	7	Block Diagram	ARY1189	ARY1189	ARY1189	ARY1189	Not used	Not used
	11	Hexagonal Wrench (6 mm)	Not used	AEF1029	AEF1029	Not used	AEF1029	Not used
	13	Caution Card	ARM1310	ARM1310	ARM1310	ARM1310	ARM1232	ARM1232
	14	Cleaning Caution PTK	ARM1311	ARM1311	ARM1311	ARM1311	Not used	Not used
	14	Wiping Cloth Caution	Not used	Not used	Not used	Not used	ARM1283	ARM1283
	19	Pad (427 T-L)	AHA2554	AHA2554	AHA2554	AHA2554	AHA2534	AHA2534
	20	Pad (427 T-R)	AHA2555	AHA2555	AHA2555	AHA2555	AHA2535	AHA2535
	21	Pad (427 B-L)	AHA2600	AHA2600	AHA2600	AHA2600	AHA2592	AHA2592
	22	Pad (427 B-R)	AHA2601	AHA2601	AHA2601	AHA2601	AHA2593	AHA2593
	23	Under Carton (427)	AHD3496	AHD3496	AHD3496	AHD3496	AHD3471	AHD3471
24	Upper Carton	AHD3515	AHD3514	AHD3497	AHD3517	AHD3513	AHD3516	
25	Mirror Mat	AHG1327	AHG1327	AHG1327	AHG1327	AHG1284	AHG1284	

2.2 REAR SECTION

A


B

C

D

E

F

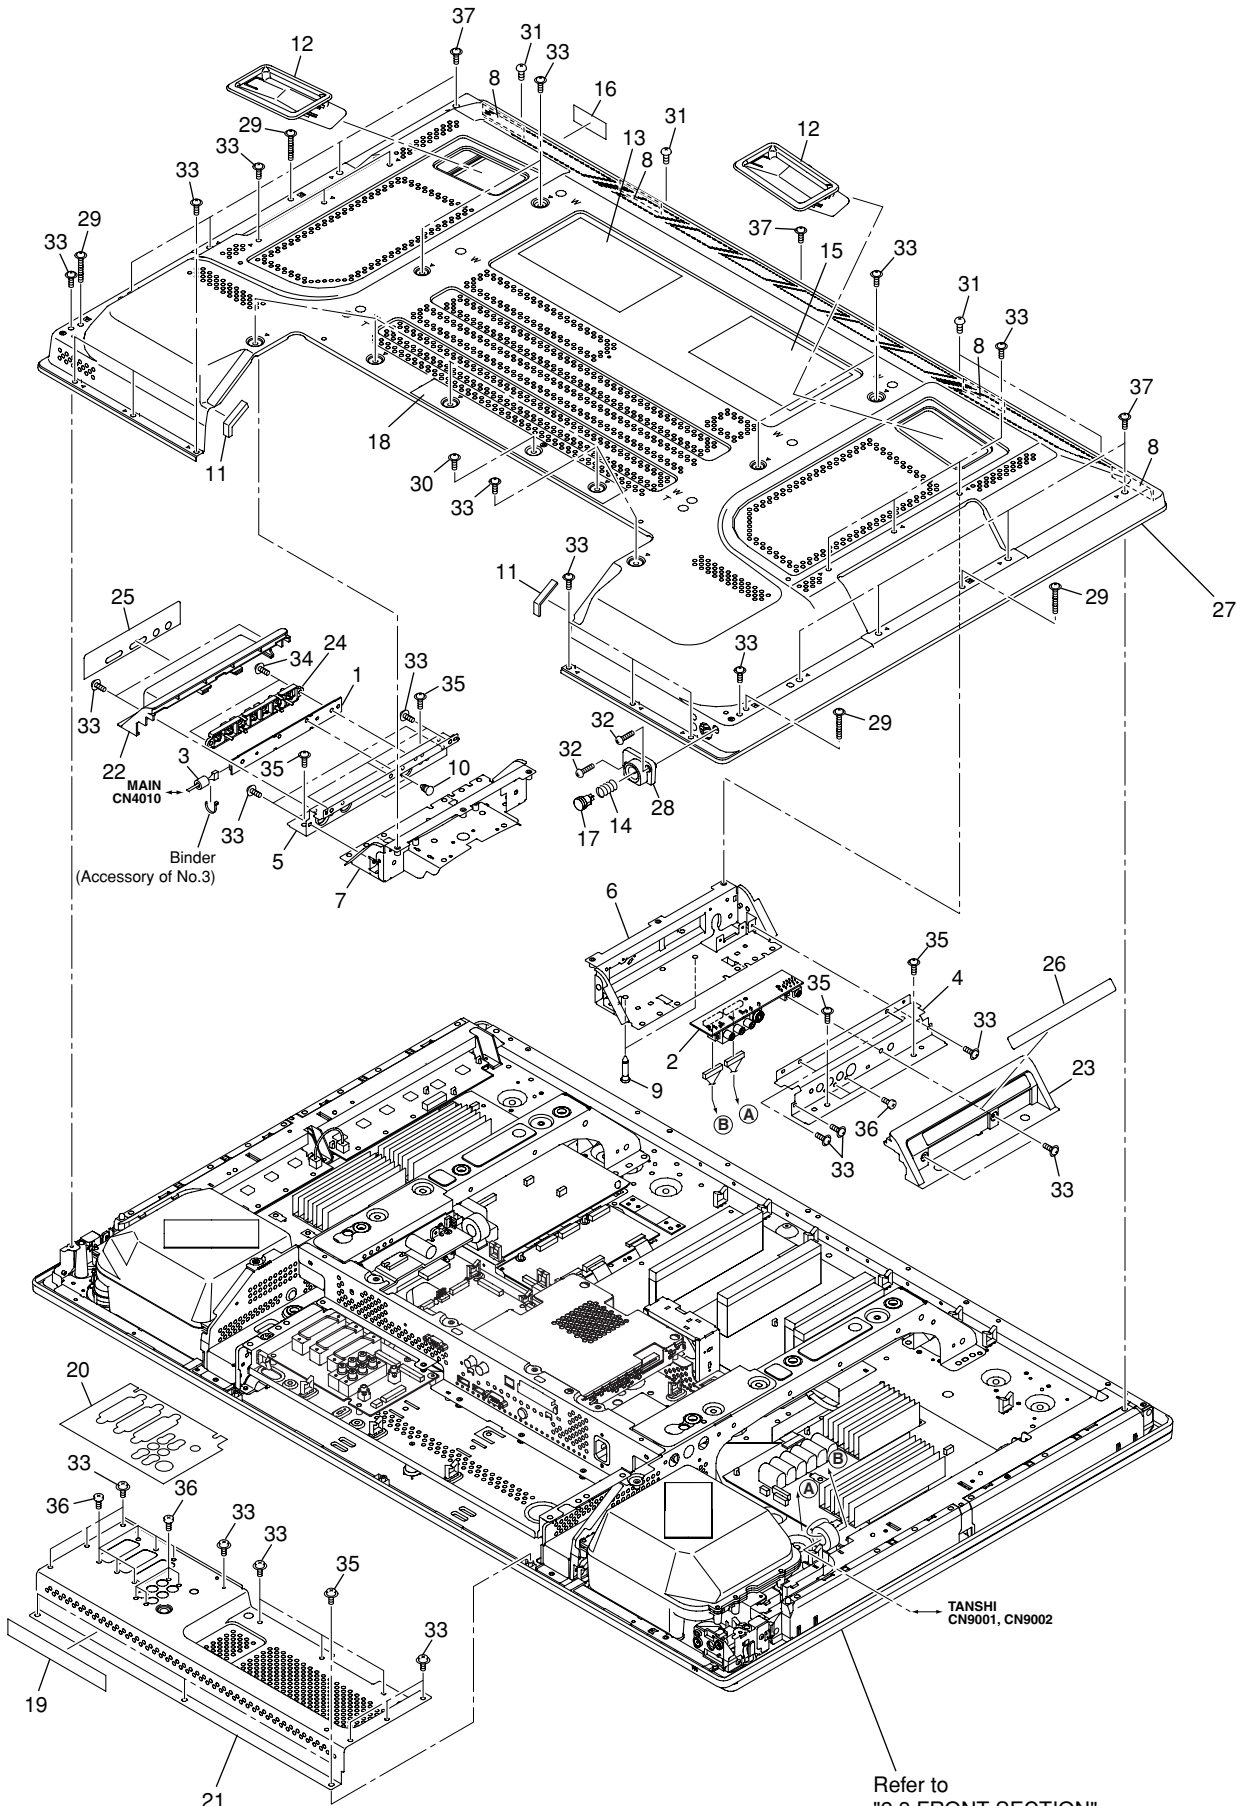

(1) REAR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	SIDE KEY Assy	AWW1133	21	Terminal Panel B	See Contrast table (2)
2	SIDE Assy	AWW1162	22	Function Button Panel	AMB2906
3	Filter	CTX1054	23	Side Input Cover	AMB2911
4	Side Input Panel (E)	ANC2418	24	Function Button (E)	AAC1565
5	Function Button Base	ANG2923	25	Function Button Sheet (E)	AAK2896
6	Side Input Shield	ANK1834	26	Input Cover Label E	See Contrast table (2)
7	Function Button Shield	ANK1835	27	Rear Case (427)	ANE1655
8	Rear Case Cushion	AEB1439	28	Power Button Holder	AMR3539
NSP 9	PCB Support	AEC1288	29	Screw (3 x 40P)	ABA1332
10	Locking Card Spacer	AEC2019	30	Screw	ABA1341
11	Protection Sheet C	AED1300	31	Screw (4 x 18)	ABA1353
12	Inner Grip Assy	AMR3434	32	Screw	BPZ30P140FTB
NSP 13	Name Label	See Contrast table (2)	33	Screw	AMZ30P060FTB
14	Coil Spring	ABH1125	34	Screw	AMZ30P080FTC
15	Bolt Caution Label	See Contrast table (2)	35	Screw	APZ30P080FTB
16	Serial Seal	AAX3143	36	Screw	BPZ30P080FTB
17	Power Button	AAD4145	37	Screw	TBZ40P080FTB
18	Terminal Label A	See Contrast table (2)			
19	Terminal Label C	See Contrast table (2)			
20	Terminal Label B	See Contrast table (2)			

(2) CONTRAST TABLE

PDP-427XD/WYVIXK5, PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5, WYV5, PDP-427XA/WYVIXK5 and WYV5 are constructed the same except for the following:


Mark	No.	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
NSP	13	Name Label	AAL2804	AAL2801	AAL2803	AAL2806	AAL2802	AAL2805
	15	Bolt Caution Label	AAX3005	AAX3005	AAX3005	AAX3005	Not used	Not used
	15	Caution Label	Not used	Not used	Not used	Not used	AAX3117	AAX3117
	18	Terminal Label A	AAX3337	AAX3343	AAX3399	AAX3398	AAX3344	AAX3332
	19	Terminal Label C	AAX3339	AAX3340	AAX3340	AAX3339	AAX3340	AAX3339
	20	Terminal Label B	AAX3417	AAX3419	AAX3419	AAX3417	AAX3419	AAX3417
	21	Terminal Panel B	ANC2403	ANC2429	ANC2429	ANC2403	ANC2429	ANC2403
	26	Input Cover Label E	AAX3396	AAX3397	AAX3397	AAX3396	AAX3376	AAX3375

2.3 FRONT SECTION

PDP-4270XD/WYVIXK5
 PDP-4270XA/WYVIXK5
 PDP-4270XA/WYV5
 Only stick here 3

Refer to
 "2.4 CHASSIS SECTION (1/2)".

A
 B
 C
 D
 E
 F

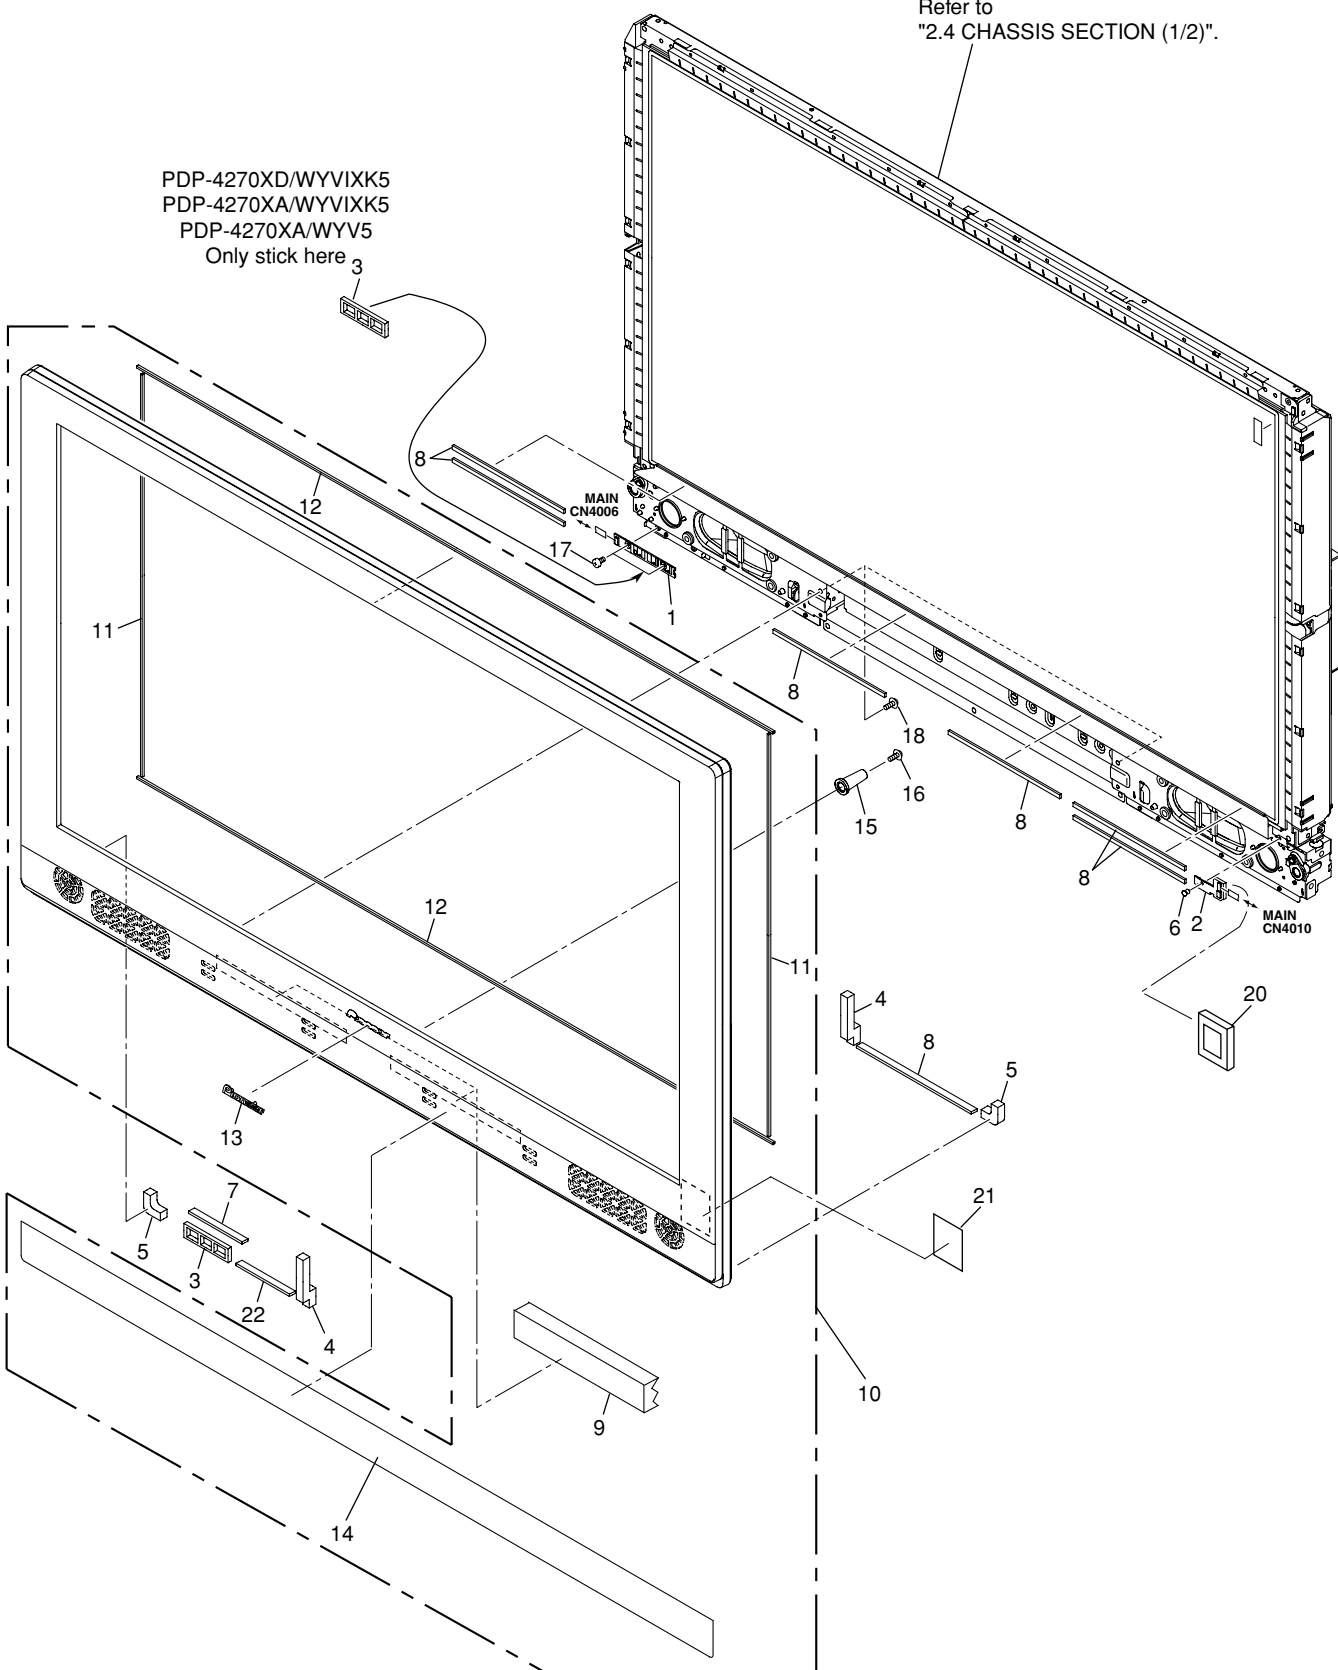

14

PDP-427XD

1

2

3

4

5 6 7 8

(1) FRONT SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	42 & 60 LED Assy	AWW1134
2	LED IR Assy	AWW1136
3	Blind Cushion (427HX)	AEB1443
4	Speaker Cushion	AEB1452
5	Speaker Cushion S	See Contrast table (2)
6	Nyron Rivet	AEC1671
7	Insulation Sheet B	AED1284
8	Insulation Sheet	See Contrast table (2)
9	Reinforcement Frame	AMR3620
10	Front Case Assy	See Contrast table (2)
11	Panel Cushion V (42)	AED1301
12	Panel Cushion H (42)	AED1309
13	Pioneer Name Plate	AAM1096
14	Punching Sheet	See Contrast table (2)
15	Front Collar	AMR3541
16	Screw (3 x 30P)	ABA1350
17	Screw (M3 x 4)	ABA1354
18	Screw	APZ30P080FTB
19	Front Case Cushion	See Contrast table (2)
20	IR Block Cushion	AEB1465
21	IR Blind Sheet	AAX3455
22	Insulation Sheet B	See Contrast table (2)

(2) CONTRAST TABLE

PDP-427XD/WYVIXK5, PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5, WYV5, PDP-427XA/WYVIXK5 and WYV5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
	5	Speaker Cushion S	AEB1460	Not used	Not used	AEB1460	Not used	AEB1460
	8	Insulation Sheet	AED1289	Not used	Not used	AED1289	Not used	AED1289
	10	Front Case Assy	AMB2968	AMB2971	AMB2972	AMB2969	AMB2972	AMB2969
	14	Punching Sheet	AAS1014	AAS1015	AAS1015	AAS1014	AAS1015	AAS1014
	19	Front Case Cushion (42B)	AEB1462	AEB1464	AEB1464	AEB1462	AEB1464	AEB1462
	22	Insulation Sheet B	AED1284	Not used	Not used	AED1284	Not used	AED1284

2.4 CHASSIS SECTION (1/2)

1

2

3

4

A

B

C


D

E

F

Refer to "2.7 MULTI BASE SECTION".

Refer to "2.5 CHASSIS SECTION (2/2)".

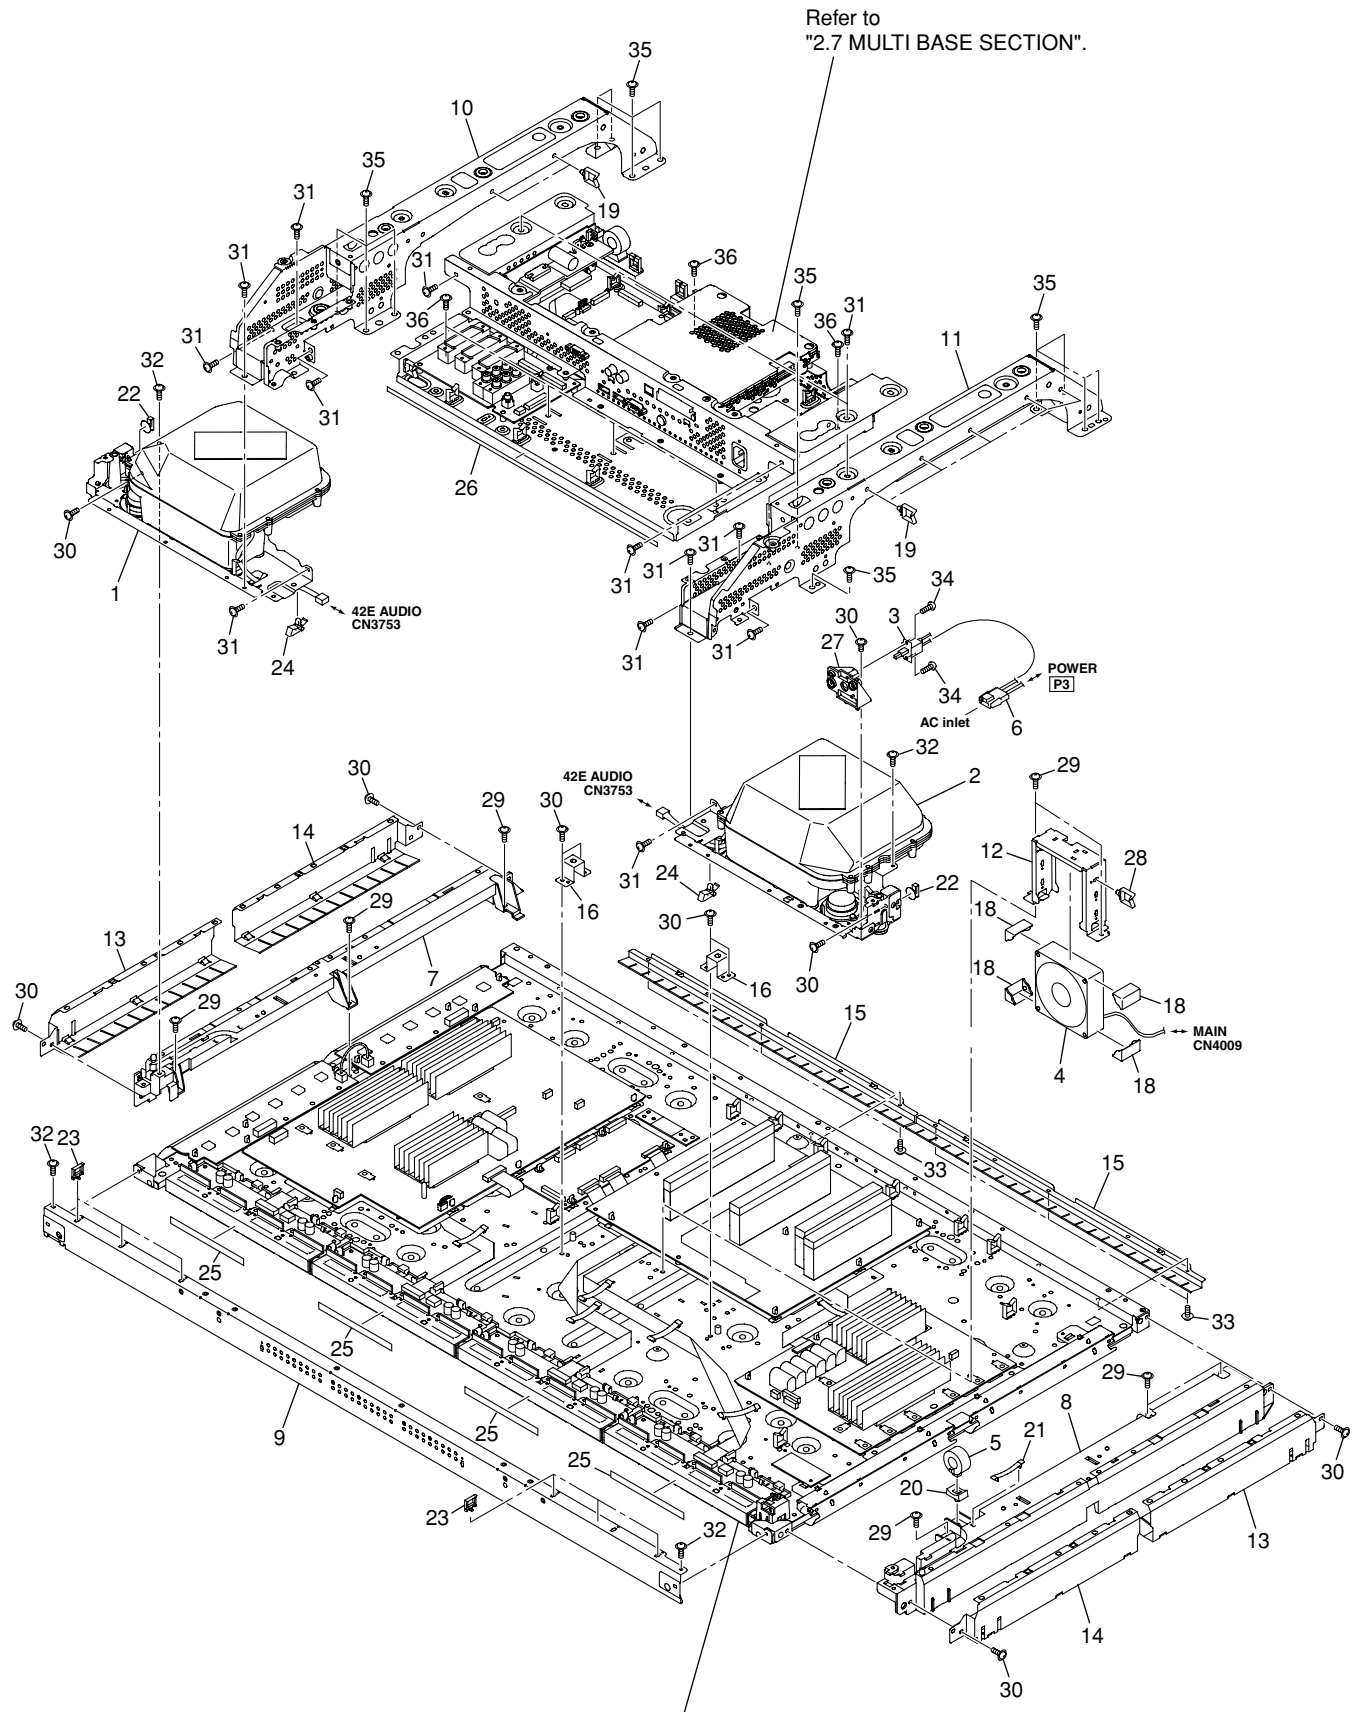

1

2

3

4

5 6 7 8


CHASSIS SECTION (1/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Speaker Box Assy L	AMW1010	
2	Speaker Box Assy R	AMW1011	A
⚠ 3	Power Switch (S1)	ASG1092	
⚠ 4	Fan Motor 80 x 25L	AXM1059	
5	Ferrite Core	ATX1044	
6	Housing Wire (42, 50)(J103)	ADX3320	
7	Front Chassis VL (427)	AMA1020	
8	Front Chassis VR (427)	AMA1021	
9	Front Chassis H Assy (427)	ANA2047	
10	Sub Frame Assy L (427)	ANA1943	
11	Sub Frame Assy R (427)	ANA1944	B
12	Fan Holder	ANG2833	
13	Panel Holder V1 (427)	ANG2920	
14	Panel Holder V2 (427)	ANG2921	
15	Panel Holder H (427)	ANG2922	
16	Multi Base Holder	ANG2937	
17	•••••		
18	Floating Rubber 80	AEB1427	
19	Wire Saddle	AEC1745	
20	Ferrite Core Holder	AEC1818	C
21	Flat Clamp	AEC1879	
22	Locking Wire Saddle	AEC1948	
23	Mini Clamp	AEC2090	
24	Re-use Wire Saddle	AEC2091	
25	Address Gasket (42)	ANK1877	
⚠ 26	Gasket D	ANK1840	
27	Switch Holder	AMR3540	
28	Re-use Wire Saddle	AEC1945	
29	Screw	ABA1351	
30	Screw	ABZ30P080FTC	D
31	Screw	AMZ30P060FTB	
32	Screw	APZ30P080FTB	
33	Screw	BBZ30P060FTC	
34	Screw	BPZ30P080FTB	
35	Screw	TBZ40P080FTB	
36	Screw	ABA1364	E

2.5 CHASSIS SECTION (2/2)

A
B
C
D
E
F

1 2 3 4

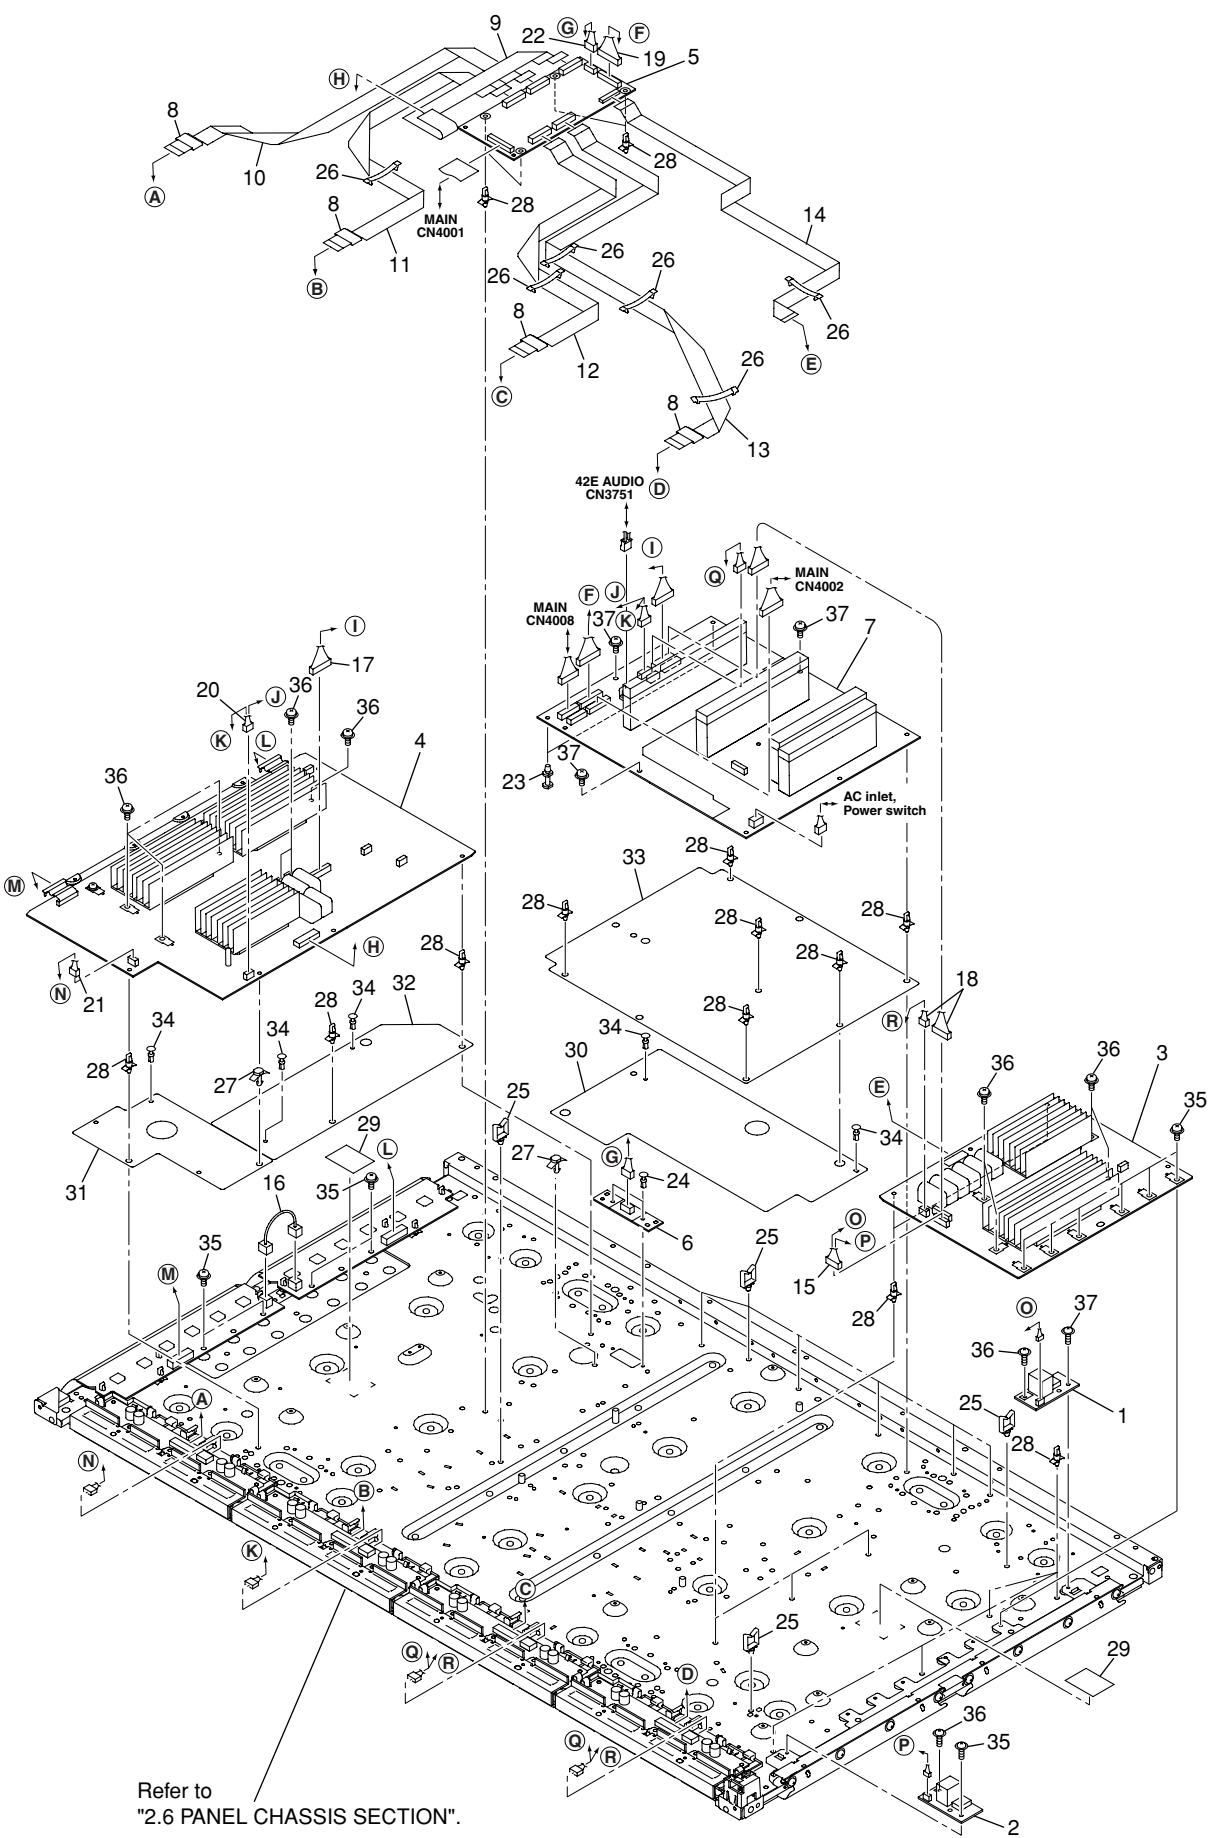

1 2 3 4

5 6 7 8

CHASSIS SECTION (2/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	SUS CLAMP 1 Assy	AWW1022	
2	SUS CLAMP 2 Assy	AWW1023	A
3	42 X DRIVE Assy	AWW1196	
4	42 Y DRIVE Assy	AWV2400	
5	42 DIGITAL Assy	AWW1240	
6	SENSOR Assy	AWW1140	
△ 7	POWER SUPPLY Unit	AXY1153	
8	Ferrite Core	ATX1048	
9	Flexible Cable (J201)	ADD1429	
10	Flexible Cable (J202)	ADD1430	
11	Flexible Cable (J203)	ADD1431	B
12	Flexible Cable (J204)	ADD1432	
13	Flexible Cable (J205)	ADD1433	
14	Flexible Cable (J206)	ADD1434	
15	6P Housing Wire (J118)	ADX3118	
16	3P Housing Wire (J119)	ADX3122	
17	9P Housing Wire (J101)	ADX3318	
18	8P&5/4P Housing Wire (J102)	ADX3319	
19	14P Housing Wire (J105)	ADX3323	
20	6P/4P Housing Wire (J108)	ADX3326	C
21	4P Housing Wire (J109)	ADX3327	
22	5P Housing Wire (J110)	ADX3328	
23	Spacer	AEC1065	
24	Nyron Rivet	AEC1671	
25	Wire Saddle	AEC1745	
26	Flat Clamp	AEC1879	
27	PCB Support	AEC1938	
28	Re-use PCB Spacer	AEC2087	
29	Drive Silicone Sheet	AEH1095	
30	Power Supply Sheet B (507)	AMR3555	D
31	Y Drive Protection Sheet A	AMR3632	
32	Y Drive Protection Sheet B	AMR3633	
33	Power Supply Sheet (427) A	AMR3648	
34	Rivet A	BEC1158	
35	Screw	ABA1364	
36	Screw	ABA1351	
37	Screw	ABA1368	E

2.6 PANEL CHASSIS SECTION

1

2

3

4

A


B

C

D

E

F

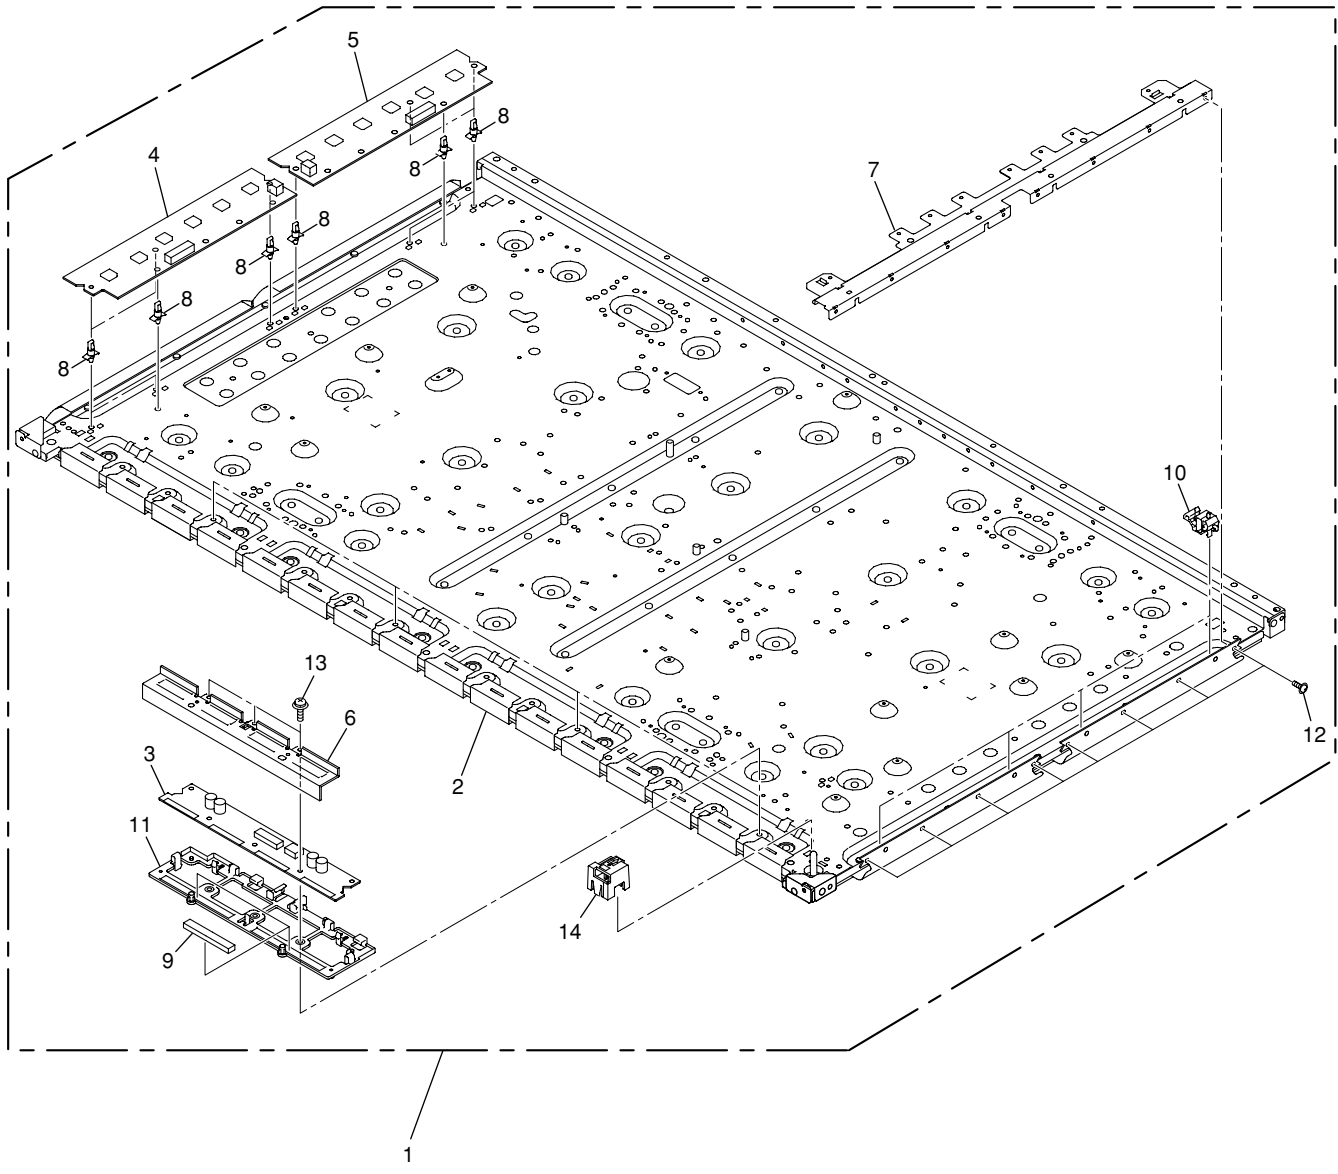

1

2

3

4

(1) PANEL CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP 1	Panel Chassis (427S) Assy	See Contrast table (2)
NSP 2	Plasma Panel (42DC) Assy	AWU1161
NSP 3	42 ADDRESS Assy	AWV2335
NSP 4	42 SCAN A Assy	AWW1182
NSP 5	42 SCAN B Assy	AWW1183
6	Address Heatsink	ANH1644
7	Conductive Plate X	ANG2791
8	Re-use PCB Spacer	AEC2087
9	Address Silicone A	AEH1093
10	Conductive Plate Holder	AMR3446
11	Address Holder Assy	AMR3460
12	Screw	ABA1364
13	Screw	BBB30P120FNI
14	Tube Cover (FT)	AMR3557

(2) CONTRAST TABLE

PDP-427XD/WYVIXK5, PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5, WYV5, PDP-427XA/WYVIXK5 and WYV5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
NSP	1	Panel Chassis (427S) Assy	AWU1185	AWU1185	AWU1185	AWU1185	AWU1207	AWU1207

2.7 MULTI BASE SECTION

A


B

C

D

E

F

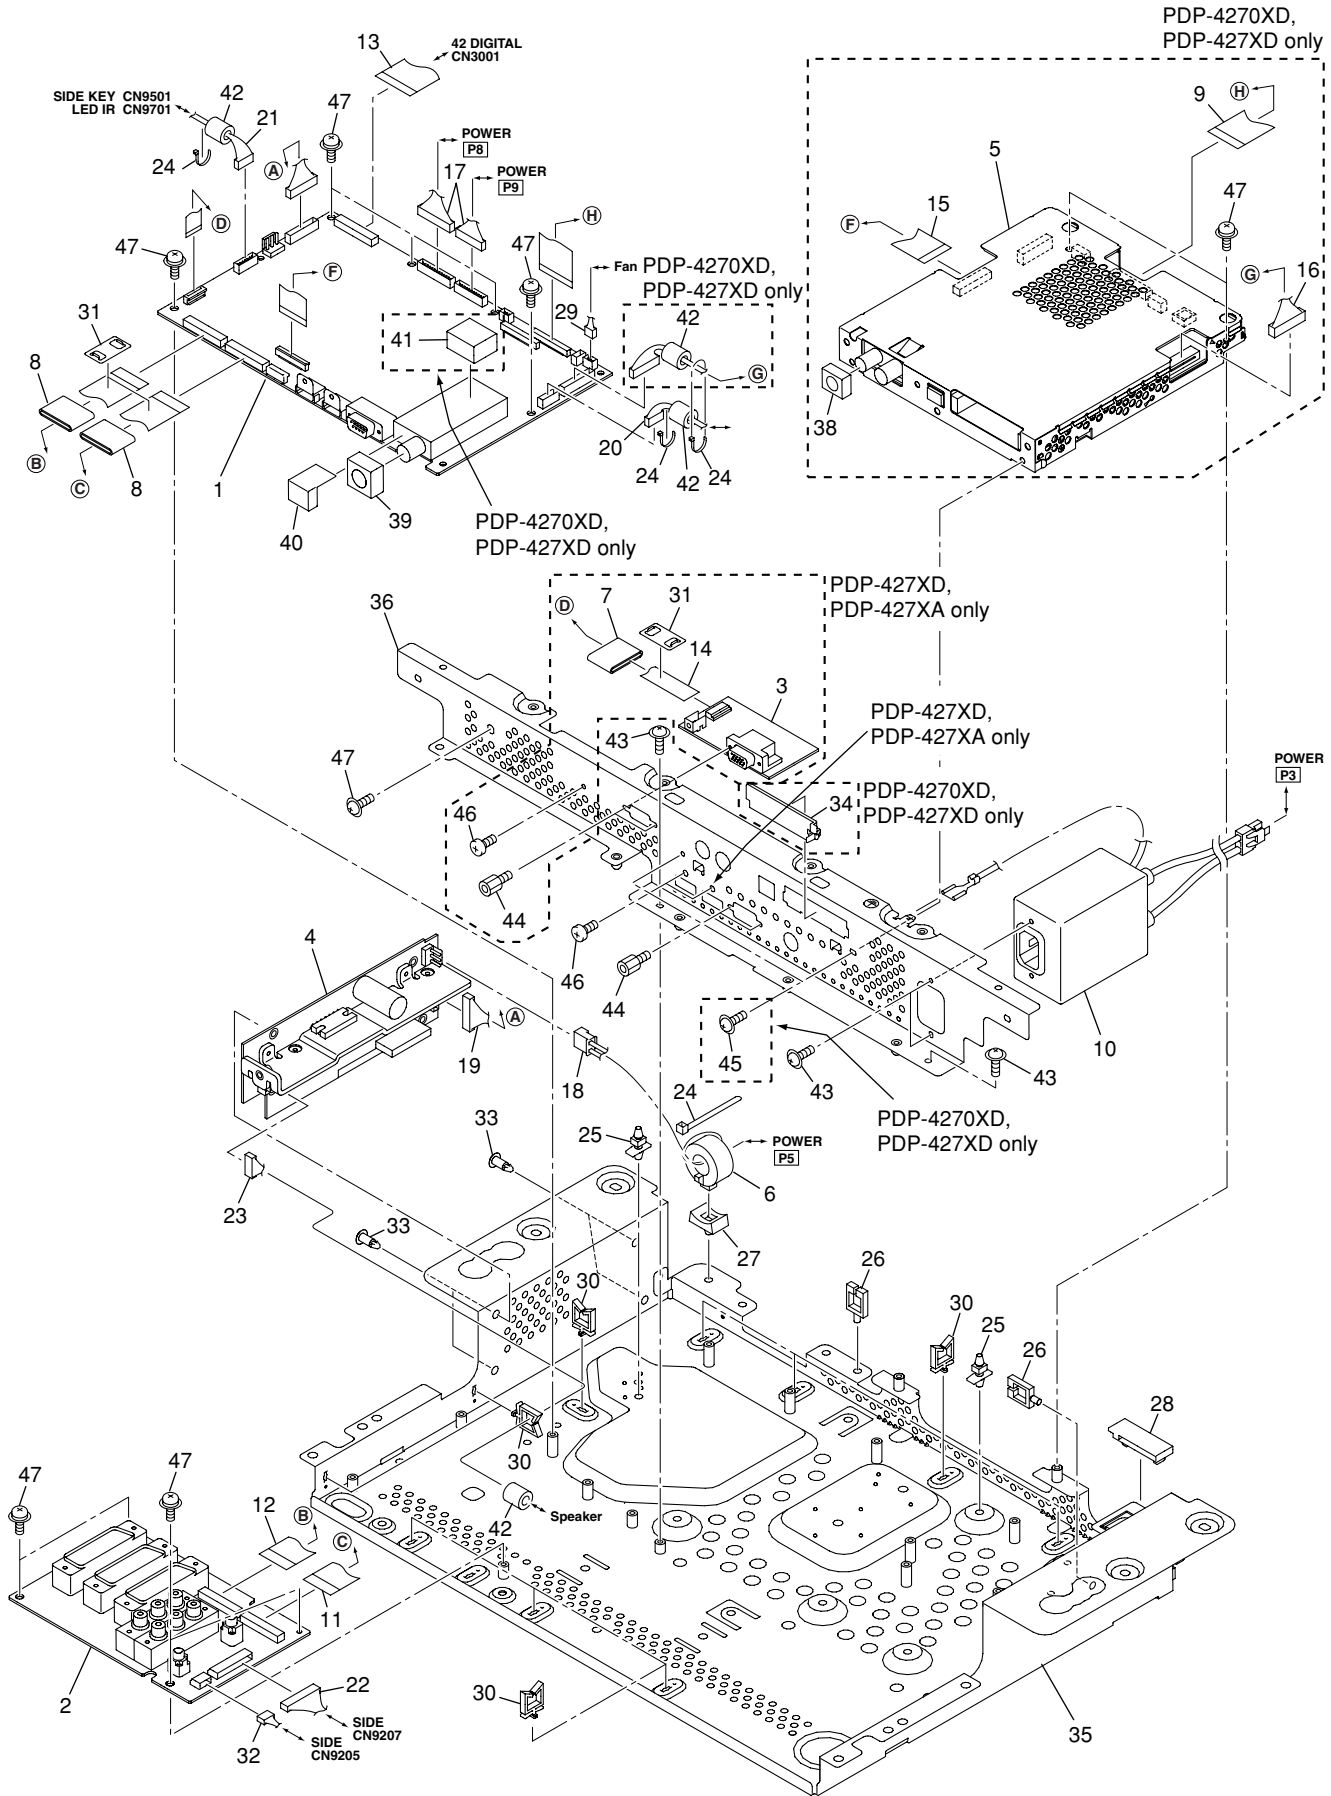

(1) MULTI BASE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	See Contrast table (2)	26	Wire Saddle	AEC1745
2	TANSHI Assy	See Contrast table (2)	27	Ferrite Core Holder	AEC1818
3	PC Assy	See Contrast table (2)	28	Clamp	AEC1884
4	42E AUDIO Assy	AWW1185	29	3P Housing Wire (J127)	ADX3421
5	R07 DT Assy	See Contrast table (2)	30	Re-use Wire Saddle	AEC1945
6	Ferrite Core	ATX1044	31	Ferrite Stopper	AEC1981
7	Ferrite Core	See Contrast table (2)	32	5P Housing Wire (J125)	ADX3388
8	Ferrite Core	ATX1064	33	Locking Card Spacer	AEC2019
9	Flexible Cable (J214)	See Contrast table (2)	34	POD Cover	See Contrast table (2)
⚠ 10	AC Inlet (CN1)	AKP1301	35	Multi Base Assy	See Contrast table (2)
11	Flexible Cable (J210)	ADD1441	36	Terminal Panel A	See Contrast table (2)
12	Flexible Cable (J211)	ADD1441	37	•••••	
13	Flexible Cable (J207)	ADD1445	⚠ 38	Gasket N	See Contrast table (2)
14	Flexible Cable (J213)	See Contrast table (2)	⚠ 39	Gasket EA	ANK1855
15	Flexible Cable (J215)	See Contrast table (2)	⚠ 40	Gasket EB	ANK1899
16	12P Housing Wire (J126)	See Contrast table (2)	⚠ 41	Gasket ED	See Contrast table (2)
17	13P&11P Housing Wire (J106)	ADX3324	42	Filter	CTX1054
18	3P Housing Wire (J107)	ADX3325	43	Screw	AMZ30P060FTB
19	11P Housing Wire (J111)	ADX3329	44	Hex. Head Screw	BBA1051
20	6P Housing Wire (J113)	ADX3331	45	Screw	See Contrast table (2)
21	7/6/4P Housing Wire (J114)	ADX3332	46	Screw	BMZ30P060FTB
22	14P Housing Wire (J116)	ADX3334	47	Screw	PMB30P080FNI
23	8/4P Housing Wire (J117)	ADX3336			
24	Binder	AEC-093			
25	Locking Card Spacer	AEC1429			


(2) CONTRAST TABLE

PDP-427XD/WYVIXK5, PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5, WYV5, PDP-427XA/WYVIXK5 and WYV5 are constructed the same except for the following:


Mark	No.	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
	1	MAIN Assy	AWV2318	AWV2320	AWV2320	AWV2318	AWV2320	AWV2318
	2	TANSHI Assy	AWW1161	AWW1178	AWW1178	AWW1161	AWW1178	AWW1161
	3	PC Assy	AWW1163	Not used	Not used	AWW1163	Not used	AWW1163
	5	R07 DT Assy	AWE1311	AWE1311	Not used	Not used	Not used	Not used
	7	Ferrite Core	ATX1063	Not used	Not used	ATX1063	Not used	ATX1063
	9	Flexible Cable (J214)	ADD1450	ADD1450	Not used	Not used	Not used	Not used
	14	Flexible Cable (J213)	ADD1452	Not used	Not used	ADD1452	Not used	ADD1444
	15	Flexible Cable (J215)	ADD1451	ADD1451	Not used	Not used	Not used	Not used
	16	12P Housing Wire (J126)	ADX3390	ADX3390	Not used	Not used	Not used	Not used
	34	POD Cover	AMR3542	AMR3542	Not used	Not used	Not used	Not used
	35	Multi Base Assy	ANA1952	ANA1952	ANA2019	ANA2019	ANA2019	ANA2019
	36	Terminal Panel A	ANC2398	ANC2400	ANC2415	ANC2399	ANC2415	ANC2399
⚠	38	Gasket N	ANK1776	ANK1776	Not used	Not used	Not used	Not used
⚠	41	Gasket ED	ANK1863	ANK1863	Not used	Not used	Not used	Not used
	45	Screw	BBZ30P060FTB	BBZ30P060FTB	Not used	Not used	Not used	Not used

2.8 PDP SERVICE PANEL ASSY 427 (AWU1208)

A

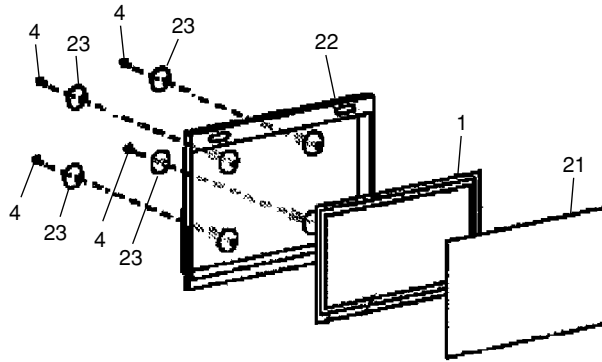

B

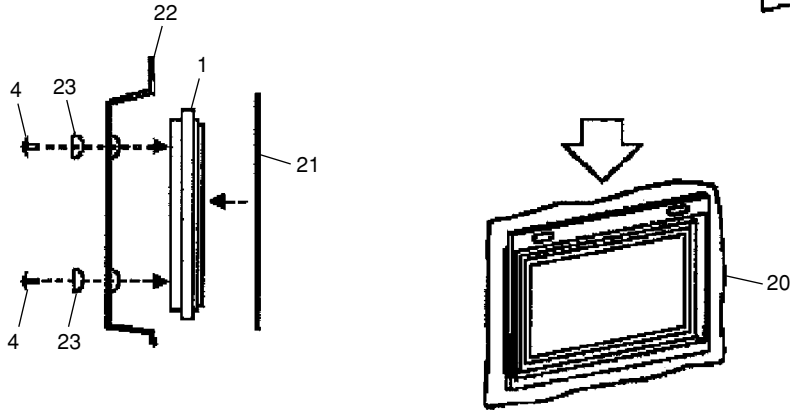

C

D

PDP SERVICE PANEL ASSY 427 (AWU1208) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	Panel Chassis (427) Assy	AWU1171	16	Pad 42SINGLE(B-L)	AHA2552
2	Caution Label	AAX3031	17	Pad 42SINGLE(B-R)	AHA2553
NSP 3	Drive Voltage Label	ARW1097	18	Upper Carton (42SINGLE)	AHD3480
4	Screw	PMB50P150FTC	19	Under Carton (42SINGLE)	AHD3481
5	Screw	ABA1351	20	Polyethylene Bag	AHG1381
6	Wire Saddle	AEC1745	21	Packing Sheet	AHG1386
7	PCB Support	AEC1938	22	Tray (FT)	AHX1158
8	Vinyl Bag S	AHG1338	23	Cup Spacer (15)	ANG2936
NSP 9	Vinyl Bag	AHG1340			
10	Y Drive Protection Sheet A	AMR3632			
11	Power Sheet (427) A	AMR3648			
12	Address Gasket (42)	ANK1877			
13	Rivet A	BEC1158			
14	Pad 42SINGLE(T-L)	AHA2550			
15	Pad 42SINGLE(T-R)	AHA2551			

F

2.9 TABLE TOP STAND (PDP-4270XD and PDP-4270XA ONLY)

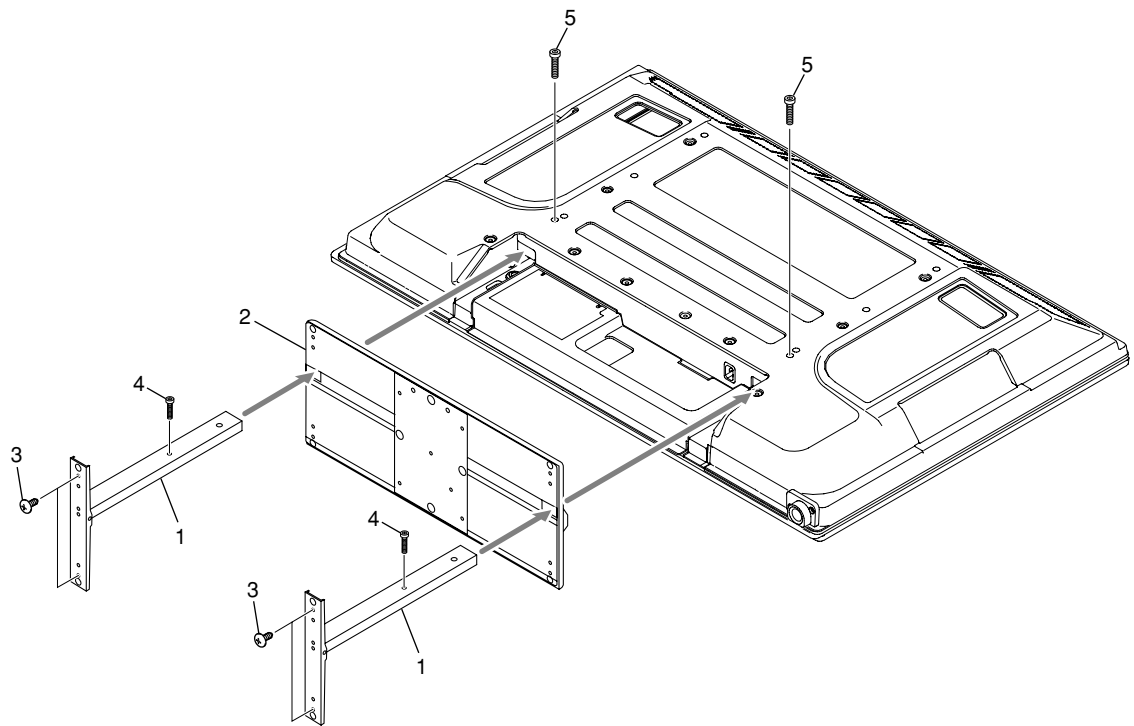


TABLE TOP STAND PARTS LIST

Mark No.	Description	Part No.
1	Stand Pipe Assy	See Contrast table (2)
2	Base Cover Assy	See Contrast table (2)
3	Screw	ABA1357
4	Screw (HEX)	SMZ80H300FTC
5	Screw (HEX)	ABA1365

(2) CONTRAST TABLE

PDP-4270XD/WYVIXK5, PDP-4270XA/WYVIXK5 and PDP-4270XA/WYV5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-4270XA /WYV5
	1	Stand Pipe Assy	AXY1158	AXY1158	AXY1144
	2	Base Cover Assy	AXY1161	AXY1161	AXY1143

3. PCB PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56×10^1 \rightarrow 561 RD1/4PU $\boxed{5}\boxed{6}\boxed{7}\boxed{J}$

47k Ω \rightarrow 47×10^3 \rightarrow 473 RD1/4PU $\boxed{4}\boxed{7}\boxed{3}\boxed{J}$

0.5 Ω \rightarrow R50 RN2H $\boxed{R}\boxed{5}\boxed{0}\boxed{K}$

1 Ω \rightarrow 1R0 RS1P $\boxed{7}\boxed{R}\boxed{0}\boxed{K}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562×10^1 \rightarrow 5621 RN1/4PC $\boxed{5}\boxed{6}\boxed{2}\boxed{1}\boxed{F}$

LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	PDP-427XD /WYVIXK5	PDP-4270XD /WYVIXK5	PDP-4270XA /WYVIXK5	PDP-427XA /WYVIXK5	PDP-4270XA /WYV5	PDP-427XA /WYV5
	1..R07 DT ASSY	AWE1311	AWE1311	Not used	Not used	Not used	Not used
	1..MAIN ASSY	AWV2318	AWV2320	AWV2320	AWV2318	AWV2320	AWV2318
NSP	1..IO ASSY	AWV2319	AWV2321	AWV2321	AWV2319	AWV2321	AWV2319
	2..TANSHI ASSY	AWW1178	AWW1161	AWW1161	AWW1178	AWW1161	AWW1161
	2..SIDE ASSY	AWW1162	AWW1162	AWW1162	AWW1162	AWW1162	AWW1162
	2..PC ASSY	AWW1163	Not used	Not used	AWW1163	Not used	AWW1163
NSP	1..42E AUDIO ASSY	AWV2369	AWV2369	AWV2369	AWV2369	AWV2369	AWV2369
	2..SIDE KEY ASSY	AWW1133	AWW1133	AWW1133	AWW1133	AWW1133	AWW1133
	2..42 & 60 LED ASSY	AWW1134	AWW1134	AWW1134	AWW1134	AWW1134	AWW1134
	2..LED IR ASSY	AWW1136	AWW1136	AWW1136	AWW1136	AWW1136	AWW1136
	2..42E AUDIO ASSY	AWW1185	AWW1185	AWW1185	AWW1185	AWW1185	AWW1185
NSP	1..42 X DRIVE ASSY	AWV2399	AWV2399	AWV2399	AWV2399	AWV2399	AWV2399
	2..SUS CLAMP 1 ASSY	AWW1022	AWW1022	AWW1022	AWW1022	AWW1022	AWW1022
	2..SUS CLAMP 2 ASSY	AWW1023	AWW1023	AWW1023	AWW1023	AWW1023	AWW1023
	2..42 X DRIVE ASSY	AWW1196	AWW1196	AWW1196	AWW1196	AWW1196	AWW1196
	1..42 Y DRIVE ASSY	AWV2400	AWV2400	AWV2400	AWV2400	AWV2400	AWV2400
NSP	1..42 DIGITAL ASSY	AWV2435	AWV2435	AWV2435	AWV2435	AWV2435	AWV2435
	2..SENSOR ASSY	AWW1140	AWW1140	AWW1140	AWW1140	AWW1140	AWW1140
	2..42 DIGITAL ASSY	AWW1240	AWW1240	AWW1240	AWW1240	AWW1240	AWW1240
NSP	1..PANEL CHASSIS (427S) ASSY	AWU1185	AWU1185	AWU1185	AWU1185	AWU1185	AWU1185
NSP	2..42 ADDRESS ASSY	AWV2335	AWV2335	AWV2335	AWV2335	AWV2335	AWV2335
NSP	2..42 SCAN ASSY	AWV2362	AWV2362	AWV2362	AWV2362	AWV2362	AWV2362
NSP	3..42 SCAN A ASSY	AWW1182	AWW1182	AWW1182	AWW1182	AWW1182	AWW1182
NSP	3..42 SCAN B ASSY	AWW1183	AWW1183	AWW1183	AWW1183	AWW1183	AWW1183
Δ	1..POWER SUPPLY UNIT	AXY1153	AXY1153	AXY1153	AXY1153	AXY1153	AXY1153

■ CONTRAST OF PCB ASSEMBLIES

MAIN ASSY

AWV2320 and AWV2318 are constructed the same except for the following :

Mark	Symbol and Description	AWV2320	AWV2318
	IC5103	Not used	TVP5150AM1PBS-K
	IC5404	Not used	BR24L02FJ
	IC8305	Not used	TC74VHC00FTS1
	Q5402	Not used	HN1K02FU
	Q5408	Not used	UMD2N
	Q5414	Not used	RN1902
	Q8302	Not used	2SA1586
	Q8303, Q8304	Not used	DTC124EUA
	Q8311	Not used	2SJ461A
	D5402	Not used	1SS301
	D5408	Not used	UDZS6R8(B)
	D8301 - D8303	Not used	1SS355
	C4922, C4932, C4933, C5101, C5102, C5103	Not used	CKSRYB105K10
	C5104, C5105	Not used	CCSSCH100D50
	C5117, C5123, C5125, C5126, C5449 - C5451	Not used	CKSSYF104Z16
	C5121, C5122, C5124, C8320	Not used	CKSSYB104K10
	C5452, C8319	Not used	DCH1201
	C5453	Not used	CCSSCH101J50
	R4031	Not used	RS1/16S0R0J
	R4056, R8344	Not used	RS1/16SS0R0J
	R4057	RS1/16SS0R0J	Not used
	R4728, R4729, R4904, R4905, R4910	Not used	RS1/16SS220J
	R4809, R4810	Not used	RS1/16SS562J
	R4964, R4965, R4966	Not used	RS1/16S75R0F
	R5103	Not used	ACN1246
	R5121, R8347, R8359	Not used	RS1/16SS332J
	R5122, R5419, R8476	Not used	RS1/16SS103J
	R5124, R5125, R5126	Not used	RS1/16SS470J
	R5147	Not used	RAB4CQ220J
	R5421, R8364	Not used	RS1/16SS101J
	R5422	Not used	RS1/16SS473J
	R5423, R5424	Not used	RS1/16SS100J
	R5433, R8353	Not used	RS1/16SS102J
	R8354	Not used	RS1/16SS122J
	R8355	Not used	RS1/16SS104J
	R8356, R8358	Not used	RS1/16S122J
	R8357	Not used	RS1/16S220J
	R8376	RS1/10S0R0J	Not used
	R8379, R8380	RS1/16SS223J	Not used
	R8477, R8480	RS1/16SS103J	Not used
	X5101 CRYSTAL	Not used	ASS1189
	CN4018 12P FFC CONNECTOR	Not used	AKM1233
	JA5402 HDMI CONNECTOR	Not used	AKP1278

TANSHI ASSY

AWW1178 and AWW1161 are constructed the same except for the following :

Mark	Symbol and Description	AWW1178	AWW1161
A	Q9012	Not used	HN1A01FU
	Q9015	Not used	2SC4116
	Q9016	Not used	2SD2114K
	⚠ F9001 - F9007	Not used	CTF1557
	C9037	Not used	CCG1205
	C9022, C9025	Not used	CKSRYB105K10
	⚠ C9010 - C9012	Not used	CKSSYB471K50
	C9023, C9026	Not used	CKSRYB102K50
	C9043	Not used	CKSRYB224K10
	JA9005 2P PINJACK	AKB1331	AKB1340
B	JA9002	Not used	VKN1449
	JA9004	Not used	AKN1081

PCB PARTS LIST FOR PDP-427XD/WYVIXK5 UNLESS OTHERWISE NOTED

Mark No.	Description	Part No.	Mark No.	Description	Part No.
R07 DT ASSY			C1018,1027,1029,1050		CEHVKW470M16
			C1019		CEHVKW100M50
			C1020		CEHVKW100M16
			C1025,1026,1030-1035		CKSRYB104K16
			C1028,1038,1042,1046		CCG1205
MISCELLANEOUS			C1036		CKSRYB105K10
9	TOP CAN	XNG1002	C1037,1039,1049,1053		CKSRYB104K16
11	PCMCIA EJECTOR	ANG2673	C1043,1044		CCSRCJ3R0C50
12-15	SCREW	PMZ20P100FNI	C1045		CKSRYB103K50
16-18	SCREW	ABZ30P060FTC	C1051		CCG1205
[TUNER BLOCK]			C1054		BCG1050
SEMICONDUCTORS			C1056,1057		CEHVKW470M16
IC1000		UPC3221GV	C1058-1062		CKSRYB104K16
IC1001		STV0361L	C1102		CEHVKW331M6R3
Q1001		2SC2412K	RESISTORS		
Q1002		DTC124EUA	All Resistors		RS1/16S###J
Q1003,1004		RK7002	[DEMUX BLOCK]		
⚠ D1000		SM15T6V8A	SEMICONDUCTORS		
D1001		1SS355	IC2000		STI5517DWAL
MISCELLANEOUS			IC2001		SN74LVU04APW
L1000		XTX1005	IC2002		TC74VHC08FTS1
L1002		LCYAR82J2520	Q2000		2SC4081
L1004		XTX1003	D2000		DA204U
L1200		XTX1001	D2001		UDZS8R2(B)
F1000		XTF1002	D2002		HVU307
F1001,1003-1010		VTF1091	D2005,2009		RB501V-40
F1012-1014,1100,1101		VTF1091	MISCELLANEOUS		
F1202-1204		VTF1091	L2000		XTX1003
X1100 CRYSTAL (27 MHz)		XSS1010	F2000-2003		VTF1091
⚠ FU1200 CHIP FUSE (0.25A)		XEK1003	X2000 CRYSTAL RESONATOR (27 MHz)		BSS1112
⚠ M1000 FRONT END		XXF1007	X2001 CRYSTAL OSCILLATOR		ASS1172
CAPACITORS			VA2002 VARISTOR		AVR-M1608C120MT2AB
C1001-1003,1017,1022		CKSRYB104K16	RESISTORS		
C1004,1055		CEHVKW101M6R3	R2010,2018,2042		RAB4C103J
C1010		CEHVKW2R2M50	R2070,2071		RAB4CQ220J
C1013,1021,1040,1041		CKSRYB103K50	Other Resistors		RS1/16S###J
C1015		CKSRYB102K50			

5	6	7	8
Mark No.	Description	Part No.	Mark No. Description Part No.
CAPACITORS		CAPACITORS	
C2000,2026,2030	CCSRCH101J50	C4000,4002	CCG1205
C2001	CKSRYB471K50	C4001,4014,4032,4033	CKSRYB103K50
C2002,2003,2005,2006	CKSRYF104Z16	C4003,4005,4017,4018	CKSRYF104Z16
C2004	CKSRYF474Z16	C4004	CEHVKW2R2M50
C2007	CCSRCH471J50	C4006	CKSRYB102K50
C2008,2017,2020,2021	CKSRYB102K50	C4007,4013	CCSRCH220J50
C2009	CCSRCH330J50	C4008,4009	CCSRCH121J50
C2011,2012	CCSRCH390J50	C4010,4011,4042	CCSRCH101J50
C2013	CKSRYB105K10	C4012,4022,4023,4029	CEHVKW470M16
C2014,2016	CCSRCH100D50	C4019,4102-4104	CEHVKW100M16
C2015	CKSRYF105Z10	C4021,4024,4043	CKSRYF104Z16
C2018,2019,2022-2025	CKSRYF104Z16	C4038	CKSRYB103K50
C2027,2029,2042,2046	CKSRYF223Z50	C4039	CEHVKW470M16
C2028,2035,2037-2041	CKSRYF104Z16	C4040,4041	CKSRYB105K10
C2032-2034,2036	CEHVKW470M16	C4105-4107	CKSRYF104Z16
C2043-2045,2047,2048	CKSRYF104Z16	C4108-4113	CEHVKW100M16
[MEMORY BLOCK]		[CI BLOCK]	
SEMICONDUCTORS		SEMICONDUCTORS	
IC3000,3003	K4S281632I-UC75	IC5000	ST890CDR
IC3002	XGC1003	IC5001	CIMAXSP2L
MISCELLANEOUS		IC5002	TC74LCX245FTS1
L3003	XTX1003	IC5003,5004	TC74LCX373FT
L3005	XTX1001	Q5000	2SC4081
RESISTORS		Q5001	DTA143EUA
R3004-3014	RAB4CQ470J	Q5002	DTC124EUA
Other Resistors	RS1/16S###J	MISCELLANEOUS	
CAPACITORS		CN5000 PCMCIA CONNECTOR	XKP1003
C3000,3003,3007,3008	CKSRYF104Z16	RESISTORS	
C3001,3002,3004,3014	CKSRYF223Z50	R5014,5019,5022,5024	RAB4CQ470J
C3010	CEHVKW470M16	R5030,5032,5036-5038	RAB4CQ470J
C3012,3017,3020-3022	CKSRYF104Z16	R5045-5050	RAB4CQ470J
C3015,3018,3019,3023	CKSRYF223Z50	Other Resistors	RS1/16S###J
C3024	CKSRYF223Z50	CAPACITORS	
[AV BLOCK]		C5001	CKSRYB105K10
SEMICONDUCTORS		C5003,5004,5006	CKSRYF104Z16
IC4000	CS4334-KS	C5005,5100	CEHVKW470M16
IC4001	SN74LVU04APW	C5008-5013	CKSRYF104Z16
IC4002	RC4558D	[POWER BLOCK]	
IC4003	CS8406CZZ	SEMICONDUCTORS	
IC4100	PCM1803DB	IC6001	M5291FP
Q4001,4002	2SC4081	IC6002	BA05FP
MISCELLANEOUS		IC6003	FPF2003
F4000,4100 FERRITE CORE	VTF1091	IC6200	TC74LCX245FTS1
JA4000 OPTICAL OUT MOD.	GP1FM513TZ	IC6300	SN74LVC1G08DCK
X4000 CRYSTAL (12.288 MHz)	XSS1006	Q6001,6009,6011,6200	DTC124EUA
CN4000 40P CONNECTOR	AKM1348	Q6003,6005,6010	DTA143EUA
RESISTORS		Q6006	2SB1188
R4042,4045,4046	RS1/16S2000F	Q6008	TPC8209
Other Resistors	RS1/16S###J	Q6100	2SC4081
		D6001	RSX201L-30
		D6003,6100-6102	1SS355
		D6103	UDZS30(B)

Mark No. Description**Part No.****Mark No. Description****Part No.****MISCELLANEOUS**

L6000	LCYAR82J2520
L6001,6100,6101	XTH1001
F6000 FERRITE CORE	VTF1091
CN6000 12P CONNECTOR	AKM1298
CN6003 50P CONNECTOR	AKM1349

RESISTORS

R6012-6014	RAB4C2R2J
R6031	RAB4C221J
R6204,6205	RAB4CQ101J
Other Resistors	RS1/16S###J

CAPACITORS

C6000,6026,6104-6106	CEHVKW331M6R3
C6001,6011,6013-6015	CEHVKW470M16
C6002,6035	CKSRYF223Z50
C6003,6005,6006,6012	CKSRYF104Z16
C6004	CEHVKW100M50

C6008,6016	CKSRYF474Z16
C6010	CCSRCH331J50
C6017,6028,6036,6042	CEHVKW101M6R3
C6018,6020,6021,6025	CKSRYF104Z16
C6019,6023,6100	CEHVKW470M16

C6022	CKSRYB103K50
C6027	CCSRCH101J50
C6029,6030,6033,6038	CKSRYF104Z16
C6031	CEHVKW2R2M50
C6044	CEHVKW101M6R3

C6102	CCG1191
C6200,6300	CKSRYF104Z16

MAIN ASSY**[BOARD IF BLOCK]****SEMICONDUCTORS**

IC4001-4005	TC74VCX541FT
Q4001,4002,4005	DTC124EUA
Q4003,4004	RN2902

MISCELLANEOUS

L4001-4006	BTX1042
△F4001-4010	CTF1557
CN4001,4004,4005 50P CONNECTOR	AKM1349
CN4006 PLUG(6P)	KM200NA6
CN4013 50P CONNECTOR PBF	AKM1353
CN4014 40P CONNECTOR PBF	AKM1354

RESISTORS

R4001	RAB4CQ470J
R4021-4024	BCN1067
R4030,4035	RS1/16S0R0J
Other Resistors	RS1/16SS###J

CAPACITORS

C4001-4003,4007,4009	CKSSYF104Z16
C4004	CCSSCH101J50
C4006,4036,4039	DCH1201
C4008	DCH1165
C4014	CKSSYF104Z16

C4033,4051	CKSRYF104Z50
------------	--------------

C4048-4050

[REG 0 BLOCK]**SEMICONDUCTORS**

IC4101,4114,4115
IC4102
IC4103
IC4104,4111,4113
IC4105

IC4106
IC4107
IC4108
IC4109,4110
Q4101,4103

Q4102
Q4104
Q4105,4106
Q4107-4109
Q4110

D4101-4110,4112-4118
D4111,4119,4120,4122
D4121

MISCELLANEOUS

L4101,4103
L4102,4105-4107
L4108
L4109
F4101,4102

RESISTORS

R4113,4134-4136,4140
R4119,4131,4146
R4120
R4123,4159
R4124

R4133
R4148,4164-4170,4173
Other Resistors

CAPACITORS

C4018,4101,4103,4106
C4102,4104,4105,4107
C4108
C4109,4111-4113,4116
C4110,4117

C4114,4118
C4119,4127,4131,4134
C4121,4140,4153
C4122,4129
C4123,4124,4126,4130

C4132
C4135,4138,4143-4146
C4136,4137,4141,4142
C4139
C4147

C4150
C4151
C4154
C4155
C4165

CCSSCH470J50

S-1132B18-U5
LTC3414EFE
LTC3412EFE
NJM2846DL3-05
S-1170B25UC-OTK

S-1170B15UC-OTA
NJM2846DL3-33
NJM2846DL3-18
PQ090DNA1ZPH
RN1902

HN1C01FU
DTC124EUA
UPA1917TE
2SC4116
2SD2114K

1SS355
1SS357
1SS355

BTX1042
BTX1039
ATH1208
ATH1194
VTF1080

RS1/10S0R0J
RS1/16SS3003F
RS1/16SS2003F
RS1/16SS1502F
RS1/16SS6202F

RS1/16SS1503F
RS1/10S0R0J
RS1/16SS###J

CKSRYB105K10
DCH1201
CKSRYB105K10
DCH1201
CCSSCH101J50

BCG1050
DCH1201
CKSSYB104K10
CCSSCH220J50
DCH1165

ACH1421
DCH1201
BCG1059
CCSRCH471J50
CCSRCH102J50

ACH1429
CKSSYB102K50
CKSSYF104Z16
CKSSYB103K16
DCH1201

Mark No. Description**Part No.****Mark No. Description****Part No.**

C4737
C4745,4767,4768
C4753
C4754,4755,4759,4760
C4756,4761,4763,4764

ACG1122
DCH1165
ACH1394
CKSRYB105K10
CKSSYF104Z16

C4758,4762,4765
C4766,4772-4774
C4769-4771
C4775,4776
C4777,4779

DCH1201
CKSSYF104Z16
DCH1201
CKSSYB681K50
CKSSYB152K50

C4778
C4780-4783
C4784,4785

CCSSCH221J50
CKSRYB105K10
CCSRCH331J50

CAPACITORS

C5106,5107,5136,5140
C5108,5109
C5113,5118,5119
C5120,5129,5131,5133
C5127,5128,5130,5132

CKSSYB103K16
CCSSCH8R0D50
DCH1201
CKSSYF104Z16
CKSSYB104K10

C5134,5135,5137,5139
C5138,5144,5155-5165
C5141-5143,5145,5151
C5150
C5153,5191

CKSSYB104K10
CKSSYF104Z16
CKSSYB104K10
CKSSYB103K16
CKSSYB104K10

[ADC BLOCK]**SEMICONDUCTORS**

IC5301

AD9985KSTZ-110

RESISTORS

R5301-5303
R5305
R5307,5308,5312,5313
R5310,5311
Other Resistors

BCN1067
RS1/16SS2701F
RS1/16SS470J
RS1/10S0R0J
RS1/16S###J

CAPACITORS

C5301
C5302
C5303-5305
C5307,5313
C5308-5312,5314-5316

CKSSYB823K10
CKSSYB822K16
CKSSYB473K16
CKSSYB104K10
CKSSYF104Z16

C5318,5319

CKSSYF104Z16

[HDMI BLOCK]**SEMICONDUCTORS**

IC5401
IC5402
IC5403
Q5401
Q5407

SI9023CTU
PCM1754DBQ
BR24L02FJ-W
HN1K02FU
UMD2N

Q5413
D5401
D5407

RN1902
1SS301
UDZS6R8(B)

MISCELLANEOUS

JA5401 HDMI CONNECTOR
X5401 CRYSTAL

AKP1278
ASS1192

RESISTORS

R5401-5403
R5413,5429
R5450
R5451
R5452,5455

BCN1071
RS1/10S0R0J
RAB4CQ473J
RAB4CQ100J
RAB4CQ103J

R5454
Other Resistors

RAB4CQ470J
RS1/16SS###J

CAPACITORS

C5401,5402
C5403,5404,5408,5410
C5405,5407,5473
C5406
C5412,5414,5416,5418

CCSSCH120J50
CKSSYF104Z16
DCH1201
CCSSCH101J50
CKSSYF104Z16

[RGB SW BLOCK]**SEMICONDUCTORS**

IC4901
Q4901-4903,4905
Q4904,4906
D4901-4903

R2S11001FT
2SA1586
HN1B04FU
UDZS4R7(B)

RESISTORS

R4913-4918
R4919,4926,4930
R4921,4928,4932
R4925
Other Resistors

RS1/16SS3301F
RS1/16SS5600F
RS1/16SS75R0F
RAB4CQ102J
RS1/16SS###J

CAPACITORS

C4901-4903
C4904
C4905
C4906-4910,4912-4915
C4911,4935

CKSRYB105K10
CCSRCH331J50
CCSRCH680J50
CKSSYB103K16
CKSRYB474K10

C4916,4923,4924,4926
C4917-4921
C4925,4927
C4928-4931

CKSSYF104Z16
CKSSYB103K16
DCH1201
CKSSYF104Z16

[VDEC BLOCK]**SEMICONDUCTORS**

IC5101
IC5102

UPD64015AGM-UEU
EDS1616AGTA-75-E

MISCELLANEOUS

F5101 EMI FILTER
X5102 CRYSTAL

CCG1162
ASS1191

RESISTORS

R5101,5102,5104,5105
R5106,5107
R5108-5110
R5118-5120
R5133-5135

ACN1246
BCN1067
RS1/16S0R0J
RS1/16SS470J
RS1/16SS2000F

R5136-5138
R5140
R5148

RS1/16SS220J
RS1/16SS334J
RAB4CQ220J
RS1/10S0R0J
RS1/16SS####D

R5149-5151,5153,5155
Other Resistors

5	6	7	8
Mark No.	Description	Part No.	Mark No. Description Part No.
C5423,5426-5428,5430	CKSSYF104Z16	IC8203	TC74VHC08FTS1
C5432,5434,5436,5438	CKSSYF104Z16	MISCELLANEOUS	
C5440,5442,5444,5445	CKSSYF104Z16	L8201-8205	BTX1042
C5447,5448,5455,5457	CKSSYF104Z16	RESISTORS	
C5458,5460,5462,5464	CKSSYF104Z16	R8201-8205	ACN1246
C5466,5468,5469,5471	CKSSYF104Z16	R8206-8208,8255	ACN1251
C5472	CKSSYF104Z16	R8209	RS1/10S0R0J
		R8214,8215,8248	RAB4CQ103J
		R8225,8245	BCN1071
		R8246	BCN1073
		R8249	RAB4CQ680J
		Other Resistors	RS1/16SS###J
[DSEL BLOCK]		CAPACITORS	
SEMICONDUCTORS		C8202	CKSSYB102K50
IC8001	PD6523A	C8203-8205	DCH1201
IC8002	TC74LCX125FT	C8221-8234,8239	CKSSYF104Z16
IC8003	TC74VCX574FT		
MISCELLANEOUS		[IF UCOM BLOCK]	
L8001-8003	BTX1042	SEMICONDUCTORS	
⚠ F8004	ATX1058	IC8301	AGC1016
X8001 CRYSTAL	ASS1194	IC8302	PST9230N
		IC8303	TC74VHC08FTS1
RESISTORS		IC8304	TC7W126FU
R8001,8002	ACN1251	IC8306	MAX3232CPW
R8003,8008	RAB4CQ680J	IC8307	TC74VHC125FTS1
R8004-8006	BCN1071		
R8009-8011	BCN1067	IC8308	TC74VHC00FTS1
R8026,8027	RAB4CQ101J	Q8301,8315	DTA124EUA
Other Resistors	RS1/16SS###J	Q8306,8308	DTC124EUA
CAPACITORS		Q8307,8312	2SA1586
C8002	CKSSYB102K50	Q8309,8313	2SC4116
C8003,8005,8014-8020	CKSSYF104Z16		
C8025,8027	CKSSYF104Z16	Q8310,8314	HN1C01FU
C8026	DCH1201	D8304,8305	1SS355
		MISCELLANEOUS	
[IP BLOCK]		X8301 CERAMIC RESONATOR	ASS1168
SEMICONDUCTORS		X8302 CRYSTAL OSCILLATOR	ASS1172
IC8101	PE5504B	CN8301 9P D-SUB SOCKET	AKP1213
IC8102,8103	EDS6432AFTA-75-E		
MISCELLANEOUS		RESISTORS	
L8101-8104	BTX1042	R8307	RAB4CQ473J
RESISTORS		R8348,8351,8352	RAB4CQ103J
R8101-8104,8106-8110	BCN1067	R8376	RS1/10S0R0J
R8105	BCN1071	Other Resistors	RS1/16SS###J
R8111,8116	ACN1246	CAPACITORS	
R8112-8115,8117	ACN1251	C8301	CKSSYB472K25
R8123	RAB4CQ103J	C8302,8303	CCSSCH220J50
		C8305,8312	CCSRCH471J50
R8135	RAB4CQ470J	C8306-8311,8322,8323	CKSSYF104Z16
R8136	RAB4CQ101J	C8313-8317,8321,8324	CKSSYB104K10
Other Resistors	RS1/16SS###J	[MAIN UCOM BLOCK]	
CAPACITORS		SEMICONDUCTORS	
C8101	CKSSYB102K50	IC8401	MB91305PMC-G-BND
C8112-8115,8117-8120	CKSSYF104Z16	IC8402	AGC1018
C8134-8145	CKSSYF104Z16	IC8403	PST3628UR
		IC8407	PQ200WNA1ZPH
[MULTI BLOCK]		IC8409	BR24L64F-W
SEMICONDUCTORS		IC8410,8411	TC74VHC125FTS1
IC8201	PEG121B		
IC8202	AGC1019		

Mark No. Description**Part No.**

Q8401 2SJ461A
 Q8402 DTC124EUA
 A Q8403,8405 HN1K02FU
 D8401 1SS355
 D8402 SML-311UT

 D8403-8405 1SS301

MISCELLANEOUS

X8401 CERAMIC OSCILLATOR CSS1616
 CN8401 50P CONNECTOR PBF AKM1353

RESISTORS

R8401,8402 ACN1248
 B R8408,8467 RAB4CQ101J
 R8454,8455 RS1/16S0R0J
 R8464 RS1/16S4701F
 R8465 RS1/16S1801F

 R8466 RS1/16S1001F
 R8484 RS1/16SS5602F
 R8485 RS1/16SS2002F
 Other Resistors RS1/16SS###J

CAPACITORS

C8402-8405,8408-8413 CCSSCH470J50
 C8414 CKSSYB102K50
 C C8416,8426 CCSSCH120J50
 C8417 CKSSYB472K25
 C8418,8443 CKSSYB103K16

 C8421-8423,8425 CCSSCH470J50
 C8424,8460 DCH1165
 C8427-8434,8436-8442 CKSSYF104Z16
 C8445-8454,8459 CKSSYF104Z16

TANSHI ASSY**SEMICONDUCTORS**

IC9001 BH3544F
 Q8801-8804 HN1A01FU
 Q8805-8808,9019,9020 2SA1586
 Q8809-8811,9013 UMD2N
 Q8812,8814,8821,8823 2SC4116

 Q8813 HN1C01FU
 Q8825-8829,8832 2SC4116
 Q9001 HN1B04FU
 Q9009-9011 2SC4116
 Q9017,9018 2SD2114K

E D9013 1SS301
 D9014-9016 UDZS5R1(B)
 TH9001 TH05-3H103F

MISCELLANEOUS

JA8801-8803 RGB CONNECTOR AKP1295
 JA9001 3P PIN JACK AKB1332
 JA9005 2P PIN JACK AKB1331
 CN8802,9003 50P CONNECTOR PBF AKM1349
 CN9002 5P PLUG KM200NA5L

RESISTORS

F R8801,8803-8805,8807 RS1/10S151J
 R8802,8806,8808 RS1/10S121J
 R8809,8810 RS1/10S151J
 R8812,8821,8870,8877 RS1/16S680J

Mark No. Description**Part No.**

R8839-8841,8866,8894 RS1/16S75R0F
 R8885,8893 RS1/16S680J
 R8898,8915-8917,8922 RS1/16S75R0F
 R9008 RS1/16S4701F
 R9037,9038,9040 RS1/16S75R0F
 R9046-9048 RS1/16S75R0F

 Other Resistors RS1/16SS###J

CAPACITORS

C8801,8806,8812,8814 DCH1201
 C8802,8815,8819,9005 DCH1165
 C8803,8813,8818,9001 CKSSYF104Z16
 C8804,8805,8810,8811 CCG1205
 C8816,8817,9007,9014 DCH1201

 C8820,8821,9045,9046 CCG1205
 C8825-8836,8857,8858 CKSSYB102K50
 C8837-8839 ACH1454
 C8840-8848,8850,8851 CKSRYB105K10
 C8853-8856,9028-9030 CKSRYB105K10

 C9002,9039,9040 CKSSYB103K16
 C9006 DCH1165
 C9008,9009 CKSSYB104K10
 C9013,9044 CKSSYF104Z16
 C9017 CEHVKKW470M6R3

 C9031,9032 CKSRYB102K50
 C9033-9035,9041,9042 CKSRYB105K10
 C9038 CKSSYB473K16

SIDE ASSY**MISCELLANEOUS**

9203,9204 SCREW TERMINAL VNE1949

SEMICONDUCTORS

Q9201-9205 2SC4116
 D9201-9207 UDZS9R1(B)
 D9208,9209 UDZS5R6(B)

MISCELLANEOUS

JA9201 PIN JACK 3P AKB1303
 JA9202 4P MINI DIN SOCKET AKP1238
 CN9201 MINI JACK AKN1028

RESISTORS

R9245,9246 ACN1260
 Other Resistors RS1/16SS###J

CAPACITORS

C9201,9202 ACH1454
 C9204,9208,9209 CKSSYF104Z16
 C9213,9214 CKSRYB105K10
 C9215,9216 CKSRYB102K50

PC ASSY**MISCELLANEOUS**

9302 SCREW TERMINAL VNE1949

5	6	7	8
Mark No.	Description	Part No.	Mark No. Description Part No.
SEMICONDUCTORS			
IC9301	TC74VHC08FTS1	C3779	CKSRYPB822K50
IC9302	TC7WH123FU	C3791,3799	CEHAT100M50
IC9303	BR24C21FJ	C3792-3795,3806,3807	CFTLA104J50
Q9301	UMD2N	C3797,3808,3812,3814	CEHAT1R0M50
D9301,9302	1SS301	C3800,3801	CKSRYPB224K16
D9306-9309	UDZS5R6(B)	C3811	CFTLA223J50
		C3813	CFTLA104J50
		C3816,3817	ACH1456
		C3818-3821	CCSRCH221J50
		C3822-3825	CKSRYPB682K50
		C3826-3829	CKSRYPF104Z50
		C3838,3839	CEHAT4R7M50
MISCELLANEOUS			
CN9301	CKS3826		
CN9303	AKP1214		
RESISTORS			
R9330	RAB4CQ101J		
Other Resistors	RS1/16SS###J		
CAPACITORS			
C9304,9305	CCSRCH220J50		
C9306	CKSRYPB105K10		
C9307,9315,9316	DCH1201		
C9308,9313,9314,9317	CKSSYPF104Z16		
42E AUDIO ASSY			
MISCELLANEOUS			
3772,3773 SCREW	PMB30P100FNI		
3774,3775 SCREW	VBB30P100FNI		
SEMICONDUCTORS			
IC3751	LA4625		
IC3752	PQ120DNA1ZPH		
IC3753	NJW1183GK1		
Q3751,3754,3755,3757	2SA1586		
Q3756,3759	2SC4116		
Q3758,3760	DTC124EUA		
D3751	1SS355		
MISCELLANEOUS			
⚠ F3751,3752	ATF1224		
KN3751,3752 WRAPPING TERMINAL	VNF1084		
CN3751 3P CONNECTOR	B3P-VH		
RESISTORS			
R3803	RD1/2MMF2R2J		
Other Resistors	RS1/16S###J		
CAPACITORS			
C3752,3753	CEHAT2R2M50		
C3754,3805	CFTLA103J50		
C3755	CEHAT472M25		
C3757	CEHAT471M25		
C3758,3760,3796	CKSRYPB103K50		
C3759	CEHAT331M16		
C3761,3764,3786,3798	CEHAT101M16		
C3762	CEHAT220M50		
C3763	CEHATR47M50		
C3766,3780,3783-3785	CEHAT1R0M50		
C3767,3770,3781,3782	CFTLA104J50		
C3769,3815	CKSRYPB222K50		
C3771-3774,3787,3789	CKSRYPB224K16		
C3775,3777,3788,3790	CEHAT100M50		
C3778	CFTLA334J50		
SEMICONDUCTORS			
		C3779	CKSRYPB822K50
		C3791,3799	CEHAT100M50
		C3792-3795,3806,3807	CFTLA104J50
		C3797,3808,3812,3814	CEHAT1R0M50
		C3800,3801	CKSRYPB224K16
		C3811	CFTLA223J50
		C3813	CFTLA104J50
		C3816,3817	ACH1456
		C3818-3821	CCSRCH221J50
		C3822-3825	CKSRYPB682K50
		C3826-3829	CKSRYPF104Z50
		C3838,3839	CEHAT4R7M50
42E AUDIO ASSY			
MISCELLANEOUS			
		⚠ L9501-9504	QTL1013
		S9501-9507	CSG1155
RESISTORS			
		All Resistors	RS1/16S###J
CAPACITORS			
		C9501	CKSRYPF104Z16
		C9502,9503	CCSRCH101J50
42 & 60 LED ASSY			
SEMICONDUCTORS			
		D9601	SML-521MDW
		D9602	TLRV1022
		D9603	SML512BC4T
MISCELLANEOUS			
		CN9601 CONNECTOR	AKP1303
RESISTORS			
		All Resistors	RS1/16S###J
CAPACITORS			
		C9606,9610,9614	CKSSYPF103Z50
		C9611	CKSRYPF103Z50
LED IR ASSY			
SEMICONDUCTORS			
		IC9702	SBX3050-01
		Q9701	2SA1586
		D9701	1SS302
		D9703	SML-521MDW
MISCELLANEOUS			
		CN9701 CONNECTOR	AKP1303
RESISTORS			
		R9701,9702,9707,9712	RS1/16S0R0J
		R9713	RS1/16S121J
		R9714	RS1/16S331J
		Other Resistors	RS1/16SS###J

Mark No. Description**Part No.****Mark No. Description****Part No.****CAPACITORS**

C9701
 C9702
 C9703 (10/6.3V)
 C9704
 C9705
 All Resistors

CKSSYB102K50
 CKSSYF104Z16
 ACG7046
 CKSSYF103Z50
 CKSRYF103Z50
 RS1/16S###J

C1141,1142,1144,1145
 C1161-1164,1166
 C1167,1168

CKSRYB104K16
 ACE1168
 ACG1129

[42X SUS BLOCK]**SEMICONDUCTORS**

IC1201
 IC1202
 IC1251
 IC1252
 IC1271

MM1565AF
 AXF1143
 TND301S
 PS9117
 TND307TD

Q1251
 Q1272
 D1201
 D1251
 D1252

2SC2412K
 2SK3325
 1SS355
 UDZS5R6(B)
 CRH01

D1281
 D1282

1SS302
 UDZS16(B)

MISCELLANEOUS

L1201,1205,1231
 L1204,1211
 F1201
 KN1201-1206,1208-1211
 CN1201

LFEA100J
 ATH1186
 CTF1449
 ANK-142
 B8B-EH

CN1202

B6B-EH

RESISTORS

R1204
 R1213
 R1276,1277
 Other Resistors

ACN1166
 ACN1168
 RS3LMF331J
 RS1/16S###J

CAPACITORS

C1204,1207,1223,1251
 C1206
 C1208
 C1211,1225-1227,1297
 C1212,1213

CKSRYF104Z50
 CEHAT101M25
 CEHAT470M16
 ACG1129
 ACH1424

C1214-1217
 C1220
 C1221
 C1222,1272
 C1231

ACE1178
 CKSYB105K25
 CKSRYB105K6R3
 CEHAT470M25
 CEHAT101M10

C1253,1273
 C1283
 C1298

CKSRYF104Z50
 CEHAT2R2M2E
 ACG1129

[42X D-D CON BLOCK]**SEMICONDUCTORS**

IC1321
 IC1326
 Q1301,1323
 Q1302
 Q1321,1325,1351

PS2701A-1(L)
 TA76431FR
 2SD1898
 2SC4081
 HN1C01FU

Q1324

2SA1037K

D1301,1302,1326,1327
 D1303,1324
 D1304,1307,1325,1328

CRH01
 1SS301
 1SS355

42 X DRIVE ASSY**MISCELLANEOUS**

1001
 1001
 1002
 1002

BMZ30P080FTC
 ANH1637
 AEH1092
 ANH1639

[42X LOGIC BLOCK]**SEMICONDUCTORS**

IC1001
 IC1002

TC74ACT541FT
 TC74VHC00FTS1

MISCELLANEOUS

CN1001

VKN1310

RESISTORS

R1001,1003
 R1008,1009,1020
 Other Resistors

RAB4C470J
 RAB4C472J
 RS1/16S###J

CAPACITORS

C1001,1002
 C1003
 C1004

CKSRYB104K16
 CEHAT470M16
 CCSRCH680J50

[42X RESONANCE BLOCK]**SEMICONDUCTORS**

IC1101
 IC1141
 Q1141
 D1101-1105

AXF1145
 BA10393F
 2SC4116
 D1FL40

MISCELLANEOUS

L1101,1102
 L1103-1106

ATH1155
 ATH1193

RESISTORS

R1101
 R1106
 R1121
 R1122,1123
 R1142,1146

ACN1168
 ACN1252
 RS2MMF100J
 RS1/10S104J
 RS1/10S1003F

R1148,1150
 R1151,1155
 Other Resistors

RS1/16S5601F
 RS1/16S6801F
 RS1/16S###J

CAPACITORS

C1101,1112,1113
 C1102,1146
 C1103
 C1105
 C1121

ACG1112
 CKSRYB105K6R3
 CKSYB105K25
 CCG1186
 ACG1126

5	6	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
D1306,1323,1331	UDZS5R1(B)	
D1321	D1FK60	
D1329,1330	UDZS4R7(B)	
MISCELLANEOUS		
VR1321	CCP1392	
T1301	ATK1159	
T1321	ATK1160	
RESISTORS		
R1321,1322,1326,1339	RS1/10S224J	
R1337	RAB4C472J	
Other Resistors	RS1/16S###J	
CAPACITORS		
C1301,1303,1323	CKSRYB103K50	
C1302,1321	CEHAT101M25	
C1304,1306	CKSRYB104K16	
C1307,1324,1327	CKSYB105K25	
C1325	ACH1428	
C1326	CEHAT100M50	

SUS CLAMP 1 ASSY

<u>SEMICONDUCTORS</u>	
D1631	DF20L60U
MISCELLANEOUS	
KN1631	VNF1084
KN1632	ANK-142
CN1631	B3B-EH
CAPACITORS	
C1632	ACE1179

SUS CLAMP 2 ASSY

<u>SEMICONDUCTORS</u>	
D1641	DF20L60U
MISCELLANEOUS	
KN	1641VNF1084
KN	1642ANK-142
CN1641	B3B-EH
CAPACITORS	
C1642	ACE1179

42 Y DRIVE ASSY

<u>MISCELLANEOUS</u>	
2001	AEH1092
2001	ABA1349
2001	ANG2790
2001	ANH1638
2002	BMZ30P080FTC
2002	ANH1639

7	8	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
[42 Y LOGIC BLOCK]		
SEMICONDUCTORS		
IC2001,2004	IC2002	IC2003,2005
TC74ACT541FT	TC74ACT540FT	TC74VHC08FTS1
MISCELLANEOUS		
CN2001 40P CONNECTOR	AKM1348	
RESISTORS		
R2001,2002,2017,2021	R2003,2006	R2004,2005,2019,2020
R2038,2039	Other Resistors	
CAPACITORS		
C2001,2002,2004-2006	C2003	C2008
CKSSYB104K10	CEHAT470M16	CCSRCH680J50

[42Y RESONANCE BLOCK]

<u>SEMICONDUCTORS</u>		
IC2101	IC2141	
Q2141	D2101-2105	
MISCELLANEOUS		
L2101,2102	L2103-2106	
RESISTORS		
R2101	R2102	
R2103,2107	R2108	
R2142,2143	R2146,2149	
R2147,2151	Other Resistors	
CAPACITORS		
C2101,2145	C2102	
C2103,2107,2108 (0.22/250V)	C2104,2106 (470p/630V)	
C2109-2112 (3300p/630V)	C2131-2134,2136	
C2141,2143,2144	Other Resistors	
AXF1145	BA10393F	
2SC4081	D1FL40	
ATH1155	ATH1193	
ACN1174	RS2MMF100J	
RS1/10S104J	ACN1241	
RS1/10S1003F	RS1/16S5601F	
RS1/16S6801F	RS1/16S###J	
CKSRYB105K6R3	CKSYB105K25	
ACG1112	ACG1126	
ACG1129	ACE1168	
CKSSYB104K10	Other Resistors	

[42Y SUS BLOCK]

<u>SEMICONDUCTORS</u>	
IC2203,2221	IC2231,2251
IC2250	IC2252,2253
IC2350	TND307TD
TND301S	PS9117
AXF1144	MM1565AF

Mark No. Description**Part No.****Mark No. Description****Part No.**

Q2202 2SA2142
 Q2221 2SK3325
 Q2250 2SC4081
 Q2280,2281 2SK3399
 Q2290 2SK3050

D2202,2204,2205,2234 CRH01
 D2203,2212,2351 1SS355
 D2211 D1FK60
 D2213 1SS302
 D2232,2271 UDZS16(B)

D2233 1SS301
 D2250 UDZS5R6(B)
 D2251,2252,2272 CRH01

MISCELLANEOUS

L2401-2403 LFEA100J
 F2401-2404 ATX1059
 CN2401,2402 15P CONNECTOR AKM1200

RESISTORS

R2407,2421 RAB4C220J
 Other Resistors RS1/16S###J

CAPACITORS

C2401,2407,2414 CEHAT101M10
 C2402,2403,2405 CKSSYB104K10
 C2404,2411 ACH1413
 C2408-2410,2412 CKSSYB104K10

A

B

MISCELLANEOUS

L2350,2351,2354 LFEA100J
 L2353 ATH1186
 F2301-2320 ATX1062
 F2352 CTF1449
 KN2350,2352,2354,2356 ANK-142

KN2357,2359-2363 GROUND PLATE ANK-142
 CN2350 9P CONNECTOR B9B-EH
 CN2351,2352 4P CONNECTOR B4B-PH

RESISTORS

R2203 RS3LMF152J
 R2210 RS1/10S151J
 R2211 RS1/10S561J
 R2222,2224 RS2MMF5R6J
 R2277-2281 RS3LMF8R2J

R2290 RS1MMF471J
 R2304 ACN1174
 R2352 ACN1166
 R2360,2362 ACN1178
 Other Resistors RS1/16S###J

C

D

CAPACITORS

C2203-2206 (3300p/630V) ACG1129
 C2207 CCSRCH102J50
 C2208,2221,2339,2364 CEHAT470M25
 C2209,2222,2230,2252 CKSRYF104Z50
 C2226 ACH1427

C2231 (0.33/100V) ACG1118
 C2250 CKSSYB104K10
 C2270 ACH1426
 C2271,2272 (0.1/100V) ACG1124
 C2330,2335,2341,2342 ACE1178

E

C2336,2337 ACH1424
 C2353,2358,2359 CKSRYB105K6R3
 C2354,2360 CKSYB105K25
 C2355,2369 CEHAT101M10
 C2356 CKSRYB104K16

C2357 CEHAT470M16
 C2363 CKSRYB473K16

[42Y SCAN BLOCK]**SEMICONDUCTORS**

IC2401 PS9851-2(P)
 IC2402,2407 TC74AC540FT
 IC2403,2405,2406,2408 PS9117
 D2402 CRH01

[42Y VH D-D CON BLOCK]**SEMICONDUCTORS**

IC2502 MIP2E3DMC
 IC2503 PS2701A-1(L)
 IC2531 BA10358F
 IC2534,2535 TA76431FR
 Q2511 HN1C01FU

Q2531 2SC3425
 Q2532 2SD2568
 Q2533 2SC2412K
 D2522,2524 CRH01
 D2523,2532 D1FK60

D2530,2536 UDZS4R7(B)
 D2531 UDZS12(B)
 D2533 UDZS33(B)
 D2534 1SS355

MISCELLANEOUS

L2501 LFEA101J
 VR2503 CCP1390
 VR2531 CCP1392
 T2503 ATK1158

RESISTORS

R2533,2556 RS1/10S104J
 R2534,2535,2541 RS1/10S2203F
 R2542,2545 RS1/16S5601F
 R2548 RS1/16S1003F
 R2549,2557 RS1/16S4702F

R2550 RS1/16S1802F
 R2553 RAB4C472J
 R2558 RS1/10S0R0J
 Other Resistors RS1/16S###J

CAPACITORS

C2513 ACH1428
 C2514,2525,2534 CKSRYB104K16
 C2515 CEHAT101M25
 C2516 ACH1360
 C2520 CEHAT101M16

C2521,2533,2535 CKSRYB104K25
 C2528 CEHAT221M16
 C2531 ACE1177
 C2532 ACH1425
 C2536 CEHAT470M25

F

5	6	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
[42Y D-D CON BLOCK]		
<u>SEMICONDUCTORS</u>		
IC2601,2603,2606	PS2701A-1(L)	
IC2602	BA10358F	
IC2605,2614	TA76431FR	
Q2601,2609	2SA1576A	
Q2602,2613,2641	HN1C01FU	
Q2603,2604,2611	DTC143EUA	
Q2605,2606	2SD1898	
Q2607	2SC2713	
Q2608	2SA2005	
Q2610	2SA1163	
Q2612	2SC4081	
D2601,2603,2609,2618	CRH01	
D2602,2613-2615	1SS355	
D2604,2612	1SS301	
D2605	UDZS5R1(B)	
D2607,2608	UDZS4R7(B)	
D2610	D1FL40	
D2611	1SS226	
D2616	UDZS5R6(B)	
D2617	UDZS15(B)	
<u>MISCELLANEOUS</u>		
VR2601	CCP1390	
T2601	ATK1161	
T2602	ATK1156	
<u>RESISTORS</u>		
R2608,2612,2630,2632	RS1/16S4701F	
R2613	RAB4C472J	
R2618	RS1/16S4702F	
R2625,2626	RS1/16S1501F	
R2627	RS3LMF151J	
R2629	RS1/16S1002F	
R2635	RS1/16S4701F	
R2636	RS1/16S5601F	
R2641,2642	RS1/10S224J	
R2652	RS1/16S6801F	
Other Resistors	RS1/16S###J	
<u>CAPACITORS</u>		
C2601,2604,2609	CKSRYB104K16	
C2602,2615	CKSRYB105K6R3	
C2603	CKSRYF104Z50	
C2605,2612,2614	CKSRYB103K50	
C2606	CEHAT221M6R3	
C2607	CKSRYB102K50	
C2608,2610	CEHAT101M25	
C2611	CKSSYB104K10	
C2613	CEHAT221M25	
All Resistors	RS1/16S###J	
42 DIGITAL ASSY		
[DIGITAL IF BLOCK]		
<u>MISCELLANEOUS</u>		
F3001	CCG1162	
CN3001	AKM1353	
CN3002	AKM1235	

7	8	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
<u>RESISTORS</u>		
R3007,3010-3016	RAB4C470J	
R3020-3022	RAB4C103J	
Other Resistors	RS1/16SS###J	
[MODULE UCOM BLOCK]		
<u>SEMICONDUCTORS</u>		
IC3152,3153	SN74AHC541PW	
IC3155	SN74AHC08PW	
IC3156	BR24L04FJ-W	
IC3157	M62334FP	
IC3159	TC7W126FU	
IC3160,3161	TC74VHC123AFTS1	
Q3151	2SJ461A	
D3151,3152,3154,3155	DAN202U	
D3158,3159,3161-3163	1SS355	
<u>MISCELLANEOUS</u>		
X3151	CSS1616	
CN3151	AKM1276	
CN3152	CKS4828	
<u>RESISTORS</u>		
R3155,3160,3170,3176	RAB4C101J	
R3174	RAB4C103J	
Other Resistors	RS1/16SS###J	
<u>CAPACITORS</u>		
C3151	CEHVKW470M6R3	
C3152,3153,3155-3158	CKSSYB104K10	
C3159,3171,3172,3182	CKSRYB105K6R3	
C3162,3163,3165,3166	CKSSYB104K10	
C3164	CCSSCH101J50	
C3167	CKSSYB103K16	
C3168,3170,3181	CKSSYB104K10	
[PANEL FLASH BLOCK]		
<u>SEMICONDUCTORS</u>		
IC3302,3305	PST3628UR	
IC3303	SN74AHC08PW	
IC3304	PST3610UR	
Q3301	RN1901	
Q3302	HN1C01FU	
<u>MISCELLANEOUS</u>		
X3302	ASS1188	
CN3301	CKS4835	
<u>RESISTORS</u>		
R3307,3308	RAB4C101J	
Other Resistors	RS1/16SS###J	
<u>CAPACITORS</u>		
C3301-3303,3306,3308	CKSSYB104K10	
C3304,3307,3309	CKSSYB472K16	
C3305,3310	CKSSYB102K50	
C3311	CCSRCH470J50	
C3315,3316	CKSSYB104K10	
C3317	CCSRCH471J50	

Mark No. **Description****Part No.****Mark No.** **Description****Part No.****[SQ ASIC BLOCK]****MISCELLANEOUS**

CN3651 5P CONNECTOR

AKM1276

A **SEMICONDUCTORS**

IC3401

PEG239A

RESISTORS

All Resistors

RS1/16SS###J

MISCELLANEOUSL3401-3403
F3401,3402QTL1013
CCG1162**CAPACITORS**C3651,3653
C3652,3654
C3656,3657CKSRYB105K6R3
CKSSYB103K16
CKSSYB104K10**RESISTORS**R3402,3412
R3405-3407,3409,3410
R3416
R3425
Other ResistorsRAB4C101J
RAB4C220J
RAB4C220J
RS1/16SS5601F
RS1/16SS###J**42 ADDRESS ASSY****[42 ADR LOGIC]****SEMICONDUCTORS**

IC1501

PEE002A

MISCELLANEOUSL1504
CN1501
CN1502QTL1013
AKM1348
AKM1290**RESISTORS**R1505-1509
R1530,1531
Other ResistorsRS1/16SS1000F
RS1/16S0R0J
RS1/16SS###J**CAPACITORS**C1501
C1502
C1503-1507,1552-1555
C1509,1510
C1557CKSRYB105K6R3
ACH1357
CKSSYF104Z16
CKSSYB102K50
CCSSCH470J50**[42 ADR RESONANCE]****SEMICONDUCTORS**IC1601,1602
Q1601,1610
Q1602,1609
Q1606,1608,1611
Q1612TND307TD
HAT3021R
HAT1110R
QSZ2
2SA1163Q1613,1614
D1601,1606,1618,1619
D1602,1603,1620,1621
D1604,1605,1622,1623
D1612RN1901
UDZS15(B)
EC10UA20
CRH01
1SS302

D1625,1628

1SS355

MISCELLANEOUS

L1601,1604

ATH1135

RESISTORSR1606,1611,1613
R1607,1619,1621,1636
R1637
Other ResistorsRS1/16SS330J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S###J**Mark No.** **Description****Part No.****Mark No.** **Description****Part No.****[SQ ASIC BLOCK]****MISCELLANEOUS**

CN3651 5P CONNECTOR

AKM1276

A **SEMICONDUCTORS**

IC3401

PEG239A

RESISTORS

All Resistors

RS1/16SS###J

MISCELLANEOUSL3401-3403
F3401,3402QTL1013
CCG1162**CAPACITORS**C3651,3653
C3652,3654
C3656,3657CKSRYB105K6R3
CKSSYB103K16
CKSSYB104K10**RESISTORS**R3402,3412
R3405-3407,3409,3410
R3416
R3425
Other ResistorsRAB4C101J
RAB4C220J
RAB4C220J
RS1/16SS5601F
RS1/16SS###J**42 ADDRESS ASSY****[42 ADR LOGIC]****SEMICONDUCTORS**

IC1501

PEE002A

MISCELLANEOUSL1504
CN1501
CN1502QTL1013
AKM1348
AKM1290**RESISTORS**R1505-1509
R1530,1531
Other ResistorsRS1/16SS1000F
RS1/16S0R0J
RS1/16SS###J**CAPACITORS**C1501
C1502
C1503-1507,1552-1555
C1509,1510
C1557CKSRYB105K6R3
ACH1357
CKSSYF104Z16
CKSSYB102K50
CCSSCH470J50**[42 ADR RESONANCE]****SEMICONDUCTORS**IC1601,1602
Q1601,1610
Q1602,1609
Q1606,1608,1611
Q1612TND307TD
HAT3021R
HAT1110R
QSZ2
2SA1163Q1613,1614
D1601,1606,1618,1619
D1602,1603,1620,1621
D1604,1605,1622,1623
D1612RN1901
UDZS15(B)
EC10UA20
CRH01
1SS302

D1625,1628

1SS355

MISCELLANEOUS

L1601,1604

ATH1135

RESISTORSR1606,1611,1613
R1607,1619,1621,1636
R1637
Other ResistorsRS1/16SS330J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S###J**Mark No.** **Description****Part No.****Mark No.** **Description****Part No.****[SQ ASIC BLOCK]****MISCELLANEOUS**

CN3651 5P CONNECTOR

AKM1276

A **SEMICONDUCTORS**

IC3401

PEG239A

RESISTORS

All Resistors

RS1/16SS###J

MISCELLANEOUSL3401-3403
F3401,3402QTL1013
CCG1162**CAPACITORS**C3651,3653
C3652,3654
C3656,3657CKSRYB105K6R3
CKSSYB103K16
CKSSYB104K10**RESISTORS**R3402,3412
R3405-3407,3409,3410
R3416
R3425
Other ResistorsRAB4C101J
RAB4C220J
RAB4C220J
RS1/16SS5601F
RS1/16SS###J**42 ADDRESS ASSY****[42 ADR LOGIC]****SEMICONDUCTORS**

IC1501

PEE002A

MISCELLANEOUSL1504
CN1501
CN1502QTL1013
AKM1348
AKM1290**RESISTORS**R1505-1509
R1530,1531
Other ResistorsRS1/16SS1000F
RS1/16S0R0J
RS1/16SS###J**CAPACITORS**C1501
C1502
C1503-1507,1552-1555
C1509,1510
C1557CKSRYB105K6R3
ACH1357
CKSSYF104Z16
CKSSYB102K50
CCSSCH470J50**[42 ADR RESONANCE]****SEMICONDUCTORS**IC1601,1602
Q1601,1610
Q1602,1609
Q1606,1608,1611
Q1612TND307TD
HAT3021R
HAT1110R
QSZ2
2SA1163Q1613,1614
D1601,1606,1618,1619
D1602,1603,1620,1621
D1604,1605,1622,1623
D1612RN1901
UDZS15(B)
EC10UA20
CRH01
1SS302

D1625,1628

1SS355

MISCELLANEOUS

L1601,1604

ATH1135

RESISTORSR1606,1611,1613
R1607,1619,1621,1636
R1637
Other ResistorsRS1/16SS330J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S###J**Mark No.** **Description****Part No.****Mark No.** **Description****Part No.****[SQ ASIC BLOCK]****MISCELLANEOUS**

CN3651 5P CONNECTOR

AKM1276

A **SEMICONDUCTORS**

IC3401

PEG239A

RESISTORS

All Resistors

RS1/16SS###J

MISCELLANEOUSL3401-3403
F3401,3402QTL1013
CCG1162**CAPACITORS**C3651,3653
C3652,3654
C3656,3657CKSRYB105K6R3
CKSSYB103K16
CKSSYB104K10**RESISTORS**R3402,3412
R3405-3407,3409,3410
R3416
R3425
Other ResistorsRAB4C101J
RAB4C220J
RAB4C220J
RS1/16SS5601F
RS1/16SS###J**42 ADDRESS ASSY****[42 ADR LOGIC]****SEMICONDUCTORS**

IC1501

PEE002A

MISCELLANEOUSL1504
CN1501
CN1502QTL1013
AKM1348
AKM1290**RESISTORS**R1505-1509
R1530,1531
Other ResistorsRS1/16SS1000F
RS1/16S0R0J
RS1/16SS###J**CAPACITORS**C1501
C1502
C1503-1507,1552-1555
C1509,1510
C1557CKSRYB105K6R3
ACH1357
CKSSYF104Z16
CKSSYB102K50
CCSSCH470J50**[42 ADR RESONANCE]****SEMICONDUCTORS**IC1601,1602
Q1601,1610
Q1602,1609
Q1606,1608,1611
Q1612TND307TD
HAT3021R
HAT1110R
QSZ2
2SA1163Q1613,1614
D1601,1606,1618,1619
D1602,1603,1620,1621
D1604,1605,1622,1623
D1612RN1901
UDZS15(B)
EC10UA20
CRH01
1SS302

D1625,1628

1SS355

MISCELLANEOUS

L1601,1604

ATH1135

RESISTORSR1606,1611,1613
R1607,1619,1621,1636
R1637
Other ResistorsRS1/16SS330J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S###J**Mark No.** **Description****Part No.****Mark No.** **Description****Part No.****[SQ ASIC BLOCK]****MISCELLANEOUS**

CN3651 5P CONNECTOR

AKM1276

A **SEMICONDUCTORS**

IC3401

PEG239A

RESISTORS

All Resistors

RS1/16SS###J

MISCELLANEOUSL3401-3403
F3401,3402QTL1013
CCG1162**CAPACITORS**C3651,3653
C3652,3654
C3656,3657CKSRYB105K6R3
CKSSYB103K16
CKSSYB104K10**RESISTORS**R3402,3412
R3405-3407,3409,3410
R3416
R3425
Other ResistorsRAB4C101J
RAB4C220J
RAB4C220J
RS1/16SS5601F
RS1/16SS###J**42 ADDRESS ASSY****[42 ADR LOGIC]****SEMICONDUCTORS**

IC1501

PEE002A

MISCELLANEOUSL1504
CN1501
CN1502QTL1013
AKM1348
AKM1290**RESISTORS**R1505-1509
R1530,1531
Other ResistorsRS1/16SS1000F
RS1/16S0R0J
RS1/16SS###J**CAPACITORS**C1501
C1502
C1503-1507,1552-1555
C1509,1510
C1557CKSRYB105K6R3
ACH1357
CKSSYF104Z16
CKSSYB102K50
CCSSCH470J50**[42 ADR RESONANCE]****SEMICONDUCTORS**IC1601,1602
Q1601,1610
Q1602,1609
Q1606,1608,1611
Q1612

5	6	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
<u>CAPACITORS</u>		
C1601,1614	ACG1124	
C1602-1605	ACH1405	
C1609	ACG1098	
C1613	CKSRYB104K25	
C1619	CKSYB105K16	

7	8	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
C2825-2827,2835-2837	CCSRCH390J50	
C2828,2829,2838,2839	CCSRCH331J50	
C2841,2851	ACG1125	
C2843,2853,2861	CKSRYB105K6R3	
C2845-2847,2855-2857	CCSRCH390J50	
C2848,2849,2858,2859	CCSRCH331J50	
C2850,2860	CCSRCH181J50	

42 SCAN A ASSY

SEMICONDUCTORS

IC2701-2706	SN755870KPZT-P
IC2707	TC7SH08FUS1
D2701-2707	1SS355

MISCELLANEOUS

CN2701	AKP1261
CN2702	AKM1274

RESISTORS

R2705,2710,2713,2716	RAB4C221J
R2719,2722	RAB4C221J
Other Resistors	RS1/16S###J

CAPACITORS

C2701,2711,2721,2731	ACG1125
C2703,2713,2723,2733	CKSRYB105K6R3
C2705-2707,2715-2717	CCSRCH390J50
C2708,2709,2718,2719	CCSRCH331J50
C2710,2720,2730,2740	CCSRCH181J50
C2725-2727,2735-2737	CCSRCH390J50
C2728,2729,2738,2739	CCSRCH331J50
C2741,2751	ACG1125
C2743,2753	CKSRYB105K6R3
C2745-2747,2755-2757	CCSRCH390J50
C2748,2749,2758,2759	CCSRCH331J50
C2750,2760	CCSRCH181J50

42 SCAN B ASSY

SEMICONDUCTORS

IC2801-2806	SN755870KPZT-P
IC2807	TC7SH08FUS1
D2801-2807	1SS355

MISCELLANEOUS

CN2801	AKP1261
CN2802	AKM1274

RESISTORS

R2803,2808,2811,2814	RAB4C221J
R2817,2820	RAB4C221J
Other Resistors	RS1/16S###J

CAPACITORS

C2801,2811,2821,2831	ACG1125
C2803,2813,2823,2833	CKSRYB105K6R3
C2805-2807,2815-2817	CCSRCH390J50
C2808,2809,2818,2819	CCSRCH331J50
C2810,2820,2830,2840	CCSRCH181J50


POWER SUPPLY UNIT

POWER SUPPLY Unit has no service part.


4. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

4.1 OVERALL WIRING DIAGRAM (1/2)

A

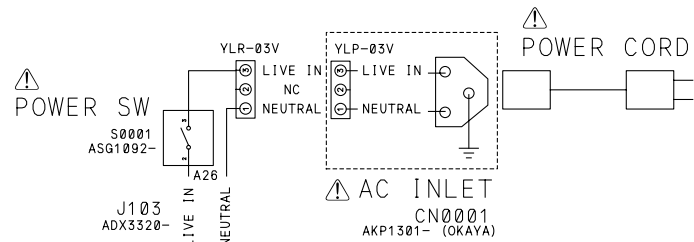

B

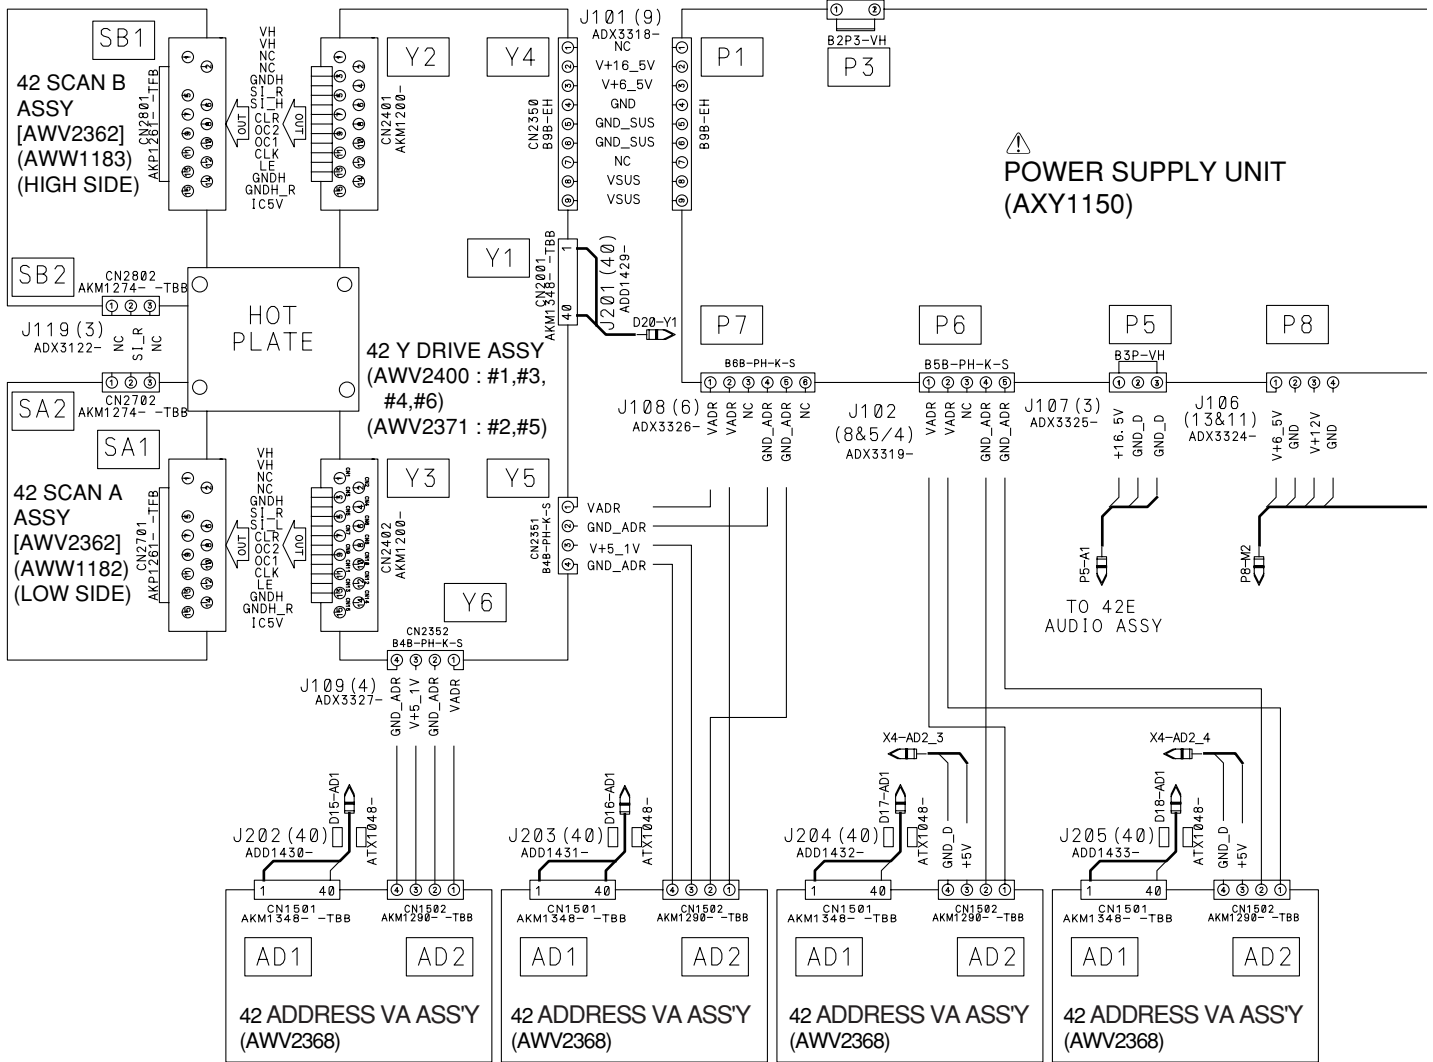

C

D


E

CONNECTOR PIN ASSIGN

<p>CN3001 [D11] → CN4001 [M1]</p> <p>1. GND 2. V+3.3V_UCOM 3. INP_MUTE 4. THEATER 5. VDD 6. HD 7. DE 8. GND 9. CLK 10. GND 11. GND 12. VIDEO_R9 13. VIDEO_R8 14. VIDEO_R7 15. VIDEO_R6 16. VIDEO_R5 17. VIDEO_R4 18. VIDEO_R3 19. VIDEO_R2 20. VIDEO_R1 21. VIDEO_R0 22. GND 23. VIDEO_G8 24. VIDEO_G8 25. VIDEO_G7</p>	<p>26. VIDEO_G6 27. VIDEO_G5 28. VIDEO_G4 29. VIDEO_G3 30. VIDEO_G2 31. VIDEO_G1 32. VIDEO_G0 33. GND 34. VIDEO_B9 35. VIDEO_B8 36. VIDEO_B7 37. VIDEO_B6 38. VIDEO_B5 39. VIDEO_B4 40. VIDEO_B3 41. VIDEO_B2 42. VIDEO_B1 43. VIDEO_B0 44. GND 45. RESERVE (NC) 46. AC_OFF (NC) 47. TXD_MD 48. RXD_MD 49. REQ_MD 50. MODE</p>	<p>CN1501 [AD1] → CN3501 [D15] CN1501 [AD1] → CN3502 [D16] CN1501 [AD1] → CN3503 [D17] CN1501 [AD1] → CN3504 [D18]</p>	<p>1-40. GND_D 2-39. D1V0 3-38. D1V1 4-37. GND_D 5-36. V+3.3V 6-35. V+3.3V 7-34. GND_D 8-33. LVDS_GND 9-32. NC 10-31. DP 11-30. DN 12-29. NC 13-28. LVDS_GND 14-27. NC 15-26. CLKP 16-25. CLKN 17-24. NC 18-23. LVDS_GND 19-22. NC 20-21. CP</p>	<p>21-20. CN 22-19. NC 23-18. LVDS_GND 24-17. NC 25-16. BP 26-15. BN 27-14. NC 28-13. LVDS_GND 29-12. NC 30-11. AP 31-10. AN 32-9. NC 33-8. LVDS_GND 34-7. GND_D 35-6. V+8V 36-5. V+8V 37-4. GND_D 38-3. PS12E 39-2. ADR_PD 40-1. NC</p>	<p>CN3506 [D20] → CN2001 [Y1]</p> <p>1-40. YCN_D 2-39. SCNEV_PD 3-38. SI_L 4-37. SI_H 5-36. GND_D 6-35. CLR 7-34. CLK1 8-33. GND_D 9-32. LE 10-31. OC2 11-30. OC1 12-29. GND_D 13-28. SUS-B 14-27. SUS-U 15-26. GND_D 16-25. SUS-D 17-24. VSUS-G 18-23. GND_D 19-22. YPR-U 20-21. SUS_MUTE</p>	<p>21-20. GND_D 22-19. VSUS_MSK 23-18. YNRST 24-17. YRSV2 25-16. GND_D 26-15. YNOFS 27-14. YRSV3 28-13. YSOFT-D 29-12. GND_D 30-11. VOFS_ADJ 31-10. VYPRST_ADJ 32-9. GND_D 33-8. GND_D 34-7. GND_D 35-6. GND_D 36-5. YDD_PD 37-4. VSUS_PD 38-3. SCAN_PD 39-2. YDRV_PD 40-1. PSW</p>	<p>CN3505 [D19] → CN1001 [X1]</p> <p>1-18. PSW2 2-17. XSUS_PD 3-16. XDD_PD 4-15. XDRV_PD 5-14. GND_D 6-13. SUS_MUTE 7-12. XSUS_MSK 8-11. GND_D 9-10. XNR-D 10-9. GND_D 11-8. XSUS-G 12-7. GND_D 13-6. XSUS-D 14-5. GND_D 15-4. XSUS-U 16-3. GND_D 17-2. XSUS-B 18-1. XCN_PD</p>
---	--	--	--	--	--	---	---


POWER CORD Table	
427XD/427XA	ADG1214-(other)
4278XD/4278XA	ADG1223-(for UK)
427XDA	ADG1245-
427XC	ADG1209-
427XG	-(other) ADG1233-(for Argentina)

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The encircled numbers denote measuring point in the schematic diagram. Waveforms, refer to service manual (ARP3392).

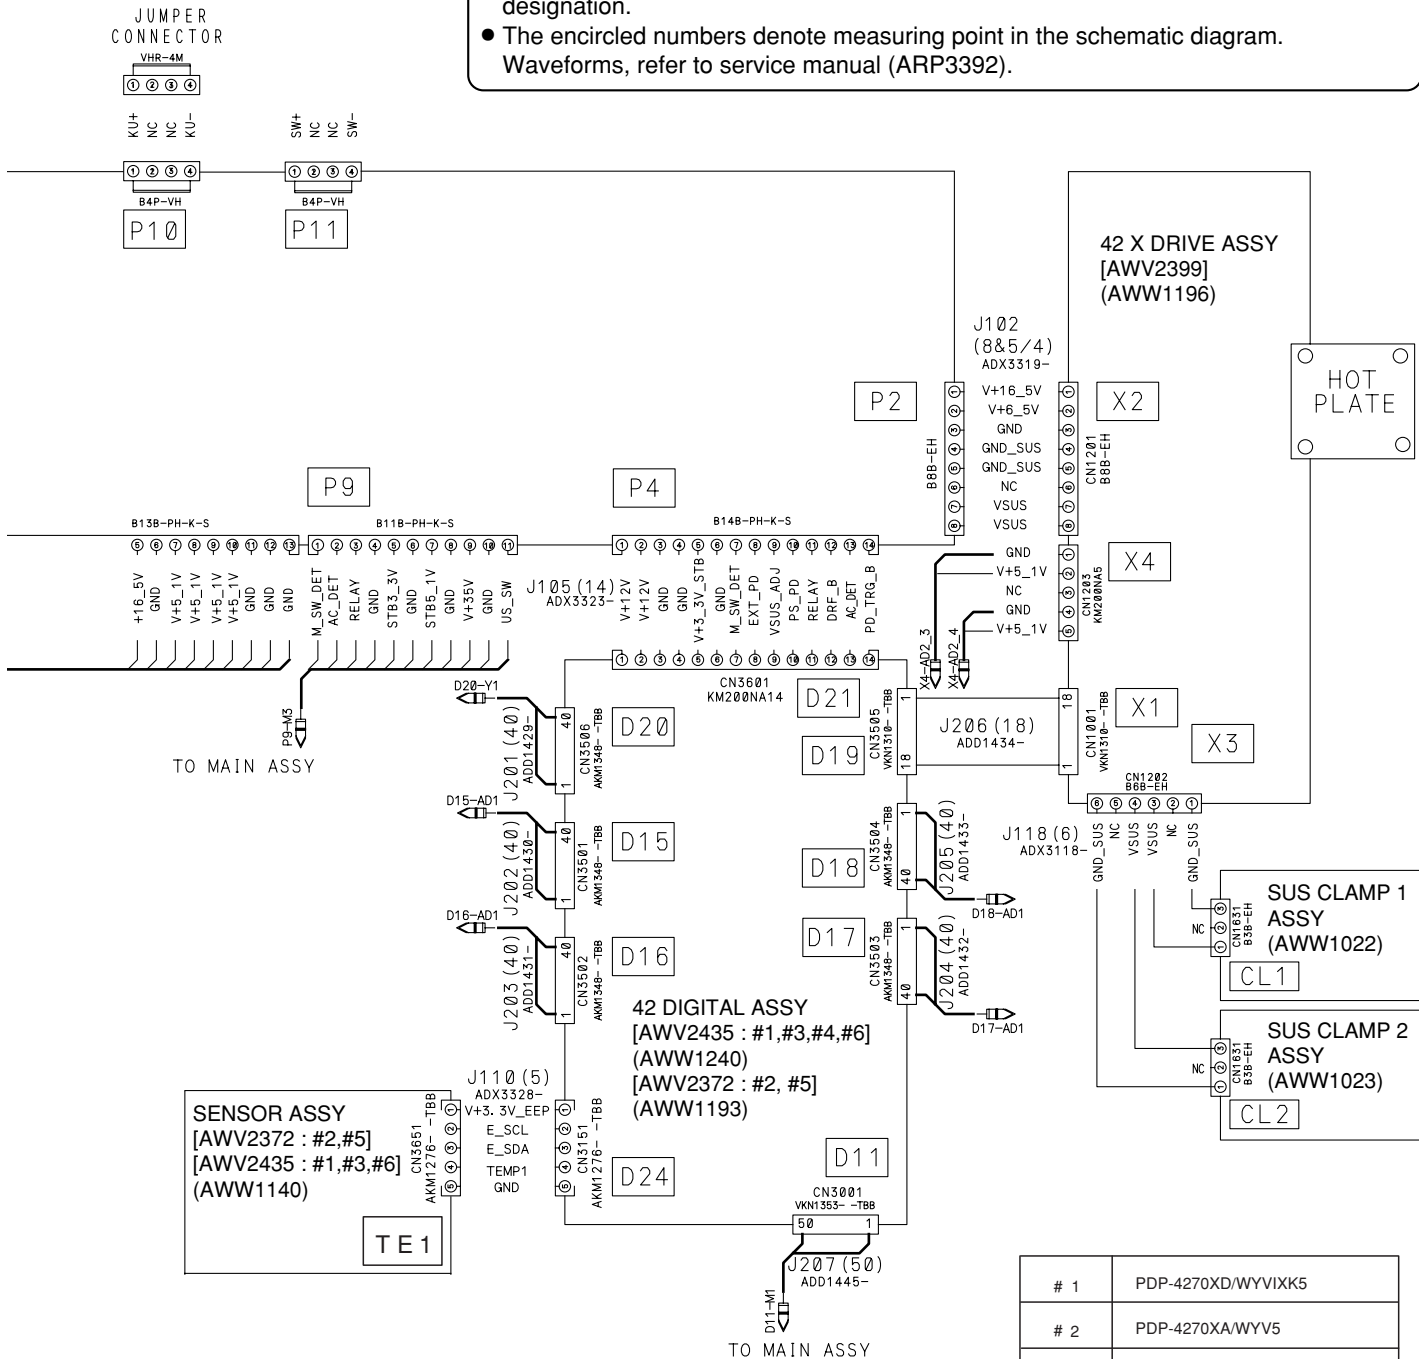

# 1	PDP-4270XD/WYVIXK5
# 2	PDP-4270XA/WYV5
# 3	PDP-4270XA/WYVIXK5
# 4	PDP-427XD/WYVIXK5
# 5	PDP-427XA/WYV5
# 6	PDP-427XA/WYVIXK5


4.2 OVERALL WIRING DIAGRAM (2/2)

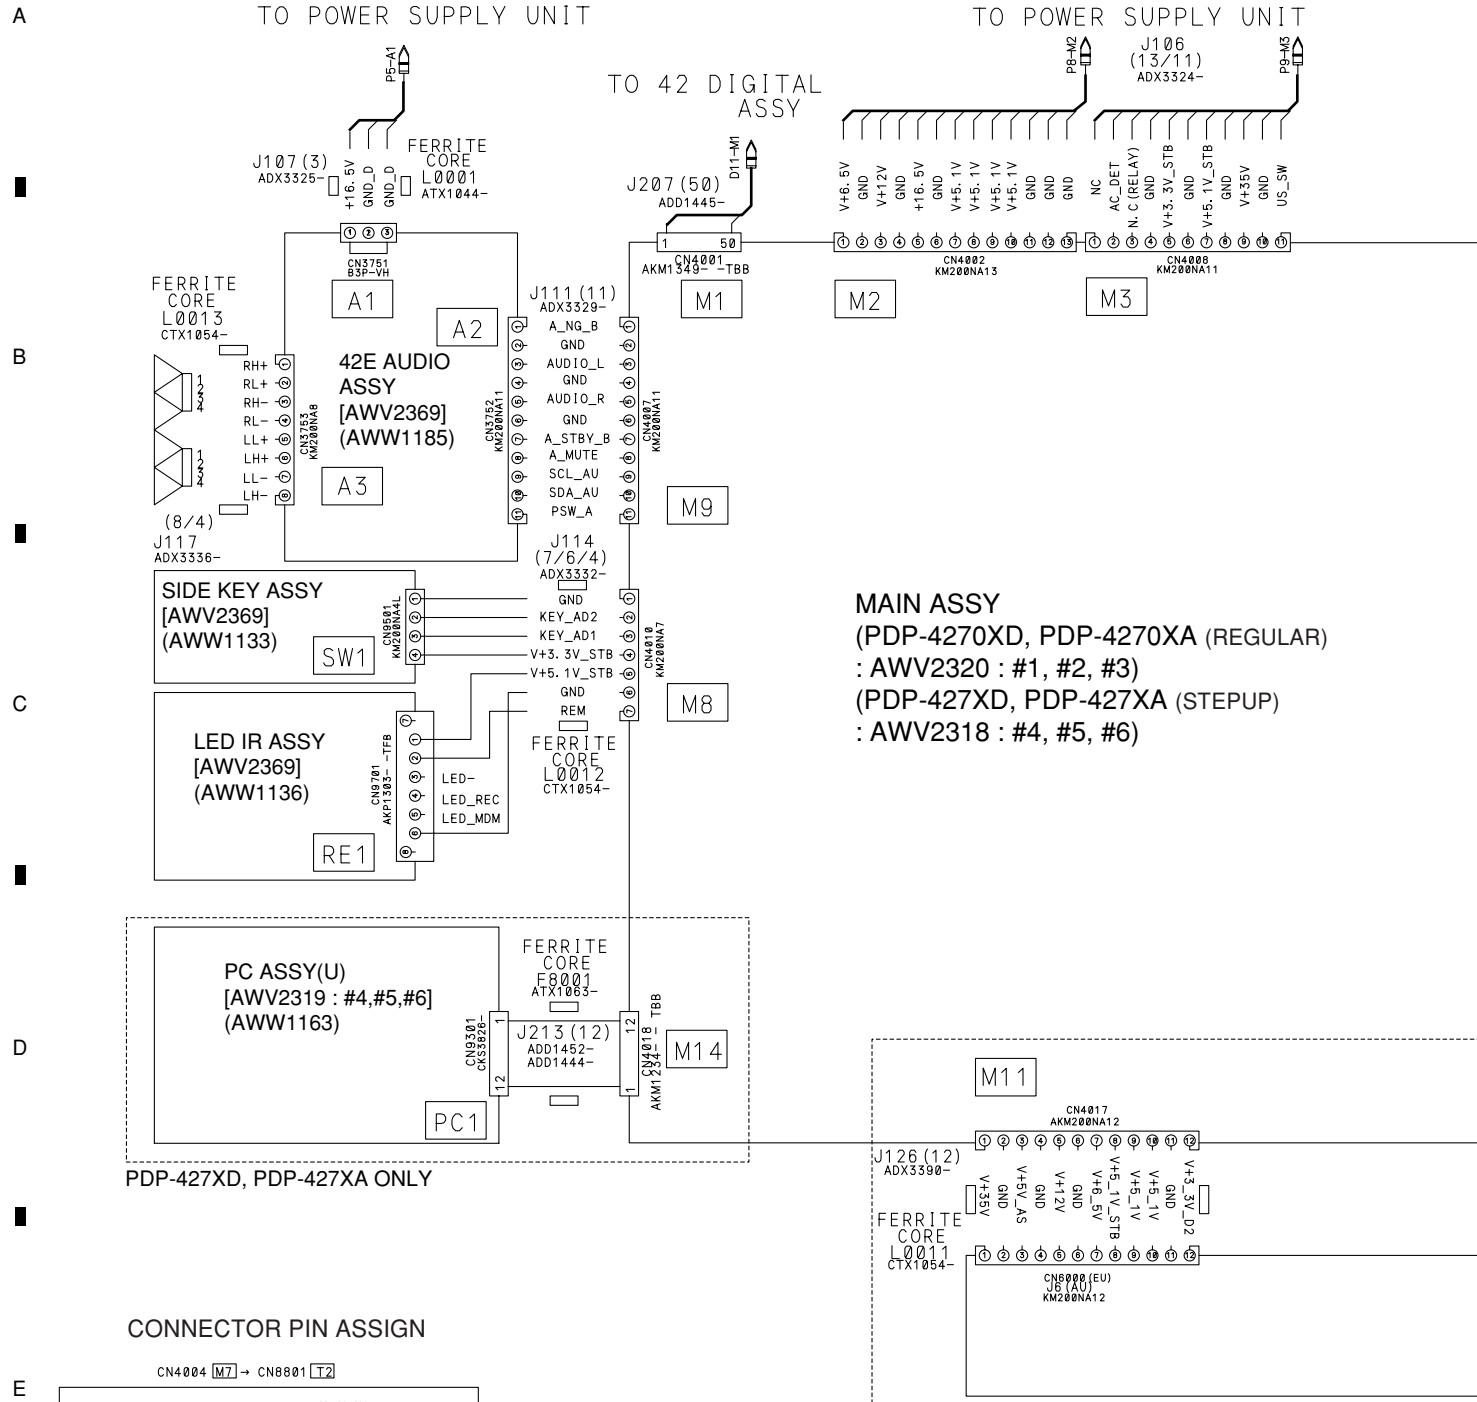

MAIN ASSY
 (PDP-4270XD, PDP-4270XA (REGULAR)
 : AWW2320 : #1, #2, #3)
 (PDP-427XD, PDP-427XA (STEPUP)
 : AWW2318 : #4, #5, #6)


CONNECTOR PIN ASSIGN

CN4004 [M7] → CN8801 [T2]		CN4005 [M6] → CN9003 [T1]		CN4013 [M12] → CN6003 (EU) / J7 (AU)		CN4000 (EU) / J10 (AU) → CN4014 [M13]	
1-50. INPUT2_Rch	30-21. SLOW_SW3	1-50. V+5V_A	26-25. GND	1. GND	26. GND	1-48. GND	21-20. GND
2-49. GND	INPUT2_S2 (GE/AU/CN)	2-49. HP_PLUG	27-24. HP_L	2. TXD_DT	27. CBS_DT	2-39. DT_MON_V	22-19. GND
3-48. INPUT2_Lch	31-20. SLOW_SW2 (EU)	3-48. AC_HP_MUTE	28-23. V+5.3V_STB	3. RXD_DT	28. CBS_DT	3-38. GND	23-18. GND
4-47. GND	INPUT3_SPLUG (GE/AU/CN)	4-47. AC_AM_MUTE	29-22. SCART_OUT_Rch (EU)	4. GND	4. GND	4-37. GND	24-17. GND
5-46. INPUT1_Rch	32-19. SLOW_SW1 (EU)	5-46. AC_SC1_MUTE (EU)	MON_OUT_Rch (GE/AU/CN)	5. DT_FNC	30. CB1_DT	5-36. GND	25-16. GND
6-45. GND	INPUT3_S2 (GE/AU/CN)	6-45. AC_SC2_MUTE (EU)	MON_OUT_Lch (GE/AU/CN)	6. GND	31. CB2_DT	6-35. GND	26-15. GND
7-44. INPUT1_Lch	33-18. LINK_I02 (EU)	7-44. AC_SC3_MUTE (EU)	MON_MUTE (GE/AU/CN)	7. CLK_DT	32. GND	7-34. DT_SP_R	27-14. NC
8-43. GND	INPUT1_I03 (EU)	8-43. TEMP2	MON_MUTE (GE/AU/CN)	8. GND	33. CR7_DT	8-33. GND	28-13. GND
9-42. SCART_OUT_V (EU)	34-17. GND	9-42. SR_OUT	MON_OUT_Lch (GE/AU/CN)	9. Y7_DT	34. CR6_DT	9-32. DT_SP_L	29-12. GND
10-41. GND	35-16. LINK_I03 (EU)	10-41. TXD_SR	MON_OUT_Rch (GE/AU/CN)	10. Y8_DT	35. GND	10-31. GND	30-11. NC
11-40. AIR_OUT_V (EU)	INPUT1_S2 (GE/AU/CN)	11-40. RXD_SR	33-18. AIR_Rch (EU)	11. GND	36. CR5_DT	11-30. OPT_R	31-10. GND
12-39. GND	36-15. GND	12-39. GND	34-17. GND	12. Y5_DT	37. CR4_DT	12-29. GND	32-9. GND
13-38. INPUT1_V (EU)	37-14. RAPID_SW1 (EU)	13-38. AUDIO_OUT_Rch (EU)	35-16. AIR_Lch (EU)	13. Y4_DT	38. GND	13-28. OPT_L	33-8. NC
14-37. GND	INPUT1_PULG (GE/AU/CN)	14-37. GND	MON_OUT_Lch (GE/AU/CN)	14. GND	39. CR3_DT	14-27. GND	34-7. GND
15-36. INPUT2_SY (GE/AU/CN)	38-13. RAPID_SW3 (EU)	15-36. AUDIO_OUT_Lch (EU)	MON_OUT_Lch (GE/AU/CN)	15. Y3_DT	40. CR2_DT	15-26. DT_MON_C	35-6. GND
16-35. GND	39-12. GND	16-35. SIDE_SC	MON_OUT_Lch (GE/AU/CN)	16. Y1_DT	41. GND	16-25. GND	36-5. ANT_POW_EU
17-34. INPUT2_V	40-11. INPUT1_R (EU)	17-34. GND	MON_OUT_Lch (GE/AU/CN)	17. GND	42. CR1_DT	17-24. GND	37-4. POW_DET
18-33. GND	INPUT2_Pr (GE/AU/CN)	18-33. SIDE_S2	MON_OUT_Lch (GE/AU/CN)	18. Y1_DT	43. CR2_DT	18-23. DT_MON_Y	38-3. RST_DT
19-32. INPUT3_SC	41-10. GND	19-32. GND	MON_OUT_Lch (GE/AU/CN)	19. Y8_DT	44. GND	19-22. GND	39-2. DT_DET
20-31. GND	42-9. INPUT2_Pb (EU)	20-31. SIDE_SY	MON_OUT_Lch (GE/AU/CN)	20. GND	45. DE_DT	20-21. GND	40-1. GND
21-30. INPUT3_V	43-8. GND	21-30. GND	MON_OUT_Lch (GE/AU/CN)	21. CB7_DT	46. GND		
22-29. GND	44-7. INPUT1_G (EU)	22-29. SIDE_V	MON_OUT_Lch (GE/AU/CN)	22. CB6_DT	47. VD_DT		
23-28. GND	INPUT2_Y (GE/AU/CN)	23-28. SIDE_PLUG	MON_OUT_Lch (GE/AU/CN)	23. GND	48. GND		
24-27. GND	45-6. GND	24-27. GND	MON_OUT_Lch (GE/AU/CN)	24. CB5_DT	49-3. GND		
25-26. INPUT2_Pb (EU)	46-5. INPUT3_R (EU)	25-26. HP_R	MON_OUT_Lch (GE/AU/CN)	25. CB4_DT	50-1. V+9V_A		
26-25. INPUT1_SY (GE/AU/CN)	47-4. GND		MON_OUT_Lch (GE/AU/CN)				
27-24. INPUT2_Y (EU)	48-3. INPUT3_B (EU)		MON_OUT_Lch (GE/AU/CN)				
28-23. GND	49-2. GND		MON_OUT_Lch (GE/AU/CN)				
29-22. IN2_CompY_PLUG (EU)	50-1. INPUT3_G (EU)		MON_OUT_Lch (GE/AU/CN)				
INPUT2_SPLUG (GE/AU/CN)	INPUT1_Y (GE/AU/CN)		MON_OUT_Lch (GE/AU/CN)				

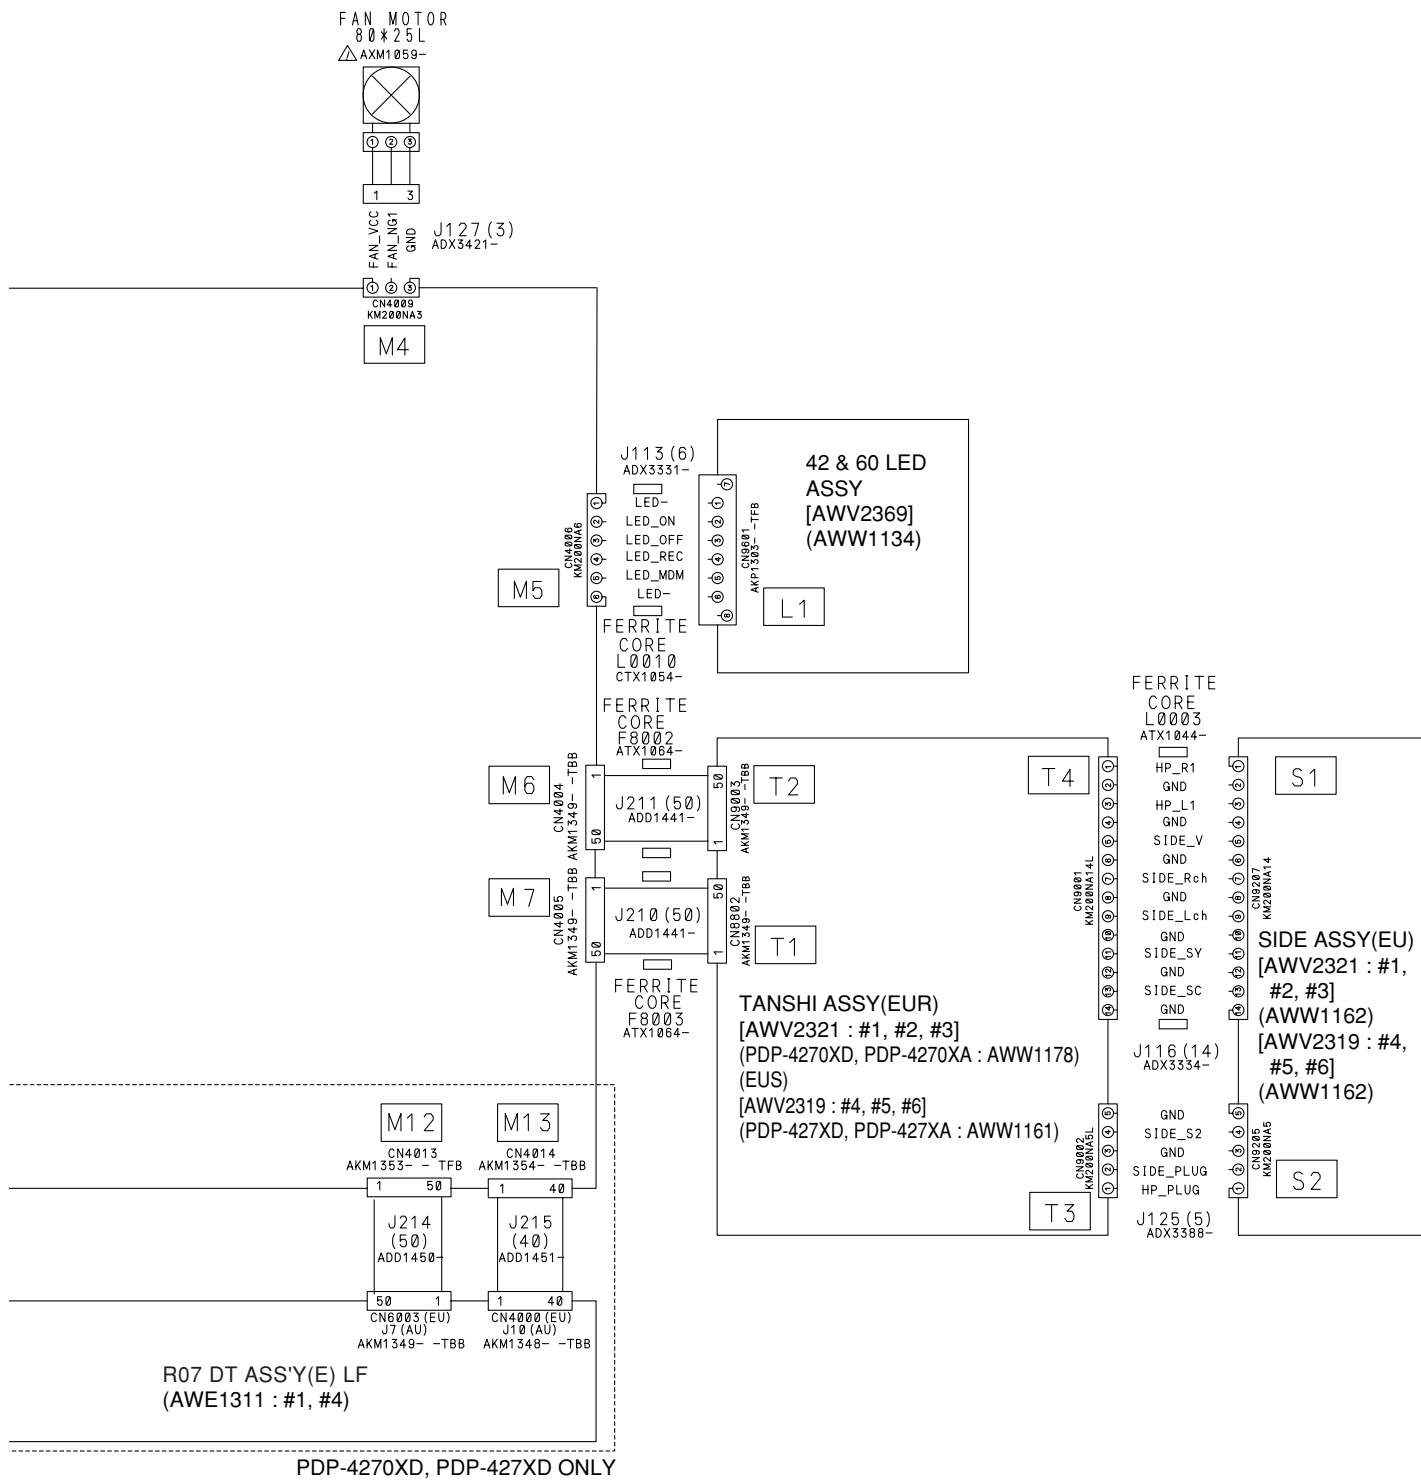


# 1	PDP-4270XD/WYVIXK5
# 2	PDP-4270XA/WYV5
# 3	PDP-4270XA/WYVIXK5
# 4	PDP-427XD/WYVIXK5
# 5	PDP-427XA/WYV5
# 6	PDP-427XA/WYVIXK5

ASS'Y Table	
PDP-427XD/XA	EU Step up
PDP-4270XD/XA	EU Regular

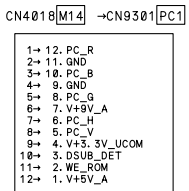


4.3 OVERALL BLOCK DIAGRAM (1/2)

A
B
C
D
E
F

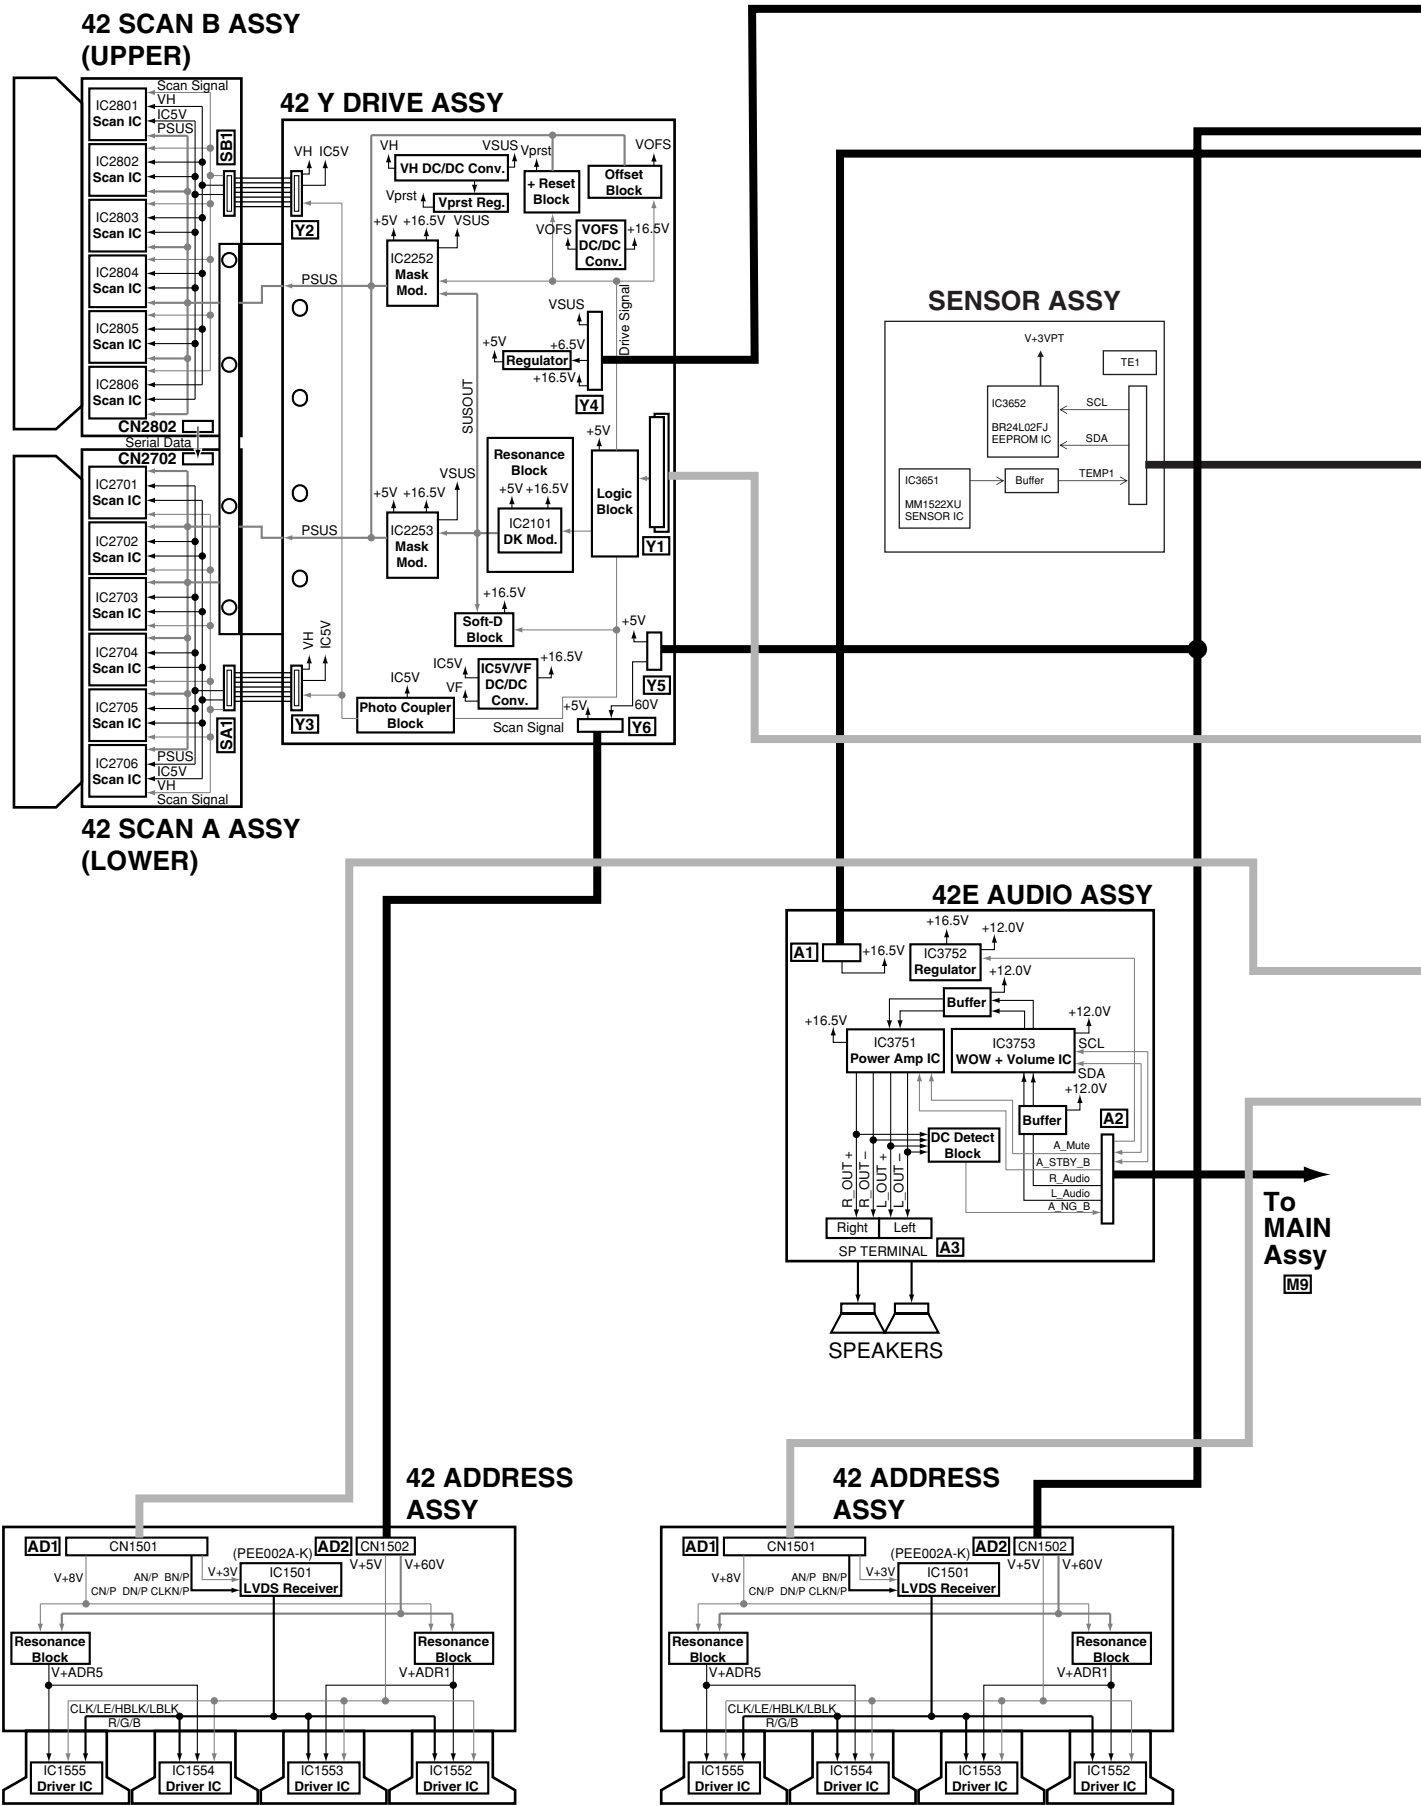


— : Wire harness
— : FFC

A

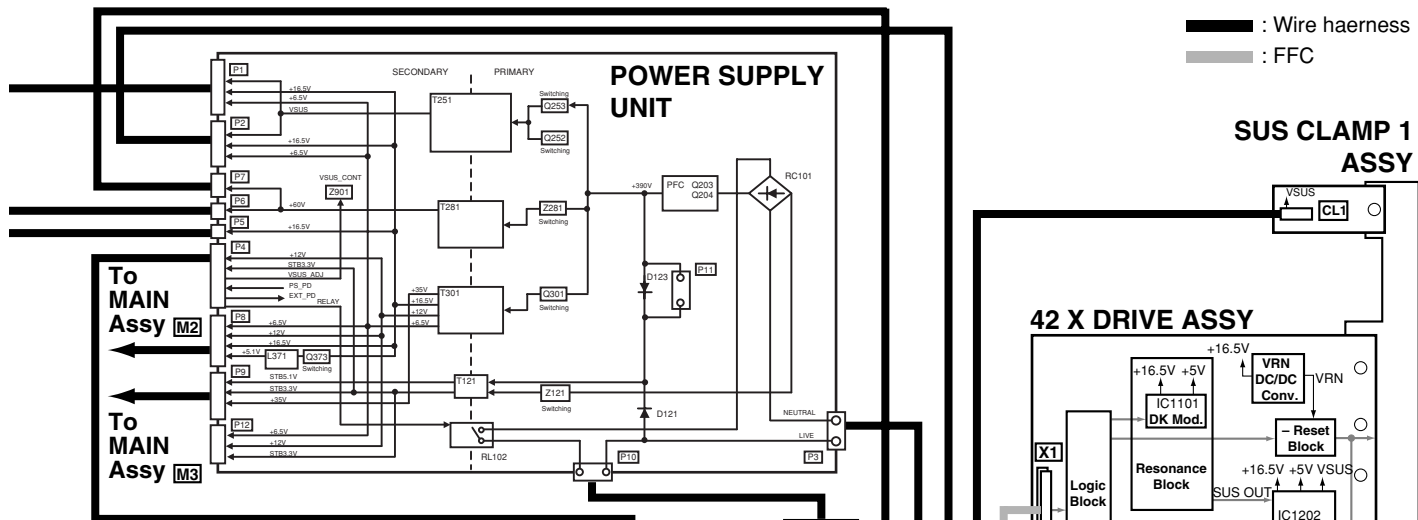


B

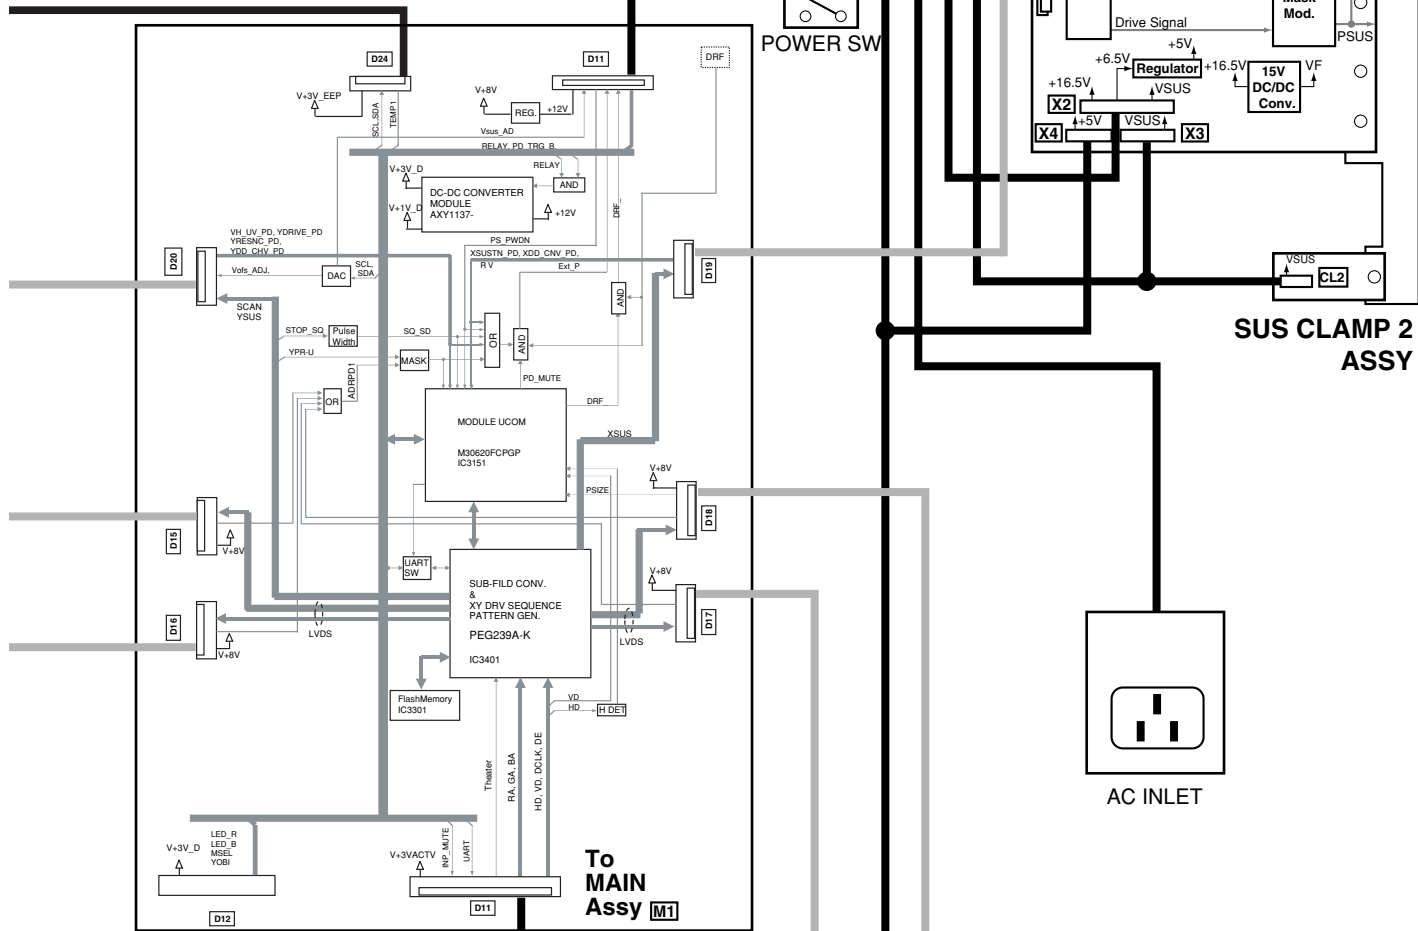

C

D


E

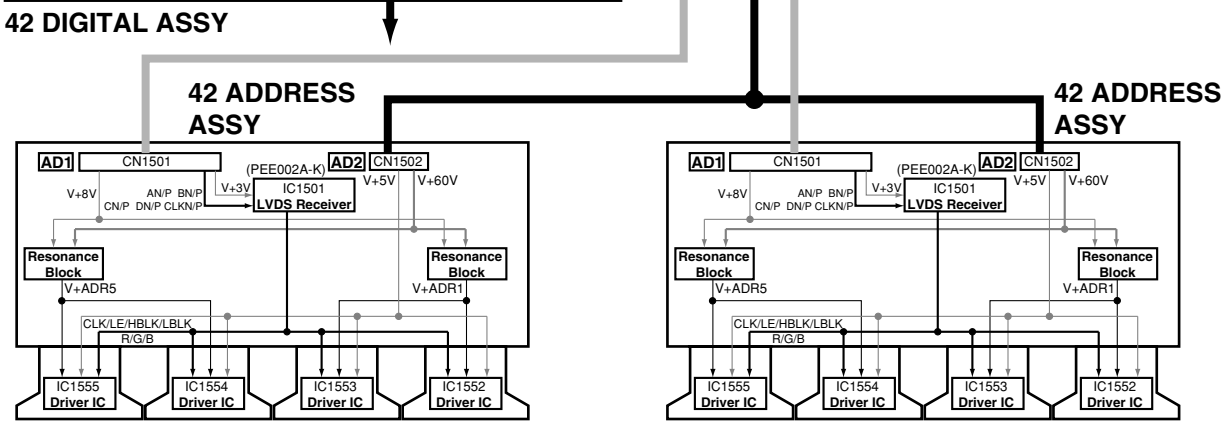

F


4.4 OVERALL BLOCK DIAGRAM (2/2)

A
B
C
D
E
F

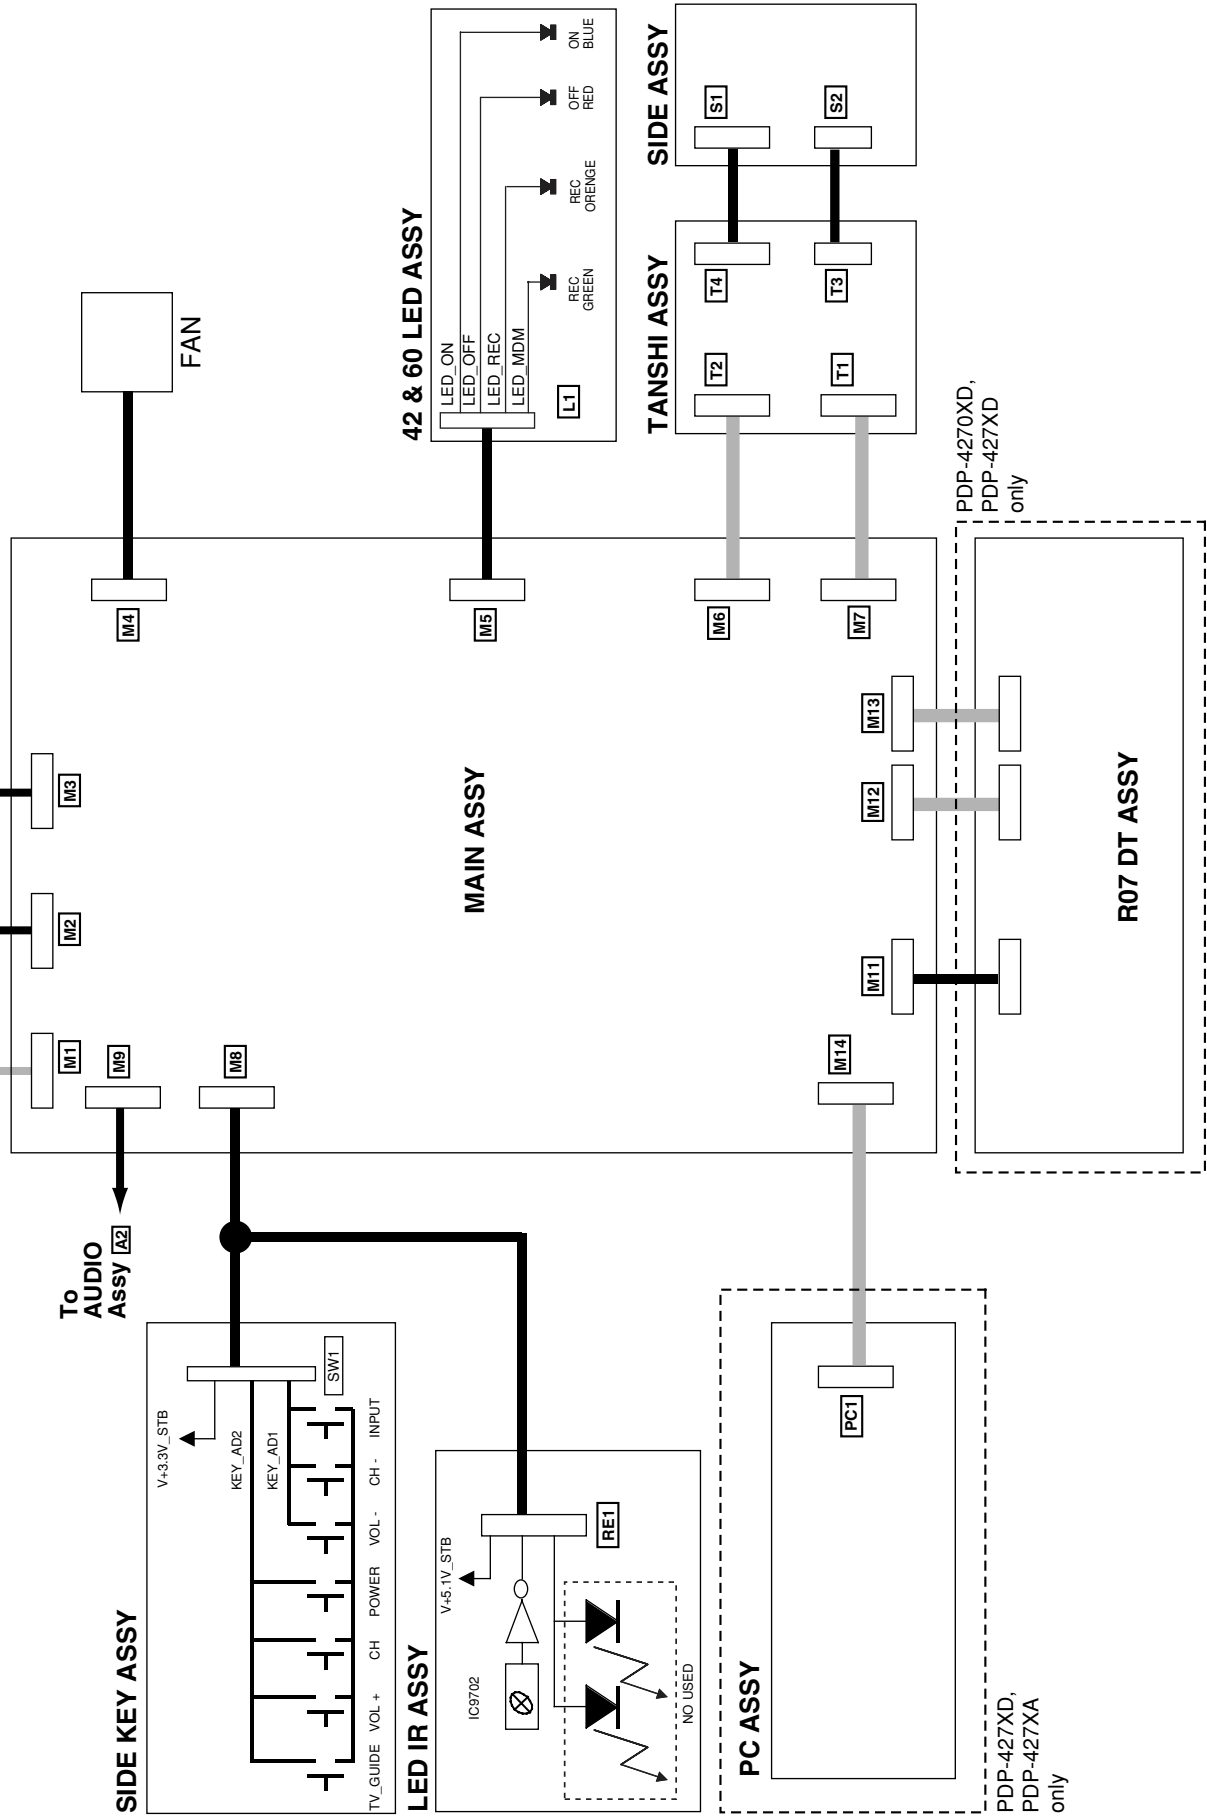


1 2 3 4


4.5 POWER SUPPLY UNIT

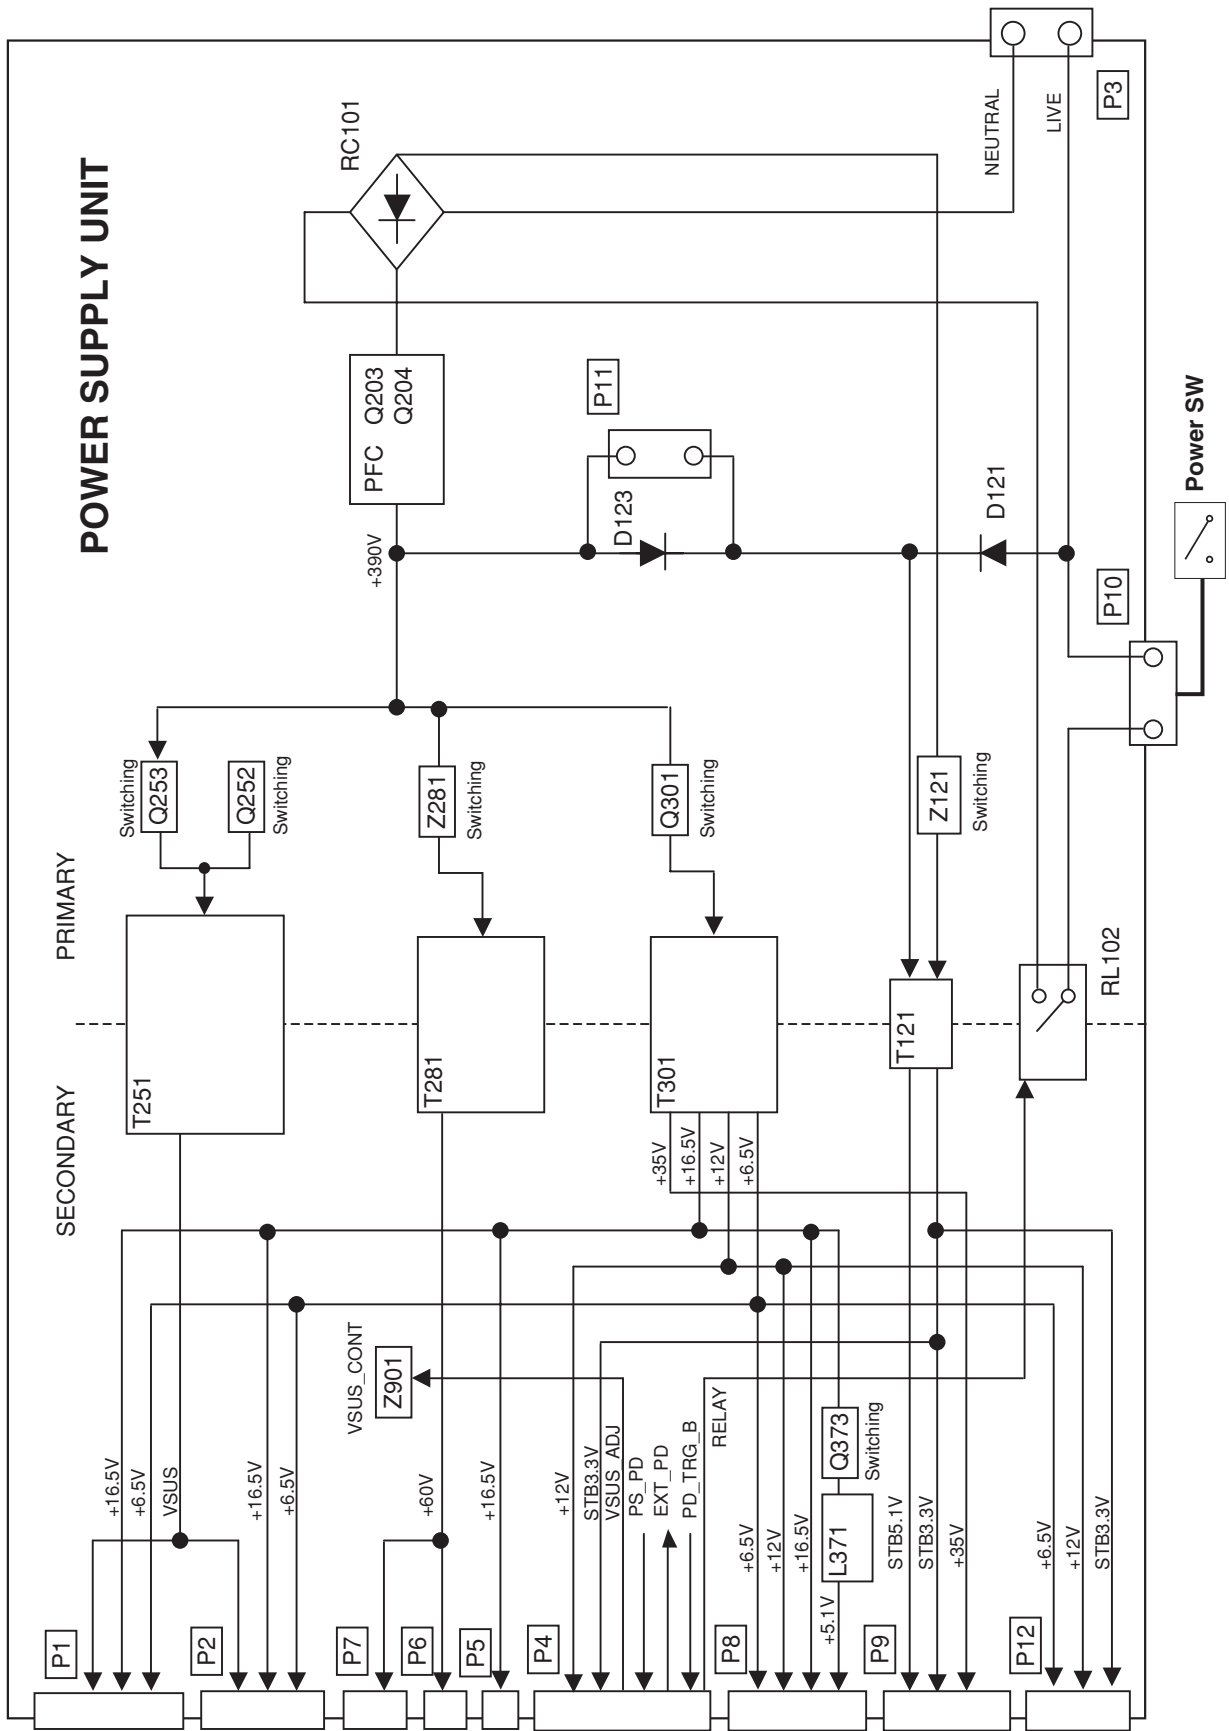


4.6 42 X DRIVE, SUS CLAMP 1 and SUS CLAMP 2 ASSYS

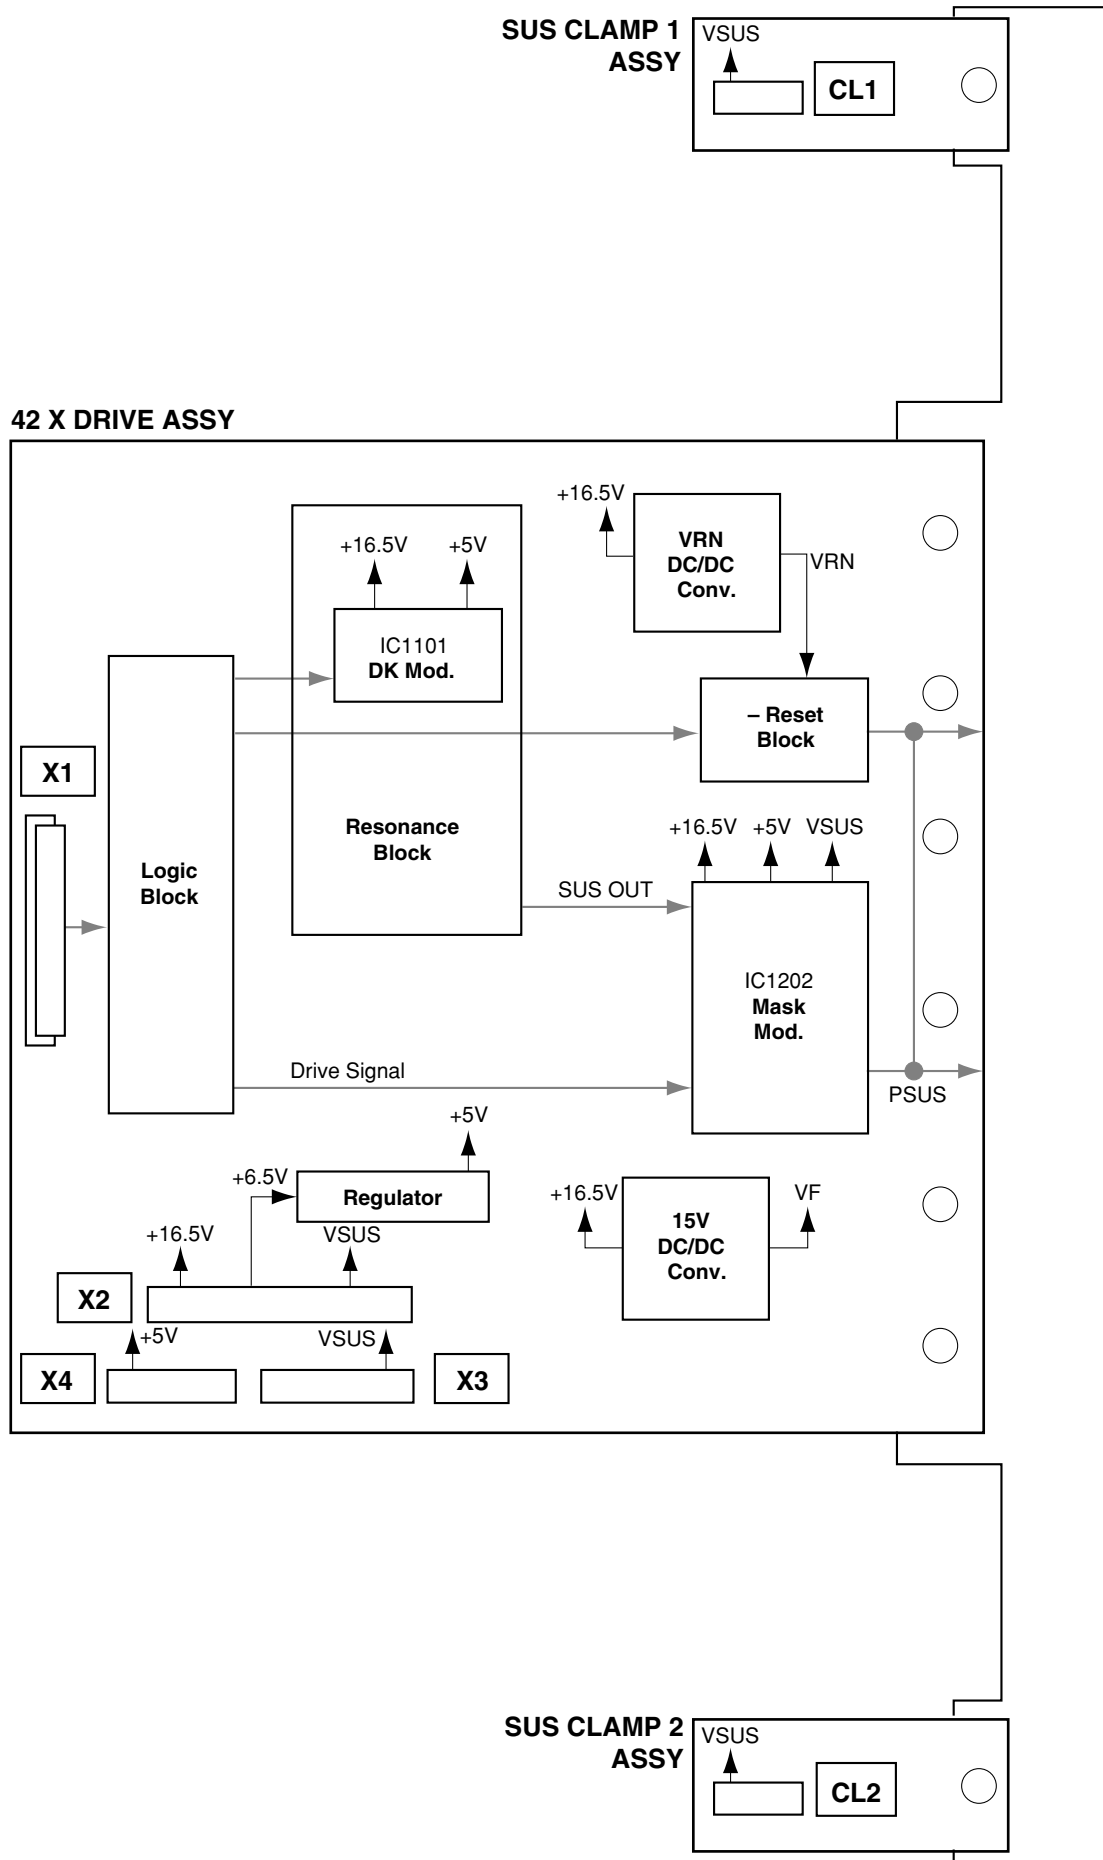

4.7 42Y DRIVE ASSY

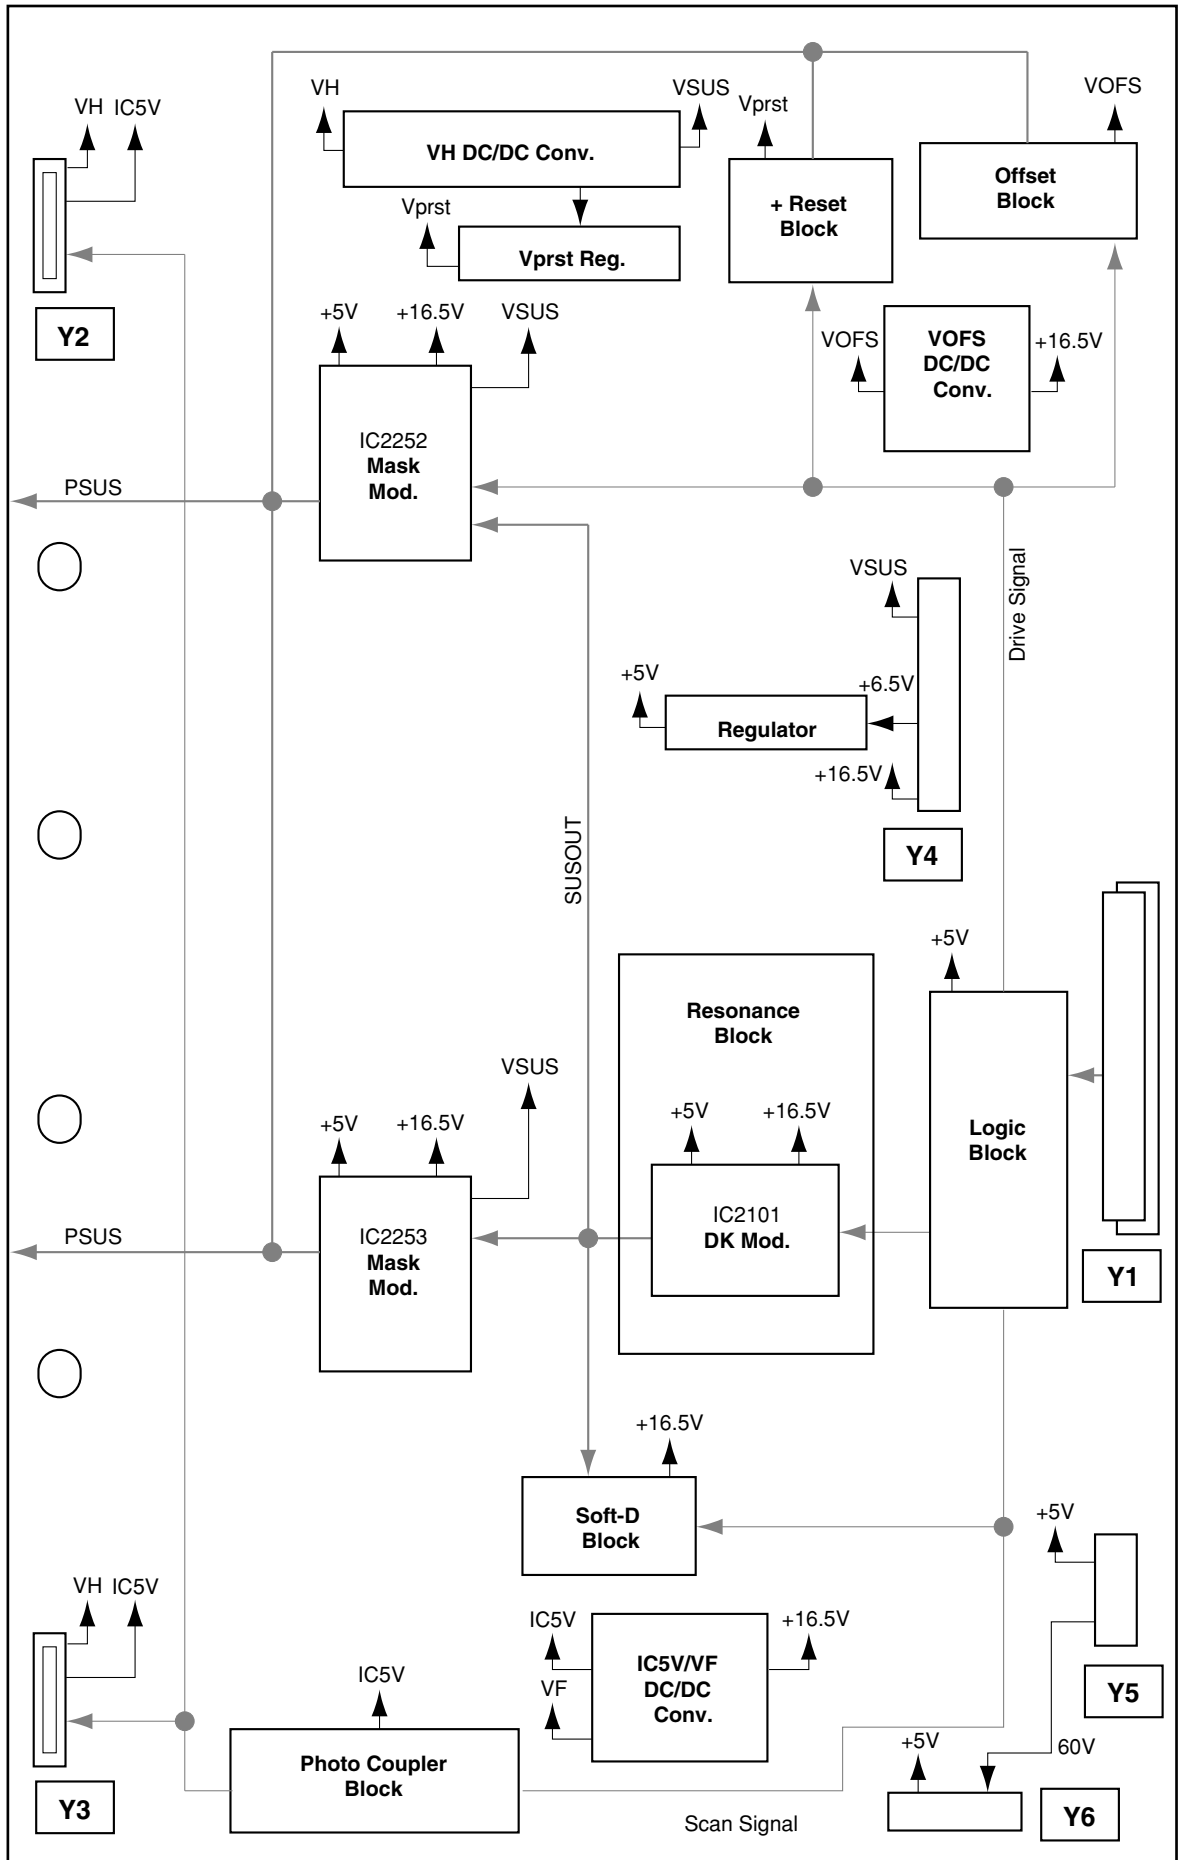


4.8 POWER SUPPLY BLOCK of 42 X DRIVE and 42 Y DRIVE ASSYS

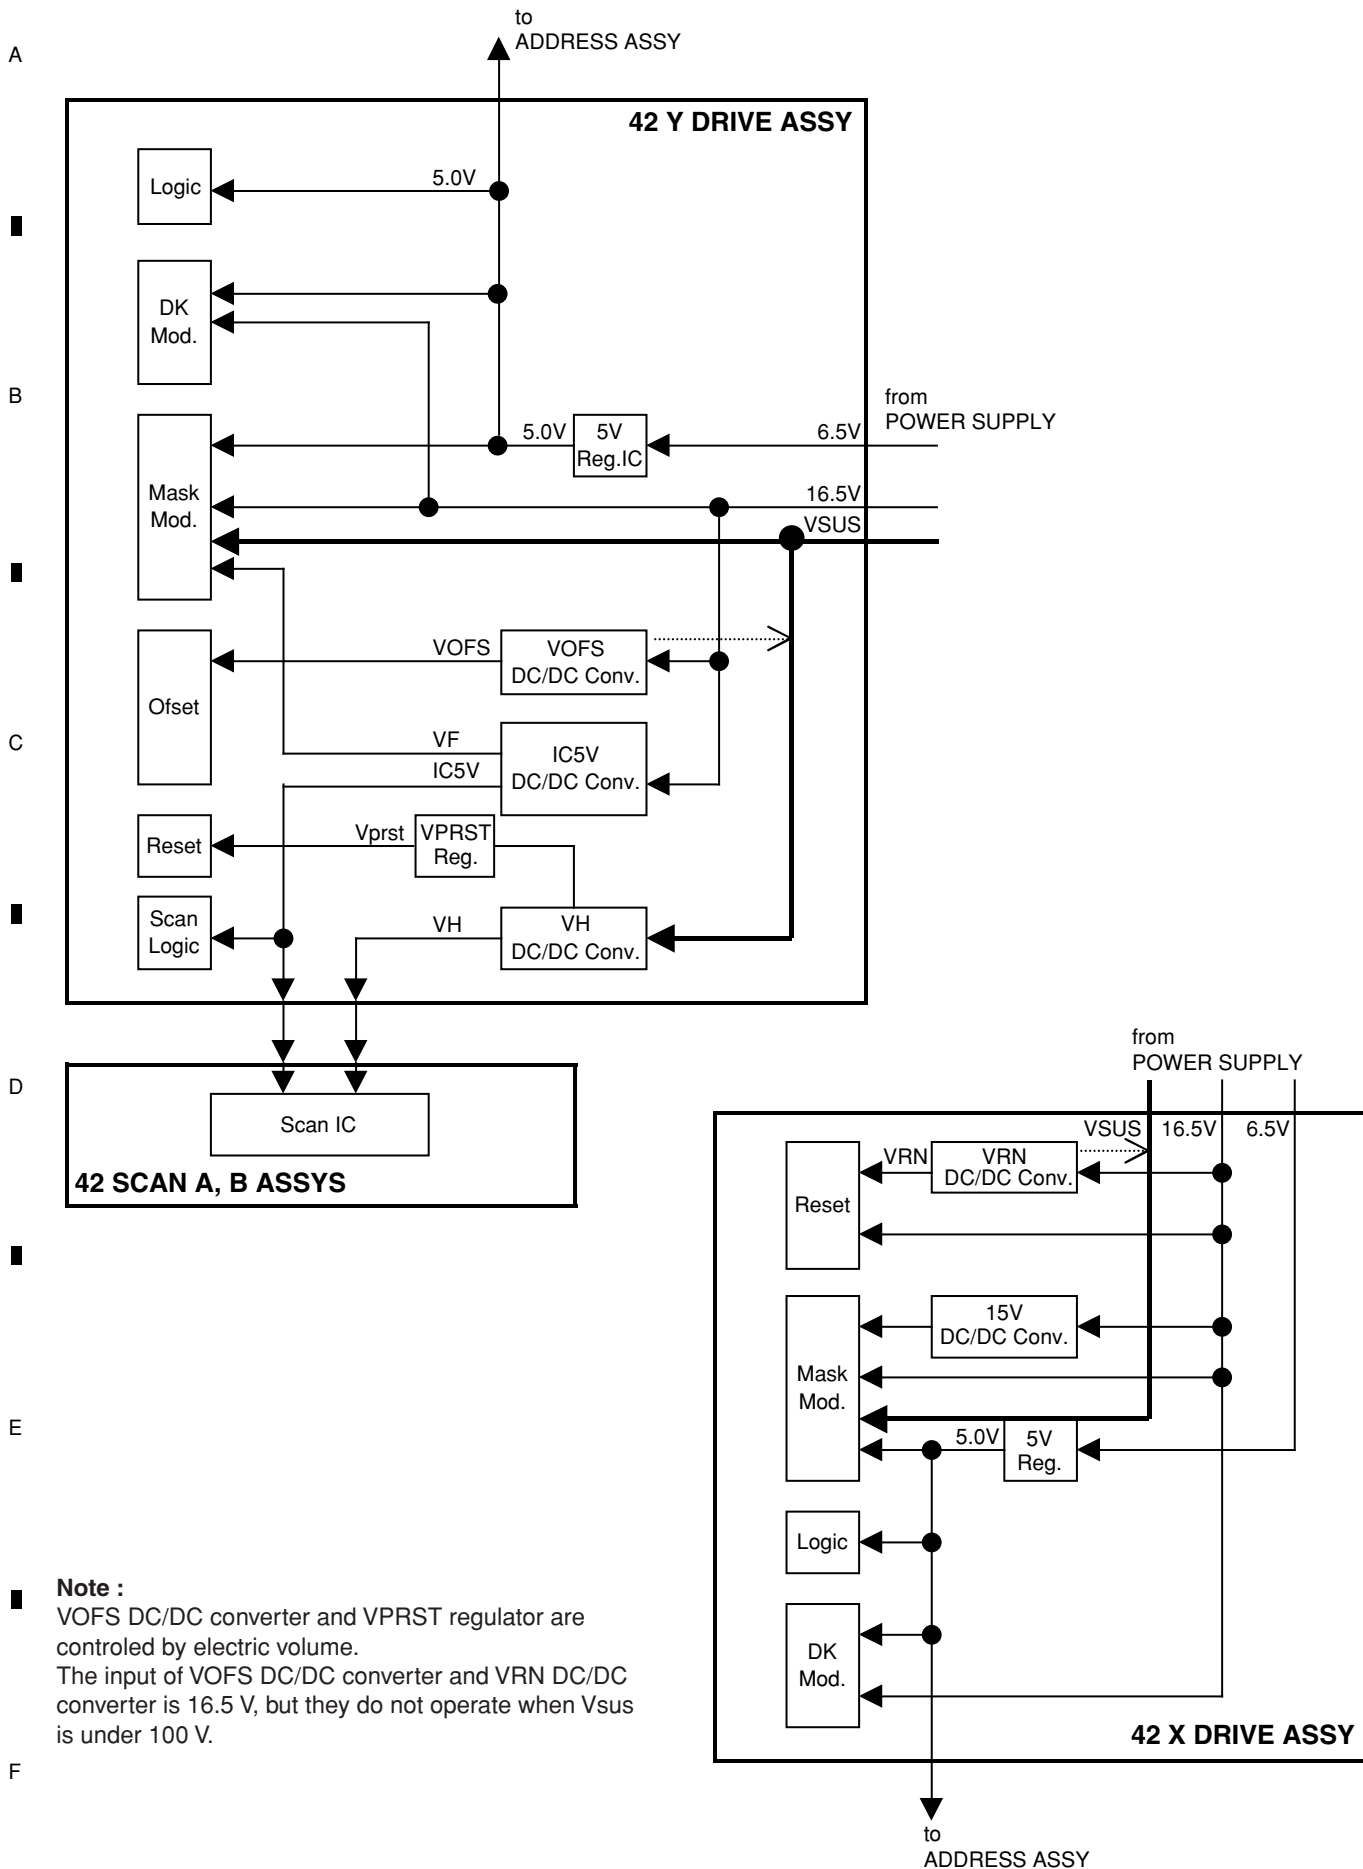

Note :
 VOFS DC/DC converter and VPRST regulator are controlled by electric volume.
 The input of VOFS DC/DC converter and VRN DC/DC converter is 16.5 V, but they do not operate when Vsus is under 100 V.

4.9 42 SCAN A and 42 SCAN B ASSYS

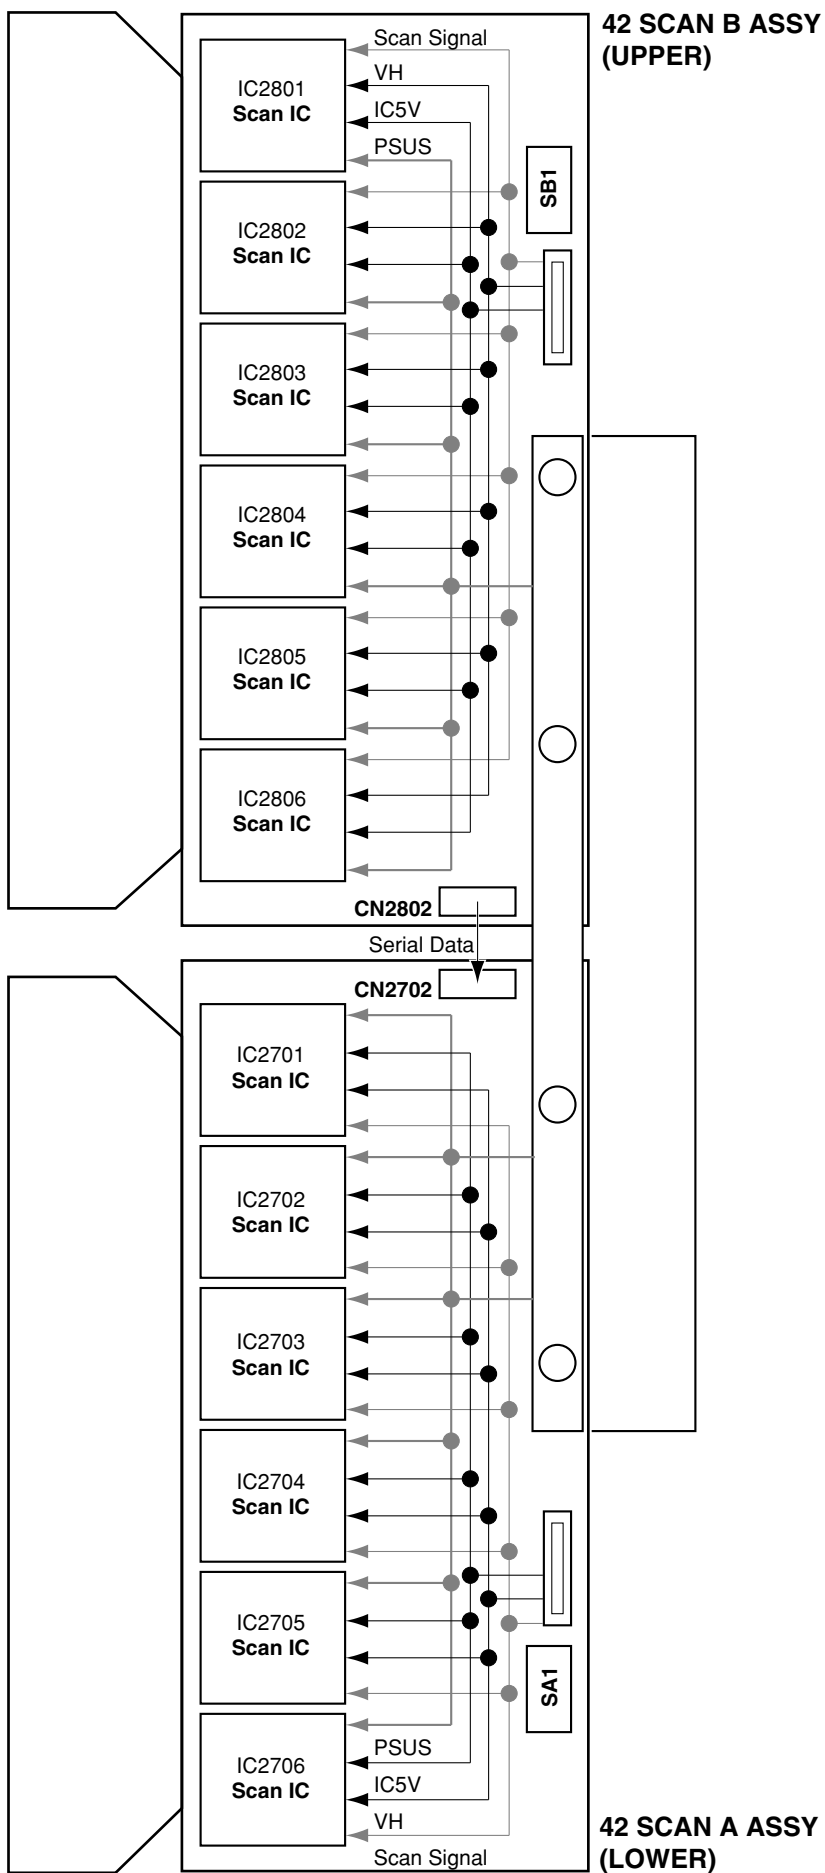

A
B
C
D
E
F

4.10 42 ADDRESS ASSY

A


B

C


D

E

F

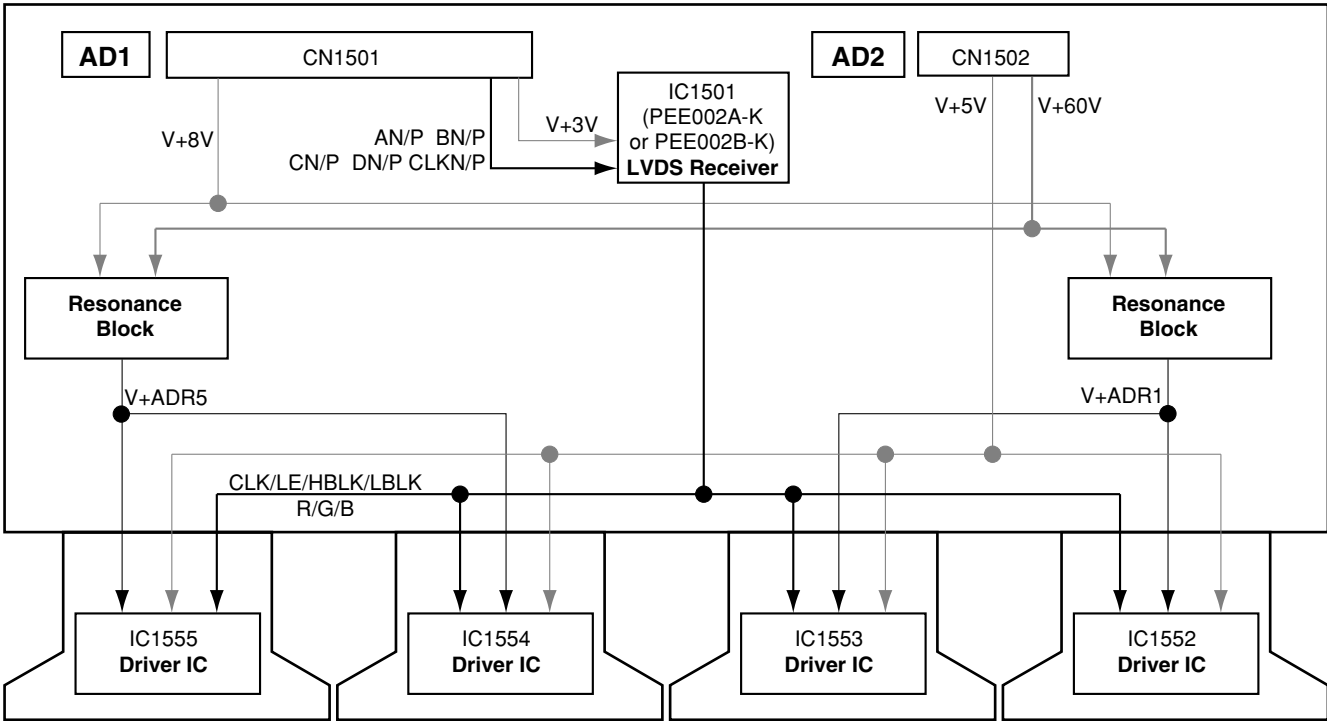

4.11 42 DIGITAL ASSY

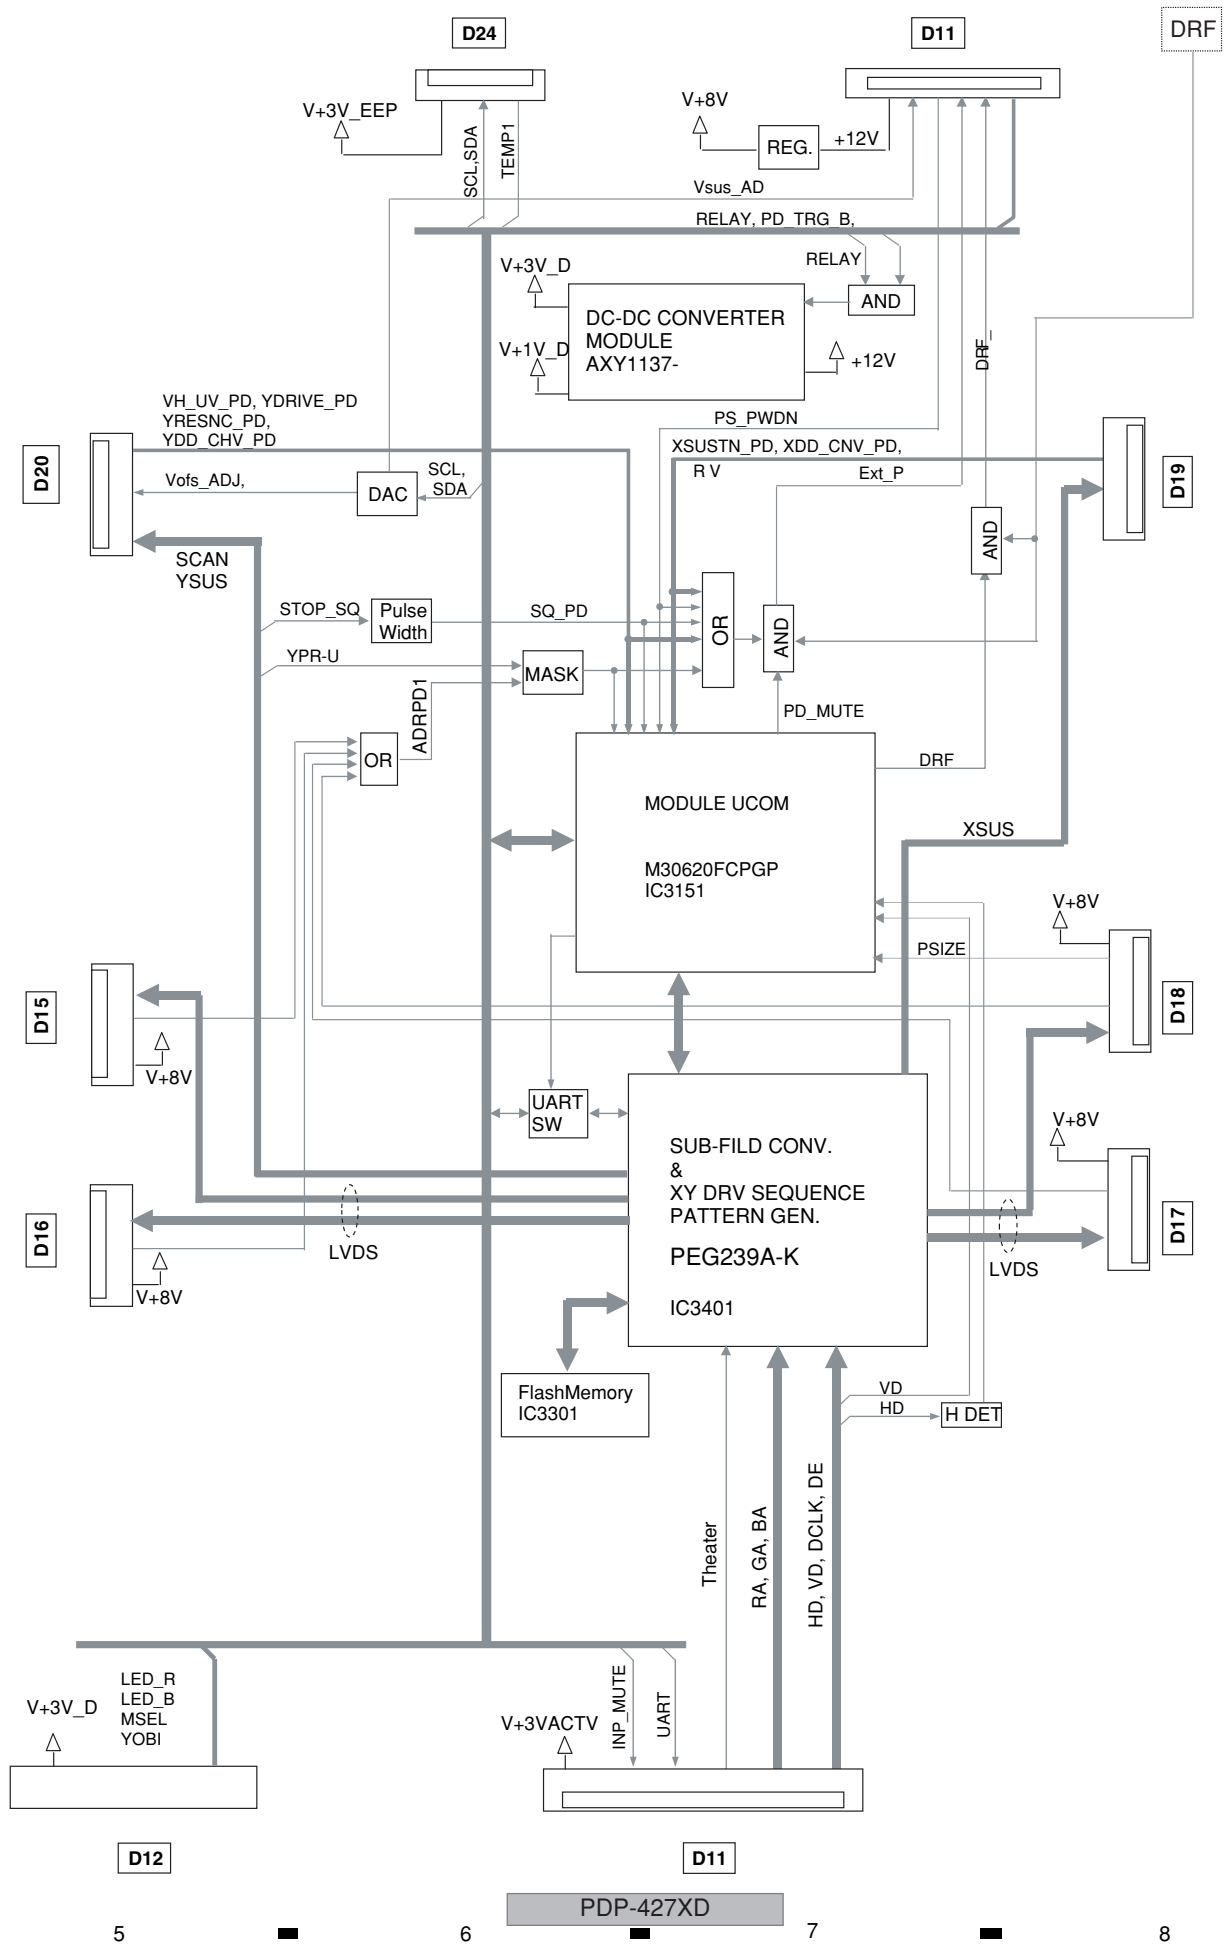

4.12 SIGNAL BLOCK DIAGRAM

1

2

3

4

A


B

C

D

E

F

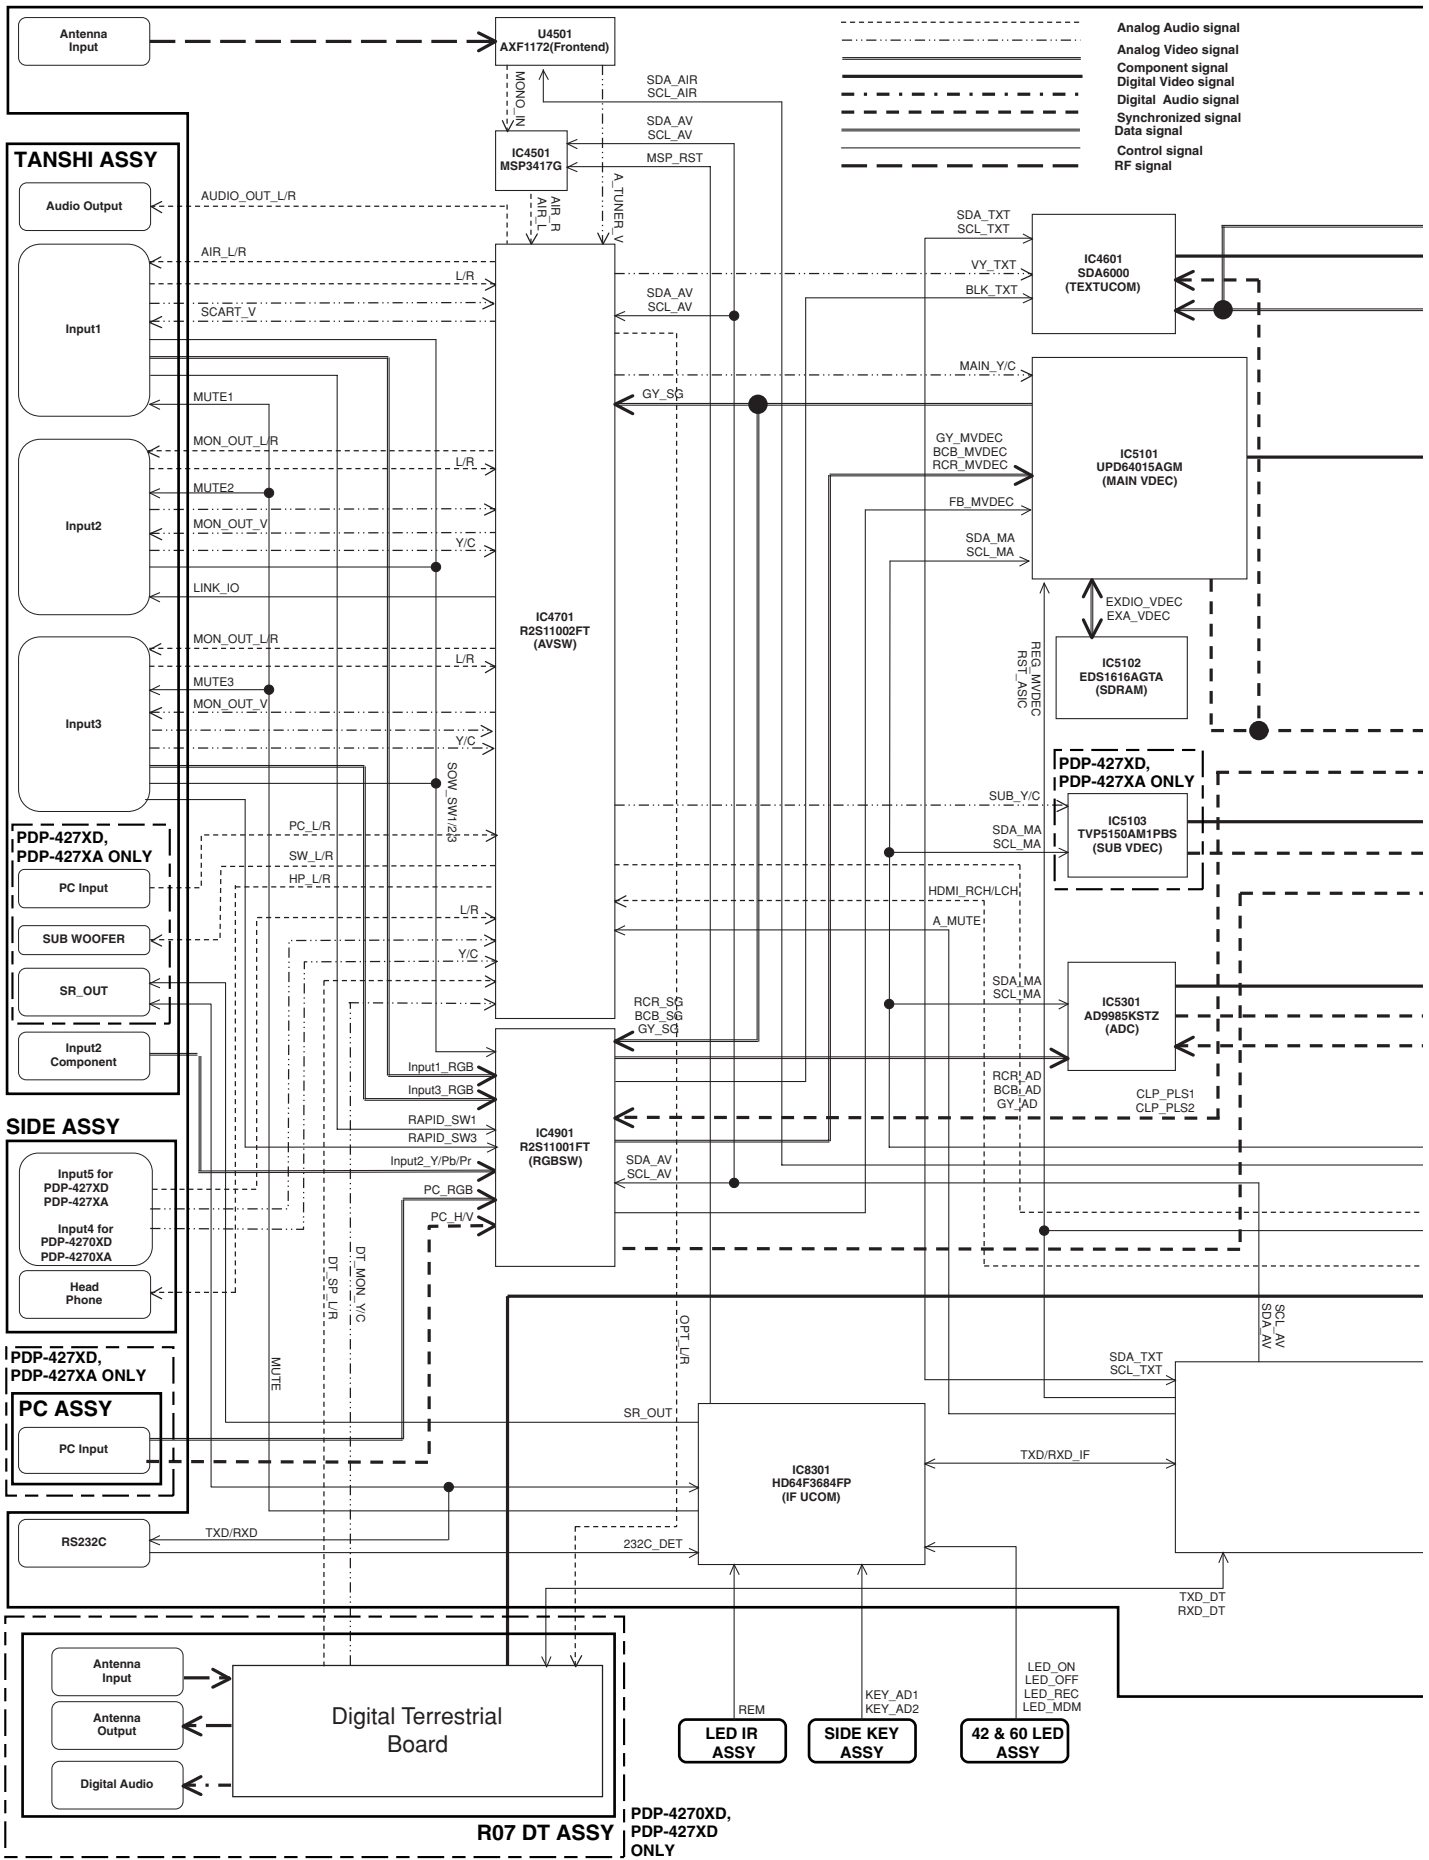

Analog Audio signal
 Analog Video signal
 Component signal
 Digital Video signal
 Digital Audio signal
 Synchronized signal
 Data signal
 Control signal
 RF signal

R07 DT ASSY PDP-4270XD, PDP-427XD ONLY


1

2

3

4

A
B
C
D
E
F

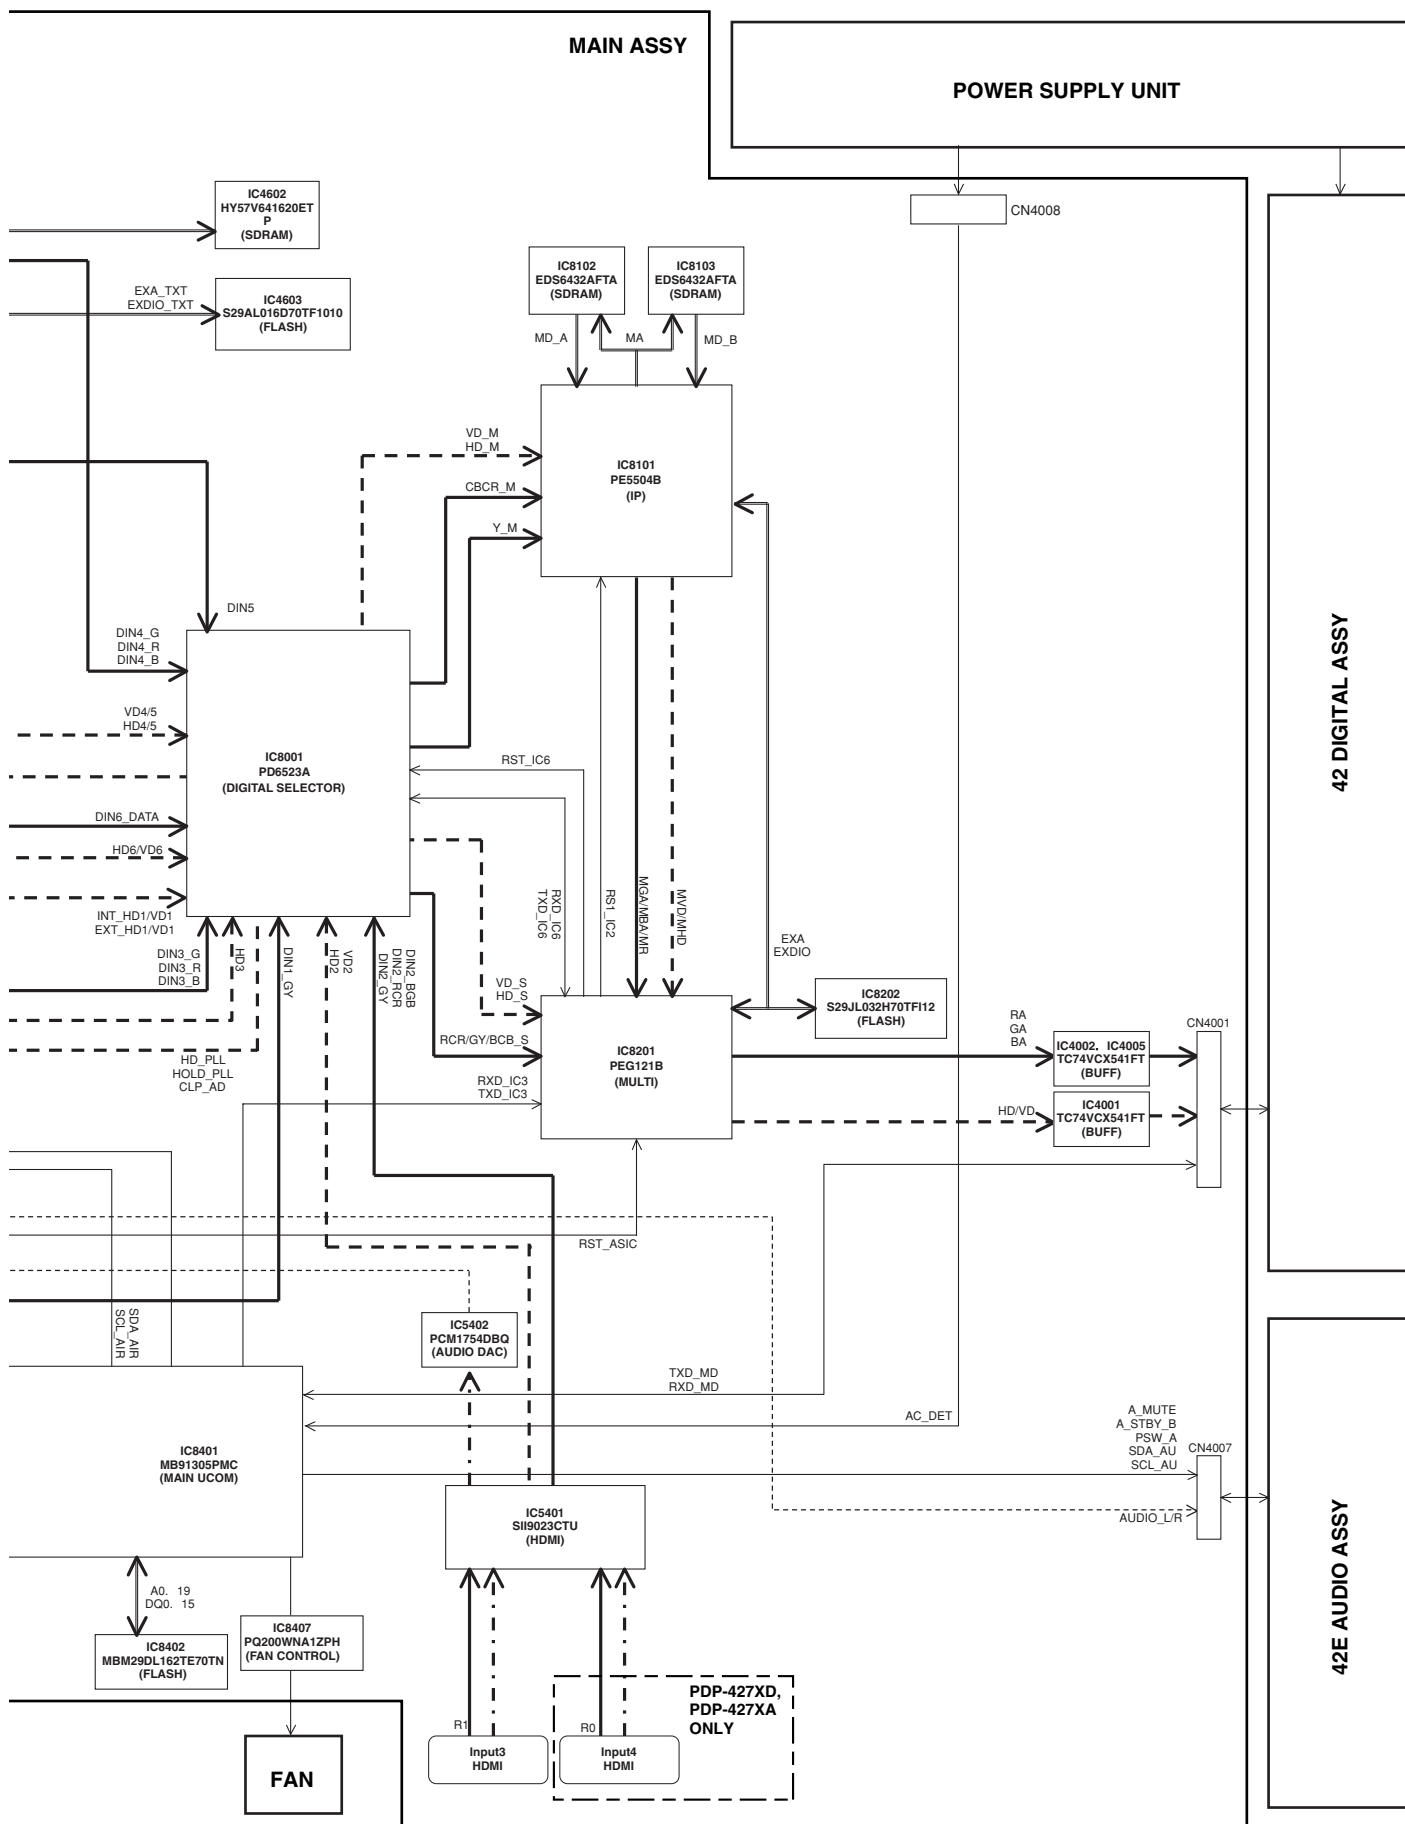

4.13 R07 DT ASSY (PDP-4270XD and PDP-427XD ONLY)

A


B

C


D

E


F

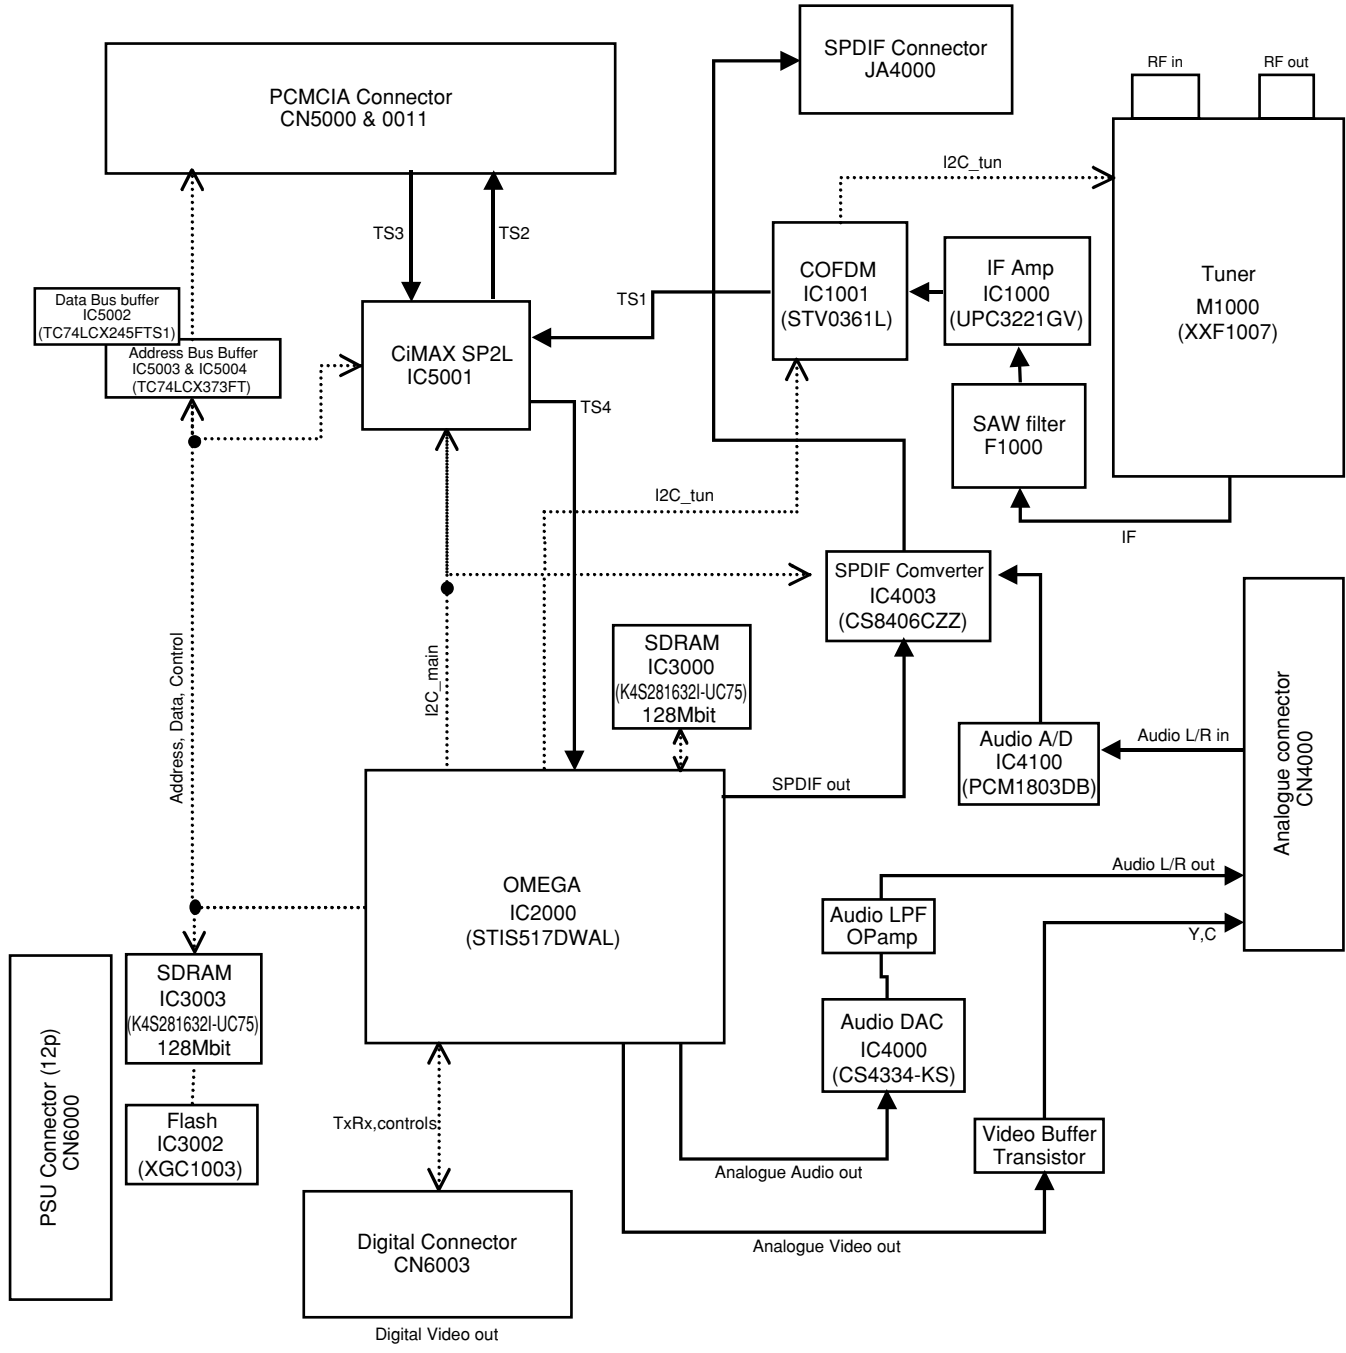

4.14 POWER SUPPLY BLOCK of MAIN ASSY

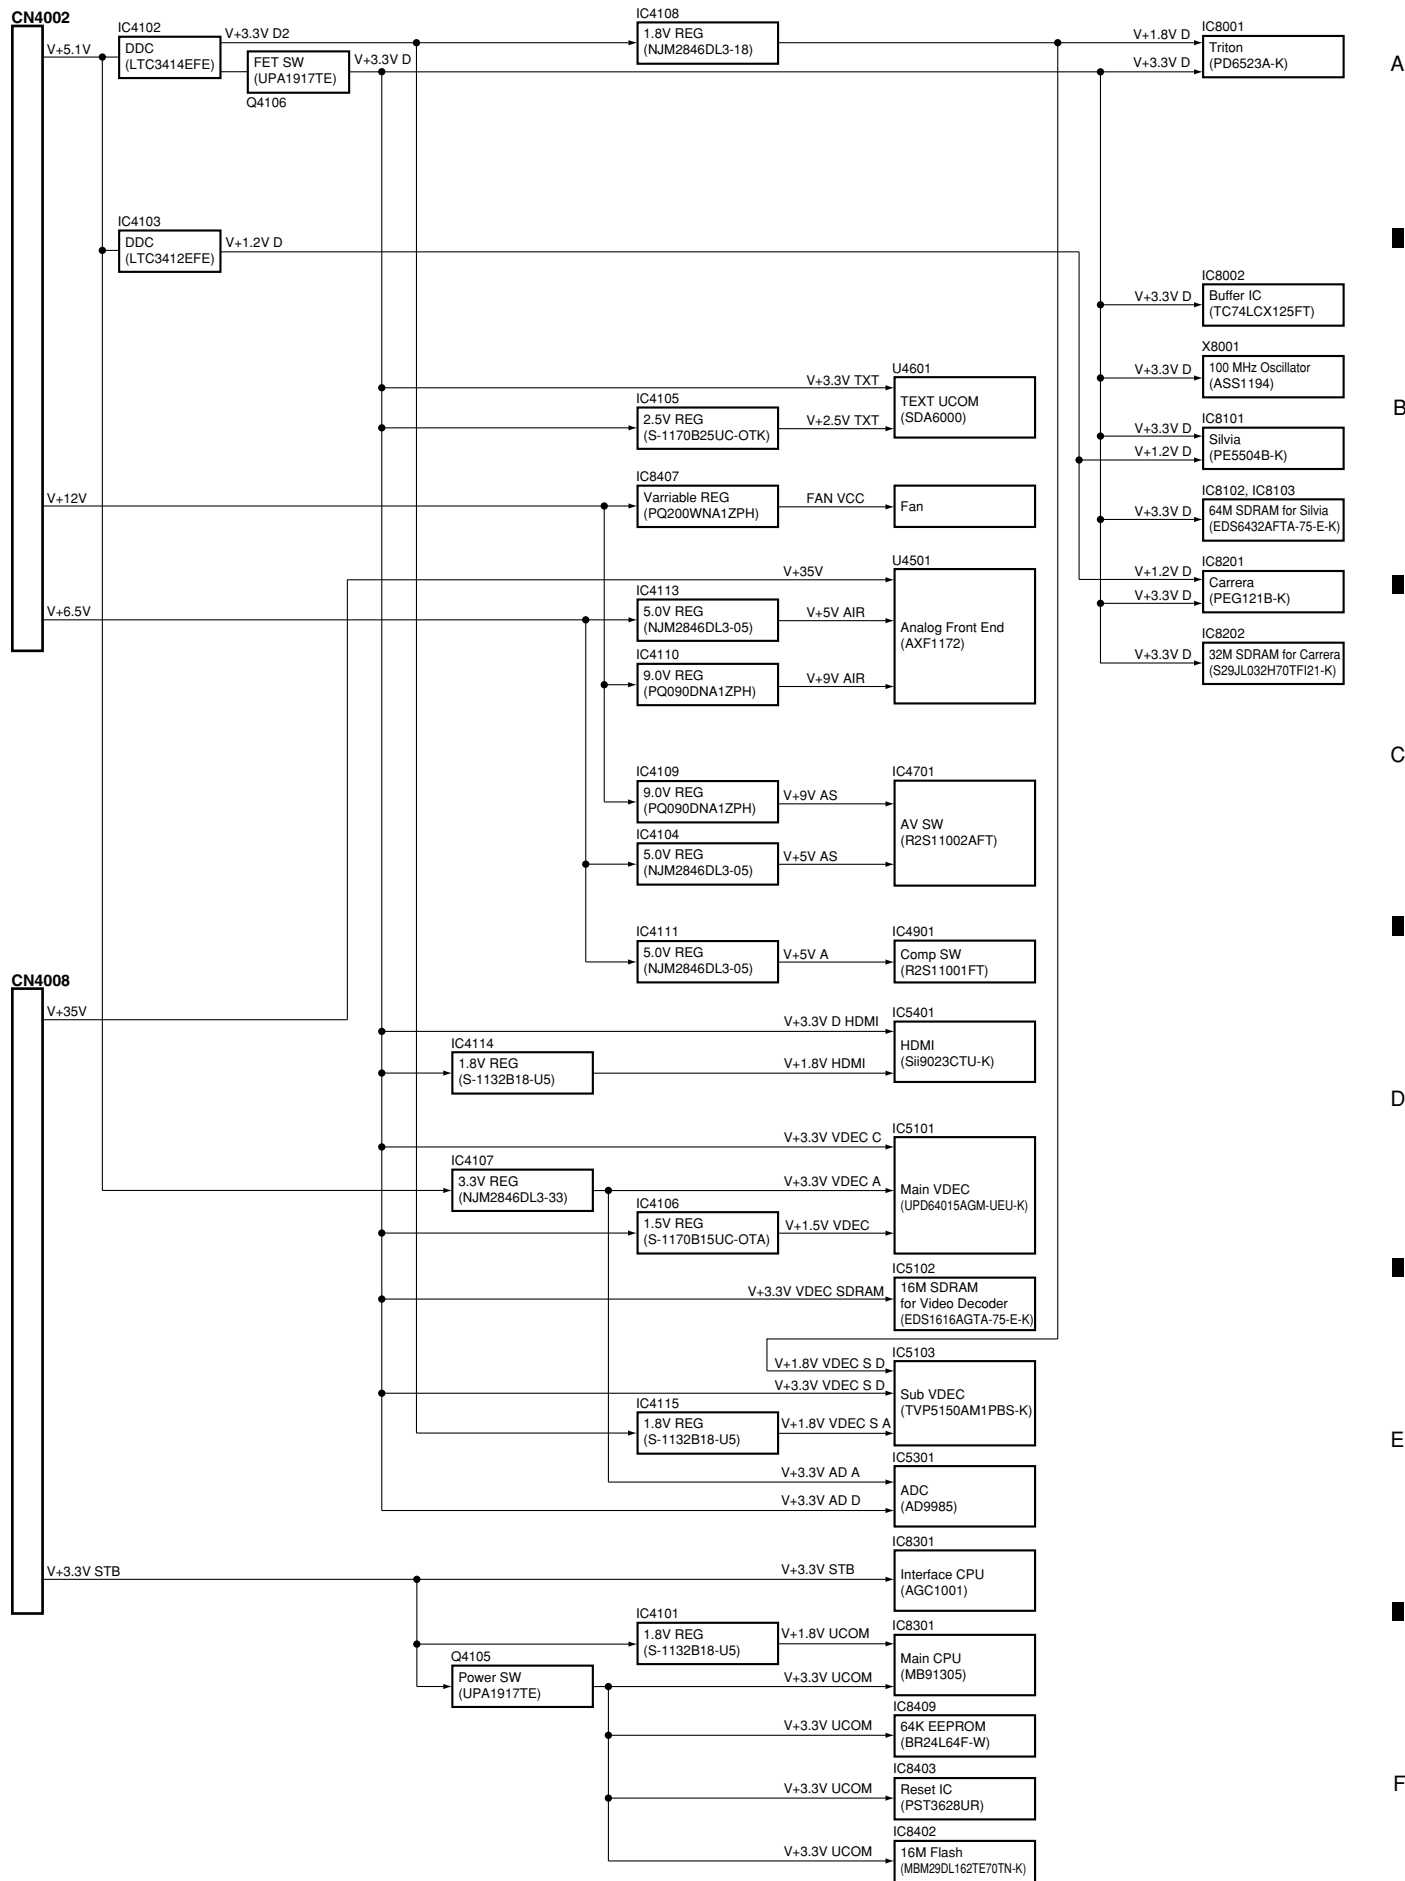


4.15 42E AUDIO ASSY

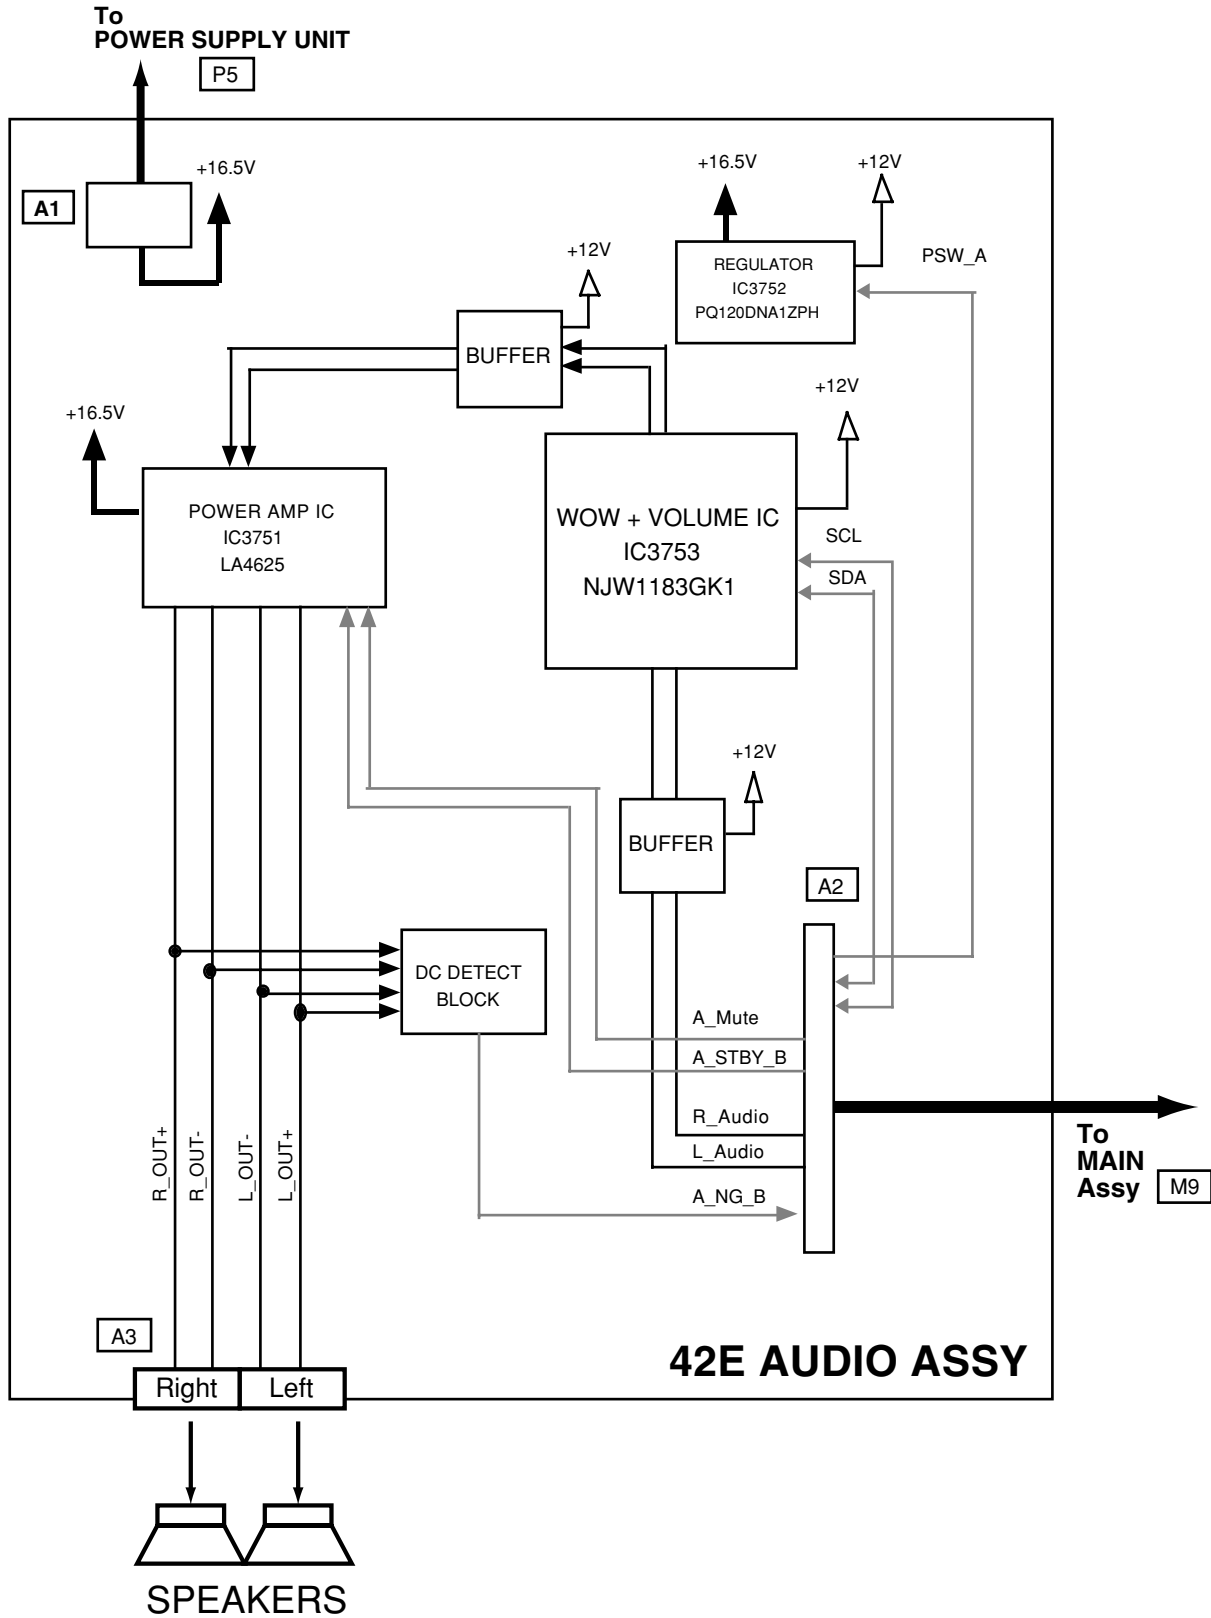

5 6 7 8

4.16 POWER SUPPLY BLOCK of 42E AUDIO, LED IR and SIDE KEY ASSYS

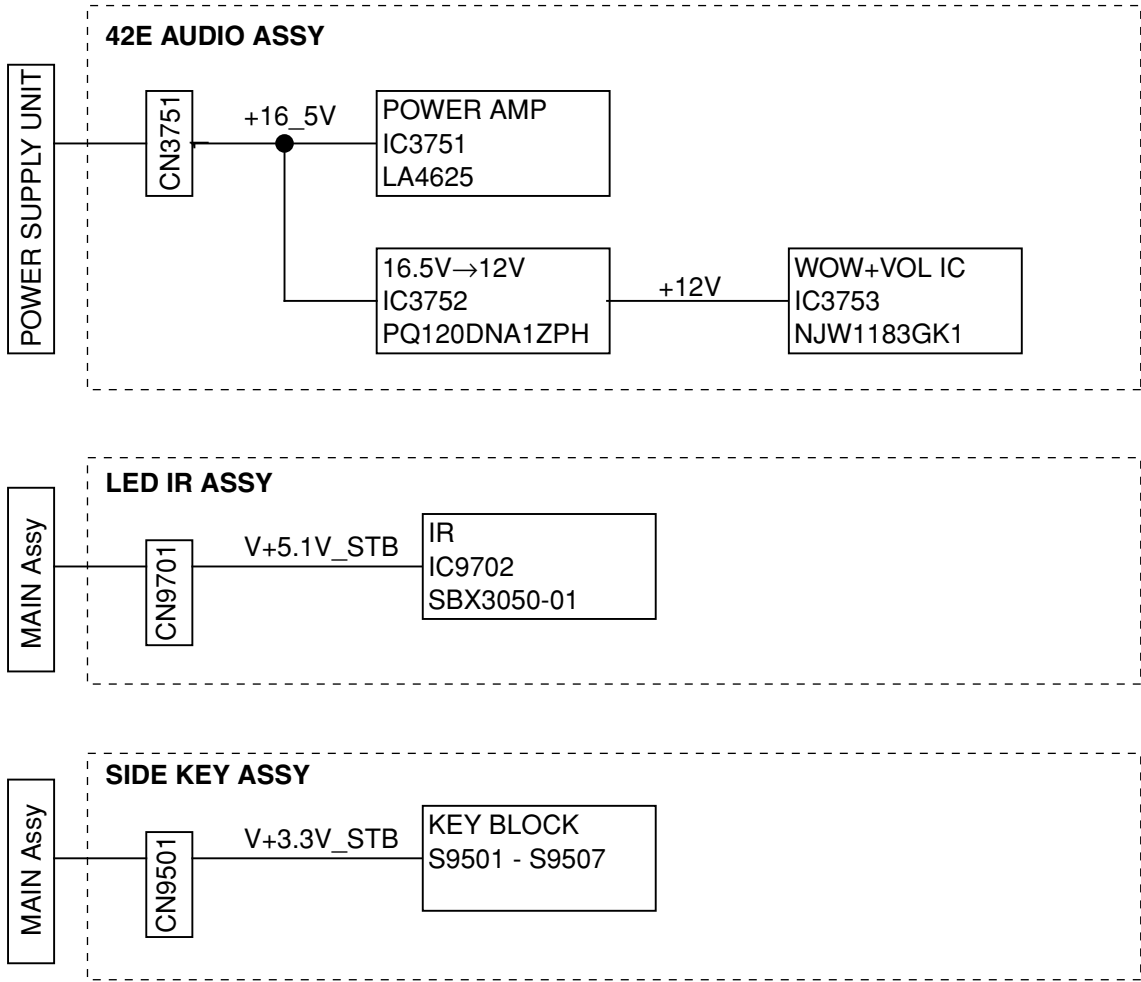

4.17 VOLTAGES

No.	42 DIGITAL Assy		MAIN Assy	
	Pin Name	Voltage (V)	Pin Name	No.
1	GND	0	GND	1
2	V_3.3V_UCOM	3.3	V_3.3V_UCOM	2
3	INP_MUTE	0	INP_MUTE	3
4	THEATER	0	THEATER	4
5	VD	0/3.3	VD	5
6	HD	0/3.3	HD	6
7	DE	0/3.3	DE	7
8	GND	0	GND	8
9	CLK	0/3.3	CLK	9
10	GND	0	GND	10
11	GND	0	GND	11
12	VIDEO_R9	0	VIDEO_R9	12
13	VIDEO_R8	0	VIDEO_R8	13
14	VIDEO_R7	0	VIDEO_R7	14
15	VIDEO_R6	0	VIDEO_R6	15
16	VIDEO_R5	0	VIDEO_R5	16
17	VIDEO_R4	0	VIDEO_R4	17
18	VIDEO_R3	0	VIDEO_R3	18
19	VIDEO_R2	0	VIDEO_R2	19
20	VIDEO_R1	0	VIDEO_R1	20
21	VIDEO_R0	0	VIDEO_R0	21
22	GND	0	GND	22
23	VIDEO_G9	0	VIDEO_G9	23
24	VIDEO_G8	0	VIDEO_G8	24
25	VIDEO_G7	0	VIDEO_G7	25
26	VIDEO_G6	0	VIDEO_G6	26
27	VIDEO_G5	0	VIDEO_G5	27
28	VIDEO_G4	0	VIDEO_G4	28
29	VIDEO_G3	0	VIDEO_G3	29
30	VIDEO_G2	0	VIDEO_G2	30
31	VIDEO_G1	0	VIDEO_G1	31
32	VIDEO_G0	0	VIDEO_G0	32
33	GND	0	GND	33
34	VIDEO_B9	0	VIDEO_B9	34
35	VIDEO_B8	0	VIDEO_B8	35
36	VIDEO_B7	0	VIDEO_B7	36
37	VIDEO_B6	0	VIDEO_B6	37
38	VIDEO_B5	0	VIDEO_B5	38
39	VIDEO_B4	0	VIDEO_B4	39
40	VIDEO_B3	0	VIDEO_B3	40
41	VIDEO_B2	0	VIDEO_B2	41
42	VIDEO_B1	0	VIDEO_B1	42
43	VIDEO_B0	0	VIDEO_B0	43
44	GND	0	GND	44
45	Reserve	0	Reserve	45
46	AC_OFF	0	AC_OFF	46
47	TXD_MD	3.3	TXD_MD	47
48	RXD_MD	3.3	RXD_MD	48
49	REQ_MD	0	REQ_MD	49
50	MODE	0	MODE	50

No.	TANSHI Assy		MAIN Assy	
	Pin Name	Voltage (V)	Pin Name	No.
1	Input3_G	2.4	Input3_G	50
2	GND	0	GND	49
3	Input3_B	2.4	Input3_B	48
4	GND	0	GND	47
5	Input3_R	2.4	Input3_R	46
6	GND	0	GND	45
7	Input1_G	2.4	Input1_G	44
8	GND	0	GND	43
9	Input1_B	2.4	Input1_B	42
10	GND	0	GND	41
11	Input1_R	2.4	Input1_R	40
12	GND	0	GND	39
13	RAPID_SW3	0	RAPID_SW3	38
14	RAPID_SW1	0	RAPID_SW1	37
15	GND	0	GND	36
16	LINK_IO3	4.9	LINK_IO3	35
17	GND	0	GND	34
18	LINK_IO2	4.9	LINK_IO2	33
19	SLOW_SW1	0	SLOW_SW1	32
20	SLOW_SW2	0	SLOW_SW2	31
21	SLOW_SW3	0	SLOW_SW3	30
22	IN2_CompY_PLUG	0	IN2_CompY_PLUG	29
23	GND	0	GND	28
24	Input2_Y	2.4	Input2_Y	27
25	GND	0	GND	26
26	Input2_Pb	2.4	Input2_Pb	25
27	GND	0	GND	24
28	Input2_Pr	2.4	Input2_Pr	23
29	GND	0	GND	22
30	Input3_V	0	Input3_V	21
31	GND	0	GND	20
32	Input3_SC	2.2	Input3_SC	19
33	GND	0	GND	18
34	Input2_V	0	Input2_V	17
35	GND	0	GND	16
36	Input2_SC	2.2	Input2_SC	15
37	GND	0	GND	14
38	Input1_V	2.6	Input1_V	13
39	GND	0	GND	12
40	AIR_OUT_V	3.4	AIR_OUT_V	11
41	GND	0	GND	10
42	SCART_OUT_V	3.6	SCART_OUT_V	9
43	GND	0	GND	8
44	Input1_Lch	4.5	Input1_Lch	7
45	GND	0	GND	6
46	Input1_Rch	4.5	Input1_Rch	5
47	GND	0	GND	4
48	Input2_Lch	4.5	Input2_Lch	3
49	GND	0	GND	2
50	Input2_Rch	4.5	Input2_Rch	1

TANSHI Assy

MAIN Assy

CN9003 (AKM1349)		Voltage (V)	CN4005 (AKM1349)	
No.	Pin Name		Pin Name	No.
1	V+9V_A	9.1	V+9V_A	50
2	V+9V_AS	9	V+9V_AS	49
3	GND	0	GND	48
4	INPUT3_Lch	4.5	INPUT3_Lch	47
5	GND	0	GND	46
6	INPUT3_Rch	4.5	INPUT3_Rch	45
7	GND	0	GND	44
8	PC_Lch	4.5	PC_Lch	43
9	GND	0	GND	42
10	PC_Rch	4.5	PC_Rch	41
11	GND	0	GND	40
12	SIDE_Lch	4.5	SIDE_Lch	39
13	GND	0	GND	38
14	SIDE_Rch	4.5	SIDE_Rch	37
15	GND	0	GND	36
16	AIR_Lch	3.8	AIR_Lch	35
17	GND	0	GND	34
18	AIR_Rch	3.8	AIR_Rch	33
19	GND	0	GND	32
20	SCART_OUT_Lch	4.5	SCART_OUT_Lch	31
21	GND	0	GND	30
22	SCART_OUT_Rch	4.5	SCART_OUT_Rch	29
23	V+3_3V_STB	3.3	V+3_3V_STB	28
24	HP_L	4.5	HP_L	27
25	GND	0	GND	26
26	HP_R	4.5	HP_R	25
27	GND	0	GND	24
28	SIDE_PLUG	4.9	SIDE_PLUG	23
29	SIDE_V	2.5	SIDE_V	22
30	GND	0	GND	21
31	SIDE_SY	2.5	SIDE_SY	20
32	GND	0	GND	19
33	SIDE_S2	0.2	SIDE_S2	18
34	GND	0	GND	17
35	SIDE_SC	0	SIDE_SC	16
36	GND	0	GND	15
37	AUDIO_OUT_Lch	4.6	AUDIO_OUT_Lch	14
38	GND	0	GND	13
39	AUDIO_OUT_Rch	4.6	AUDIO_OUT_Rch	12
40	GND	0	GND	11
41	RXD_SR	3.2	RXD_SR	10
42	TXD_SR	3.2	TXD_SR	9
43	SR_OUT	5.0	SR_OUT	8
44	AC_SC3_MUTE	0	AC_SC3_MUTE	7
45	AC_SC2_MUTE	0	AC_SC2_MUTE	6
46	AC_SC1_MUTE	0	AC_SC1_MUTE	5
47	AC_AM_MUTE	0	AC_AM_MUTE	4
48	AC_HP_MUTE	0	AC_HP_MUTE	3
49	HP_PLUG	2.9	HP_PLUG	2
50	V+5V_A	5.0	V+5V_A	1

R07 DT Assy

MAIN Assy

CN6003 (AKM1349)		Voltage (V)	CN4013 (AKM1353)	
No.	Pin Name		Pin Name	No.
1	GND	0	GND	50
2	RXDA (TXD_DT)	3.3	TXD_DT (RXDA)	49
3	TXDA (RXD_DT)	3.3	RXD_DT (TXDA)	48
4	GND	0	GND	47
5	DT_FNC	3.3	DT_FNC	46
6	GND	0	GND	45
7	CLK_DT	0 to 3.3	CLK_DT	44
8	GND	0	GND	43
9	DVID_CrCb [7] (Y7_DT)	0 to 3.3	Y7_DT (DVID_CrCb [7])	42
10	DVID_CrCb [6] (Y6_DT)	0 to 3.3	Y6_DT (DVID_CrCb [6])	41
11	GND	0	GND	40
12	DVID_CrCb [5] (Y5_DT)	0 to 3.3	Y5_DT (DVID_CrCb [5])	39
13	DVID_CrCb [4] (Y4_DT)	0 to 3.3	Y4_DT (DVID_CrCb [4])	38
14	GND	0	GND	37
15	DVID_CrCb [3] (Y3_DT)	0 to 3.3	Y3_DT (DVID_CrCb [3])	36
16	DVID_CrCb [2] (Y2_DT)	0 to 3.3	Y2_DT (DVID_CrCb [2])	35
17	GND	0	GND	34
18	DVID_CrCb [1] (Y1_DT)	0 to 3.3	Y1_DT (DVID_CrCb [1])	33
19	DVID_CrCb [0] (Y0_DT)	0 to 3.3	Y0_DT (DVID_CrCb [0])	32
20	GND	0	GND	31
21	NC	0	CB7_DT	30
22	NC	0	CB6_DT	29
23	GND	0	GND	28
24	GND	0	CB5_DT	27
25	GND	0	CB4_DT	26
26	GND	0	GND	25
27	GND	0	CB3_DT	24
28	GND	0	CB2_DT	23
29	GND	0	GND	22
30	GND	0	CB1_DT	21
31	GND	0	CB0_DT	20
32	GND	0	GND	19
33	GND	0	CR7_DT	18
34	GND	0	CR6_DT	17
35	GND	0	GND	16
36	GND	0	CR5_DT	15
37	GND	0	CR4_DT	14
38	GND	0	GND	13
39	GND	0	CR3_DT	12
40	GND	0	CR2_DT	11
41	GND	0	GND	10
42	GND	0	CR1_DT	9
43	GND	0	CR0_DT	8
44	GND	0	GND	7
45	DE_DT	0	DE_DT	6
46	GND	0	GND	5
47	VD_DT	3.3	VD_DT	4
48	GND	0	GND	3
49	HD_DT	3.3	HD_DT	2
50	GND	0	GND	1

A R07 DT Assy

MAIN Assy

CN4000 (AKM1348)		Voltage (V)	CN4014 (AKM1354)	
No.	Pin Name		Pin Name	No.
1	GND	0	GND	40
2	GND	0	GND	39
3	GND	0	GND	38
4	GND	0	GND	37
5	GND	0	GND	36
6	GND	0	GND	35
7	DT_SP_R	0	DT_SP_R	34
8	GND	0	GND	33
9	DT_SP_L	0	DT_SP_L	32
10	GND	0	GND	31
11	OPT_R	0	OPT_R	30
12	GND	0	GND	29
13	OPT_L	0	OPT_L	28
14	GND	0	GND	27
15	DT_MON_C	1.7	DT_MON_C	26
16	GND	0	GND	25
17	GND	0	GND	24
18	DT_MON_Y	1.7	DT_MON_Y	23
19	GND	0	GND	22
20	GND	0	GND	21
21	GND	0	GND	20
22	GND	0	GND	19
23	GND	0	GND	18
24	GND	0	GND	17
25	GND	0	GND	16
26	GND	0	GND	15
27	NOT_USE	0	NC	14
28	GND	0	GND	13
29	GND	0	GND	12
30	NOT_USE	0	NC	11
31	GND	0	GND	10
32	GND	0	GND	9
33	NOT_USE	0	NC	8
34	GND	0	GND	7
35	GND	0	GND	6
36	ANT_POW_EU	0	ANT_POW_EU	5
37	POW_DET	0	POW_DET	4
38	RST_DT	3.3	RST_DT	3
39	DT_DET	0	DT_DET	2
40	GND	0	GND	1

42E AUDIO Assy

MAIN Assy

CN3752 (KM200NA11)		Voltage (V)	CN4007 (KM200NA11)	
No.	Pin Name		Pin Name	No.
11	PSW_A	2.8	PSW_A	11
10	SDA_AU	3.4	SDA_AU	10
9	SCL_AU	3.4	SCL_AU	9
8	A_MUTE	0	A_MUTE	8
7	A_STBY_B	3.4	A_STBY_B	7
6	GND	0	GND	6
5	AUDIO_R	0	AUDIO_R	5
4	GND	0	GND	4
3	AUDIO_L	0	AUDIO_L	3
2	GND	0	GND	2
1	A_NG_B	2.8	A_NG_B	1

AUDIO

MAIN Assy

		Voltage (V)	CN4015 (B3P-VH)	
No.	Pin Name		Pin Name	No.
		17.2	V+16_5V	1
		0	GND	2
		0	GND	3

DVI JIG

MAIN Assy

		Voltage (V)	CN4011 (AKM1274)	
No.	Pin Name		Pin Name	No.
		0	GND	1
		3.4	V+3_3V_STB	2
		6.5	V+6_5V	3

MAIN Assy

		Voltage (V)	CN4010 (KM200NA7)	
No.	Pin Name		Pin Name	No.
2	REM	0	REM	7
6	GND	0	GND	6
1	V+5_1V_STB	5.0	V+5_1V_STB	5
4	V+3_3V_STB	3.4	V+3_3V_STB	4
3	KEY_AD1	3.4	KEY_AD1	3
2	KEY_AD2	3.4	KEY_AD2	2
1	GND	0	GND	1

SIDE KEY Assy LED IR Assy
CN9501 (KM200NA4L) CN9701 (AKP1303)

E R07 DT Assy

MAIN Assy

CN6000 (AKM1298)		Voltage (V)	CN4017 (KM200NA12)	
No.	Pin Name		Pin Name	No.
1	V+35V	37.0	V+35V	12
2	GND	0	GND	11
3	NC	0	NC	10
4	GND	0	GND	9
5	V+12V	11.8	V+12V	8
6	GND	0	GND	7
7	V+6_5V	6.7	V+6_5V	6
8	V+5_1V_STB	5.1	V+5_1V_STB	5
9	V+5_1V	5.0	V+5_1V	4
10	V+5_1V	5.0	V+5_1V	3
11	GND	0	GND	2
12	V+3_3V_STB	3.4	V+3_3V_STB	1

POWER SUPPLY Unit

MAIN Assy

P8 (B13B-PH-K-S)		Voltage (V)	CN4002 (KM200NA13)	
No.	Pin Name		Pin Name	No.
1	V+6_5V	6.6	V+6_5V	1
2	GND	0	GND	2
3	V+12V	12.1	V+12V	3
4	GND	0	GND	4
5	+16.5V	17.2	V+16.5V	5
6	GND	0	GND	6
7	+5_1V	4.9	V+5_1V	7
8	+5_1V	4.9	V+5_1V	8
9	+5_1V	4.9	V+5_1V	9
10	+5_1V	4.9	V+5_1V	10
11	GND-D	0	GND	11
12	GND-D	0	GND	12
13	GND-D	0	GND	13

POWER SUPPLY Unit

MAIN Assy

P9 (B11B-PH-K-S)		Voltage (V)	CN4008 (KM200NA11)	
No.	Pin Name		Pin Name	No.
1	M-SW-DET	3.4	N.C.	1
2	AC-DET	3.4	AC_DET	2
3	N.C.	3.4	RELAY	3
4	GND-D	0	GND	4
5	STB3_3V	3.4	V+3_3V_STB	5
6	GND-D	0	GND	6
7	STBY5_1V	5.0	V+5_1V_STB	7
8	GND-D	0	GND	8
9	+35V	35.0	V+35V	9
10	GND-D	0	GND	10
11	US-SW	0	US_SW	11

Fan

MAIN Assy

		Voltage (V)	CN4009 (KM200NA3)	
No.	Pin Name		Pin Name	No.
		0	FAN_VCC	1
		3.4	FAN_NG1	2
		0	GND	3

PC Assy

MAIN Assy

CN9301 (CKS3826)		Voltage (V)	CN4018 (AKM1234)	
No.	Pin Name		Pin Name	No.
1	V+5V_A	5.0	V+5V_A	12
2	WE ROM	0	WE ROM	11
3	D-sub DET	0	D-sub DET	10
4	V+3.3V_UCOM	3.3	V+3.3V_UCOM	9
5	PC_V	0	PC_V	8
6	PC_H	0	PC_H	7
7	V+9V_A	9.0	V+9V_A	6
8	PC_G	2.4	PC_G	5
9	GND	0	GND	4
10	PC_B	2.4	PC_B	3
11	GND	0	GND	2
12	PC_R	2.4	PC_R	1

42 & 60 LED Assy

MAIN Assy

CN9601 (AKP1303)		Voltage (V)	CN4006 (KM200NA6)	
No.	Pin Name		Pin Name	No.
1	LED-	0.2	LED-	1
2	LED_ON	3.4	LED_ON	2
3	LED_OFF	0	LED_OFF	3
4	LED_REC	0	LED_REC	4
5	LED_MDM	0	LED_MDM	5
6	LED-	0.2	LED-	6

42 DIGITAL Assy

42 X DRIVE Assy

CN3505 (D19)

CN1001 (X1)

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	PSW	O	Function standby control signal	0	TP3519
2	XSUS_PD	I	X drive PD signal	0	TP3513
3	XDD_PD	I	X drive PD signal	0	TP3514
4	XDRV_PD	I	X drive PD signal	0	TP3515
5	GND	-	GND	-	-
6	XRsv1	I	X drive control signal (reserve)	-	-
7	XSUS-MSK	I	X drive control signal	0 to 3.3	-
8	GND	-	GND	-	-
9	XNR-D	O	X drive control signal	0 to 3.3	-
10	GND	-	GND	-	-
11	XSUS-G	O	X drive control signal	0 to 3.3	-
12	GND	-	GND	-	-
13	XSUS-D	O	X drive control signal	0 to 3.3	-
14	GND	-	GND	-	-
15	XSUS-U	O	X drive control signal	0 to 3.3	-
16	GND	-	GND	-	-
17	XSUS-B	O	X drive control signal	0 to 3.3	-
18	GND	-	GND	-	-

42 DIGITAL Assy

42 Y DRIVE Assy

CN3506 (D20)

CN2001 (Y1)

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	GND	-	GND	-	-
2	SCN5V_PD	I	Y drive PD signal	0	TP3507
3	SI_L	O	Scan control signal	0 to 3.3	-
4	SI_H	O	Scan control signal	0 to 3.3	-
5	GND	-	GND	-	-
6	CLR	O	Scan control signal	0 to 3.3	-
7	CLK	O	Scan control signal	0 to 3.3	-
8	GND	-	GND	-	-
9	LE	O	Scan control signal	0 to 3.3	-
10	OC2	O	Scan control signal	0 to 3.3	-
11	OC1 (-1)	O	Scan control signal	0 to 3.3	-
12	GND	-	GND	-	-
13	YSUS-B	O	Y drive control signal	0 to 3.3	-
14	YSUS-U	O	Y drive control signal	0 to 3.3	-
15	GND	-	GND	-	-
16	YSUS-D	O	Y drive control signal	0 to 3.3	-
17	YSUS-G	O	Y drive control signal	0 to 3.3	-
18	GND	-	GND	-	-
19	YPR-U	O	Y drive control signal	0 to 3.3	-
20	YRsv1	-	Y drive control signal (reserve)	-	-
21	GND	-	GND	-	-
22	YSUS-MSK	O	Y drive control signal	0 to 3.3	-
23	YNRST	O	Y drive control signal	0 to 3.3	-
24	YRsv2	-	Y drive control signal (reserve)	-	-
25	GND	-	GND	-	-
26	YENOF5	O	Y drive control signal	0 to 3.3	-
27	YRsv3	O	Y drive control signal (reserve)	-	-
28	YSOFT-D	O	Y drive control signal	0 to 3.3	-
29	GND	-	GND	-	-
30	VOFS_ADJ	-	Vofs offset adjustment	1.85	TP3181
31	VYPRST_ADJ	O	Reset voltage adjustment	1.21	TP3182
32	GND	-	GND	-	-
33	GND	-	GND	-	-
34	N.C	-	Non connection	-	-
35	GND	-	GND	-	-
36	YDD_PD	I	Y drive PD signal	0	TP3509
37	YSUS_PD	I	Y drive PD signal	0	TP3510
38	SCAN_PD	I	Y drive PD signal	0	TP3511
39	YDRV_PD	I	Y drive PD signal	0	TP3512
40	PSW	O	Function standby control signal	0	TP3518

42 DIGITAL Assy ↔ **42 ADDRESS Assy**
CN3501 (D15) ↔ **CN1501 (AD1)**

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	N.C	–	Non connection	–	–
2	ADR_PD	I	Address PD signal	0 to 4	TP3501
3	N.C	–	Non connection	–	–
4	GND	–	GND	–	–
5	V+8V	O	+8 V power supply	8	TP3618
6	V+8V	O	+8 V power supply	8	TP3618
7	GND	–	GND	–	–
8	GND	–	GND	–	–
9	N.C	–	Non connection	–	–
10	TA–	O	LVDS data	1 to 1.4	–
11	TA+	O	LVDS data	1 to 1.4	–
12	N.C	–	Non connection	–	–
13	GND	–	GND	–	–
14	N.C	–	Non connection	–	–
15	TB–	O	LVDS data	1 to 1.4	–
16	TB+	O	LVDS data	1 to 1.4	–
17	N.C	–	Non connection	–	–
18	GND	–	GND	–	–
19	N.C	–	Non connection	–	–
20	TC–	O	LVDS data	1 to 1.4	–
21	TC+	O	LVDS data	1 to 1.4	–
22	N.C	–	Non connection	–	–
23	GND	–	GND	–	–
24	N.C	–	Non connection	–	–
25	TCLK–	O	LVDS data	1 to 1.4	–
26	TCLK+	O	LVDS data	1 to 1.4	–
27	N.C	–	Non connection	–	–
28	GND	–	GND	–	–
29	N.C	–	Non connection	–	–
30	TD–	O	LVDS data	1 to 1.4	–
31	TD+	O	LVDS data	1 to 1.4	–
32	N.C	–	Non connection	–	–
33	GND	–	GND	–	–
34	GND	–	GND	–	–
35	V+3V_D	O	+3 V power supply	3.3	TP3607
36	V+3V_D	O	+3 V power supply	3.3	TP3607
37	GND	–	GND	–	–
38	ADRS_3	O	Output timing control	0	–
39	ADRS_2	O	Output timing control	0	–
40	GND	–	GND	–	–

42 DIGITAL Assy ↔ **42 ADDRESS Assy**
CN3502 (D16) ↔ **CN1501 (AD1)**

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	N.C	–	Non connection	–	–
2	ADR_PD	I	Address PD signal	0 to 4	TP3502
3	N.C	–	Non connection	–	–
4	GND	–	GND	–	–
5	V+8V	O	+8 V power supply	8	TP3618
6	V+8V	O	+8 V power supply	8	TP3618
7	GND	–	GND	–	–
8	GND	–	GND	–	–
9	N.C	–	Non connection	–	–
10	TA–	O	LVDS data	1 to 1.4	–
11	TA+	O	LVDS data	1 to 1.4	–
12	N.C	–	Non connection	–	–
13	GND	–	GND	–	–
14	N.C	–	Non connection	–	–
15	TB–	O	LVDS data	1 to 1.4	–
16	TB+	O	LVDS data	1 to 1.4	–
17	N.C	–	Non connection	–	–
18	GND	–	GND	–	–
19	N.C	–	Non connection	–	–
20	TC–	O	LVDS data	1 to 1.4	–
21	TC+	O	LVDS data	1 to 1.4	–
22	N.C	–	Non connection	–	–
23	GND	–	GND	–	–
24	N.C	–	Non connection	–	–
25	TCLK–	O	LVDS data	1 to 1.4	–
26	TCLK+	O	LVDS data	1 to 1.4	–
27	N.C	–	Non connection	–	–
28	GND	–	GND	–	–
29	N.C	–	Non connection	–	–
30	TD–	O	LVDS data	1 to 1.4	–
31	TD+	O	LVDS data	1 to 1.4	–
32	N.C	–	Non connection	–	–
33	GND	–	GND	–	–
34	GND	–	GND	–	–
35	V+3V_D	O	+3 V power supply	3.3	TP3607
36	V+3V_D	O	+3 V power supply	3.3	TP3607
37	GND	–	GND	–	–
38	ADRS_3	O	Output timing control	0	–
39	ADRS_2	O	Output timing control	0	–
40	GND	–	GND	–	–

42 DIGITAL Assy CN3503 (D17) ↔ 42 ADDRESS Assy CN1501 (AD1)

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	N.C	–	Non connection	–	–
2	ADR_PD	I	Address PD signal	0 to 4	TP3503
3	N.C	–	Non connection	–	–
4	GND	–	GND	–	–
5	V+8V	O	+8 V power supply	8	TP3618
6	V+8V	O	+8 V power supply	8	TP3618
7	GND	–	GND	–	–
8	GND	–	GND	–	–
9	N.C	–	Non connection	–	–
10	TA–	O	LVDS data	1 to 1.4	–
11	TA+	O	LVDS data	1 to 1.4	–
12	N.C	–	Non connection	–	–
13	GND	–	GND	–	–
14	N.C	–	Non connection	–	–
15	TB–	O	LVDS data	1 to 1.4	–
16	TB+	O	LVDS data	1 to 1.4	–
17	N.C	–	Non connection	–	–
18	GND	–	GND	–	–
19	N.C	–	Non connection	–	–
20	TC–	O	LVDS data	1 to 1.4	–
21	TC+	O	LVDS data	1 to 1.4	–
22	N.C	–	Non connection	–	–
23	GND	–	GND	–	–
24	N.C	–	Non connection	–	–
25	TCLK–	O	LVDS data	1 to 1.4	–
26	TCLK+	O	LVDS data	1 to 1.4	–
27	N.C	–	Non connection	–	–
28	GND	–	GND	–	–
29	N.C	–	Non connection	–	–
30	TD–	O	LVDS data	1 to 1.4	–
31	TD+	O	LVDS data	1 to 1.4	–
32	N.C	–	Non connection	–	–
33	GND	–	GND	–	–
34	GND	–	GND	–	–
35	V+3V_D	O	+3 V power supply	3.3	TP3607
36	V+3V_D	O	+3 V power supply	3.3	TP3607
37	GND	–	GND	–	–
38	ADRS_3	O	Output timing control	0	–
39	ADRS_2	O	Output timing control	0	–
40	GND	–	GND	–	–

42 DIGITAL Assy CN3504 (D18) ↔ 42 ADDRESS Assy CN1501 (AD1)

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	N.C	–	Non connection	–	–
2	ADR_PD	I	Address PD signal	0 to 4	TP3504
3	PSIZE	I	Panel size judge signal	3.3	–
4	GND	–	GND	–	–
5	V+8V	O	+8 V power supply	8	TP3618
6	V+8V	O	+8 V power supply	8	TP3618
7	GND	–	GND	–	–
8	GND	–	GND	–	–
9	N.C	–	Non connection	–	–
10	TA–	O	LVDS data	1 to 1.4	–
11	TA+	O	LVDS data	1 to 1.4	–
12	N.C	–	Non connection	–	–
13	GND	–	GND	–	–
14	N.C	–	Non connection	–	–
15	TB–	O	LVDS data	1 to 1.4	–
16	TB+	O	LVDS data	1 to 1.4	–
17	N.C	–	Non connection	–	–
18	GND	–	GND	–	–
19	N.C	–	Non connection	–	–
20	TC–	O	LVDS data	1 to 1.4	–
21	TC+	O	LVDS data	1 to 1.4	–
22	N.C	–	Non connection	–	–
23	GND	–	GND	–	–
24	N.C	–	Non connection	–	–
25	TCLK–	O	LVDS data	1 to 1.4	–
26	TCLK+	O	LVDS data	1 to 1.4	–
27	N.C	–	Non connection	–	–
28	GND	–	GND	–	–
29	N.C	–	Non connection	–	–
30	TD–	O	LVDS data	1 to 1.4	–
31	TD+	O	LVDS data	1 to 1.4	–
32	N.C	–	Non connection	–	–
33	GND	–	GND	–	–
34	GND	–	GND	–	–
35	V+3V_D	O	+3 V power supply	3.3	TP3607
36	V+3V_D	O	+3 V power supply	3.3	TP3607
37	GND	–	GND	–	–
38	ADRS_3	O	Output timing control	0	–
39	ADRS_2	O	Output timing control	0	–
40	GND	–	GND	–	–

A **42 DIGITAL Assy** ↔ **Reserve**
CN3002 (D12) ↔ **(Non connection)**

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	V+3V_D	O	+3.3 V power supply output	3.3	—
2	V+3V_D	O	+3.3 V power supply output	3.3	—
3	V+3V_D	O	+3.3 V power supply output	3.3	—
4	GND_D	—	GND	—	—
5	GND_D	—	GND	—	—
6	GND_D	—	GND	—	—
7	LED_R	O	Red LED control output	0 to 3.3	—
8	LED_B	O	Blue LED control output	0 to 3.3	—
9	MSEL	I	Control select	0 to 3.3	—
10	PBF	I	Panel type judge	0 to 3.3	—
11	NC	I	Non connection	—	—
12	YOBI0	I	Reserve input	0 to 3.3	—
13	YOBI1	I	Reserve input	0 to 3.3	—
14	YOBI2	I	Reserve input	0 to 3.3	—
15	YOBI3	I	Reserve input	0 to 3.3	—
16	YOBI4	I	Reserve input	0 to 3.3	—
17	NC	I	Non connection	—	—
18	NC	I	Non connection	—	—
19	V+3V_STB	O	STB 3.3 V power supply output	3.3	—
20	GND_D	—	GND	—	—

C **42 DIGITAL Assy** ↔ **SENSOR Assy**
CN3151 (D24) ↔ **CN3651 (TE1)**

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	V+3.3V_EEP	O	Power supply output for memory	3.3	—
2	E_SCL	O	IIC communication clock signal	0 to 3.3	—
3	E_SDA	O	IIC communication data signal	0 to 3.3	—
4	TEMP1	I	Panel temperature sensor signal	0 to 3.3	—
5	GND	—	GND	—	—

D **42 DIGITAL Assy** ↔ **POWER SUPPLY Unit**
CN3601 (D21) ↔ **(P4)**

Pin No.	Pin Name	I/O	Function	Voltage (V)	TP
1	V+12V	I	+12 V power supply input	12	—
2	V+12V	I	+12 V power supply input	12	—
3	GND	—	GND	—	—
4	GND	—	GND	—	—
5	V+3.3V_STB	I	STB3.3 V power supply input	0 to 3.3	—
6	GND	—	GND	—	—
7	M_SW_DET	I	Mechanism switch detection signal input	0 to 3.3	—
8	EXT_PD	O	Power down signal	0 to 3.3	—
9	VSUS_ADJ	O	VSUS power supply adjustment signal	0 to 3.3	—
10	PS_PD	I	Power supply PD signal	0 to 3.3	—
11	RELAY	O	Relay control	0 to 3.3	—
12	DRF_B	O	Large power supply ON/OFF control signal	0 to 3.3	—
13	AC_DET	I	AC power supply state input	0 to 3.3	—
14	PD_TRG_B	I	Power down trigger signal	0 to 3.3	—

Pin Function

42E AUDIO Assy ↔ MAIN Assy
CN3752 (A2) ↔ CN4007 (M9)

Pin No.	Pin Name	I/O	Function	Remarks
1	A_NG_B	O	DC detection, disconnection of cable detection	L : Abnormal, H : Normal
2	GND	-	GND for small signal	-
3	AUDIO_L	I	Small signal L ch	-
4	GND	-	GND for small signal	-
5	AUDIO_R	I	Small signal R ch	-
6	GND	-	GND for small signal	-
7	A_STBY_B	I	MUTE ON/OFF signal for LA4625 IC internal circuit	L : Standby, H : ON
8	A_MUTE	I	MUTE ON/OFF signal for LA4625 IC external circuit	L : MUTE OFF, H : MUTE
9	SCL_AU	I	CLK of I2C for NJW1183GK1 IC	-
10	SDA_AU	I/O	DATA of I2C for NJW1183GK1 IC	-
11	PSW_A	I	ON/OFF switch for 12 V regulator IC	L : OFF, H : ON

42E AUDIO Assy ↔ POWER SUPPLY Unit
CN3751 (A1) ↔ (P5)

Pin No.	Pin Name	I/O	Function	Remarks
1	+16.5V	-	Power supply (16.5 V) for LA4625 IC	-
2	GND_D	-	Return GND for LA4625 IC	-
3	GND_D	-	Return GND for LA4625 IC	-

42E AUDIO Assy ↔ Speaker
CN3753 (A3)

Pin No.	Pin Name	I/O	Function	Remarks
1	RH+	O	Tweeter output R+	-
2	RL+	O	Woofers output R+ (Speaker output R+)	-
3	RH-	O	Tweeter output R-	-
4	RL-	O	Woofers output R- (Speaker output R-)	-
5	LL+	O	Woofers output L+ (Speaker output L+)	-
6	LH+	O	Tweeter output L+	-
7	LL-	O	Woofers output L- (Speaker output L-)	-
8	LH-	O	Tweeter output L-	-

SIDE KEY Assy ↔ MAIN Assy
CN9501 (SW1) ↔ CN4010 (M8)

Pin No.	Pin Name	I/O	Function	Remarks
1	GND	-	GND	-
2	KEY_AD2	O	KEY voltage 2	-
3	KEY_AD1	O	KEY voltage 1	-
4	V+3.3V_STB	-	Standby 3.3 V power supply	-

42 & 60 LED Assy ↔ MAIN Assy
CN9601 (L1) ↔ CN4006 (M5)

Pin No.	Pin Name	I/O	Function	Remarks
1	LED-	-	LED signal return	-
2	LED_ON	I	LED control for power ON	H : LED_ON, L : LED_OFF
3	LED_OFF	I	LED control for standby	H : LED_ON, L : LED_OFF
4	LED_REC	I	LED control for REC	H : LED_ON, L : LED_OFF
5	LED_MDM	I	-	-
6	LED-	-	LED signal return	-

LED IR Assy ↔ MAIN Assy
CN9701 (RE1) ↔ CN4010 (M8)


Pin No.	Pin Name	I/O	Function	Remarks
1	V+5.1V_STB	-	Standby 5.1 V power supply	-
2	REM	O	Remote control signal	-
3	LED-	-	LED signal return	-
4	LED_REC	I	LED control for REC	H : LED_ON, L : LED_OFF
5	LED_MDM	I	-	-
6	GND	-	GND	-

4.18 WAVEFORMS

42 ADDRESS Assy

A

Control signals of resonance circuit (1 field)

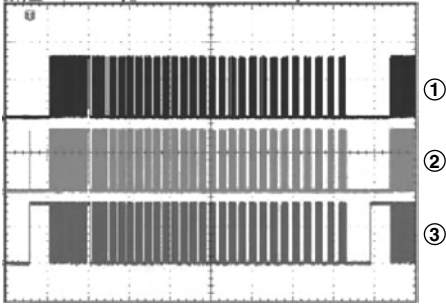


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: ADR_B (side-A test plane "B")
V: 2 V/div H: 2 mS/div
- ② CH2: ADR_U (side-A test plane "U")
V: 2 V/div H: 2 mS/div
- ③ CH3: ADR_D (side-A test plane "D")
V: 2 V/div H: 2 mS/div

B

Control signals of resonance circuit (resonance part)

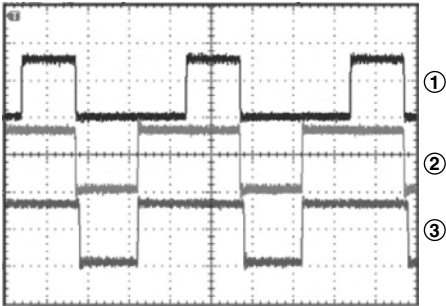


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: ADR_B (side-A test plane "B")
V: 2 V/div H: 200 nS/div
- ② CH2: ADR_U (side-A test plane "U")
V: 2 V/div H: 200 nS/div
- ③ CH3: ADR_D (side-A test plane "D")
V: 2 V/div H: 200 nS/div

C

VADR (1 field)

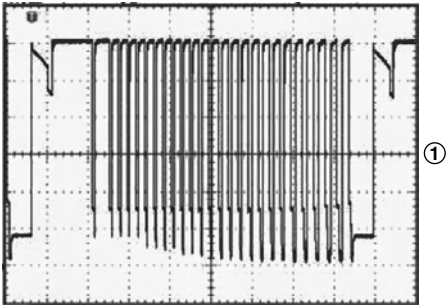


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 10 V/div H: 2 mS/div

D

VADR (1 field)

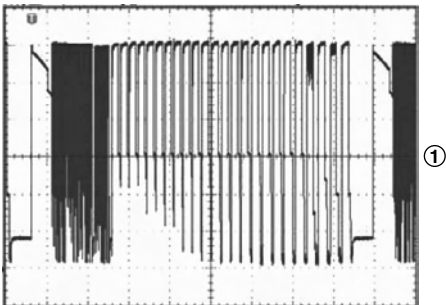


Input: VIDEO 60Hz
Signal: Checkered pattern of Black-White (MKSS13)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 10 V/div H: 2 mS/div

E

VADR (resonance part)

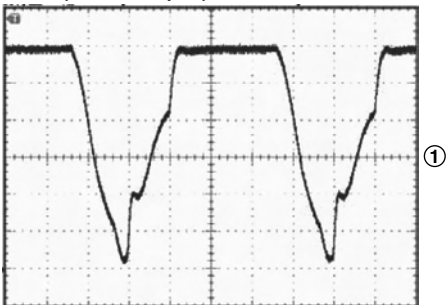


Input: VIDEO 60Hz
Signal: Checkered pattern of Black-White (MKSS13)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 10 V/div H: 200 nS/div

F


Incoming signals of TCP (1 field)

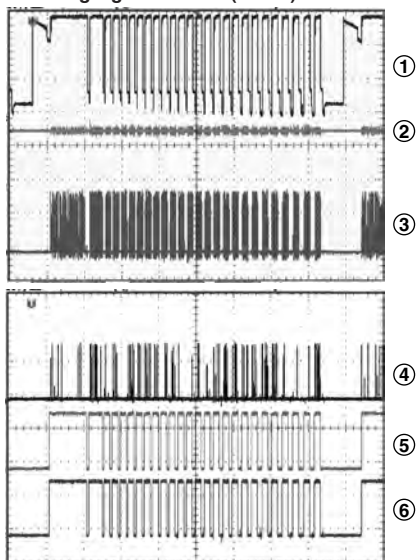

Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 20 V/div H: 2 mS/div
- ② CH2: IC1555 - pin 9 (A3) (side-A test plane "R_E")
V: 2 V/div H: 2 mS/div
- ③ CH3: IC1555 - pin 16 (CLK) (side-A test plane "CLK1")
V: 2 V/div H: 2 mS/div
- ④ CH1: IC1555 - pin 14 (LE) (side-A test plane "LE_E")
V: 2 V/div H: 2 mS/div
- ⑤ CH2: IC1555 - pin 19 (HBLK) (side-A test plane "HBLK")
V: 2 V/div H: 2 mS/div
- ⑥ CH3: IC1555 - pin 17 (LBLK) (side-A test plane "LBLK")
V: 2 V/div H: 2 mS/div


Incoming signals of TCP (1 field)

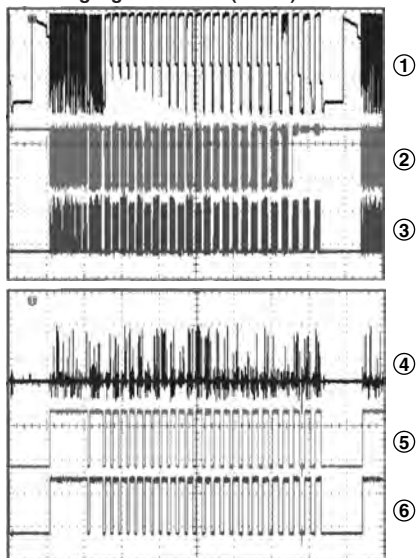

Input: VIDEO 60Hz
Signal: Checkered pattern of Black-White (MKSS13)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 20 V/div H: 2 mS/div
- ② CH2: IC1555 - pin 9 (A3) (side-A test plane "R_E")
V: 2 V/div H: 2 mS/div
- ③ CH3: IC1555 - pin 16 (CLK) (side-A test plane "CLK1")
V: 2 V/div H: 2 mS/div
- ④ CH1: IC1555 - pin 14 (LE) (side-A test plane "LE_E")
V: 2 V/div H: 2 mS/div
- ⑤ CH2: IC1555 - pin 19 (HBLK) (side-A test plane "HBLK")
V: 2 V/div H: 2 mS/div
- ⑥ CH3: IC1555 - pin 17 (LBLK) (side-A test plane "LBLK")
V: 2 V/div H: 2 mS/div

Incoming signals of TCP (resonance part)

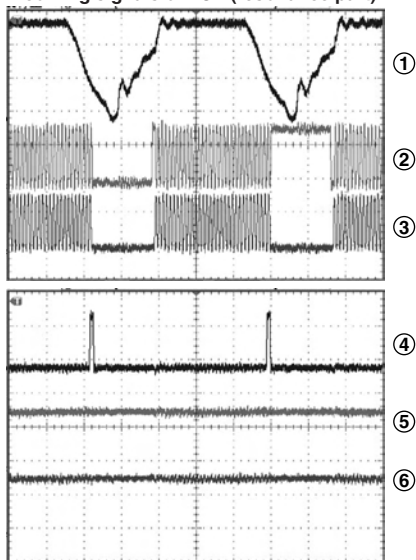


Input: VIDEO 60Hz
Signal: Checkered pattern of Black-White (MKSS13)

- ① CH1: IC1555 - pin 3 (VDD2) (side-A through hole)
V: 20 V/div H: 200 nS/div
- ② CH2: IC1555 - pin 9 (A3) (side-A test plane "R_E")
V: 2 V/div H: 200 nS/div
- ③ CH3: IC1555 - pin 16 (CLK) (side-A test plane "CLK1")
V: 2 V/div H: 200 nS/div
- ④ CH1: IC1555 - pin 14 (LE) (side-A test plane "LE_E")
V: 2 V/div H: 200 nS/div
- ⑤ CH2: IC1555 - pin 19 (HBLK) (side-A test plane "HBLK")
V: 2 V/div H: 200 nS/div
- ⑥ CH3: IC1555 - pin 17 (LBLK) (side-A test plane "LBLK")
V: 2 V/div H: 200 nS/div

42 X DRIVE Assy, 42 Y DRIVE Assy, 42 SCAN A Assy, 42 SCAN B Assy

A

Drive output signal (1 field)

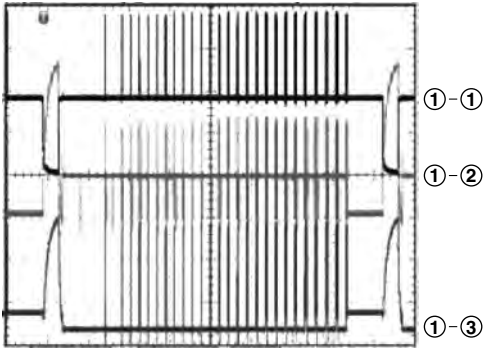


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: R1277 (XPSUS) ↔ K1203 (SUSGND)
V: 100 V/div H: 2 mS/div
(42 X DRIVE Assy)
- ② CH2: K2701 (SCANOUT) ↔ K2330 (SUSGND)
V: 100 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ③ CH3: F2301 (YPSUS) ↔ K2330 (SUSGND)
V: 100 V/div H: 2 mS/div
(42 Y DRIVE Assy)

B

X drive pulse control signal (color-bar)(resonance part)

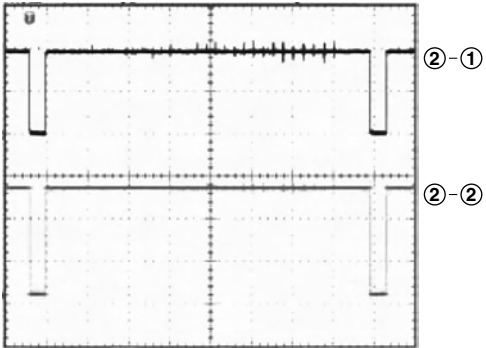


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: K1009 (XSUS-MSK) ↔ K1002 (DGND)
V: 2 V/div H: 2 mS/div
(42 X DRIVE Assy)
- ② CH2: K1005 (XNR-D) ↔ K1002 (DGND)
V: 2 V/div H: 2 mS/div
(42 X DRIVE Assy)

C

Y drive pulse control signal (color-bar)

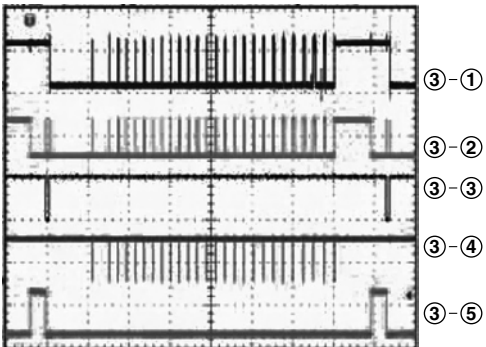


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: K2007 (YNOFS) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ② CH2: K2005 (YSUS-MSK) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ③ Ref3: K2008 (YNRST) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ④ CH3: K2006 (SOFT_D) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ⑤ CH4: K2023 (YRP_U) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)

D

Scan control signal (Color-bar)

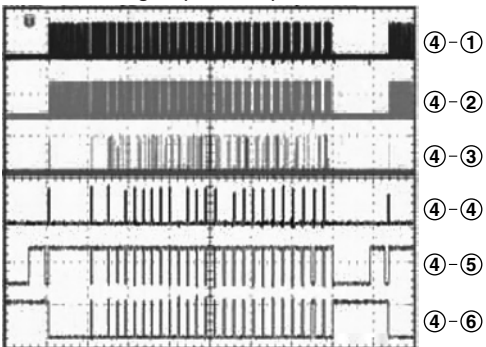


Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: TP2001 (LE) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ② CH2: TP2008 (CLK) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ③ CH3: TP2003 (Si-H) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ④ Ref1: TP2004 (CLR) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ⑤ Ref2: TP2005 (OC2) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)
- ⑥ Ref3: TP2006 (OC1) ↔ K2002 (GND_D)
V: 5 V/div H: 2 mS/div
(42 Y DRIVE Assy)

F


Reset pulse signal

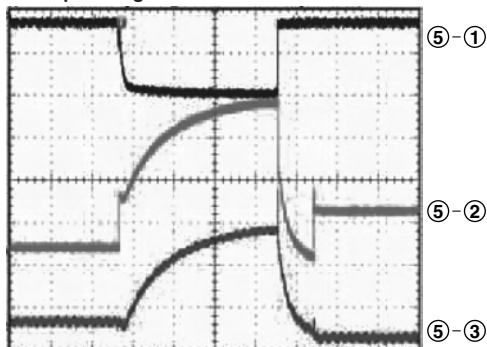

Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: R1277 (XPSUS) ↔ K1203 (SUSGND)
 V: 100 V/div H: 200 μS/div
 (42 X DRIVE Assy)
- ② CH2: K2701 (SCANOUT) ↔ K2330 (SUSGND)
 V: 100 V/div H: 200 μS/div
 (42 Y DRIVE Assy)
- ③ CH3: F2301 (YPSUS) ↔ K2330 (SUSGND)
 V: 100 V/div H: 200 μS/div
 (42 Y DRIVE Assy)


Sustain pulse signal (1 sub, subfield)

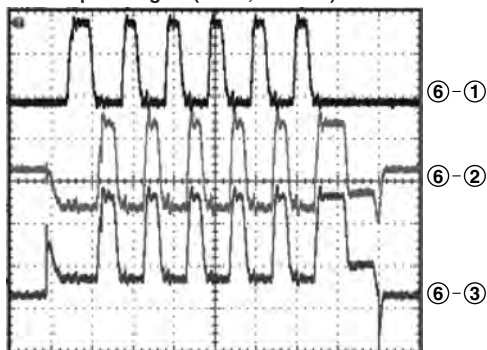

Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: R1277 (XPSUS) ↔ K1203 (SUSGND)
 V: 100 V/div H: 4 μS/div
 (42 X DRIVE Assy)
- ② CH2: K2701 (SCANOUT) ↔ K2330 (SUSGND)
 V: 100 V/div H: 4 μS/div
 (42 Y DRIVE Assy)
- ③ CH3: F2301 (YPSUS) ↔ K2330 (SUSGND)
 V: 100 V/div H: 4 μS/div
 (42 Y DRIVE Assy)

Sustain pulse signal

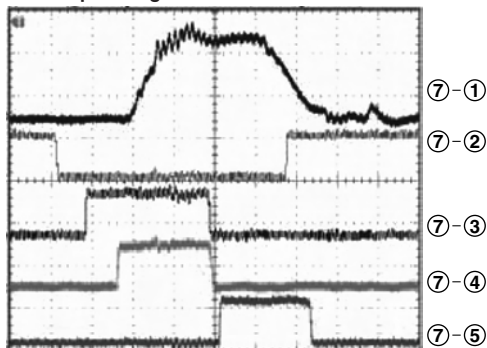

Input: VIDEO 60Hz
Signal: COLOR BAR (MKSS17)

- ① CH1: F2301 (YPSUS) ↔ K2330 (SUSGND)
 V: 100 V/div H: 400 nS/div
 (42 Y DRIVE Assy)
- ② Ref3: K2004 (YSUS-G) ↔ K2002 (GND_D)
 V: 5 V/div H: 400 nS/div
 (42 Y DRIVE Assy)
- ③ Ref2: K2011 (YSUS-U) ↔ K2002 (GND_D)
 V: 5 V/div H: 400 nS/div
 (42 Y DRIVE Assy)
- ④ CH2: K2009 (YSUS-B) ↔ K2002 (GND_D)
 V: 5 V/div H: 400 nS/div
 (42 Y DRIVE Assy)
- ⑤ CH3: K2010 (YSUS-D) ↔ K2002 (GND_D)
 V: 5 V/div H: 400 nS/div
 (42 Y DRIVE Assy)

5. DIAGNOSIS

5.1 TROUBLE SHOOTING

5.1.1 FLOWCHART OF FAILURE ANALYSIS FOR THE WHOLE UNIT

Flowchart of Failure Analysis for The Whole Unit



Flowchart of Failure Analysis for The Whole Unit

A

In the subsequent diagnostic steps, it is most likely that the multi base section is in failure.

Problems concerning video display

Is the panel mask properly displayed? No → Failure analysis for the drive system ⇒ DR2

Yes
Check with the animated slanting ramp mask.

Is the on-screen display (OSD) properly displayed? No → Failure analysis for the DIGITAL Assy ⇒ DG1

Yes
Check on the Factory menu.

Is an external video signal displayed properly? No → Failure analysis for the MAIN Assy ⇒ MA3

Yes

Problems concerning the audio output

Is the audio signal output? No → Failure analysis for the audio system ⇒ AU1

Yes


Specific failure whose cause is difficult to identify in the initial stage

A
B
C
D
E
F


5.1.2 FLOWCHART OF FAILURE ANALYSIS FOR THE POWER SUPPLY UNIT

A


Flowchart of Failure Analysis for The POWER SUPPLY Unit

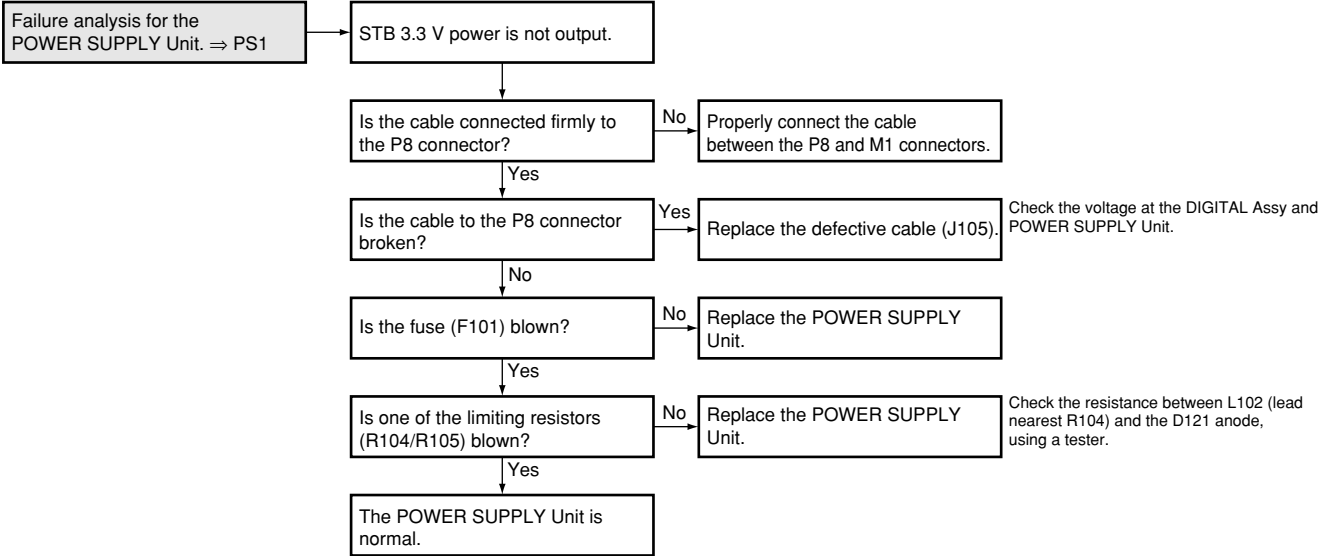

C

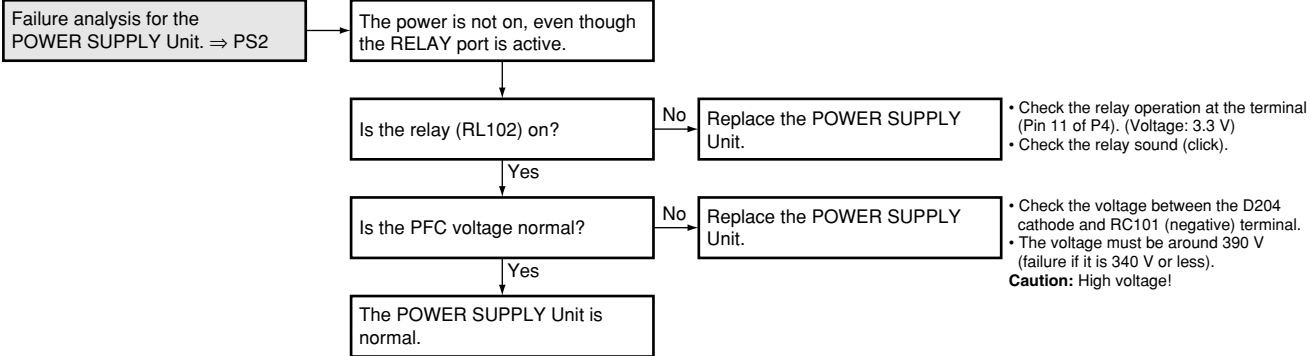


D

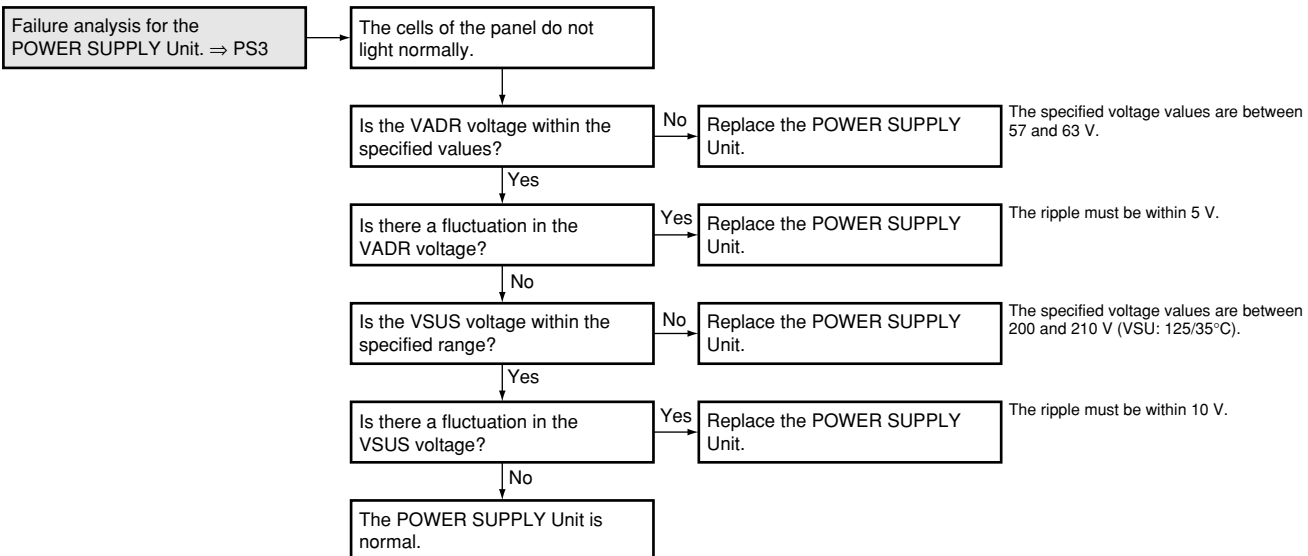

F


5.1.3 FLOWCHART OF FAILURE ANALYSIS FOR THE DIGITAL ASSY

Flowchart of Failure Analysis for The DIGITAL Assy

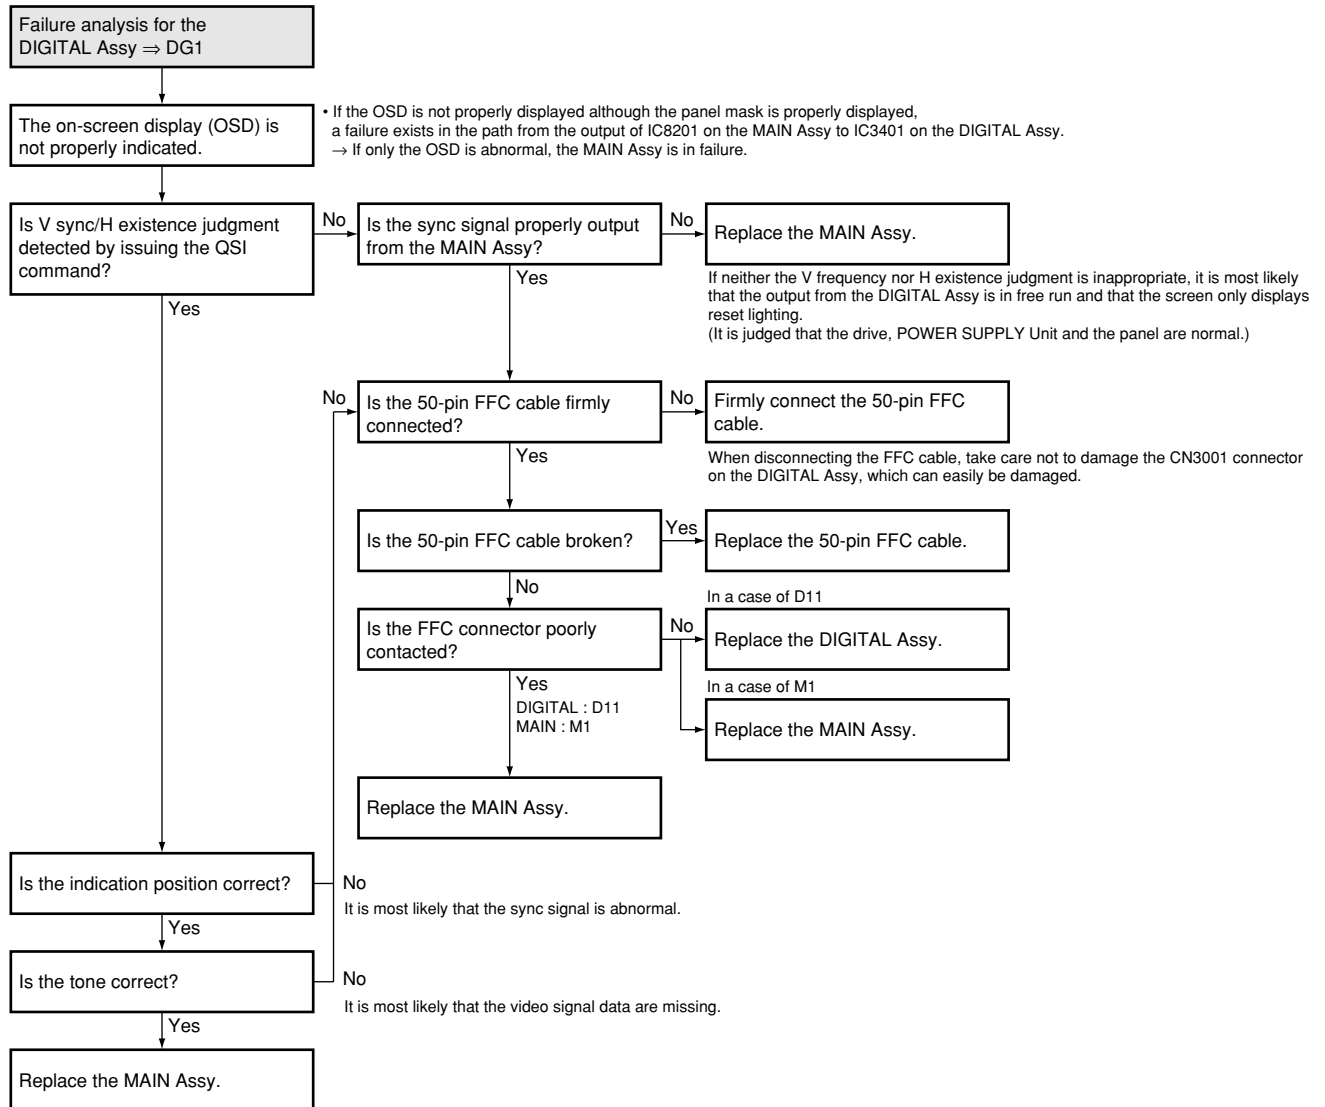

5.1.4 FLOWCHART OF FAILURE ANALYSIS FOR THE DRIVE ASSY

A Flowchart of Failure Analysis for The Drive Assy

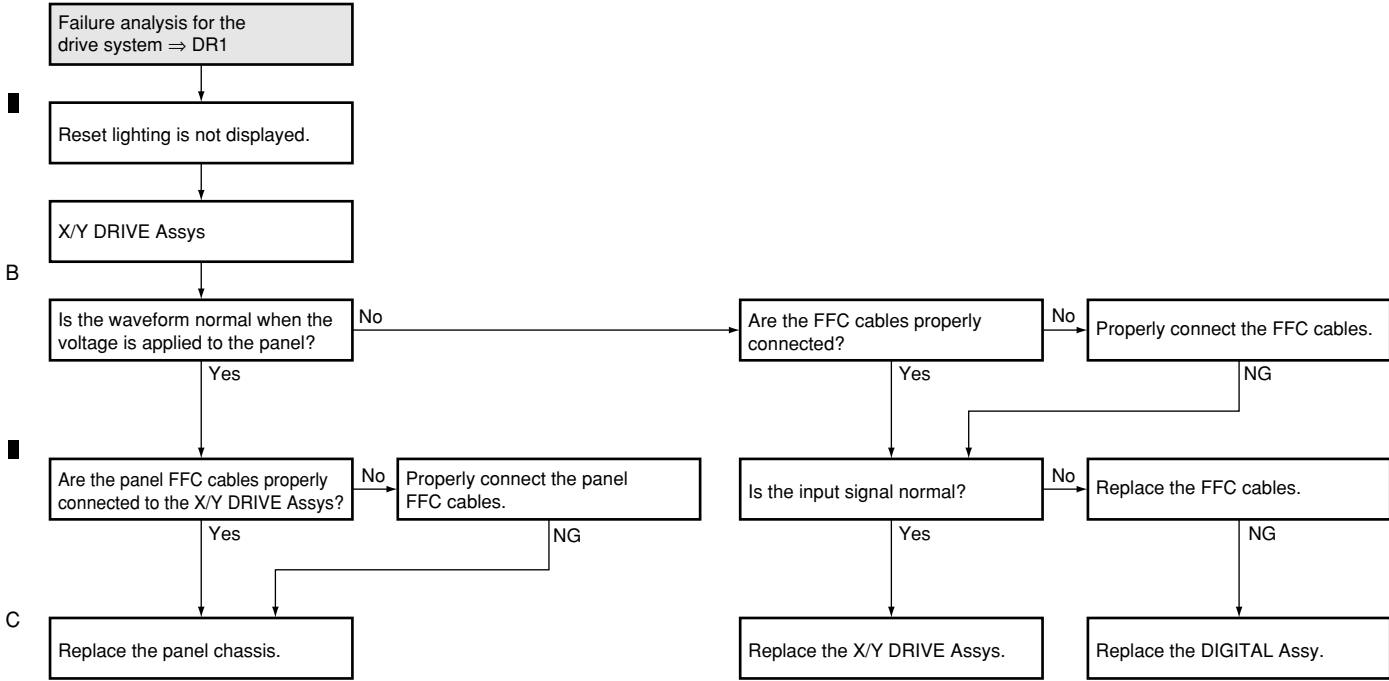


Flowchart of Failure Analysis for The Drive Assy

Failure analysis for the drive system ⇒ DR2

Abnormality across the whole screen, such as luminescent spots

Because it is difficult to identify which drive is in failure, follow the flowchart below to check each Assy.



Are all the connectors properly connected?

No → Reconnect the connectors. NG

Is the VH set voltage (130 V) correctly set?

No → Set the VH voltage correctly. NG

Is the VOFS set voltage correctly set (set value: designated for each panel)?

No → Set the VOFS voltage correctly. NG

Is the VYRST set voltage correctly set (set value: designated for each panel)?

No → Set the VYRST voltage correctly. NG

Is the waveform normal when the voltage is applied to the panel? (See the oscilloscope photos.)

Yes → Another Assy may be in failure. → D

No → Is the input signal normal? (See the oscilloscope photos.)

Is the input signal normal? (See the oscilloscope photos.)


No → Replace the FFC cables. NG

Is the waveform of the control signal from the SCAN Assy normal? (See the oscilloscope photos.)

No → Replace the Y DRIVE Assy.

Replace the SCAN IC.

A

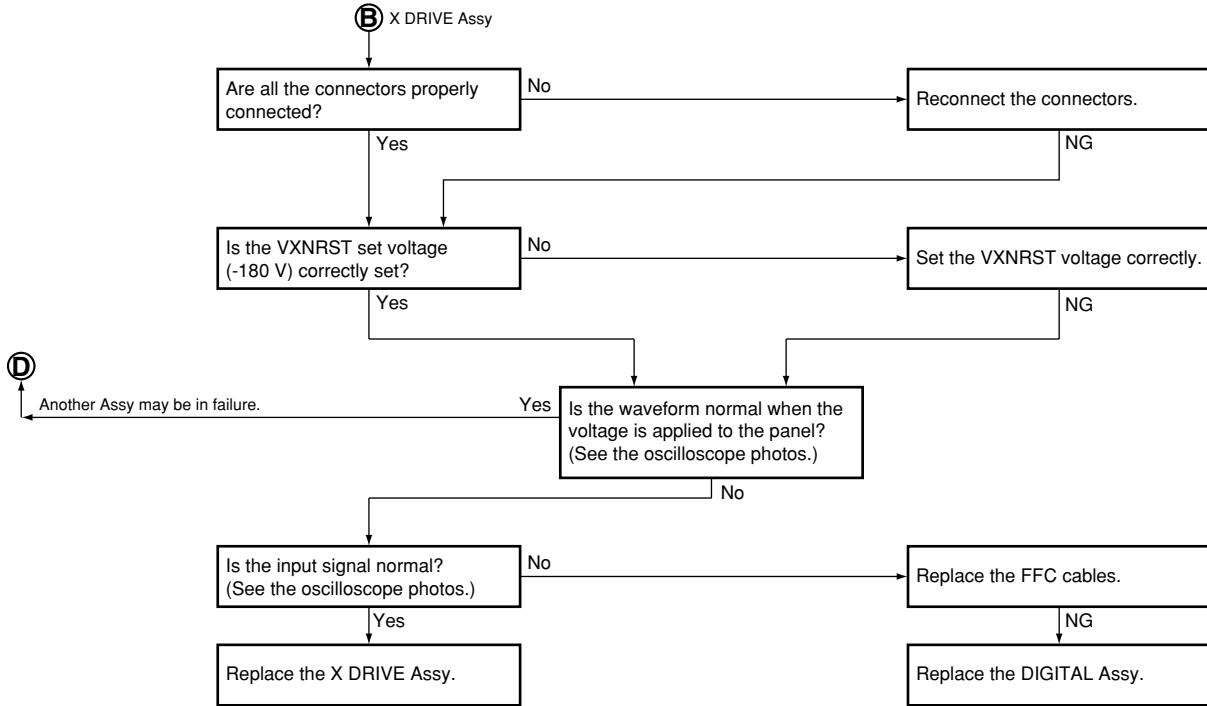


B




C

D

E



F

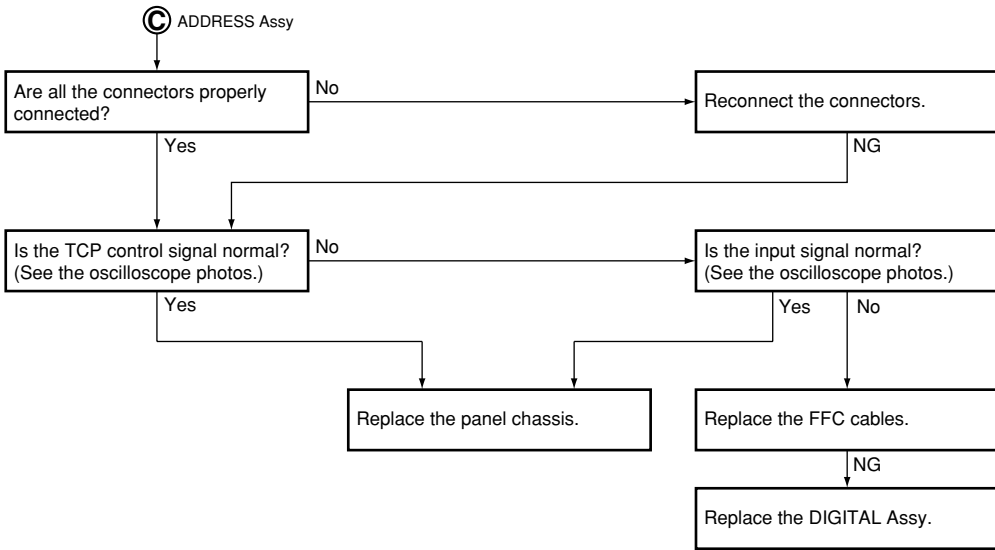

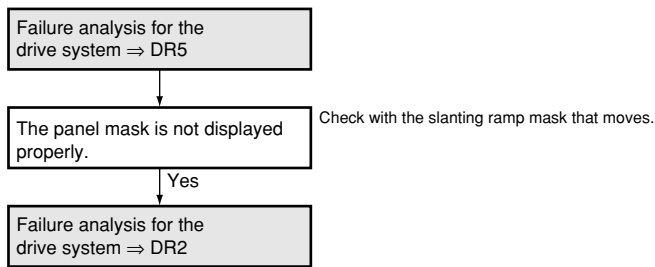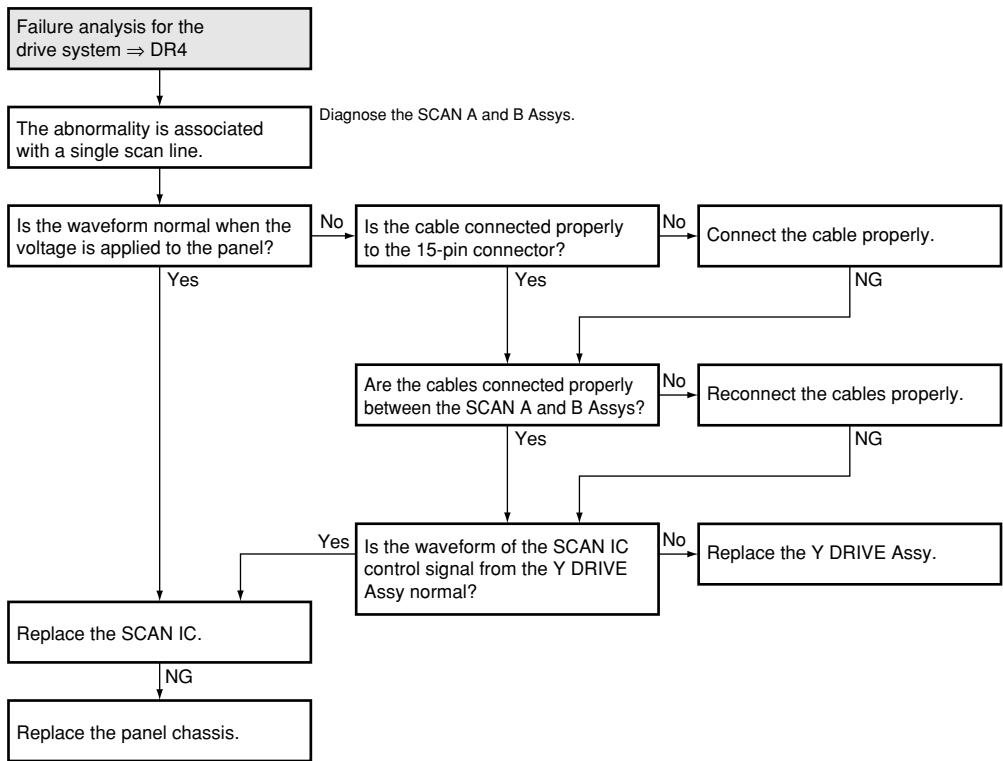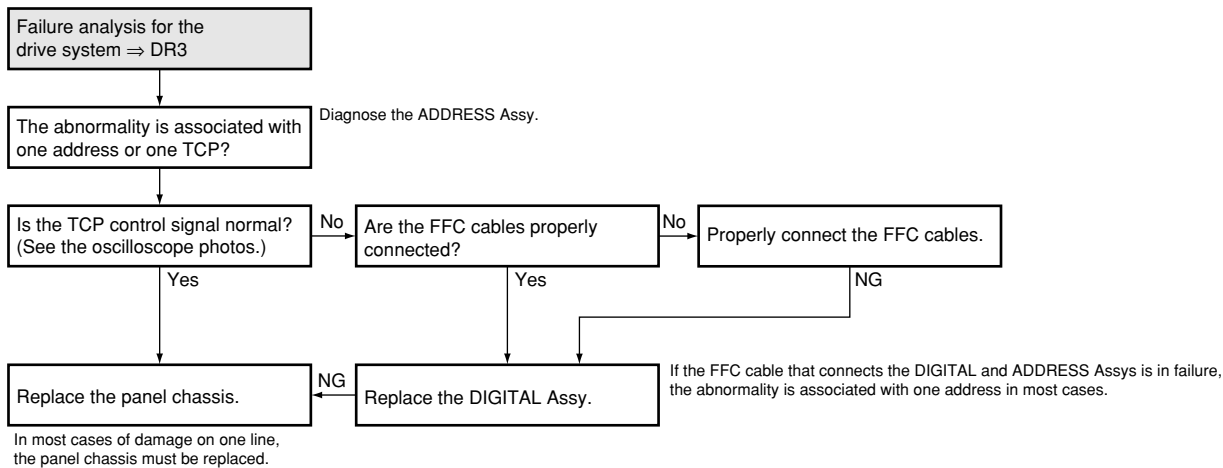


5.1.5 FLOWCHART OF FAILURE ANALYSIS FOR THE MAIN ASSY

A Flowchart of Failure Analysis for The MAIN Assy

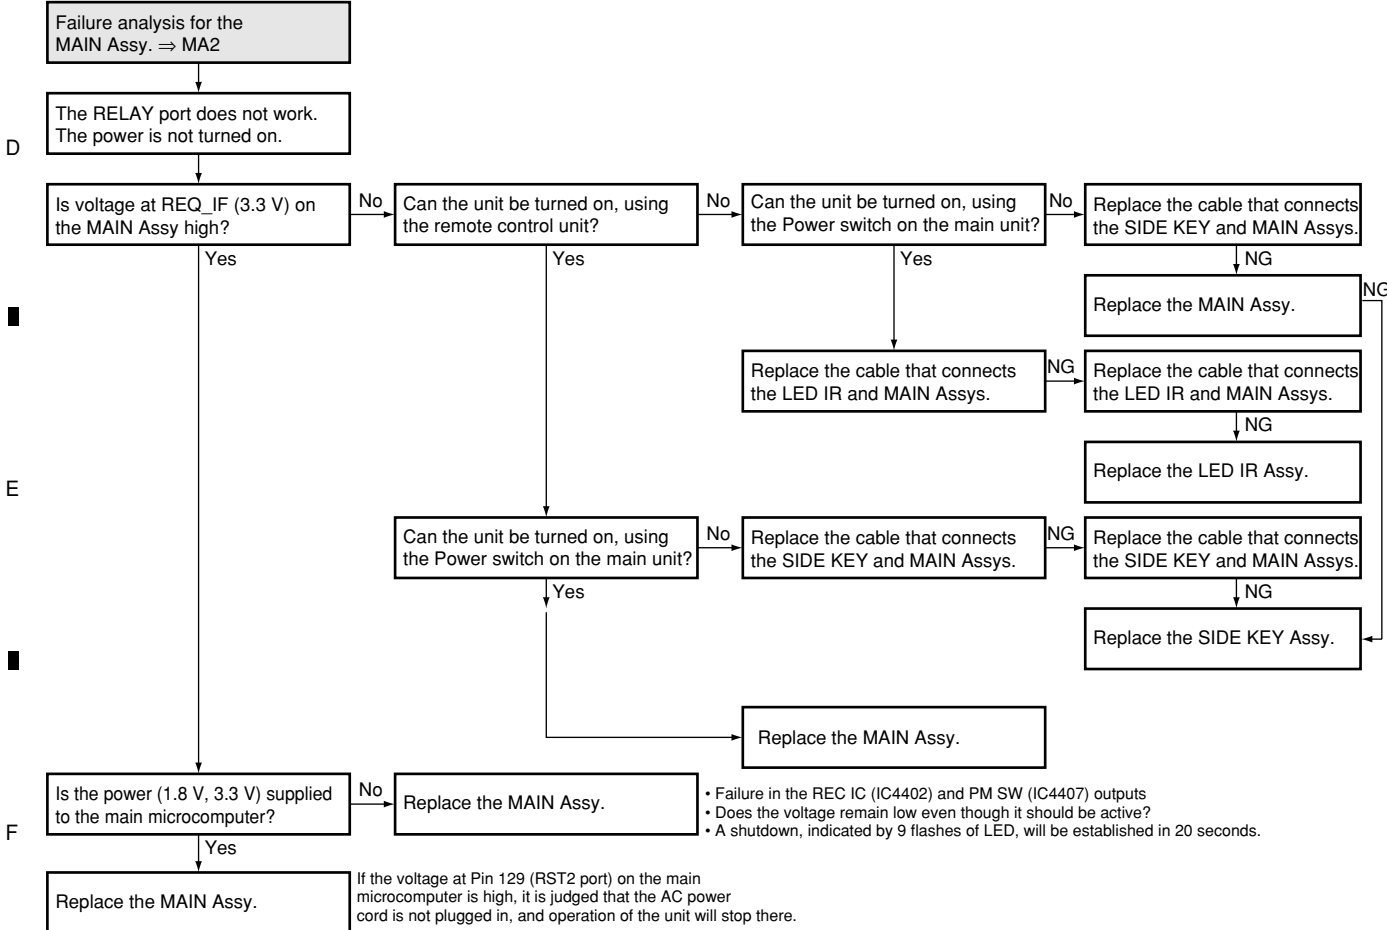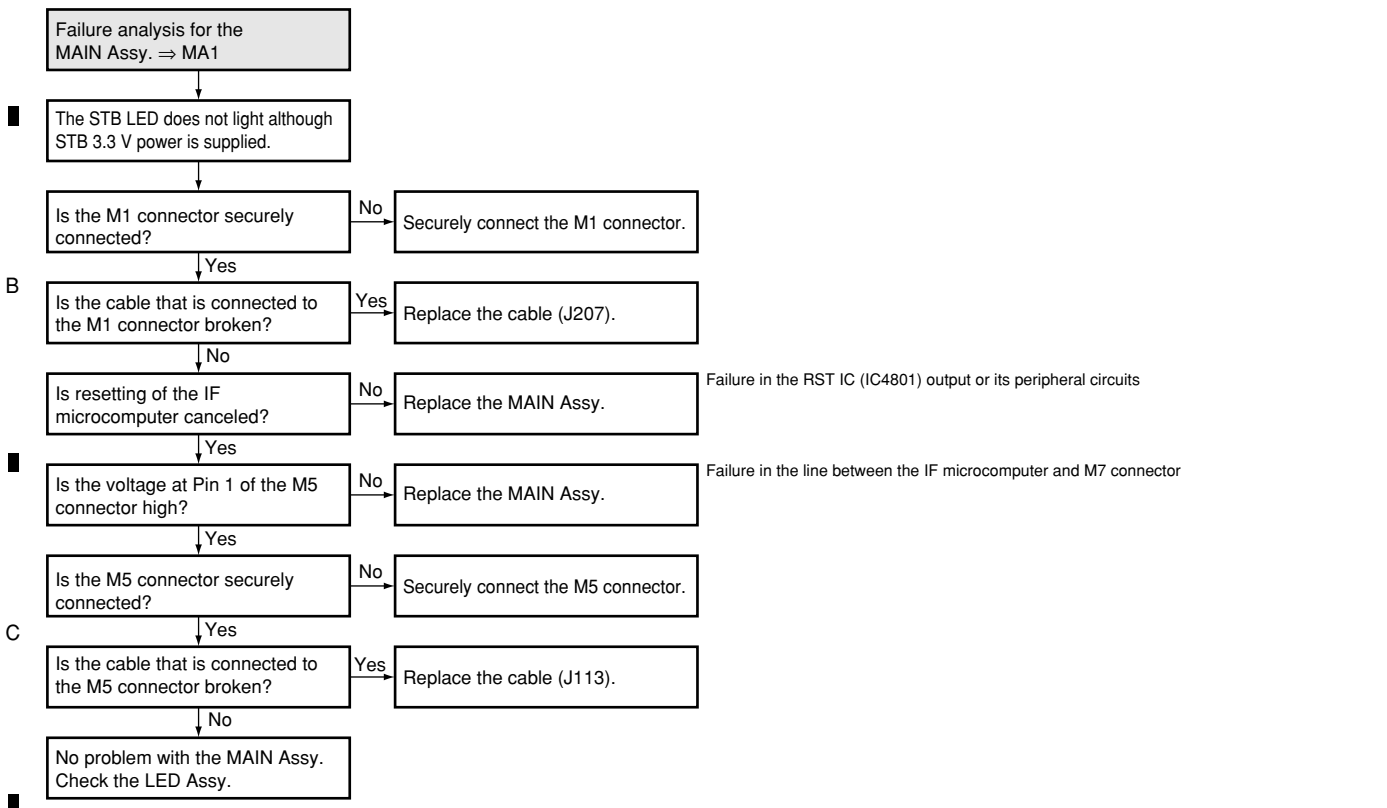


5.1.6 FLOWCHART OF FAILURE ANALYSIS FOR THE VIDEO SYSTEM

Flowchart of Failure Analysis for The Video System

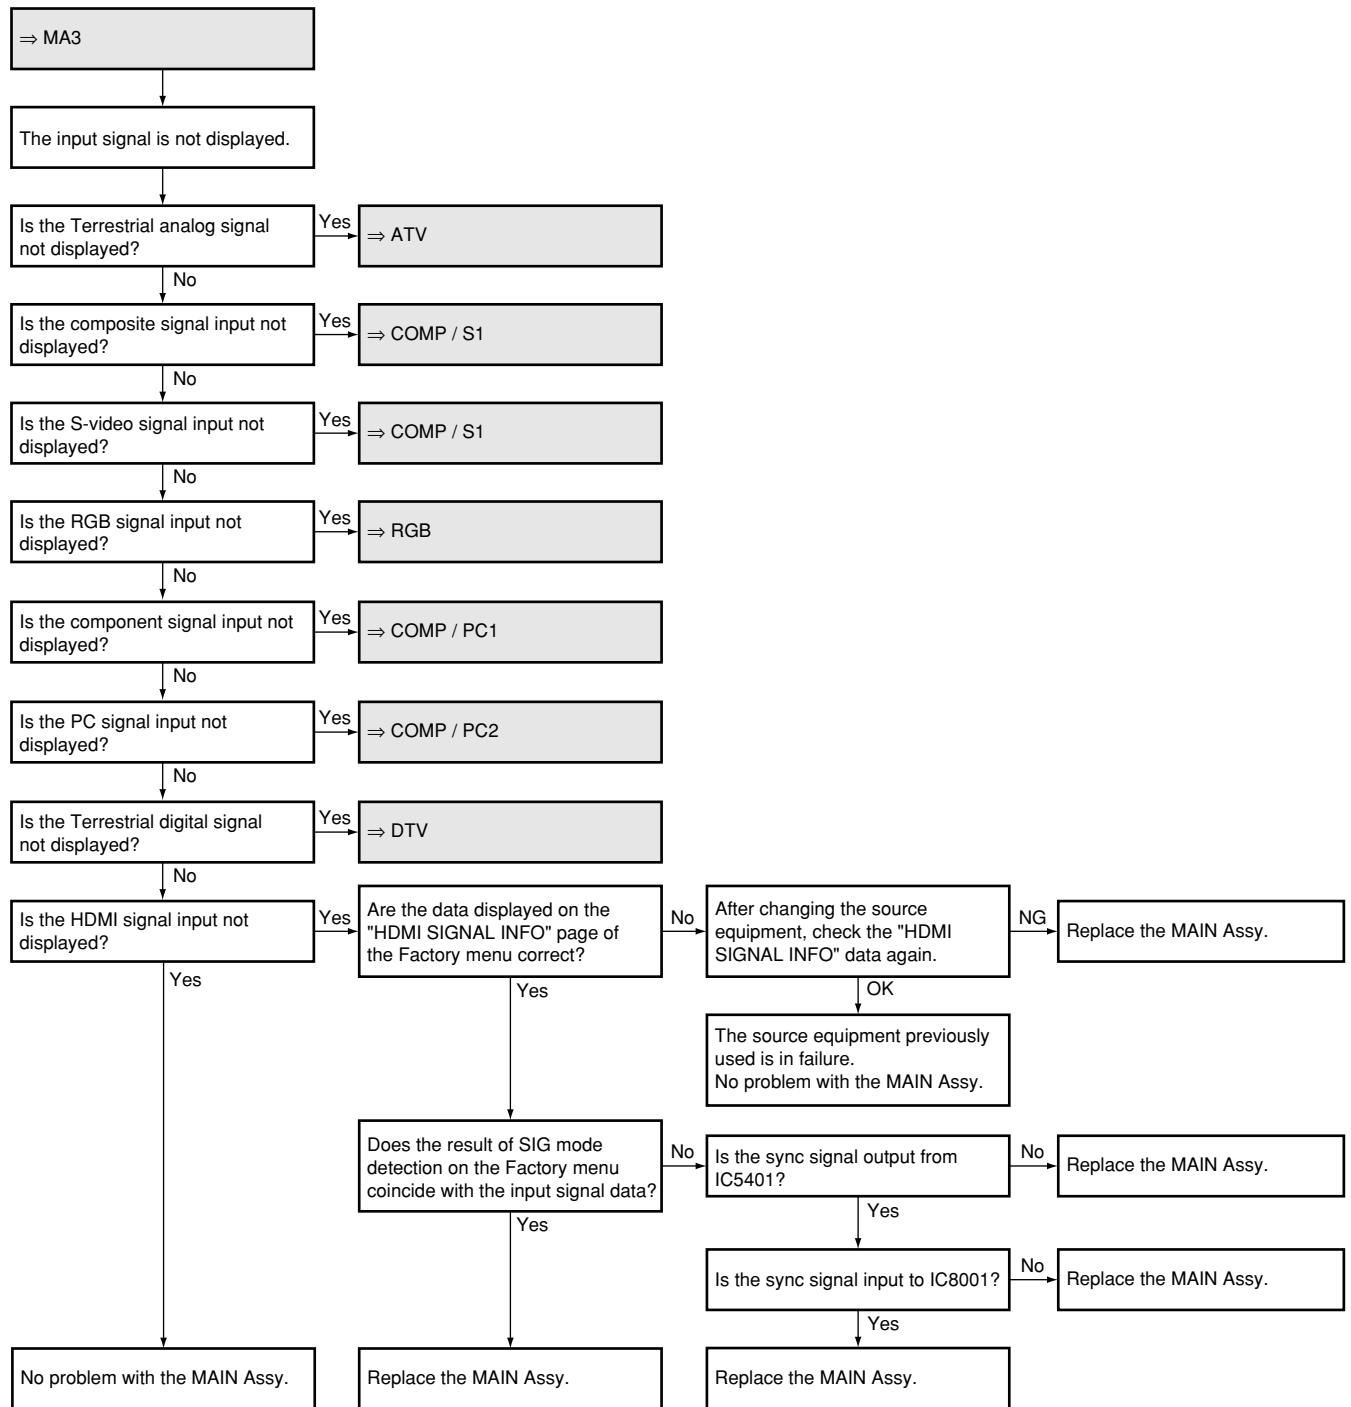


A Flowchart of Failure Analysis for The Video System

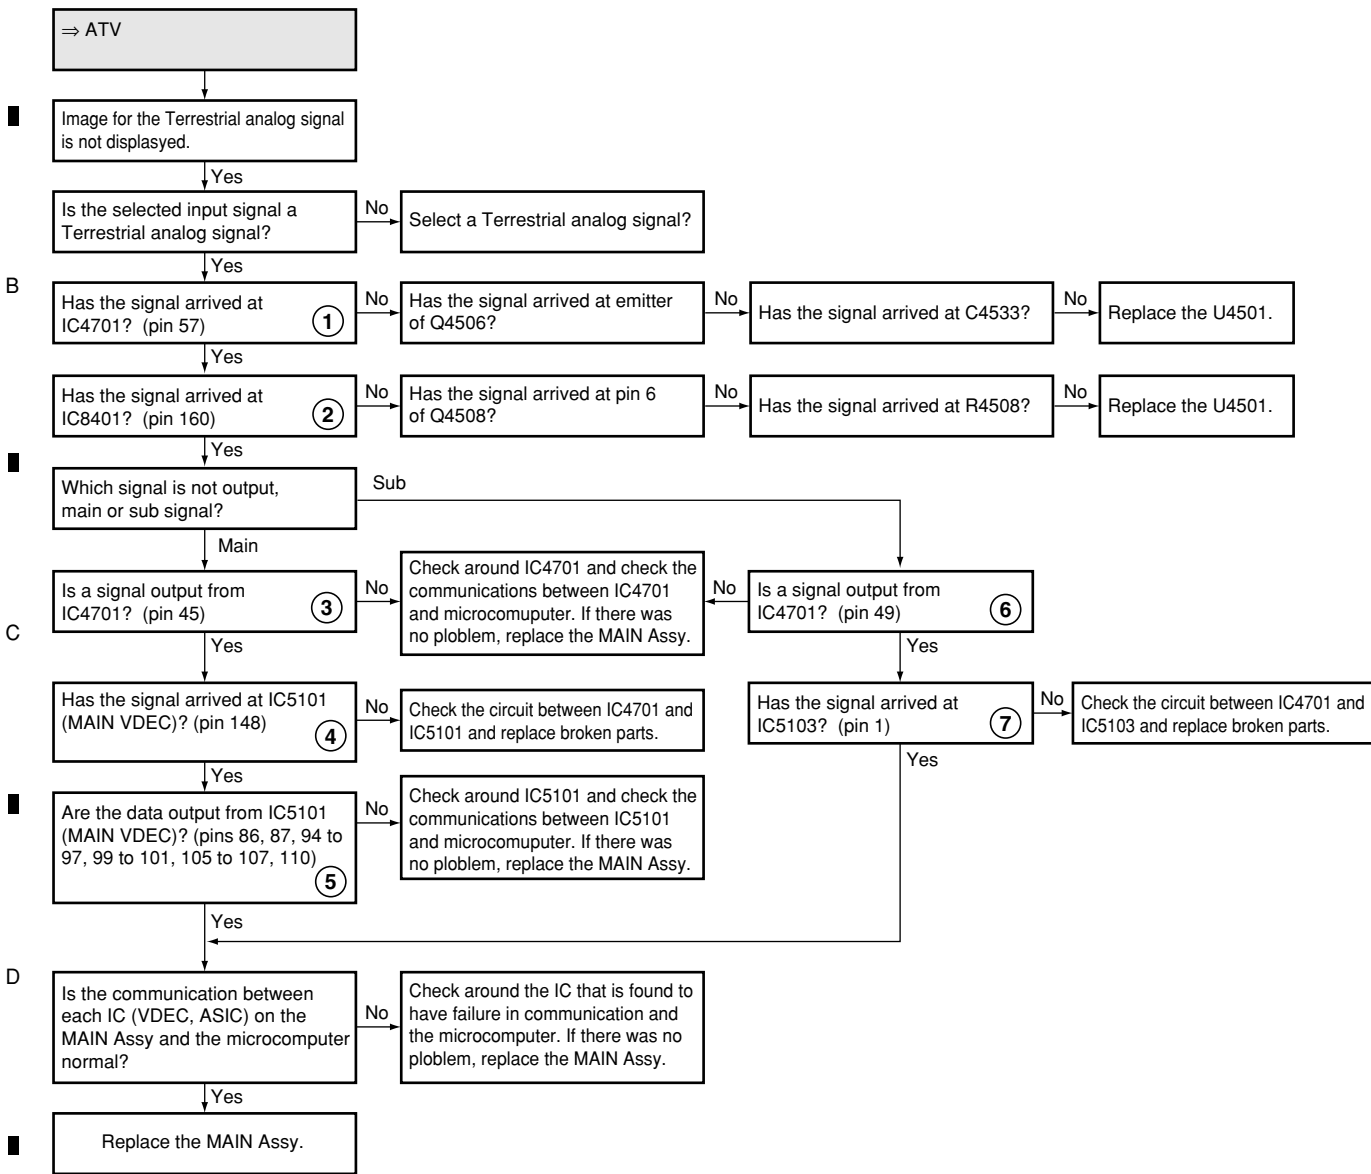


• Waveforms

Input signal: PAL Color-bar (Analog tuner)

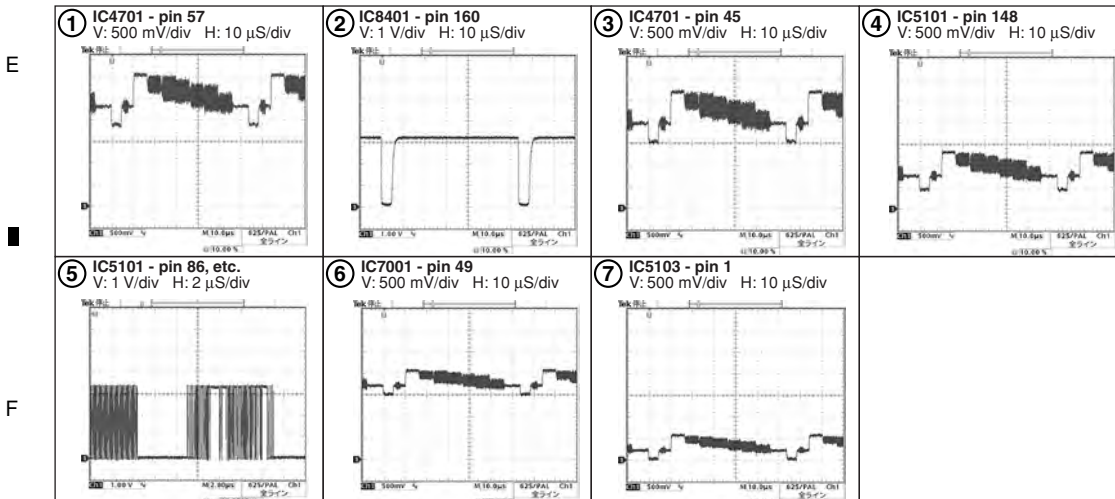


Flowchart of Failure Analysis for The Video System

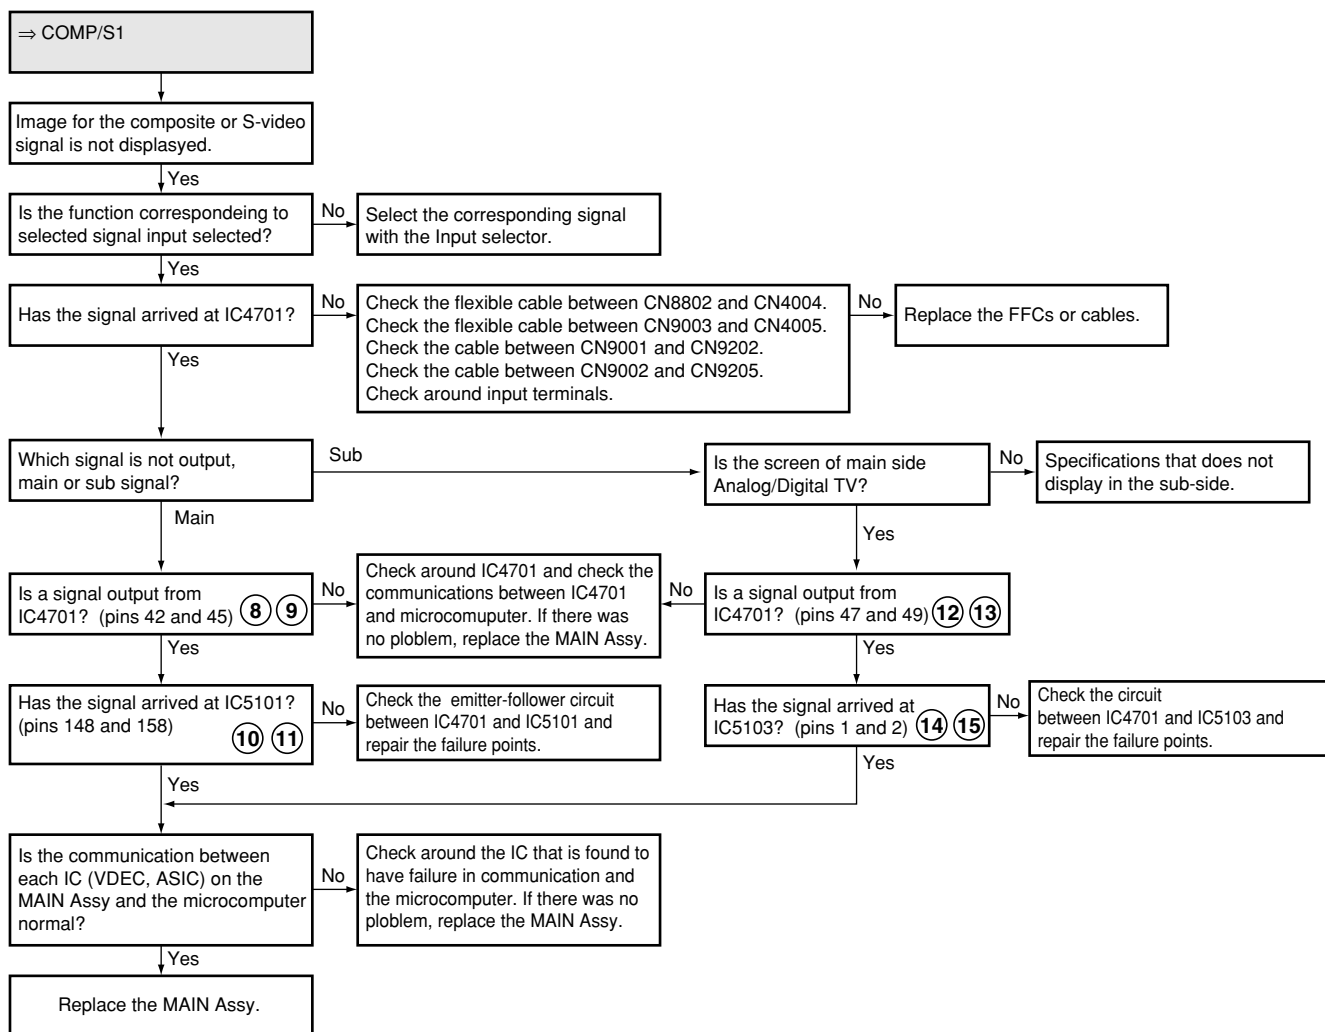


Waveforms

Input signal: PAL Color-bar (S terminal)

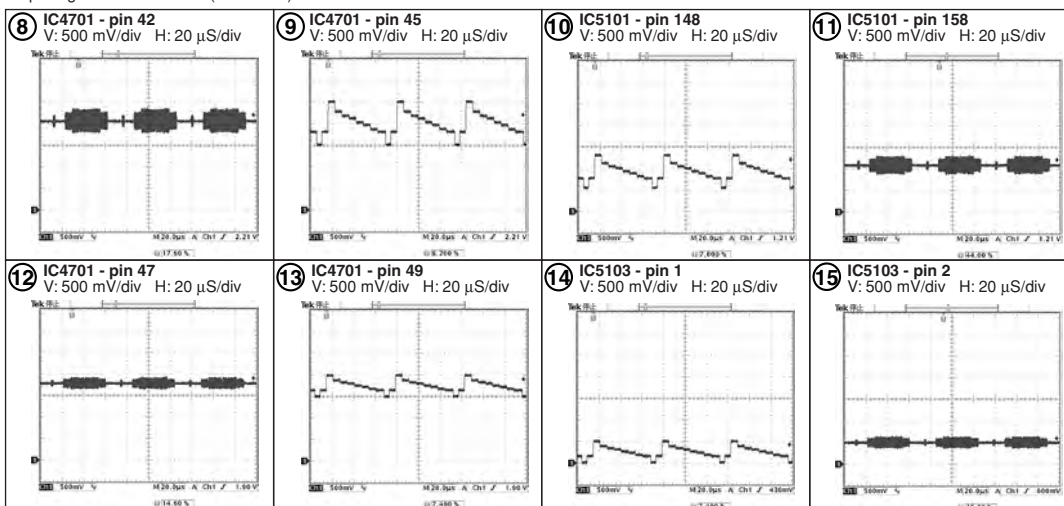


A Flowchart of Failure Analysis for The Video System

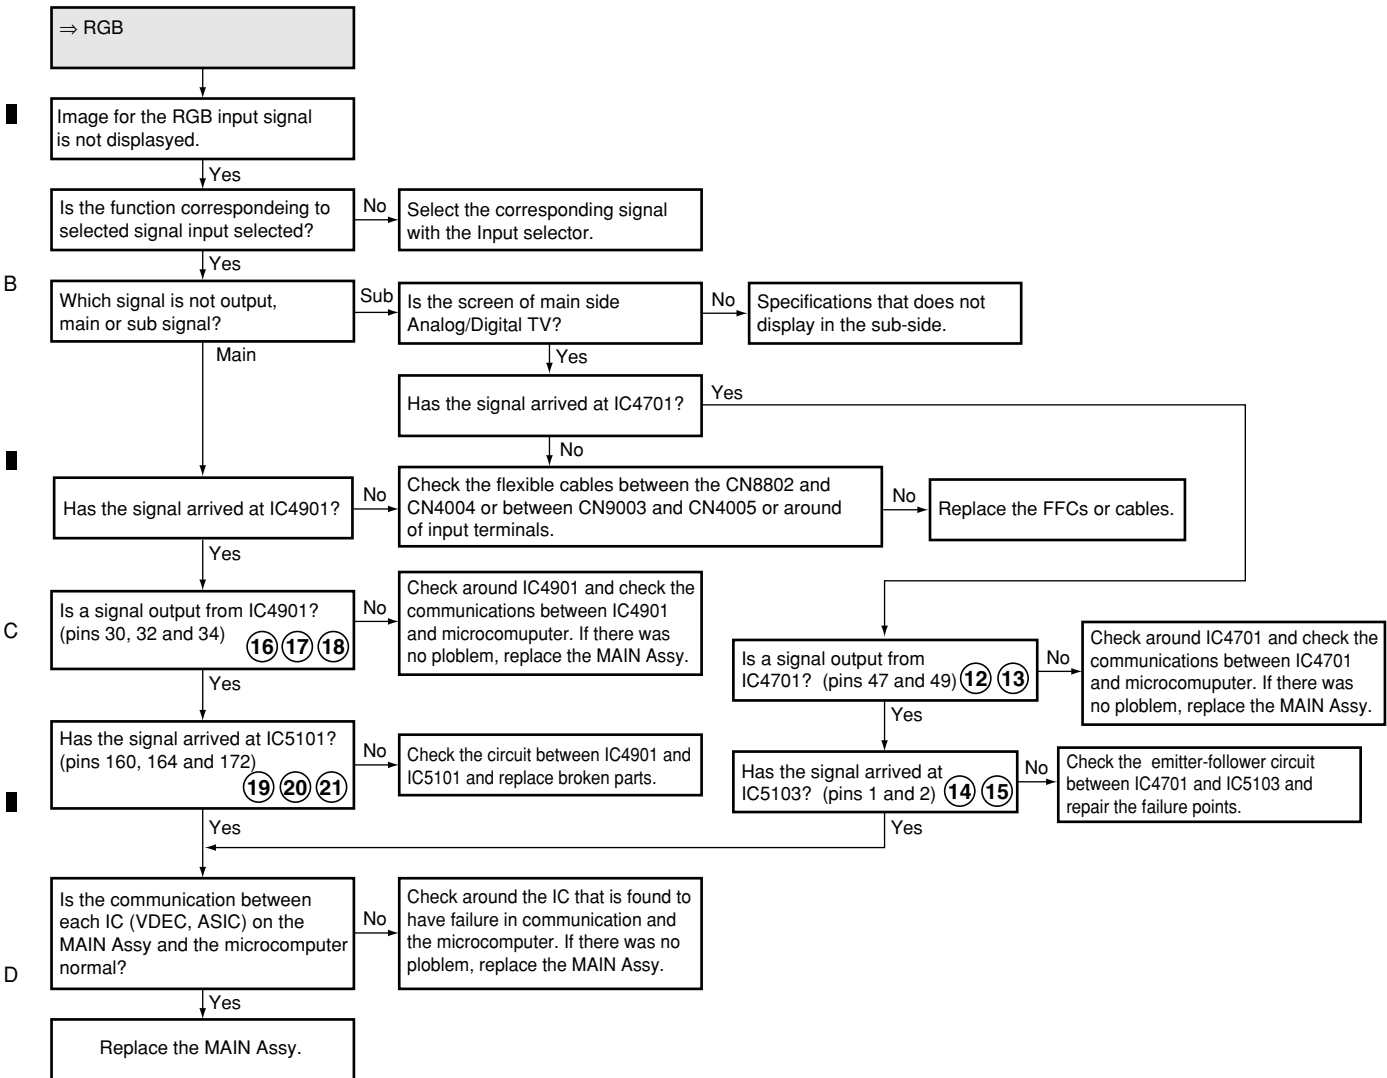


● Waveforms

Input signal: PAL Color-bar (S terminal)

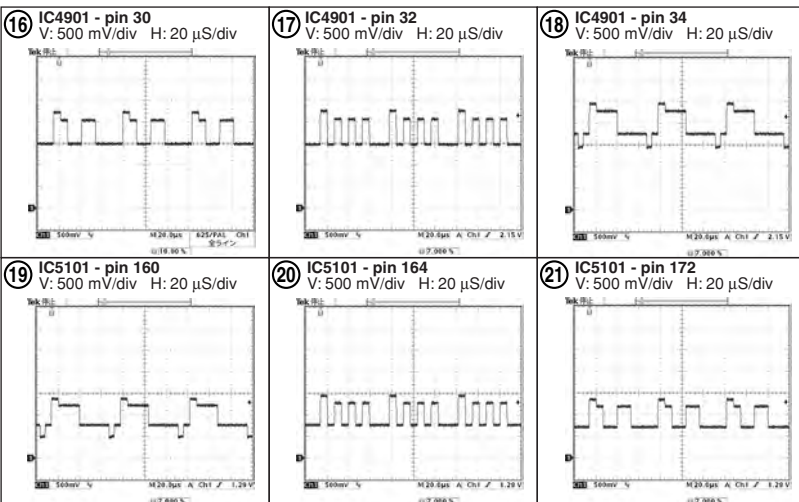


Flowchart of Failure Analysis for The Video System

No video from component

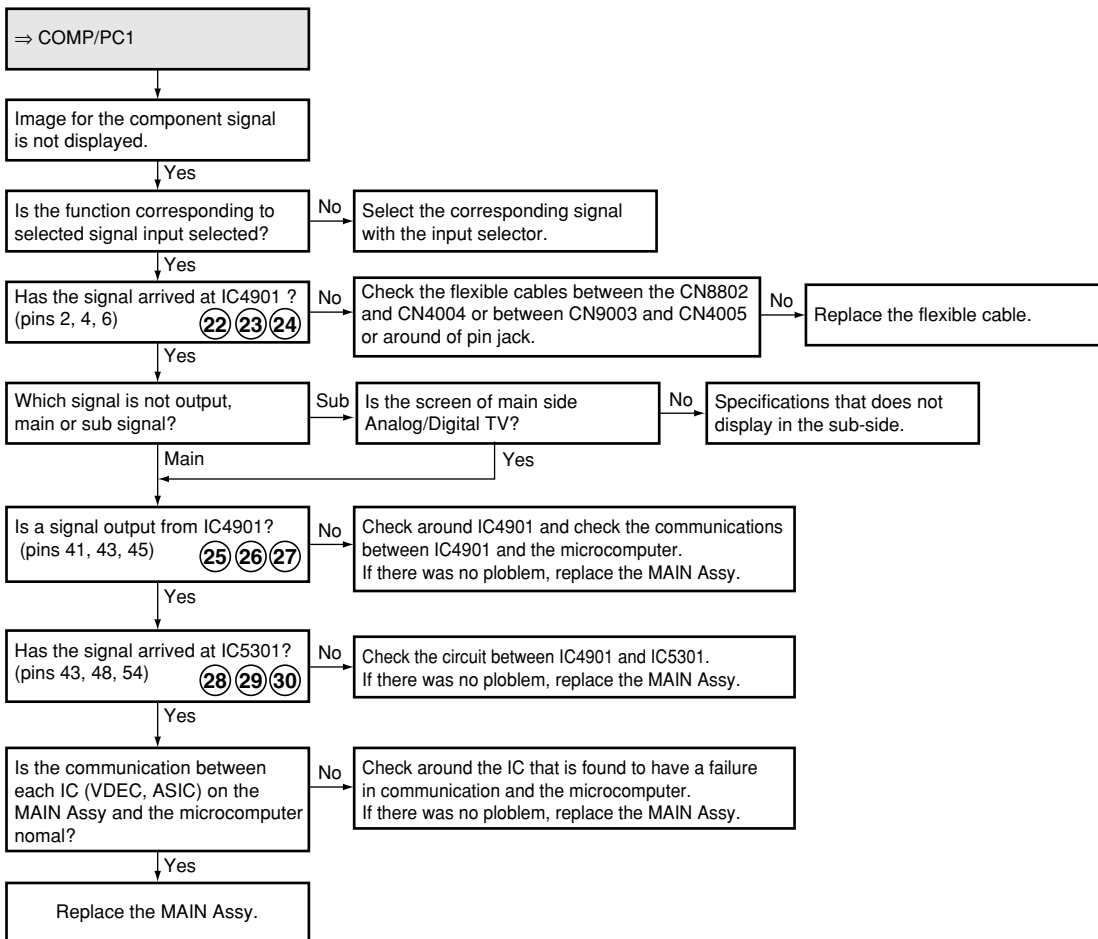


• Waveforms

Input signal: Color-bar (Component 1080i)

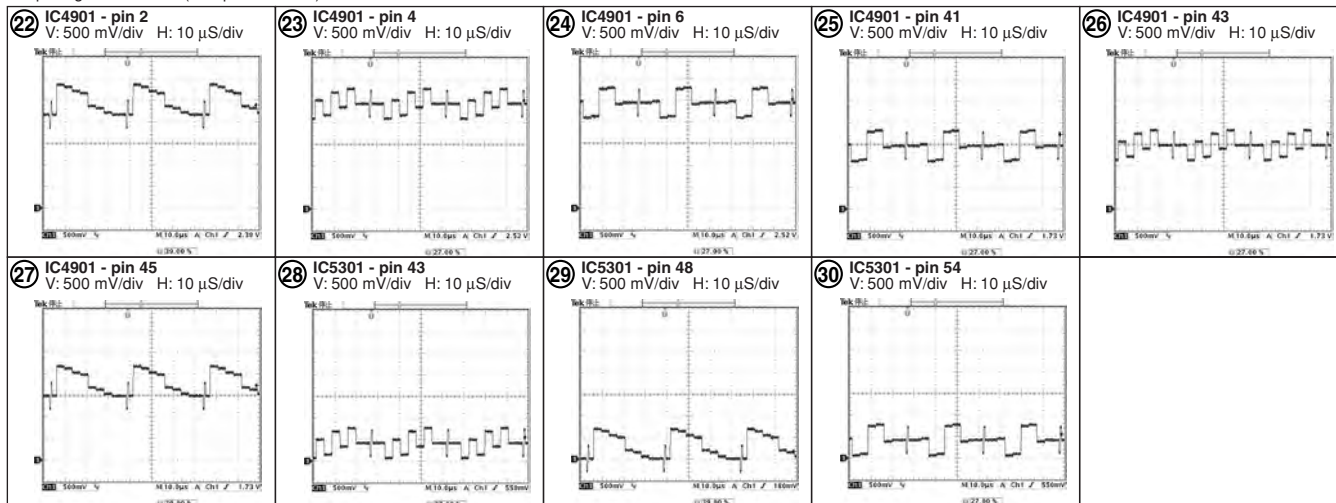


A

Flowchart of Failure Analysis for The Video System

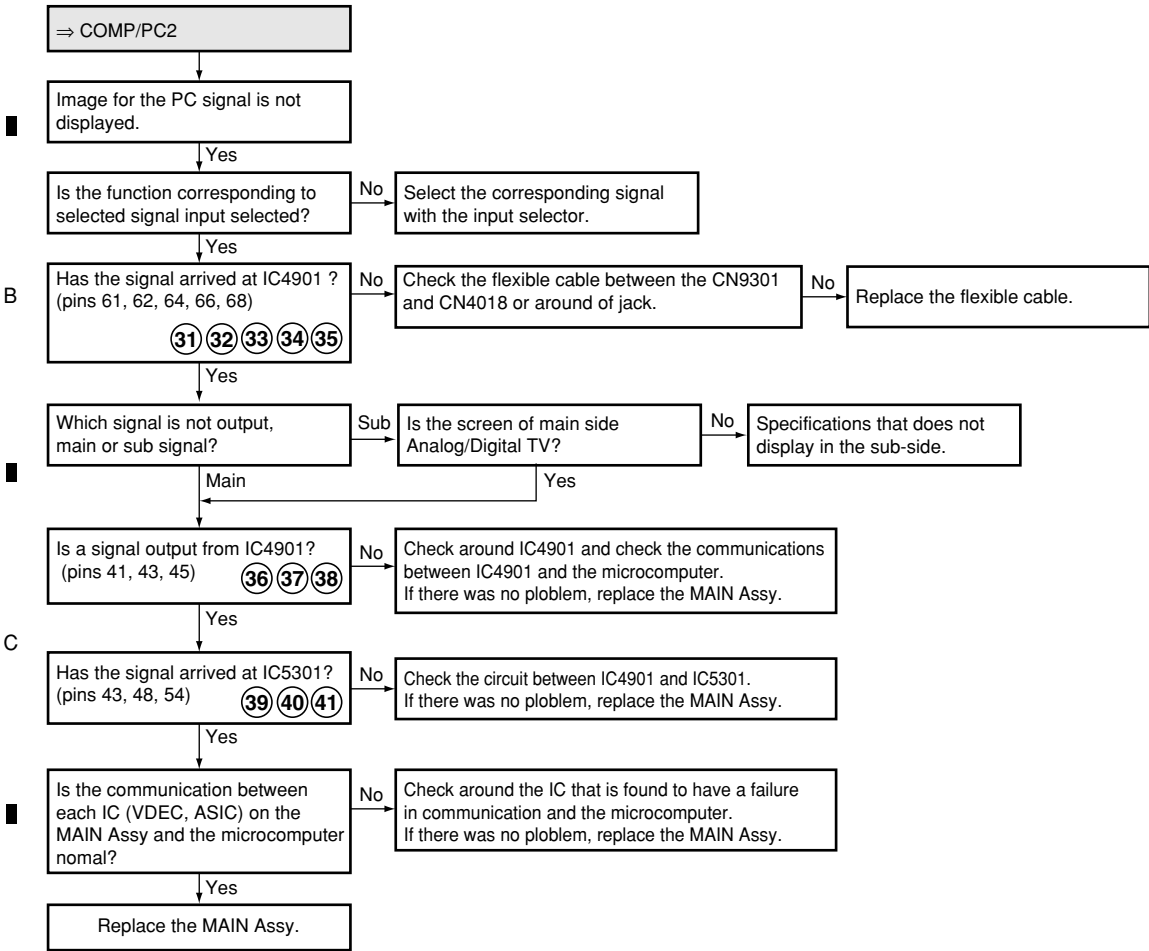

D • Waveforms


Input signal: Color-bar (PC XGA/60 Hz)

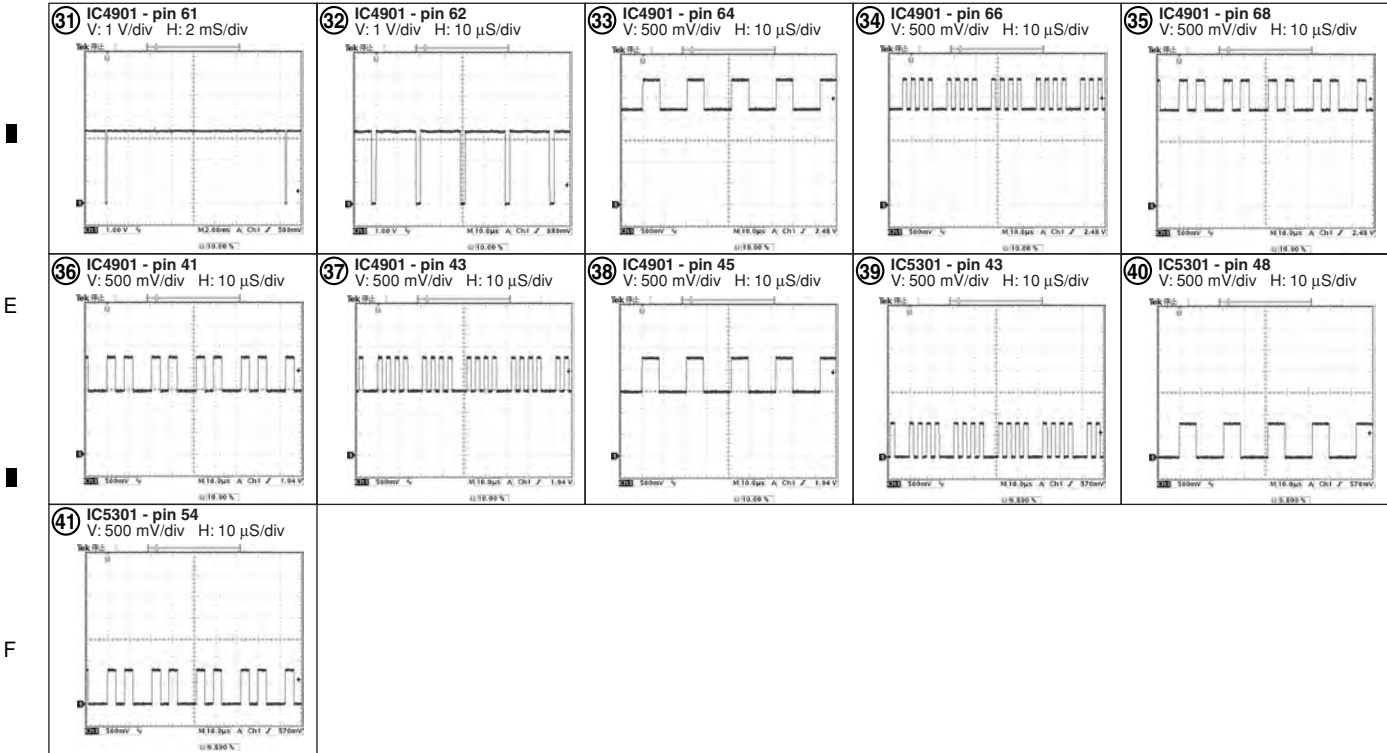

F

Flowchart of Failure Analysis for The Video System


DTV doesn't work

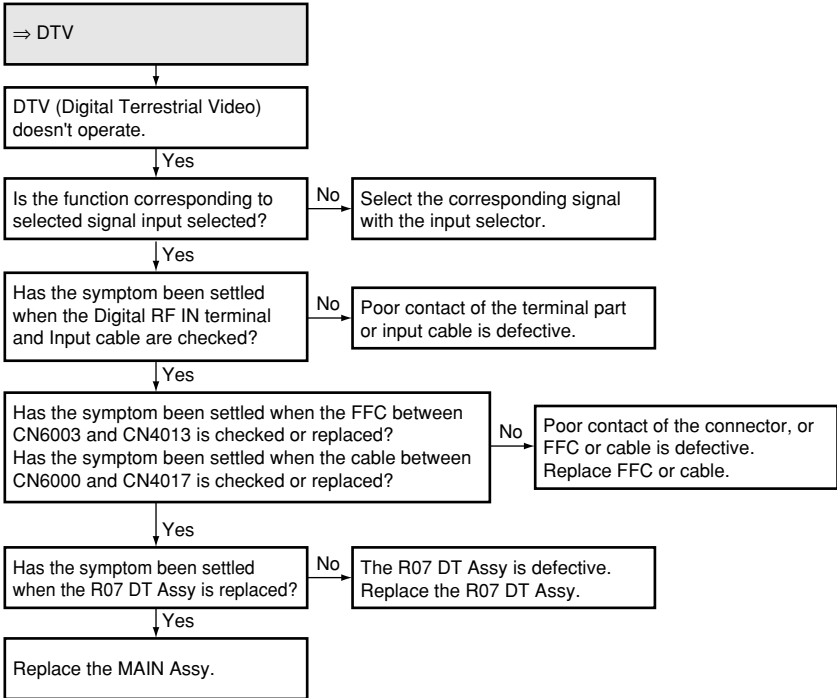


A
B
C
D
E
F

5.1.7 FLOWCHART OF FAILURE ANALYSIS FOR THE AUDIO SYSTEM


Flowchart of Failure Analysis for The Audio System

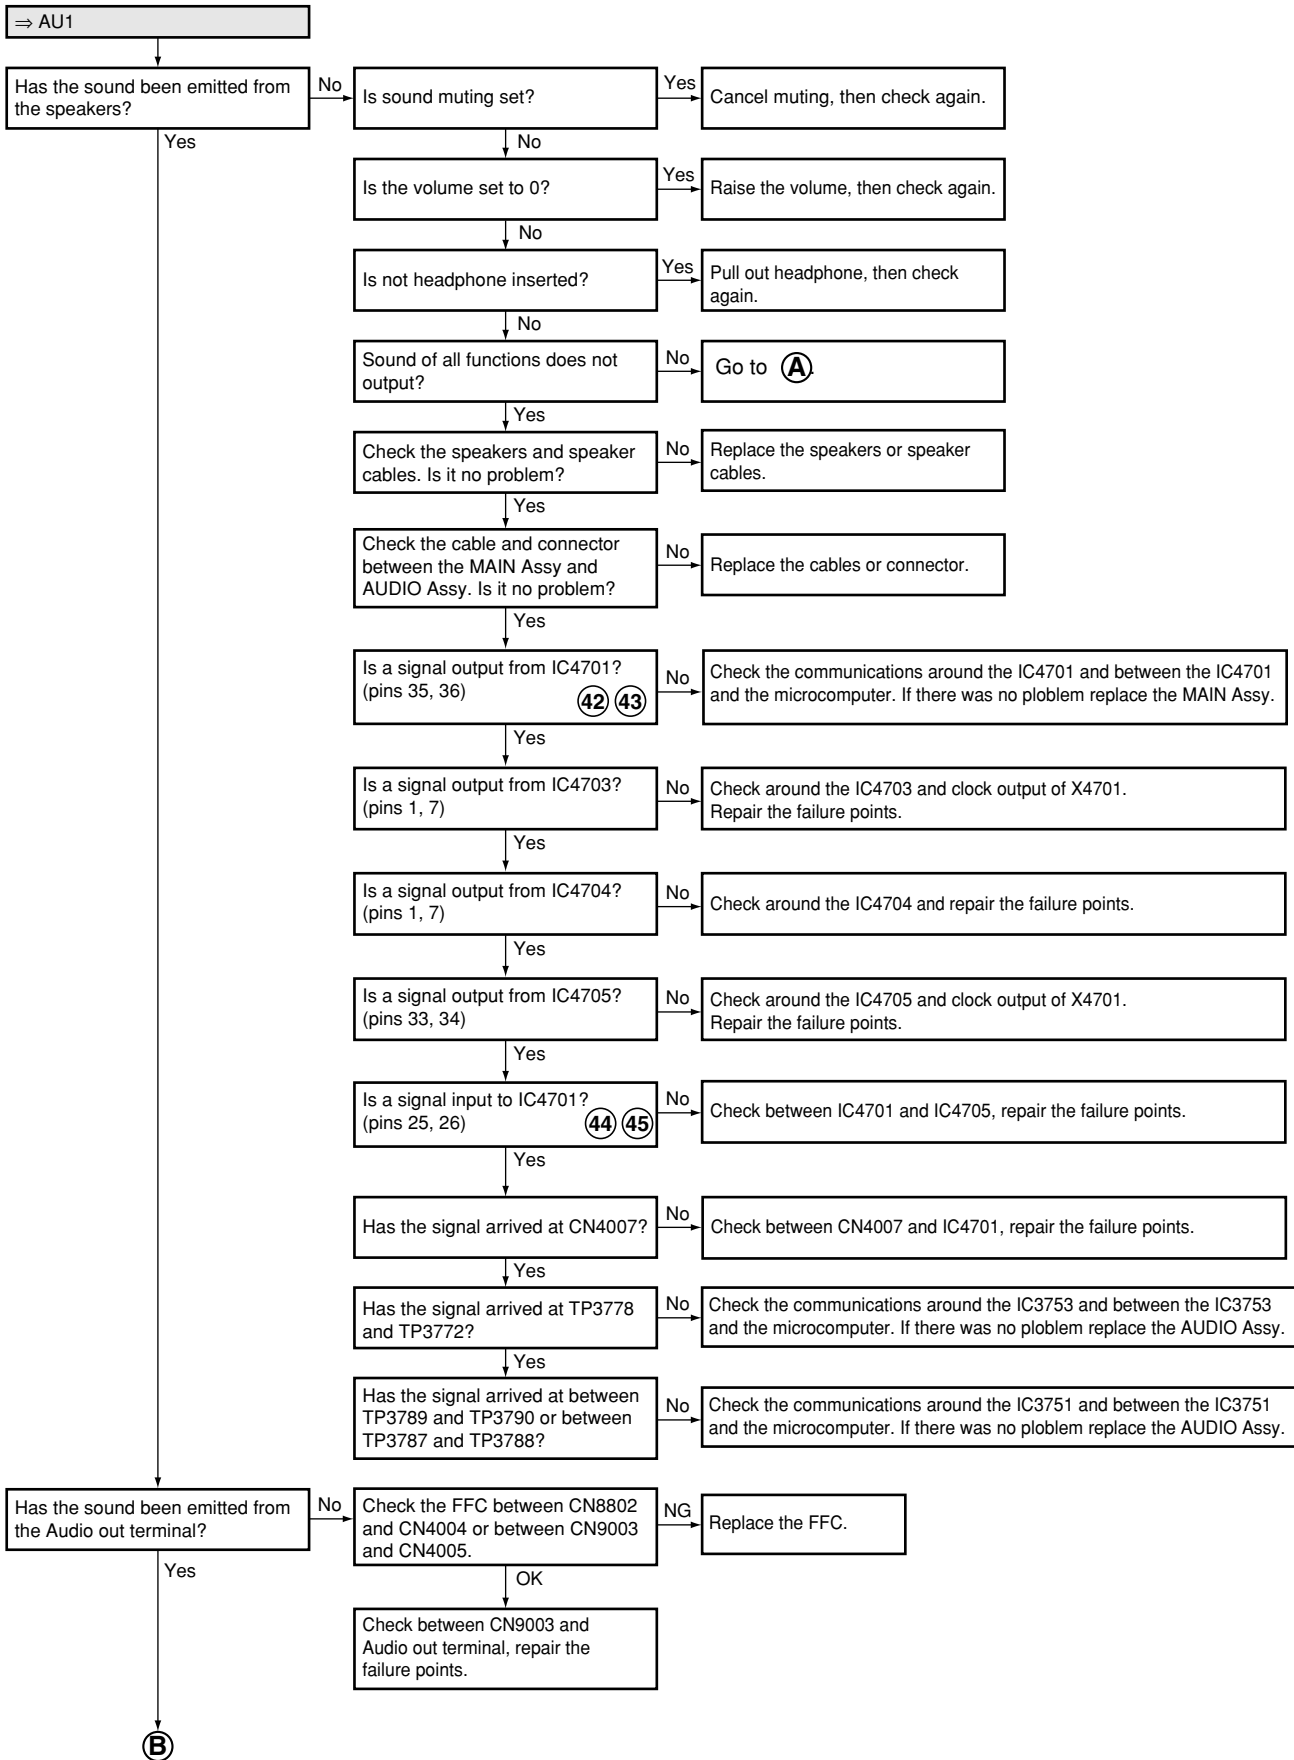

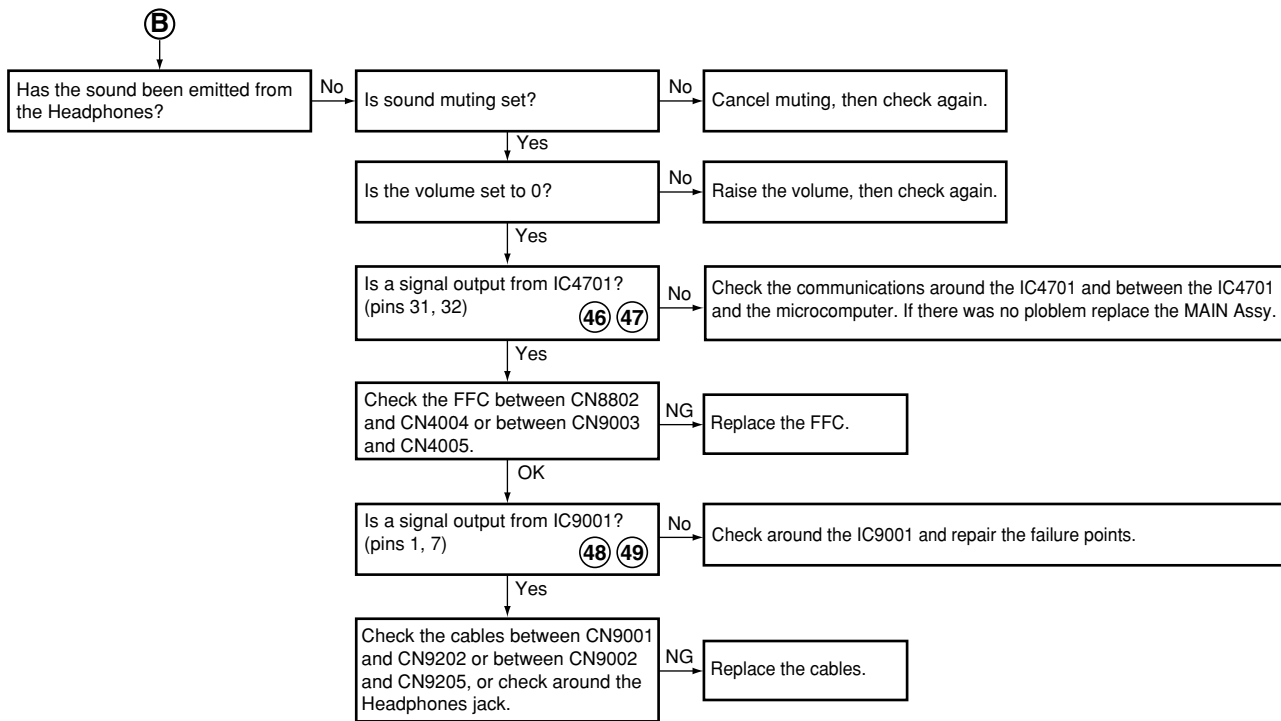


● Waveforms

Input signal: L/R 1 kHz

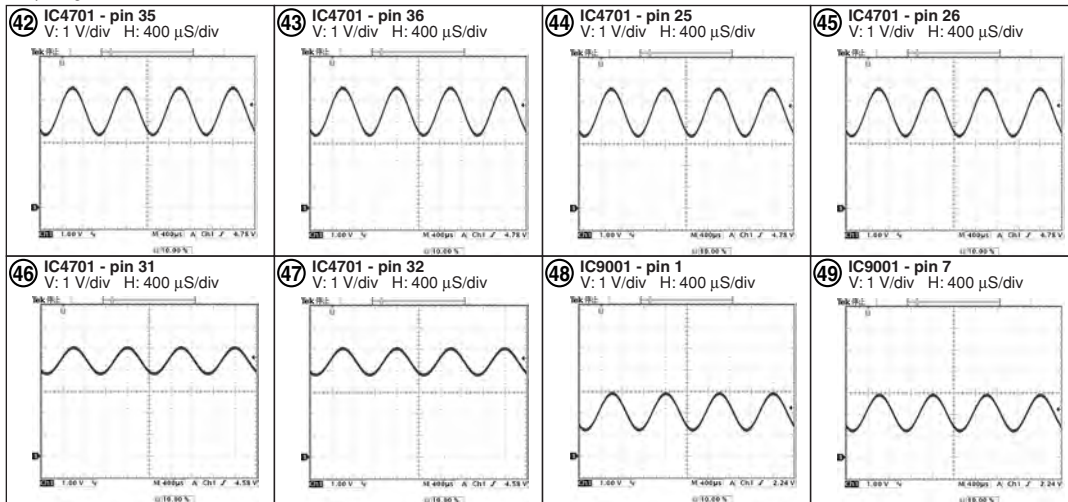





A

Flowchart of Failure Analysis for The Audio System

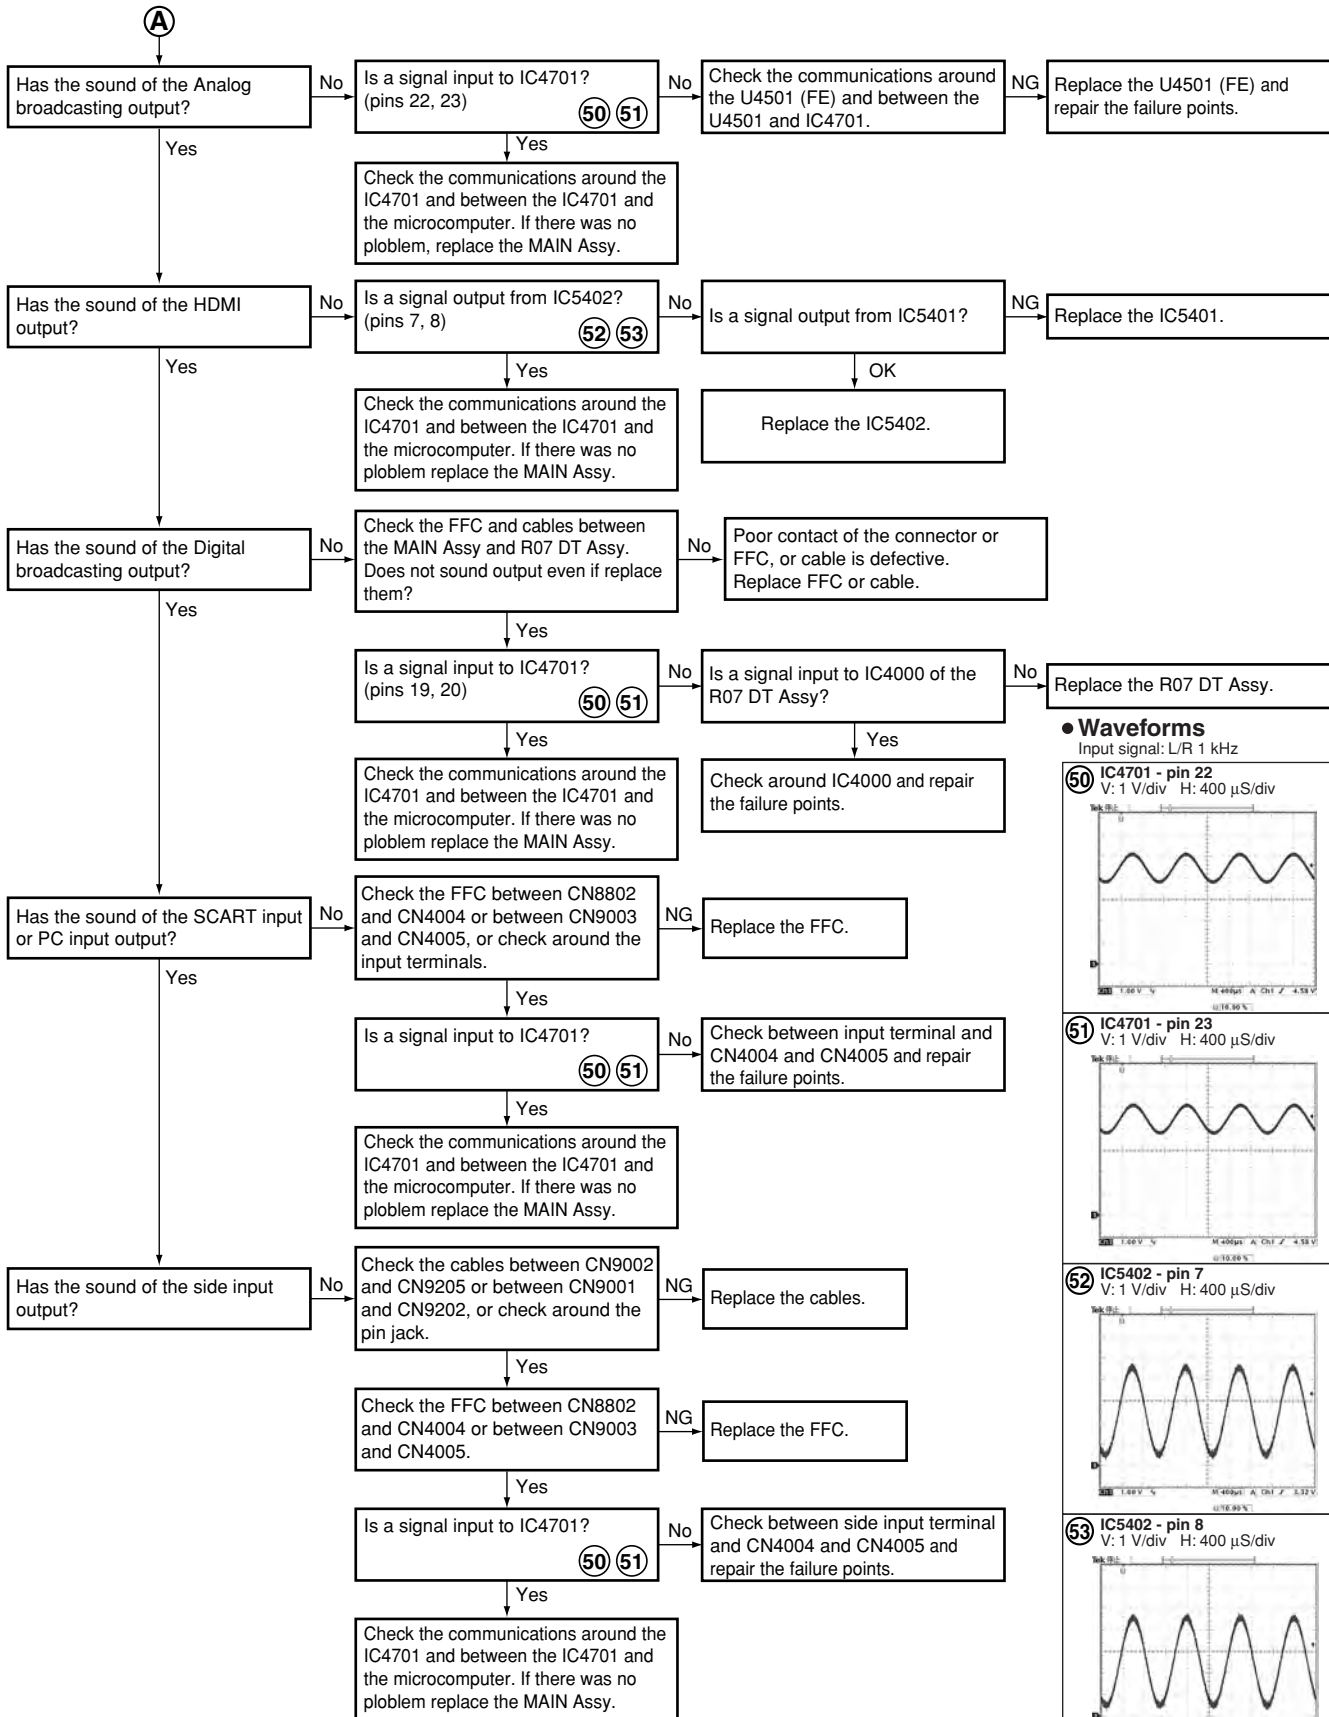

Waveforms


Input signal: L/R 1 kHz

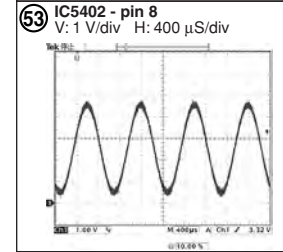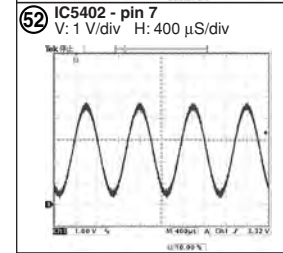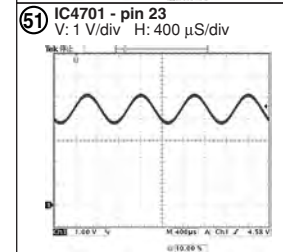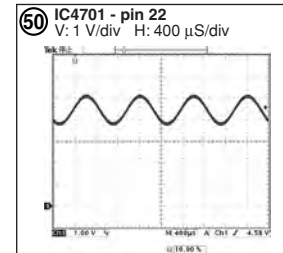

5.2 DIAGNOSIS OF PD (POWER-DOWN)

5.2.1 BLOCK DIAGRAM OF THE POWER-DOWN SIGNAL

Note:
The figures ② to ⑧ indicate the number of times the LED flashes when power-down occurs in the corresponding route.

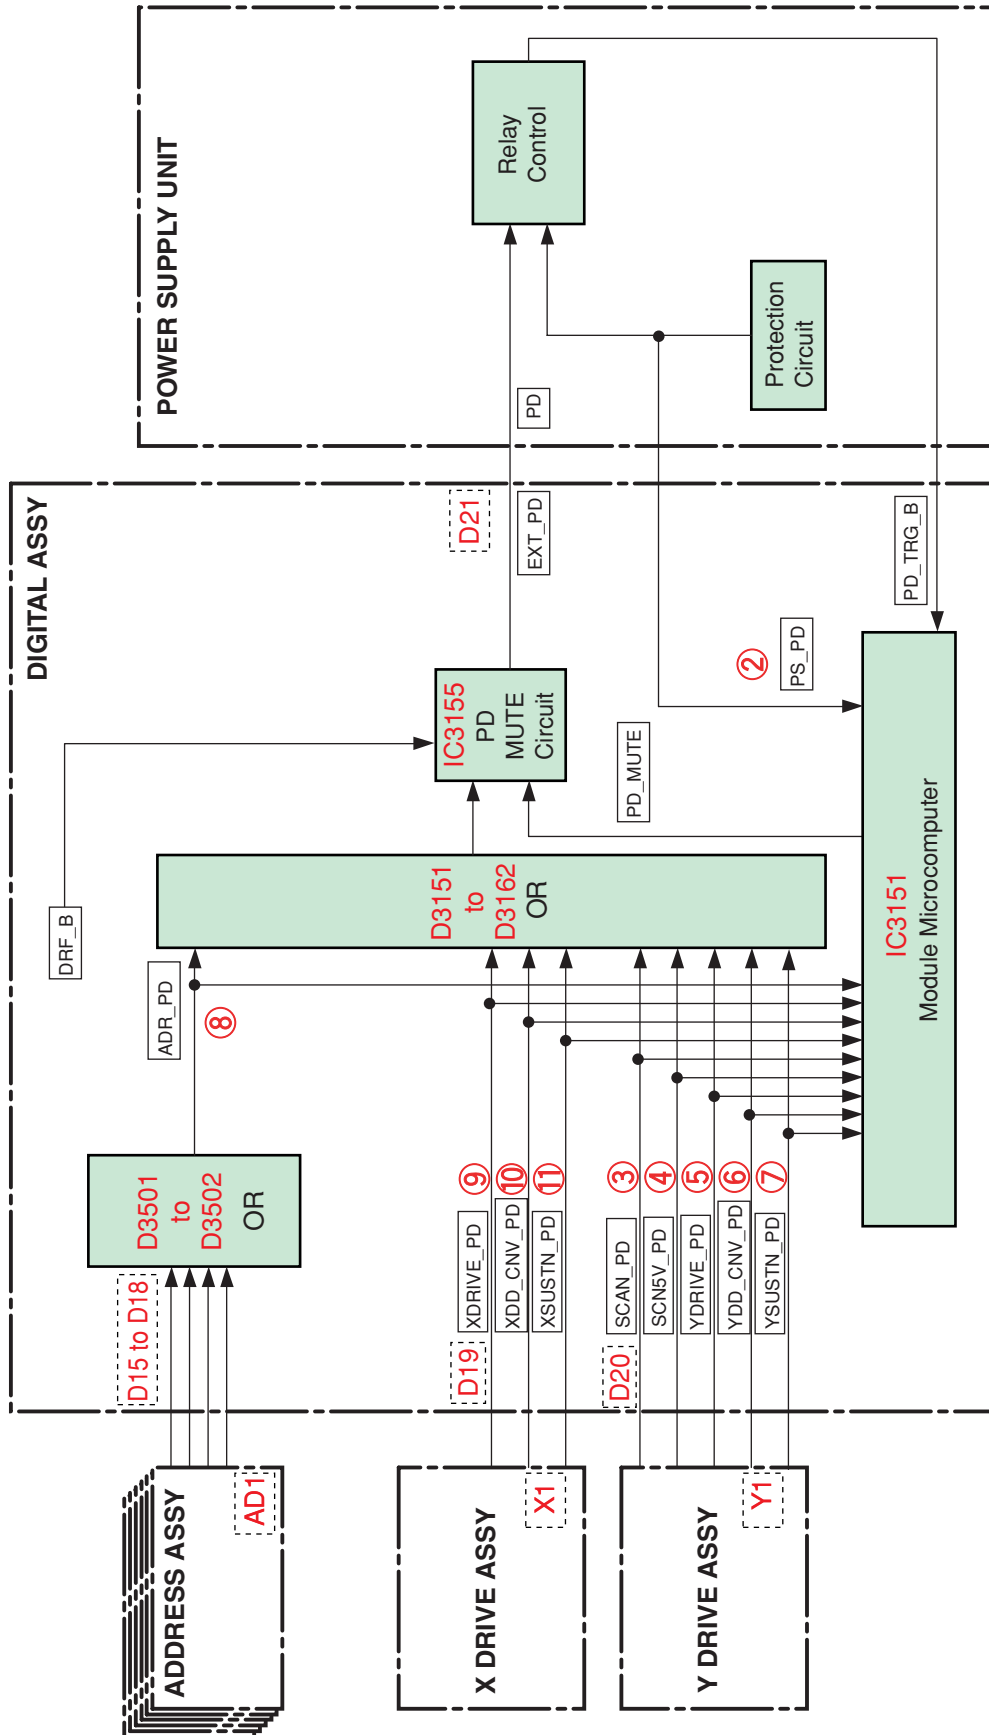

5.2.2 DIAGNOSIS OF THE PD (POWER-DOWN)

Prediction of failure symptoms when a PD (power-down) is generated

LED Flashing Count	PD Circuit	Checkpoint	Main Cause
2	Power supply PD	POWER SUPPLY Unit	Failure in the POWER SUPPLY Unit
3	SCAN PD	SCAN A, B Assy	SCAN IC is damaged (short-circuiting between VH and GNDH)
		Y DRIVE Assy	Connectors disconnected between the POWER SUPPLY Unit and the Y DRIVE Assy Connectors disconnected between the DIGITAL and the Y DRIVE Assys Failure in the VH power
4	IC5V PD	SCAN A, B Assy	SCAN IC is damaged (short-circuiting between IC5V and GNDH) Disconnection of the scan-bridge (15-pin) connector
		Y DRIVE Assy	Failure in the photo coupler Abnormality in the IC5V DC/DC converter
5	Y-DRIVE PD	Y DRIVE Assy	Abnormality in the 16.5 V power
6	Y DCDC PD	Y DRIVE Assy	Abnormality in the VOFS DC/DC converter
			Abnormality in the VPRST DC/DC converter
			Abnormality in VC_15V DC/DC converter
7	Y SUS PD	Y DRIVE Assy	Abnormality in the DK module
			Abnormality in the control signal line
8	Address PD	ADDRESS Assy	Short-circuiting of Vadr TCP damaged
9	X-DRIVE PD	X DRIVE Assy	Connectors disconnected between the DIGITAL and the X DRIVE Assys Abnormality in the 16.5 V power
			Abnormality in VC_15V power
10	X DCDC PD	X DRIVE Assy	Abnormality in VXNRST power
			Abnormality in the DK module
11	X SUS PD	X DRIVE Assy	Abnormality in the control signal line
			Connectors disconnected between the POWER SUPPLY Unit and the X DRIVE Assy

How to distinguish which connector is disconnected

Assy	Connector	To which Assy the Connector is Connected	Frequency of LED Flashing	Screen Display
X DRIVE Assy	CN1001	DIGITAL Assy	11 (XDRIVE)	-
	CN1204	POWER SUPPLY Unit (ADR system power)	-	White (left half of the screen)
	CN1206	POWER SUPPLY Unit (drive system power)	12 (X-SUS)	-
	CN1201, CN1202, CN1203, CN1205	ADDRESS Assy	8 (ADR)	-
Y DRIVE Assy	CN2001	DIGITAL Assy	3 (SCAN)	-
	CN2351	POWER SUPPLY Unit (drive system power)	3 (SCAN)	-
	CN2353	POWER SUPPLY Unit (ADR system power)	-	White (right half of the screen)
	CN2354, CN2355, CN2356, CN2357	ADDRESS Assy	8 (ADR)	-
	CN2401, CN2402	SCAN A, B Assy	4 (SCN-5V)	-
SCAN A, B Assy	CN2701, CN2801	Y DRIVE Assy	4 (SCN-5V)	-
ADDRESS Assy	CN1502, CN1702	DIGITAL Assy	8 (ADRS)	-
	CN1501, CN1701	X DRIVE Assy, Y DRIVE Assy	8 (ADRS)	-

■ How to identify the cause of a power-down that is indicated by 2-times flashing of the red LED

The cause of a power-down that is indicated by 2-times flashing of the red LED can be identified by performing the steps ① to ③ below:

- ① Visual check with the power off
- ② Tester check with the power off
- ③ Check with the power on

① Status check with the power off

Check if the cables and FFC cables that are connected to the Y DRIVE Assy are firmly connected.

② Tester check with the power off

1. Check between Vsus and SUSGND with a tester

Disconnect all cables from the X and Y DRIVE Assys and check if there is short-circuiting between Vsus and SUSGND in the X and Y DRIVE Assys.

- How to check if there is short-circuiting on the X DRIVE Assy:
If there is short-circuiting between Vsus and SUS OUT, and SUS OUT and SUSGND, the X Mask Module is damaged.
If they are not short-circuited, check other elements to see if they are short-circuited.
- How to check if there is short-circuiting on the Y DRIVE Assy:
If there is short-circuiting between Vsus and SUS OUT, and SUS OUT and SUSGND, the Y Mask Module is damaged.
If they are not short-circuited, check other elements to see if they are short-circuited.
- Check for short-circuiting in the Power supply.

Note that at the beginning of measuring with a tester, charging of an electrolytic capacitor may cause a phenomenon like short-circuiting. However, the resistance will soon rise if there is no short-circuiting.

2. Check for short-circuiting between VH and PSUS with a tester

Disconnect the cables that connect the bridge connectors between the Y DRIVE Assy and upper and lower SCAN Assys.

- If there is short-circuiting in the upper SCAN Assy, one of Scan ICs in the upper SCAN Assy is damaged.
- If there is short-circuiting in the lower SCAN Assy, one of Scan ICs in the lower SCAN Assy is damaged.
- If there is short-circuiting in the Y DRIVE Assy, a circuit in the Y DRIVE Assy is short-circuited.

If no short-circuiting is detected up to this stage, the power-down in question is proved not to be caused by short-circuiting. Therefore, it is assumed that the power-down occurred because power had not been supplied to Vsus or VH for some reason.

③ Check immediately after the unit is turned on before a power-down occurs.

If the Vsus voltage does not increase, the POWER SUPPLY Unit is in failure.

If the VH voltage does not increase, the VH DC/DC converter in the Y DRIVE Assy is in failure.


④ Check the PD detection circuit.

If no problem is detected in steps ① to ③, a power-down occurred even though the voltage was normal. Therefore, the PD detection circuit may be in failure.

By following the above procedures, the real cause of a power-down can be judged.

A

X Drive PD system




B




C


Y Drive PD system




D

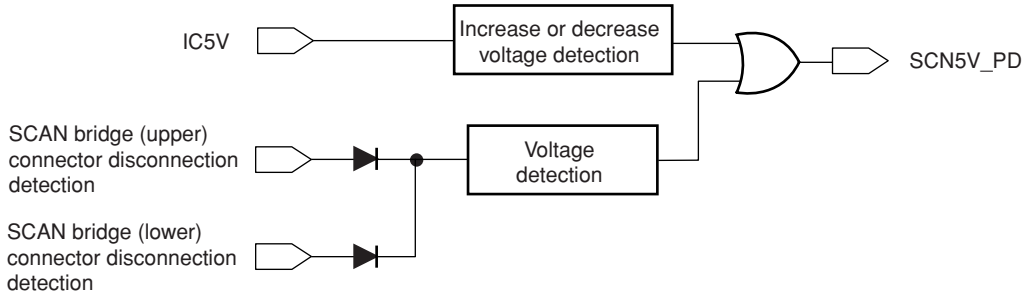

E

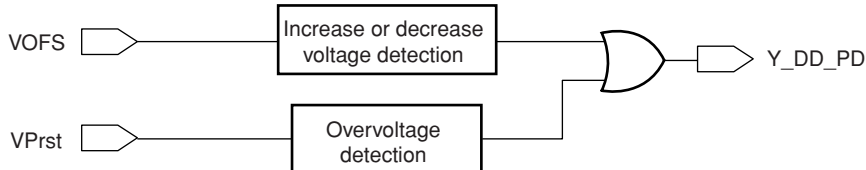


F



5.3 DIAGNOSIS OF SD (SHUTDOWN)

5.3.1 BLOCK DIAGRAM OF THE SHUTDOWN SIGNAL

Note : The figures ① to ⑬ indicate the number of times the LED flashes when shut-down occurs in the corresponding route.

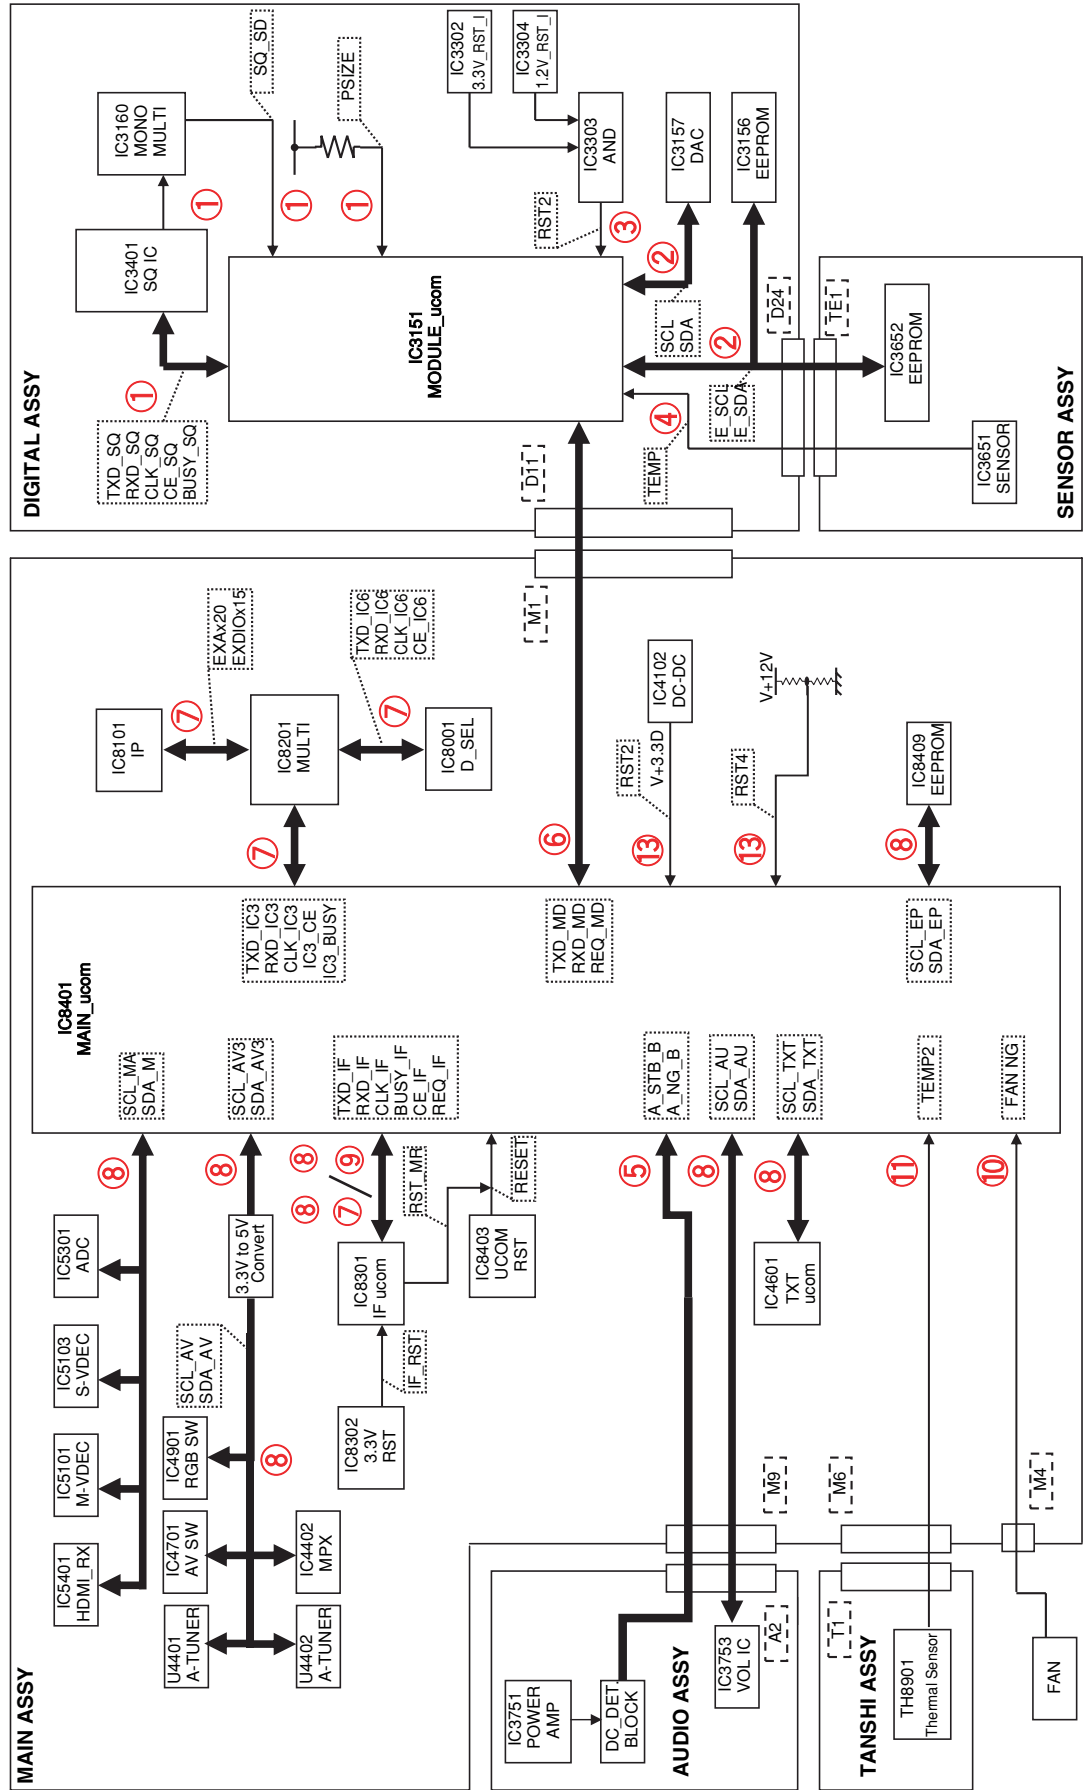

5.3.2 SD (SHUTDOWN) DIAGNOSIS

Frequency of LED Flashing	Major Type	Detailed Type	Log Indication in Factory Mode		Checkpoint	Possible Defective Part	Remarks
			MAIN	SUB			
Blue 1	Abnormality in the Sequence Processor	Communication error		RTRY	CLK_SQ/TXD_SQ, etc.	IC3151, IC3401	SQ_IC communication not established
		Drive stop Busy	SQ-IC	SONO BUSY_SQ	Check if the video sync signal is input to IC3401. BUSY_SQ	CN3001, IC3401 IC3401	If the signal detection by the module microcomputer is properly performed, the unit operates on an external sync. If BUSY_SQ remains high, a shutdown is generated.
Blue 2	Failure in IIC communication with the module microcomputer	Incoherent version (hardware, software)		VER-HS	Check the model number of the DIGITAL Assy and the designation of the sequence processor.	IC3401	The written SQ_PROG is incoherent with data on the DIGITAL Assy.
		DIGITAL Assy EEPROM SENSOR Assy EEPROM DAC	MD-IC	EEPROM BACKUP DAC	IIC communication line of IC3156 IIC communication line of IC3652 IIC communication line of IC3157	IC3151, IC3156 IC3151, IC3652 IC3151, IC3157	Check the pull-up resistor of the IIC control line and the power to the corresponding IC. Check the pull-up resistor of the IIC control line and the power to the corresponding IC. Check the pull-up resistor of the IIC control line and the power to the corresponding IC. If RST2 does not become high after the unit is turned on, a shutdown will be generated in several seconds.
Blue 3	Abnormality in RST2 power decrease		RST2		Is the output voltage of the DC-DC converter low? The 12 V power is not output.	AXY1135 POWER SUPPLY Unit	Check if V + 12 V is started.
Blue 4	High temperature of the panel		TMP_NG	TEMP1	Ambient temperature Abnormality in the panel temperature sensor	IC3651	If TEMP1 that is read by the module microcomputer is 75°C or higher, a shutdown will be generated.
Blue 5	Short-circuiting of the speakers		AUDIO		Speaker terminals AUDIO AMP	CN3753, CN3901, JA3901 IC3751	Check the connection with the SENSOR Assy. Check if any speaker cable is in contact with the chassis. Check if the AMP output is short-circuited.
			MODULE		Periphery of the cable between A2 and M8 Communication line between MAIN and MOD Periphery of the cable between D11 and M2	CN3752, CN4007 IC3151, IC8401	Check if cables are firmly connected. Check the communication lines (RXD_MOD/RXD_MOD/REQ_MOD). Check if cables are firmly connected.
Blue 6	Failure in communication with the module microcomputer				Communication line between D_SEL and MULTI_M Communication line between D_SEL and MULTI_M	CN3001, CN4001 IC8201, IC8401	Check the communication lines (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/OE_IF/REQ_IF). Check the communication lines (TXD_IC3/RXD_IC3/CLK_IC3/CE_IC3/IC3_BUSY).
			MA-SRL		Communication line between IP and MULTI_M Bus communication line between IP and MULTI_M Communication line between D_SEL and MULTI_M	IC8101, IC8201 IC8001, IC8201	Check the communication lines (EXA/EXDIO). Check the communication lines (TXD_IC6/RXD_IC6/CLK_IC6/CE_IC6).
Blue 7	Failure in IIC communication with the main microcomputer	AV Switch		AV-SW	IIC communication line between AV_SW and MAIN	IC4701, IC8401	Check the communication lines (SCL_AV3/SDA_AV3 or SCL_AV/SDA_AV).
		RGB Switch		RGB-SW	IIC communication line between RGB_SW and MAIN	IC4901, IC8401	Check the communication lines (SCL_AV3/SDA_AV3 or SCL_AV/SDA_AV).
Blue 8	Failure in IIC communication with the main microcomputer	Analog Tuner		FE1	IIC communication line between A_Tuner and MAIN	U401, IC8401	Check the communication lines (SCL_AV3/SDA_AV3 or SCL_AV/SDA_AV).
		Sub VDEC		S-VDEC	IIC communication line between S_VDEC and MAIN	IC5103, IC8401	Check the communication lines (SCL_MA/SDA_MA).
Blue 9	Failure in communication with the main microcomputer and unknown	MPX		MPX	IIC communication line between MPX and MAIN	IC4402, IC8401	Check the communication lines (SCL_AV3/SDA_AV3 or SCL_AV/SDA_AV).
		Main VDEC AD/PLL	MA-IC	M-VDEC ADC	IIC communication line between M_VDEC and MAIN IIC communication line between ADC and MAIN	IC5101, IC8401 IC5301, IC8401	Check the communication lines (SCL_MA/SDA_MA). Check the communication lines (SCL_MA/SDA_MA).
Blue 10	Failure in the fan	HDMI		HDMI	IIC communication line between HDMI_RX and MAIN	IC5401, IC8401	Check the communication lines (SCL_MA/SDA_MA).
		TXT		TXT	IIC communication line between TXT and MAIN	IC4601, IC8401	Check the communication lines (SCL_TXT/SDA_TXT).
Blue 11	High temperature of the unit	64K EEPROM		MA-EEP	IIC communication line between EEPROM and MAIN	IC4801, IC8401	Check the communication lines (SCL_TXT/SDA_EP).
		VOLUME IC		AUDIO	IIC communication line between VOL_IC and MAIN Periphery of the cable between A2 and M9	IC3753, IC8401 CN3752, CN4007	Check the communication lines (SCL_AUDIO/SDA_AUDIO). Check if cables are firmly connected.
Blue 12	Digital Tuner The unit will not be shut down, the log is recorded		MAIN		Communication line between IF and MAIN Dirt attached to the fan motor Periphery of the fan control regulator	IC3301, IC3303, IC3304, IC3401 CN4009 IC8407	Check the communication lines (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/OE_IF/REQ_IF). Check the fan. Check if cables are firmly connected.
			FAN		Periphery of the fan control regulator Temperature sensor or its periphery	TH8801, C8806 CN8804, CN4005	A shutdown is generated if TEMP2 becomes higher than 53°C TEMP2 Check if cables are firmly connected.
Blue 13	Failure in the POWER SUPPLY Unit		TEMP2		Periphery of the temperature sensor Periphery of the cable between T1 and M6 Failure in the system IC or its peripheral circuit	IC2000	Check for short-circuited/open communication line (M12_TXD_DT/RXD_DT)
			DTUNER				
Blue 13	Failure in the POWER SUPPLY Unit	DC-DC converter power decrease	MA-PWR	M-DCDC	DC-DC converter or its periphery, RST2 The 12 V power is not output, RST4	IC4102, Q4106	Check if V + 3.3 V is started. Check if V + 12 V is started.
		POWER SUPPLY		RELAY	Periphery of the cable between P8 and M2	CN4002	Check if cables are firmly connected.

5.4 INFORMATION ON SYMPTOMS THAT DO NOT CONSTITUTE FAILURE

Information on symptoms that do not constitute failure

Symptom	Cause, item to check, information
HDMI: Symptoms concerning the input format and settings	
The picture color for an INPUT 3 or 4 signal is not correct.	The color setting for INPUT 5 or 6 is not compatible with that of the output equipment. Check whether the color setting is YPbPr or RGB.
The video signal to INPUT 3 or 4 is not displayed, and a message is displayed.	A unsupported video signal is input. Example: 1080p @ 60Hz
The audio signal input to the INPUT 3 or 4 pin jack is not output.	The audio setting for INPUT 5 or 6 is "AUTO," and a video signal is not input. If the audio setting is "AUTO," to output an analog audio signal, the DVI signal must be input via a DVI-HDMI conversion cable. When the DVI equipment is connected, the analog signals are selected with the setting "AUTO."
No sound of signals to INPUT 3 or 4 is output.	The setting on the side of the HDMI output equipment is wrong. Example: Dolby Digital
MONITOR video output	
The video output signal from the MONITOR connector is deteriorated. Or when the video output signal from the MONITOR connector is recorded, its playback picture is deteriorated.	The video signal output from the MONITOR connector is Macrovision protected.
The video signal is not output when the component signal is input to INPUT 2.	The video signal is not output from the MONITOR connector when the component signal is selected.
The video signal is not output when the video signal is input to INPUT 3 or 4.	The video signal is not output from the MONITOR connector when the HDMI signal is selected.
MONITOR audio output	
The image displayed on the PDP is not synchronized with the sound from the MONITOR audio output.	The audio signal from the MONITOR connector is synchronized with the video output signal from the MONITOR connector.
DIGITAL audio output	
Playback of the signal from the DIGITAL audio output connector is possible, but recording is not possible.	The video signal output from the DIGITAL connector is copy-protected.
The video output signal from the DIGITAL connector is not synchronized with that from the MONITOR video output.	The digital audio output signal from the DIGITAL connector is synchronized with the video signal that is currently displayed, and not with the MONITOR video output.
Miscellaneous	
The no-signal off function is not activated.	The no-signal off function is effective only while a video signal is being input.
The no-operation off function is not activated.	The no-operation off function is effective only while a video signal is being input.
Power management does not function.	Power management is effective only while a signal is being input from a PC.
The AUTO SETUP function is not activated.	The AUTO SETUP function is effective only while a signal is being input from a PC.
• • • •	
Control via the SR connector is not possible.	A failure in the G-Link system or wrong connection of the cable to the SR audio connector is suspected.
The audio signal from the PC is not output.	A failure in the G-Link system or wrong connection of the cable to the PC connector is suspected.
The picture-quality setting (AV Selection) is not stored.	The picture-quality setting is stored for each input. As the setting is changed when another input is selected, the user may have a false idea that the setting is not stored.
The picture size changes arbitrary.	The Auto Size setting is set to ON (default is OFF).
The display position of the screen slightly changes every time the unit is turned on.	The orbiter function for minimizing the effects of phosphor burn is activated. As ON/OFF of this function can only be changed on the Integrator menu, turning off of this function by a user is not possible.
The video signal to the S video connector is not displayed.	Although S video input is selected on the menu, the cable is connected via a component video input connector whose function type is the same as S video input.
The video signal to the composite video connector is not displayed.	Although the composite video input is selected on the menu, the cable is connected via a component video connector or S video connector whose function type is the same as the composite video input.

SUPPLEMENT: On the video setting for HDMI

There are three types of HDMI output formats: color difference 4:4:4, color difference 4:2:2, and RGB4:4:4.

(The proportions, such as 4:4:4 and 4:2:2, represent those of the amount of data for video signal components. For example, as for color difference 4:4:4, the proportion of the amount of data as for Y, Cb, and Cr is 4:4:4.)

It is required to make the settings of the PDP according to the settings of the output equipment. For usual operation, however, set them to AUTO. If the color is inappropriate, make the settings manually.

In the HDMI system, video signals are coded at 24 bits per pixel and transmitted as a series of 24-bit pixels. In a case of color difference 4:4:4, Y, Cb, and Cr use 8 bits each. In a case of color difference 4:2:2, Y, Cb, and Cr use 12 bits each, but Cb and Cr are transmitted at a half sampling rate of Y. This unit is capable of processing the upper 10 bits out of 12 bits of video data. Recent high-end DVD players, such as Pioneer DV-79AVi, are capable of outputting 10-bit color-difference signals. In general, it is said that picture quality for color difference 4:2:2 format is assumed to be higher, because human eyes are more sensitive to luminance than to colors. In the case of RGB4:4:4, R, G, and B use 8 bits each.

6. DISASSEMBLY

6.1 PCB LOCATION

A





B

C

D

E


F

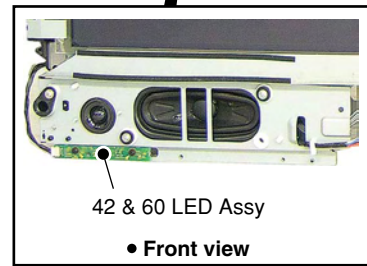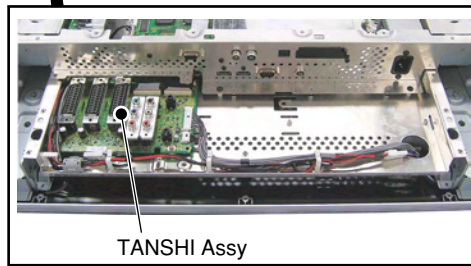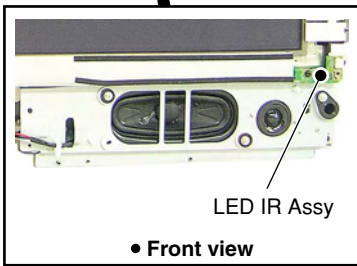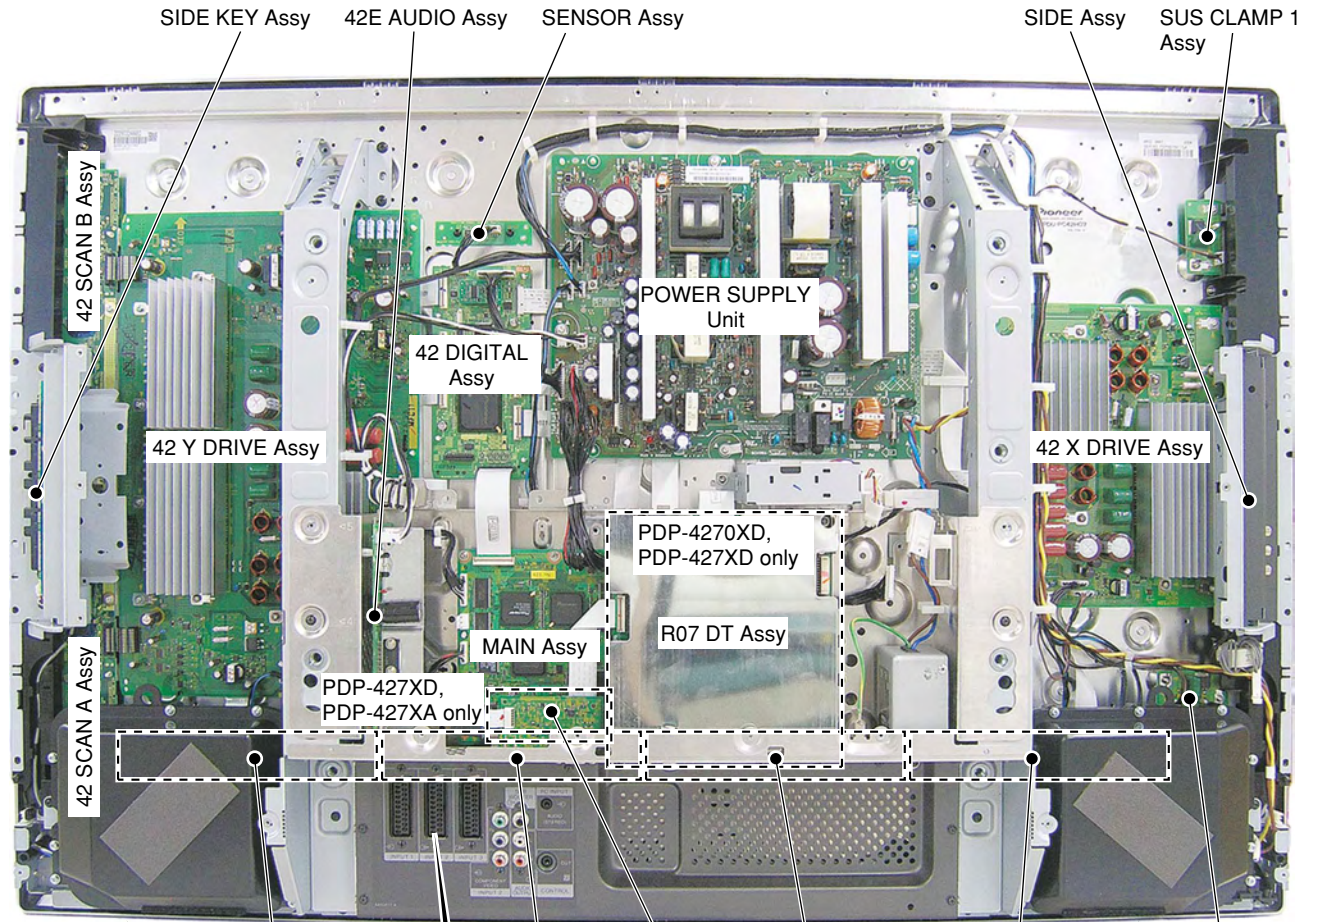

Note: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

Chart of removal order for the main parts and boards

It is efficient to proceed with removal of the main parts and boards in the order shown in the chart below:

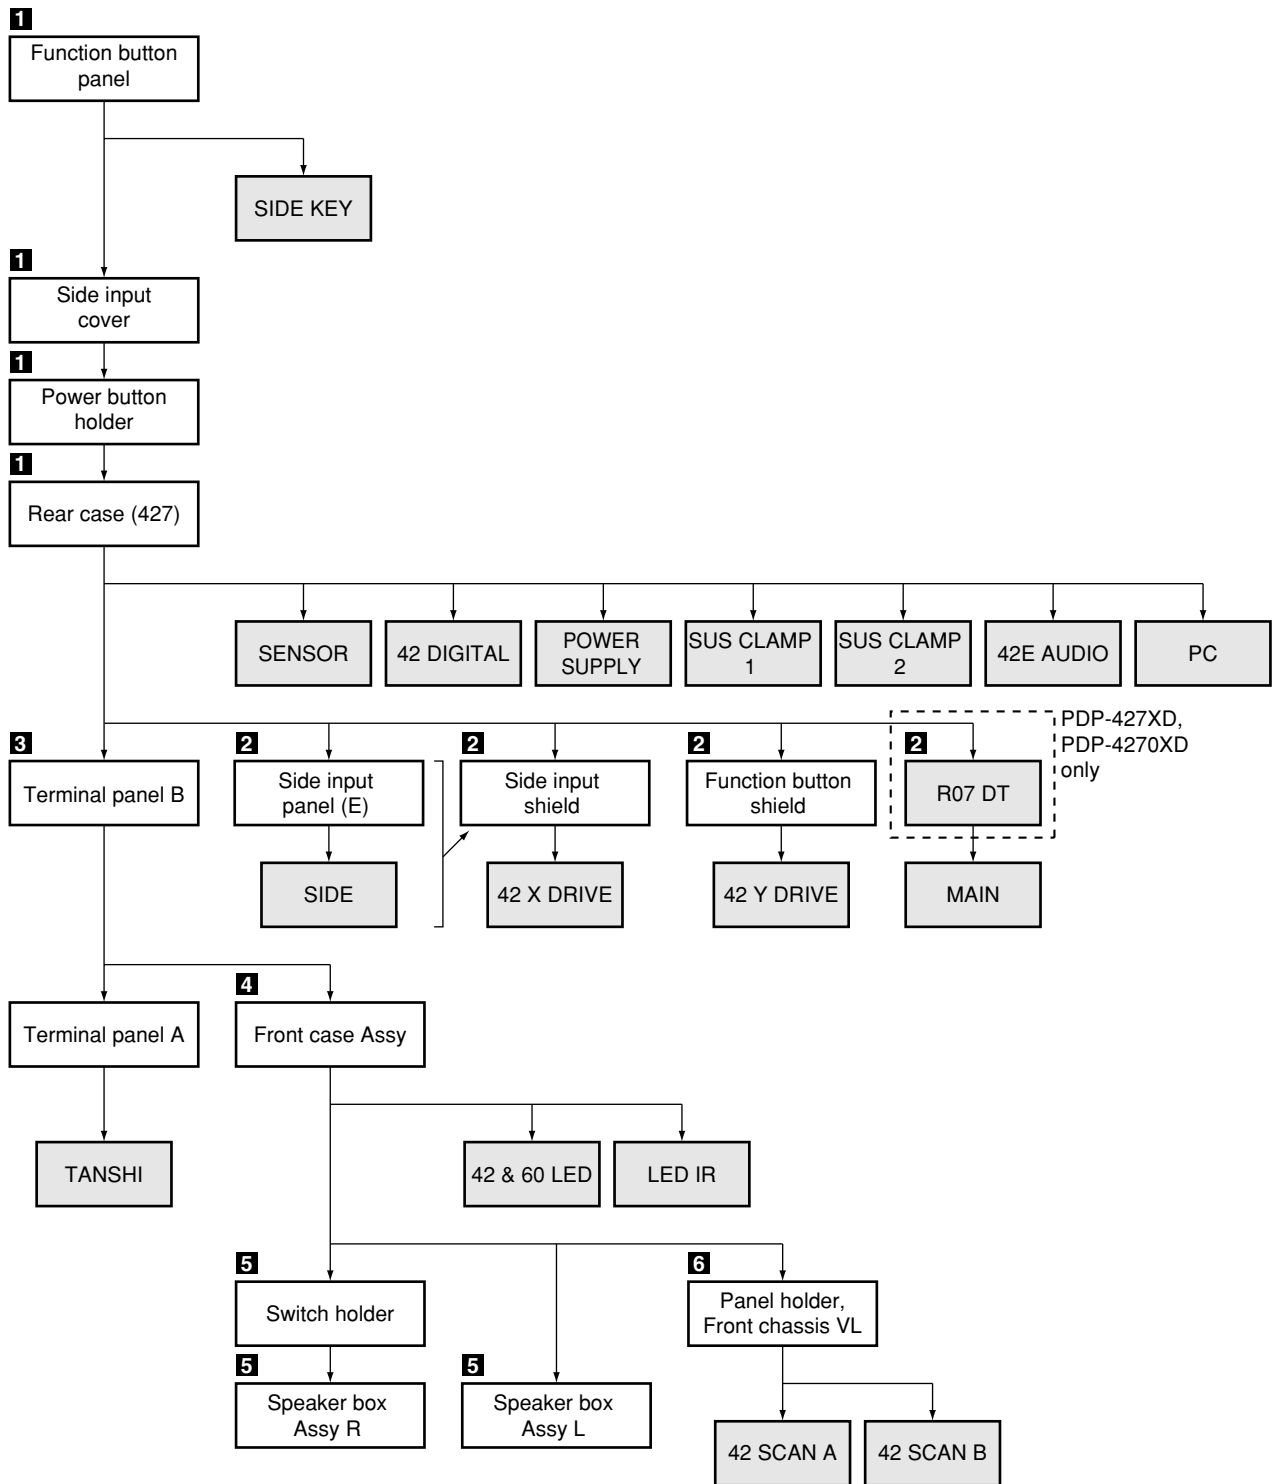

A

Disassembly

1 Rear Case (427)

● Function button panel


- ① Remove the two screws.
- ② Remove the function button panel.

● Side input cover

- ③ Remove the two screws.
- ④ Remove the side input cover.

● Power button holder

- ⑤ Remove the two screws.
- ⑥ Remove the power button holder.

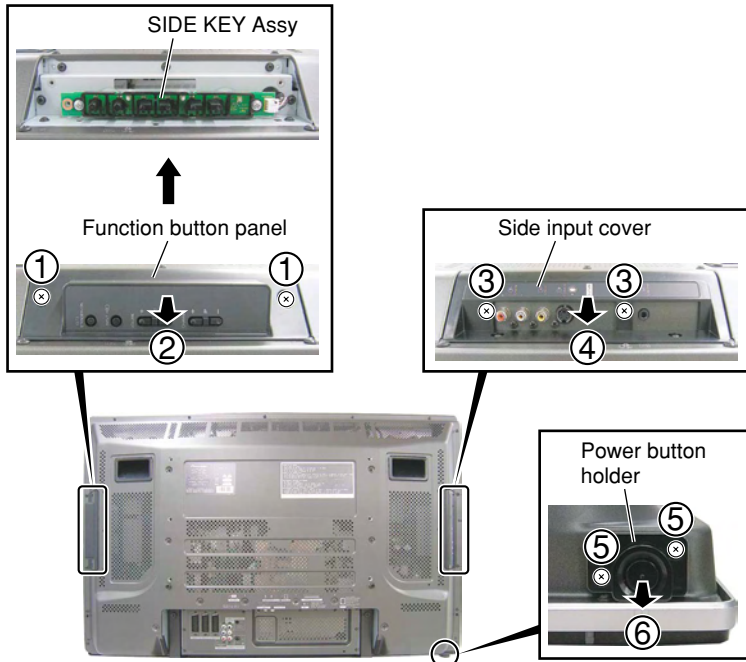


B

C

D

● Rear case (427)

- ① Remove the two protection sheets C.
- ② Remove the 23 screws. (AMZ30P060FTB)
- ③ Remove the nine screws. (TBZ40P080FTB)
- ④ Remove the four screws. (ABA1332)
- ⑤ Remove the four screws. (ABA1353)
- ⑥ Remove the one screw. (ABA1341)
- ⑦ Remove the rear case (427).

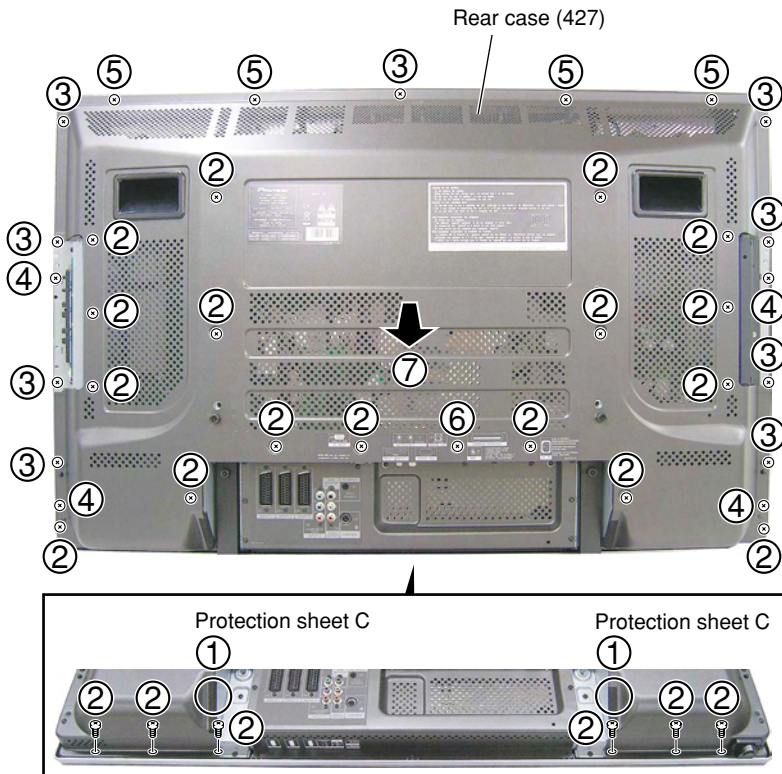


E

F

2 Access to PCB Assys


● SIDE Assy

- ① Remove the four screws.
- ② Remove the two screws.
- ③ Remove the three screws.
- ④ Remove the side input panel (E).

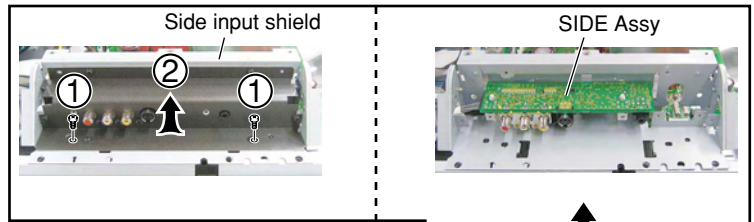



● 42 X DRIVE Assy

- ① Remove the two screws.
- ② Remove the side input shield with PCB.

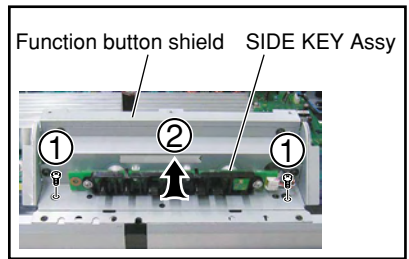

● 42 Y DRIVE Assy


- ① Remove the two screws.
- ② Remove the function button shield with PCB.

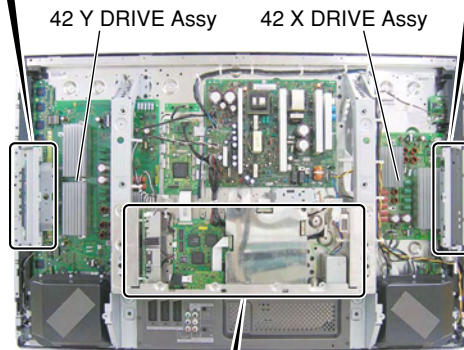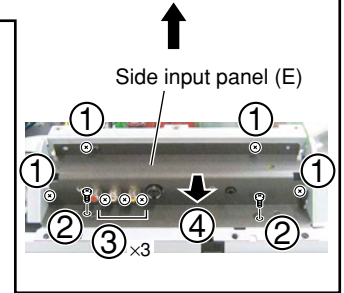

● MAIN Assy

- ① Disconnect cables, connectors, as required.
- ② Remove the POD cover.
- ③ Remove the two screws.
- ④ Remove the two screws.
- ⑤ Remove the R07 DT Assy.


PDP-427XD,
PDP-4270XD
only

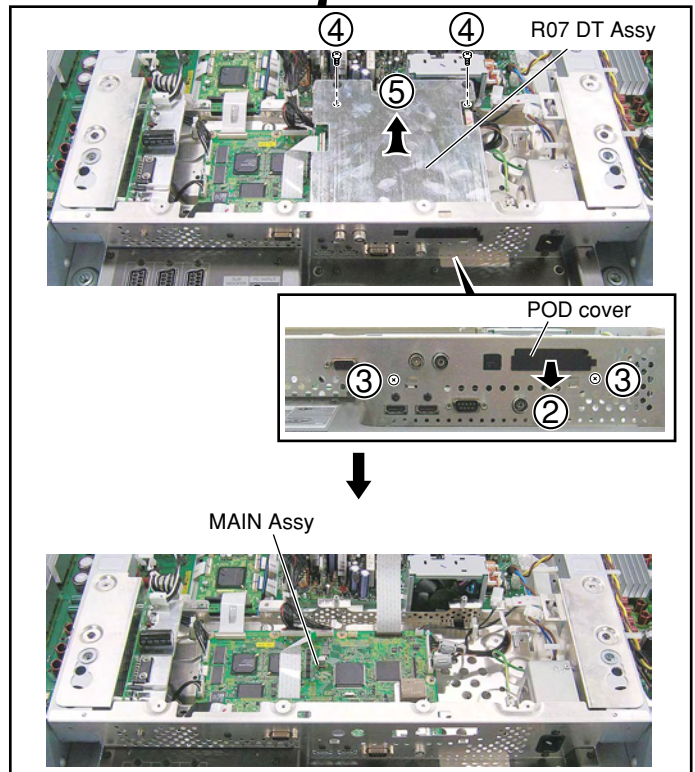

A

3 Terminal Panel B

- ① Remove the 10 screws.
- ② Remove the 10 screws.
- ③ Remove the three screws.
- ④ Remove the terminal panel B.

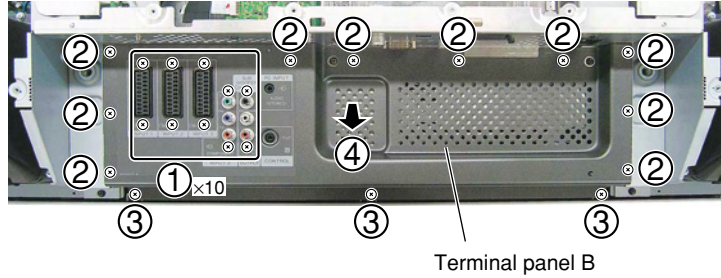


B



C


4 Front Case Assy

- ① Remove the one screw.
- ② Remove the two screws.

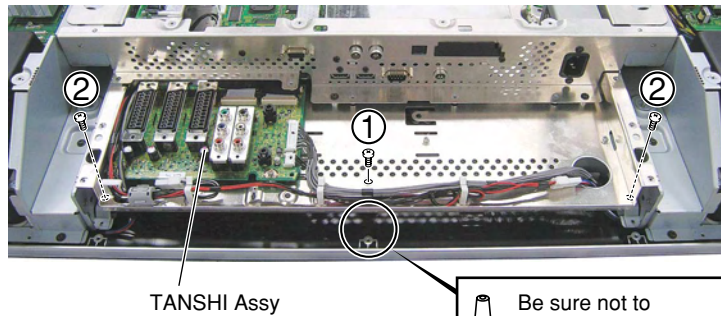

D

- ③ Pull the lower part of the Front case Assy toward you and out.
- ④ Remove the Front case Assy, by pulling it upward.

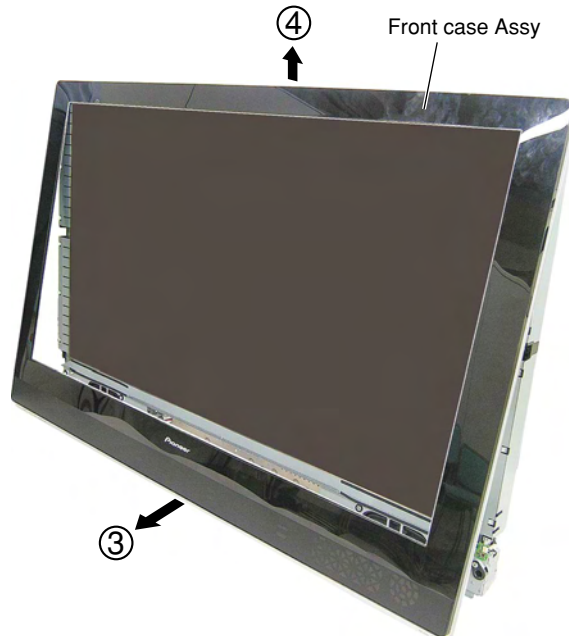

F



5 Speaker Box Assy L and R

● Speaker Box Assy L

- ① Disconnect cables, connectors, as required.
- ② Remove the two screws.
- ③ Remove the one screw.
- ④ Remove the one screw.
- ⑤ Remove the speaker box Assy L.

● Speaker Box Assy R


- ① Remove the one screw.
- ② Remove the switch holder.
- ③ Disconnect cables, connectors, as required.
- ④ Remove the two screws.
- ⑤ Remove the one screw.
- ⑥ Remove the one screw.
- ⑦ Remove the speaker box Assy R.

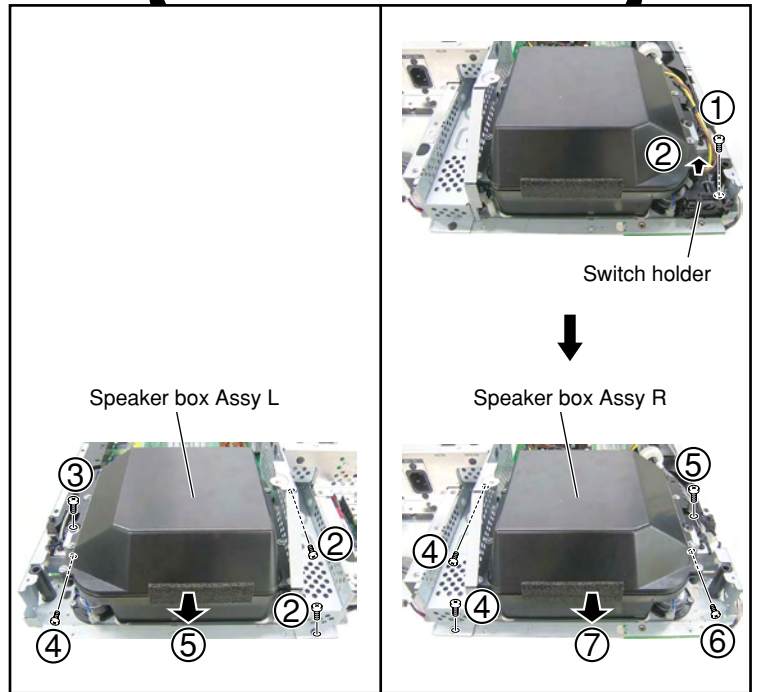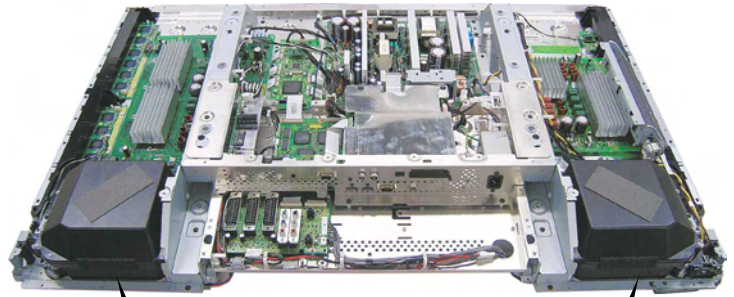


A

6 Exchange of SCAN IC

- ① Loosen the jumper wire.
- ② Remove the LED IR Assy by removing the one nylon rivet.
- ③ Remove the locking wire saddle.
- ④ Remove the two screws.
- ⑤ Unhook the six hooks.
- ⑥ Remove the panel holders V1 (427) and V2 (427).

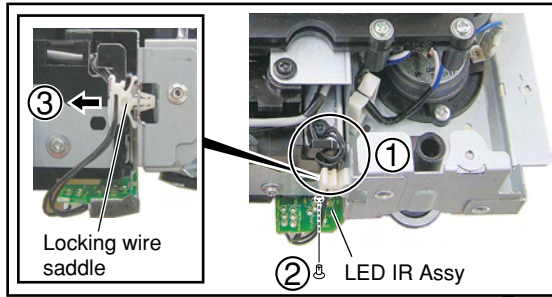


B

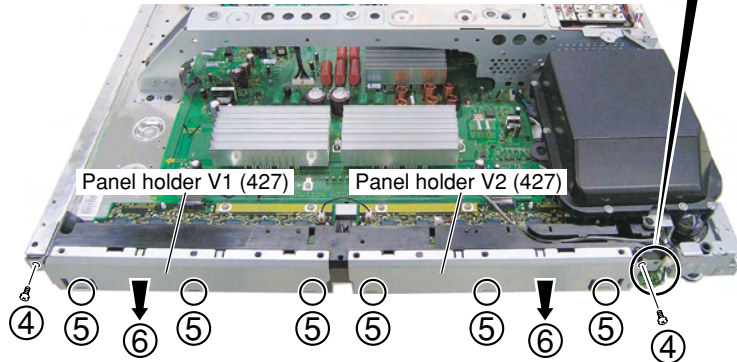

C

- ⑦ Remove the three screws.
- ⑧ Remove the front chassis VL (427).

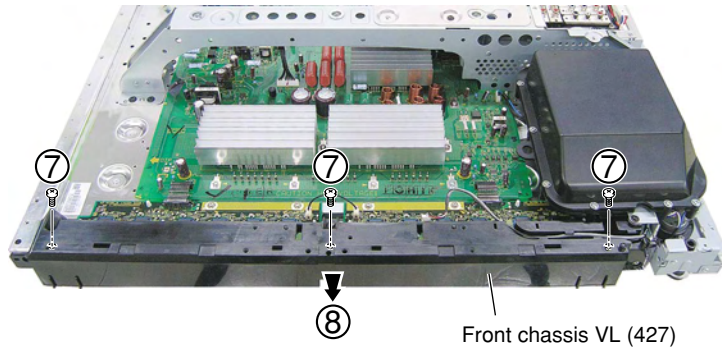


D

↓

Exchange

E

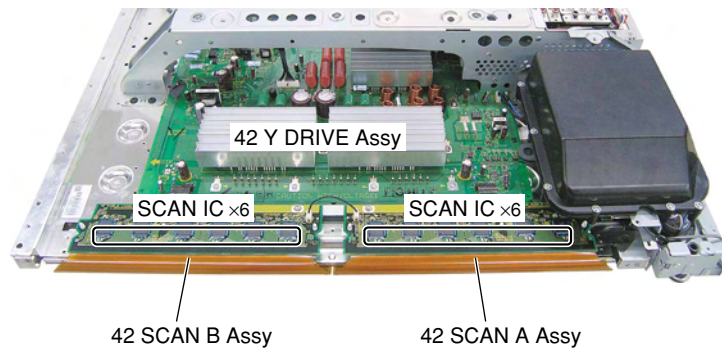

F

7. ADJUSTMENT



1. At shipment, the unit is adjusted to its best conditions. Normally, it is not necessary to readjust even if an assembly is replaced. If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
2. Any value changed in Service/Factory mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
3. Use a stable AC power supply.

7.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED

■ When any of the following assemblies is replaced

POWER SUPPLY Unit	➔	Refer to "7.4 HOW TO CLEAR HISTORY DATA".
DIGITAL Assy	➔	Writing of backup data is required. Refer to the "7.3 BACKUP WHEN THE PANEL UNIT IS ADJUSTED. "
X MAIN DRIVE Assy	➔	No adjustment required
X SUB DRIVE Assy	➔	No adjustment required
Y MAIN DRIVE Assy	➔	No adjustment required
Y SUB DRIVE Assy	➔	No adjustment required
Service Panel Assy	➔	Refer to "7.5 ADJUSTMENTS WHEN THE SERVICE PANEL ASSY IS REPLACED."
MAIN Assy	➔	Switching to SR+ from RS-232C
SENSOR Assy	➔	Writing of backup data is required. Refer to the "7.3 BACKUP WHEN THE PANEL UNIT IS ADJUSTED. "
TANSHI Assy	➔	No adjustment required
R07 DT Assy (PDP-427XD / 4270XD only)	➔	No adjustment required

7.2 ADJUSTMENT REQUIRED WHEN PART IS REPLACED

A Notes on replacing parts

For the parts described in the list below, replacement is required for the whole Assy, not only the defective part. If any part listed below is identified as defective and needs replacement, replace the whole Assy, and make necessary adjustments after replacement.

Reason: The whole Assy must be replaced, because adjustments and data rewriting for the Assy at the level of production line are required.

PCB Assy No.	Function Name	Parts that Require Whole-Assy Replacement		
		Ref No.	Function Name	Part No.
AWW1240	42 DIGITAL Assy	IC3151	Module microcomputer	AGC1011
		IC3401	Sequence IC	PEG239A
		IC3301	Flash memory	AGC1009
		IC3156	EEPROM	BR24L04FJ-W
AWW1140	SENSOR Assy	IC3652	EEPROM	BR24L02FJ-W
AWV2318 (PDP-427XD and PDP-427XA) AWV2320 (PDP-4270XD and PDP-4270XA)	MAIN Assy	IC4603	Flash ROM	AGC1020
		IC4701	AV switch	R2S11002AFT
		IC4901	RGB switch	R2S11001FT
		IC5101	MAIN VDEC	UPD64015GM-UEU
		IC5103	SUB VDEC	TVP5150AM1PBS
		IC5301	A/D Converter	AD9985KSTZ-110
		IC5403	EEPROM	BR24L02FJ-W
		IC5404	EEPROM	BR24L02FJ-W
		IC8202	Flash ROM	AGC1019
		IC8301	Flash UCOM	AGC1016
		IC8402	Flash ROM	AGC1018

D	POWER SUPPLY Unit	➔	The assembly must be replaced as a unit, and no part replacement is allowed.
	MAIN Assy	➔	No adjustment is required after replacement of parts other than those mentioned above.
	DIGITAL Assy	➔	No adjustment is required after replacement of parts other than those mentioned above.
	X MAIN DRIVE Assy	➔	No adjustment is required after replacement of parts other than those shown in the following page.
	X SUB DRIVE Assy	➔	No adjustment required
E	Y MAIN DRIVE Assy	➔	No adjustment is required after replacement of parts other than those shown in the following page.
	Y SUB DRIVE Assy	➔	No adjustment required
	ADDRESS Assy	➔	No adjustment required
	SENSOR Assy	➔	No adjustment is required after replacement of parts other than those mentioned above.
	TANSHI Assy	➔	No adjustment required
F	R07 DT Assy (PDP-427XD / 4270XD only)	➔	The assembly must be replaced as a unit, and no part replacement is allowed.

Outline

Adjustment data are stored in the EEPROM (IC3156/4K) on the DIGITAL Assy in the production process. Those adjustment data are also automatically stored in the EEPROM (for backup: IC3652) on the SENSOR Assy. If the DIGITAL Assy is replaced, those adjustment data for backup can be copied from the EEPROM on the SENSOR Assy to a new DIGITAL Assy.

Backed up data

- Drive voltage adjustment value
- Hour-meter count
- Pulse-meter count
- Panel white balance adjustment value
- Serial No.
- Drive waveform adjustment value
- P-ON counter value
- PD/SD histories

How to copy backup data


1. When the DIGITAL Assy is replaced with one for service (usual service)

Adjustment data can be restored by copying the data backed up in the SENSOR Assy to the EEPROM on a new DIGITAL Assy.

The EEPROM on the new DIGITAL Assy has no adjustment data, and the EEPROM for backup in the SENSOR Assy has adjustment data. After replacing the DIGITAL Assy, enter PANEL FACT. mode, display the PANEL INFORMATION page, then check if "NO DATA!" is set for "DIG. EEP" and "ADJUSTED" is set for "BACKUP". Then, proceed in the following steps:

(1) Copying, using the Factory menu

- ① Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.
- ② Turn on the power, using the remote control unit, then enter Panel Factory mode.
Copy the backup data, as shown in the figure below.

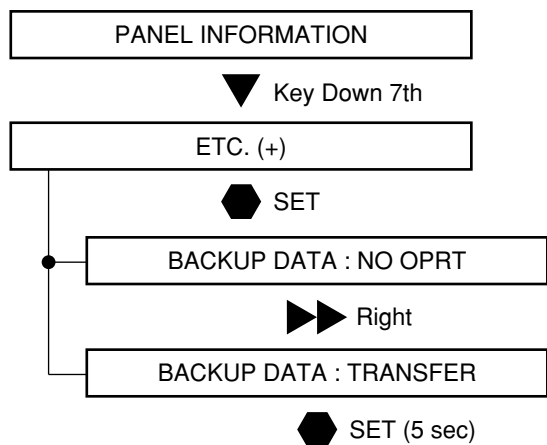

- ③ Turn the power off.
 - After the DIGITAL Assy is replaced with one for service, be sure to check if "NO DATA!" is set for "DIG. EEP" on the PANEL INFORMATION page of the PANEL FACT. mode.
 - If copying of the backup data fails in the above procedure, the red LED lights, and the blue LED flashes, as a warning that no backup data were copied.
 - If both the DIGITAL and SENSOR Assys are to be replaced, first replace the SENSOR Assy, turn the unit on and back off again, then replace the DIGITAL Assy.

(2) Copying, using the RS-232C commands


- ① Switch the RS-232C/SR+ setting to RS-232C so that RS-232C commands can be received.
- ② Turn on the unit, using the remote control unit or by issuing the PON command. Then issue the FAY command.
- ③ Issue the BCP command to transfer the data stored in the EEPROM for backup.
- ④ Turn the power off.

2. When a secondhand DIGITAL Assy that had been mounted in another product is to be reused

As adjustment data for another product are already stored in the secondhand DIGITAL Assy, first delete those data then copy the backup data stored in the EEPROM on the SENSOR Assy.

(1) Copying, using the Factory menu

- ① Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.
- ② Turn on the power, using the remote control unit, then enter Panel Factory mode.
Copy the backup data, as shown in the figure below.

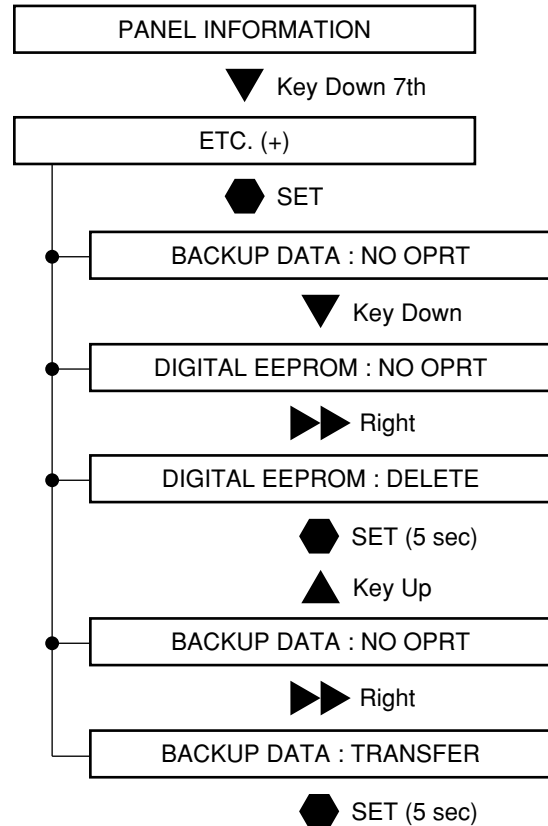

- ③ Turn the power off.

Note:

If the secondhand DIGITAL Assy is mounted in the product then the unit is turned on then back off again, the data in the EEPROM on the DIGITAL Assy are copied over the EEPROM in the SENSOR Assy. Thus the backup data can never be restored. During the first power-on after the DIGITAL Assy is replaced, be sure to enter Factory mode to copy the backup data. Or, before removing the secondhand DIGITAL Assy from the original product, delete the adjustment data on it, using the Factory mode (DIGITAL EEPROM: DELETE), mount it to the product to be repaired, then copy the data from the backup EEPROM.

(2) Copying, using the RS-232C commands


- ① Switch the RS-232C/SR+ setting to RS-232C so that RS-232C commands can be received.
- ② Turn on the unit, using the remote control unit or by issuing the PON command. Then issue the FAY command.
- ③ Issue the UAJ command to delete data stored in the EEPROM on the DIGITAL Assy.
- ④ Issue the BCP command to transfer the data stored in the EEPROM for backup.
- ⑤ Turn the power off.

3. In a case where normal backup data are not stored in the backup EEPROM because the EEPROM on the DIGITAL Assy is defective, etc., and where manually adjusted values are to be applied to the product

Note: In this section, it is assumed that settings for various items have been completed, using Factory menu or RS-232C commands.

(1) Method using the Factory menu

- ① Set various setting/adjustment values.
- ② Proceed in the following steps.

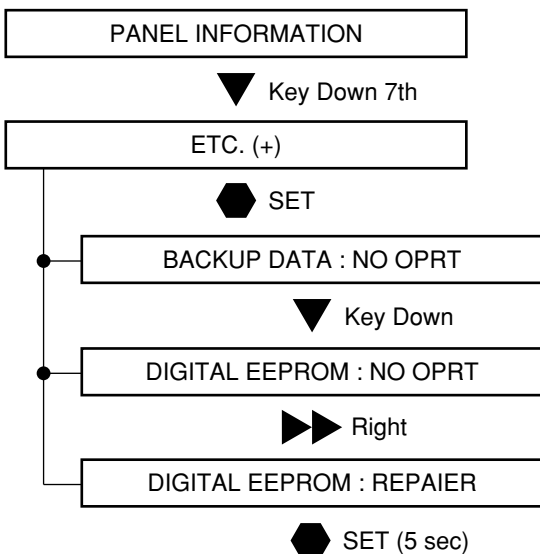

- ③ Turn the power off.

Note:

When a DIGITAL Assy with an EEPROM in which adjustment data are stored is mounted, this step is not required after manual adjustment. ("DIGITAL EEPROM: REPAIR" is not indicated.)

(2) Method using the RS-232C commands

Issue the FAJ command.

7.4 HOW TO CLEAR HISTORY DATA

■ Clearance of various logs after the Assys are replaced

Besides adjustment data, data on accumulated power-on time and logs on defective parts of the product are backed up. Some of those data must be cleared after the Assys are replaced for service.


(1) Clearance of logs, using the RS-232C commands

Item	Content	When the Panel is replaced	When the POWER SUPPLY Unit is replaced	When the Other parts is replaced	RS-232C Commands
Hour-meter	Accumulated power-on time	Must be cleared	No need to be cleared	No need to be cleared	CHM
Pulse-meter	Accumulated number of pulses emitted	Must be cleared (mandatory)	No need to be cleared	No need to be cleared	CPM
Shutdown history	Cause of an SD and hour-meter count	Must be cleared	No need to be cleared	No need to be cleared	CSD
Power-down history	Cause of an PD and hour-meter count	Must be cleared	No need to be cleared	No need to be cleared	CPD
Power-on counter	Relay-on count	No need to be cleared	Must be cleared (mandatory)	No need to be cleared	CPC
MAX TEMP	Historical max. temperature	Must be cleared	Must be cleared	Must be cleared	CMT

- Notes:**
- As the pulse-meter count is used for each correction function, it must be cleared when an Assy relevant to correction functions is replaced.
 - When clearing logs, using the RS-232C commands, first enter Factory mode (by issuing FAY or PFY), then issue the corresponding command.

(2) Clearance of logs, using the Factory menu

- Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.
- Turn on the power, using the remote control unit, then enter Panel Factory mode.
Delete various logs, as shown in the figure below.

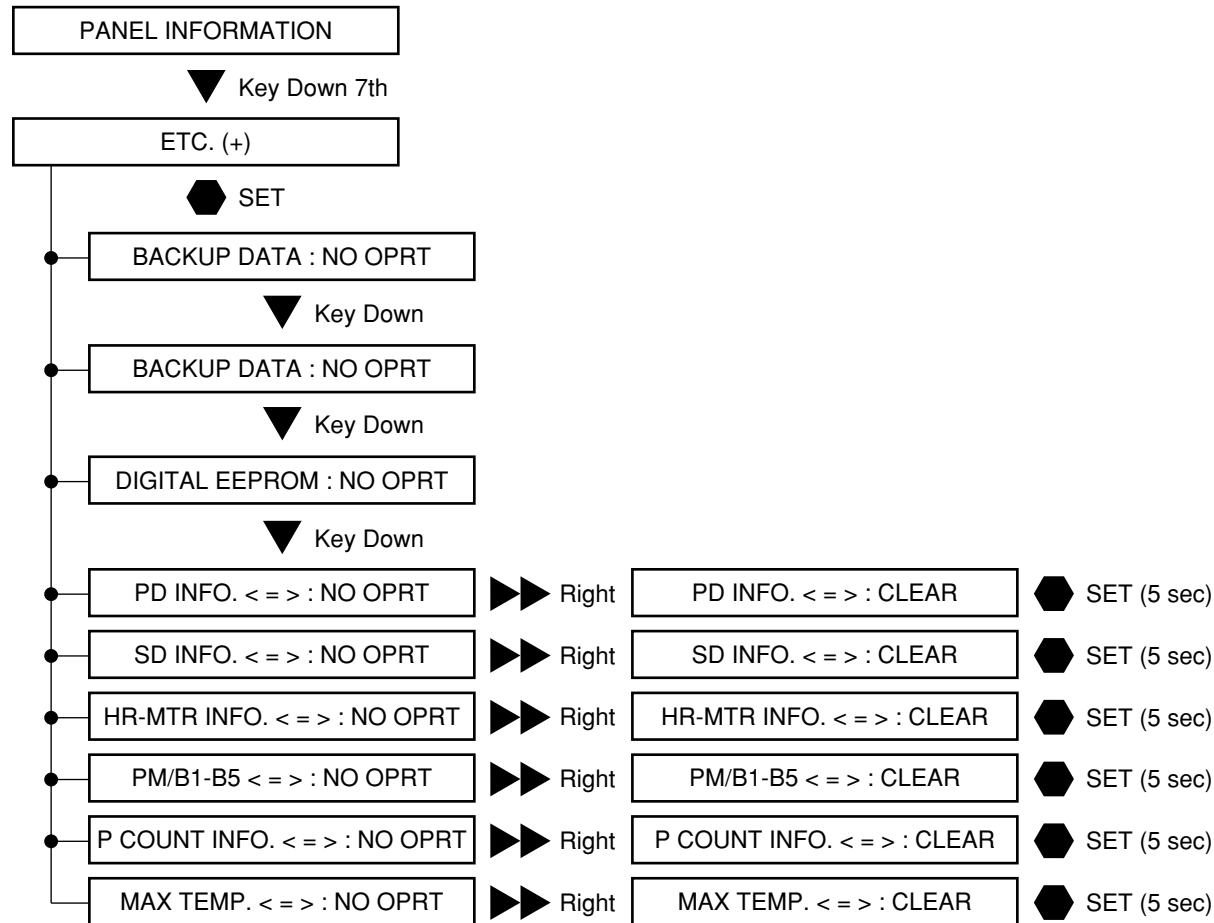

- Turn the power off.


7.5 ADJUSTMENT WHEN THE SERVICE PANEL ASSY IS REPLACED

When the Panel Assy is replaced with one for service, the following adjustments are required:

■ Adjustments of Vofs voltage and Vyprst voltage

Enter the reference adjustment values for the Vofs voltage and Vyprst voltage that are written on the label attached to the panel for service.

Note: Enter the values, using an RS-232C command or the Factory Menu.

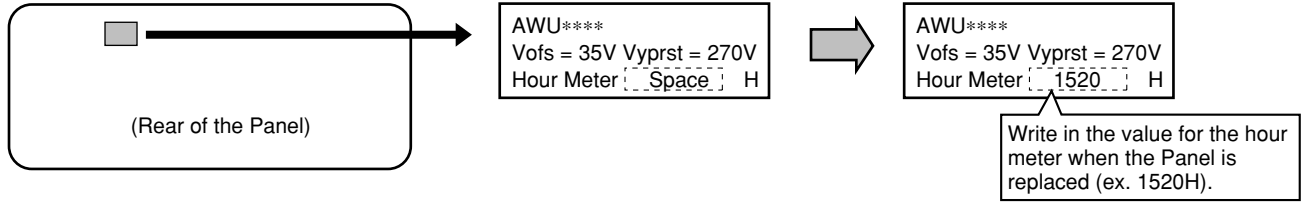


Using an RS-232C command

Enter a "PFY" command with Factory mode ON.

Convert the adjustment voltage values written on the label attached at the rear of the Panel to an input command, referring to the conversion chart. (See the next page.)

- Reference adjustment of the Vofs voltage: Ex. "Vofs = 35" → (Check the conversion chart.) Enter "VOF112."
- Reference adjustment of the Vyprst voltage: Ex. "Vyprst = 270 V" → (Check the conversion chart.) Enter "VRP078."

Using the Factory Menu

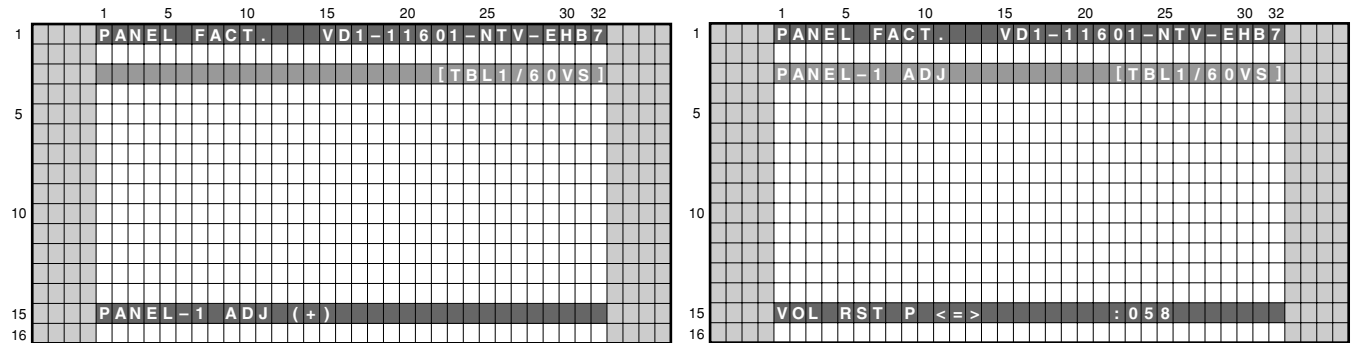

Select the main item "PANEL FACT." by pressing the MUTE key then enter Panel Factory mode by pressing the SET key.

Using the ▲/▼ keys, select "PANEL-1 ADJ" then press the SET key to enter the next lower nested layer.

Select "VOL-OFFSET" or "VOL RST P" then enter a command value converted from the voltage value, using the ◀/▶ keys.

■ Clearing data on various histories of the Panel, such as those on the hour meter

- It is necessary to clear the data on the hour meter, etc. to match them to the actual driving hours of the Panel.
- It is also necessary to clear the data on SD and PD, because the accumulated power-on time when a shutdown or power-down occurred is recorded.

Note: Clear the values, using an RS-232C command or the Factory Menu.

There are two types of hour meters. Do not take the MTB hour meter for the hour meter.

Using an RS-232C command

To acquire the accumulated power-on time of the product itself, use the "QS2" of RS-232C command.

1. To clear the data on the hour meter (for the Panel) : CHM
2. To clear the data on the pulse meter : CPM
3. To clear the data on the SD history : CSD
4. To clear the data on the PD history : CPD

Using the Factory Menu

See "7.4 HOW TO CLEAR HISTORY DATA."

A


■ Conversion charts for electronic VRs (Vprst/Vofs)

Vprst [V]	Setting value [STEP]	Vprst [V]	Setting value [STEP]	Vprst [V]	Setting value [STEP]	Vofs [V]	Setting value [STEP]	Vofs [V]	Setting value [STEP]
236	000	280	101	324	202	14	000	58	235
237	002	281	103	325	204	15	005	59	241
238	004	282	105	326	207	16	010	60	246
239	006	283	108	327	209	17	015	61	251
240	009	284	110	328	211	18	021	62	255
241	011	285	112	329	214	19	027		
242	013	286	115	330	216	20	032		
243	016	287	117	331	218	21	037		
244	018	288	119	332	220	22	043		
245	020	289	121	333	223	23	048		
246	022	290	124	334	225	24	053		
247	025	291	126	335	227	25	059		
248	027	292	128	336	230	26	064		
249	029	293	131	337	232	27	069		
250	032	294	133	338	234	28	075		
251	034	295	135	339	237	29	080		
252	036	296	138	340	239	30	085		
253	039	297	140	341	241	31	091		
254	041	298	142	342	243	32	096		
255	043	299	144	343	246	33	101		
256	045	300	147	344	248	34	107		
257	048	301	149	345	250	35	112		
258	050	302	151	346	253	36	118		
259	052	303	154	347	255	37	123		
260	055	304	156			38	128		
261	057	305	158			39	134		
262	059	306	161			40	139		
263	062	307	163			41	144		
264	064	308	165			42	150		
265	066	309	168			43	155		
266	069	310	170			44	160		
267	071	311	172			45	166		
268	073	312	174			46	171		
269	075	313	177			47	176		
270	078	314	179			48	182		
271	080	315	181			49	187		
272	082	316	184			50	192		
273	085	317	186			51	198		
274	087	318	188			52	203		
275	089	319	191			53	209		
276	092	320	193			54	214		
277	094	321	195			55	219		
278	096	322	197			56	225		
279	098	323	200			57	230		

8. SERVICE FACTORY MODE

8.1 OUTLINE OF THE SERVICE FACTORY

8.1.1 SERVICE FACTORY MODE TRANSITION CHART

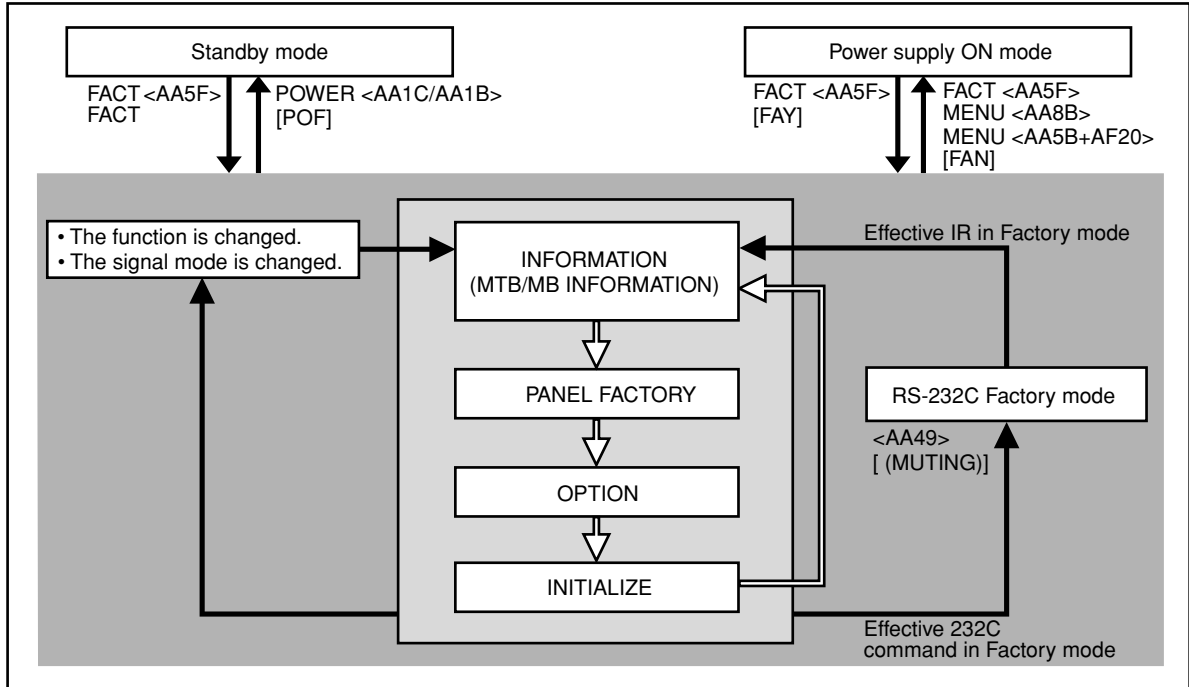

8.1.2 HOW TO ENTER/EXIT SERVICE FACTORY MODE

How to enter Service Factory Mode

By using a remote control unit for servicing)

- Remote control unit for servicing : Press [FACTORY1] key.

By issuing RS-232C commands)

- During normal Standby mode : Issue [PON] then [FAY].
- During normal operation mode : Issue [FAY].

How to exit Service Factory Mode

By using a remote control unit for servicing)

- Remote control unit for servicing : press [FACTORY1] key.
- Remote control unit supplied : press [HOME MENU] key.

By issuing RS-232C commands)

- Issue [FAN].

8.1.3 OPERATION OF SERVICE FACTORY MODE

Functions whose setting are set to OFF

No.	Function	Remarks
1	2-Screen Operation	Input function set on the main side is selected
2	FREEZE	
3	Mask Control	MTB/MB is none. It becomes processing on the PANEL side.
4	ORBITER	Central value operation

User data

User data will be treated as follows :

- User data on picture-quality and audio-quality adjustments are not reflected, and factory-preset data are output (user data will be retained in memory). When the unit enters Service Factory mode, the current audio-quality adjustment data will be still be retained in memory.
- As to data on various settings, user data will be applied to the items that are associated with signal format change (screenize switching, etc).
- Data on screen (i.e., screen position; meaning clock dividers, and not including data on screen size). Are reset to the default values (data stored in memory will be retained). Screen size will be retained.

8.1.4 REMOTE CONTROL CODE

SR/R Keys	Basic Functions	Remarks
MUTING	Switching the main items.	Shifting to the next main item (top).
↓ (DOWN) (Note1)	Switching the subtitled items.	Shifting downward to the next subtitled item.
↑ (UP) (Note1)	Switching the subtitled items.	Shifting upward to the next upper layer.
← (LEFT) (Note1)	Decreasing the adjustment value.	Decreasing the adjustment value.
→ (RIGHT) (Note1)	Increasing the adjustment value.	Increasing the adjustment value.
ENTER/SET (Note1)	Switching the layers.	Shifting downward or upward to the next lower or upper layer.
INPUT	Selecting INPUT.	Shifting the INPUT to the next function.
INPUTxx (Note1)	Selecting INPUT.	Switching the INPUT to xx. (xx=1 to 6 etc)
CH+/P+	Increasing the channel number.	Advancing
CH-/P-	Decreasing the channel number.	
Numeric Keys	Function: TV	Function: TV (previously selected channel number is selected)
POWER	Power OFF.	Turning the power off.
FACTORY	Factory OFF (Factory mode)	In Factory mode, turning Factory mode off.
	Factory ON (Non-Factory mode).	In Non-Factory mode, turn Factory mode on.
HOME MENU (Note1)	Menu ON.	In Factory mode, turn Factory mode off.
VOLUME+	Volume UP.	Increasing 10 the adjustment value. (PANEL FACTORY)
VOLUME-	Volume DOWN.	Decreasing 10 the adjustment value. (PANEL FACTORY)
DRIVE ON/OFF (Note2)	Drive Mode OFF.	Turning Drive mode off.
INTEGRATOR (Note1)	INTEGRATOR MENU ON.	Enter INTEGRATOR MODE.

(Note 1) A pertinent key that exists in the service remote control becomes effective only in the factory mode and the integrator mode. Please use the remote control of the attachment when you normally operate it in the mode (home menu operation etc.).

(Note 2) When ten seconds have passed since the [DRIVE ON/OFF] key was pressed at the standby, it becomes invalid. Please press [POWER] key from the [DRIVE ON/OFF] key pressing within ten seconds when you do power supply ON while driven OFF.



Remote control unit for Servicing

PDP-427XD

PDP-427XA

PDP-4270XD


PDP-4270XA

8.1.5 FACTORY HIERARCHICAL TABLE


Large Item		Middle Item		Variable / Adjustment Range	Remarks
		Small Item			
8.2.1 INFORMATION					
8.2.1.1		VERSION (1)			
8.2.1.2		VERSION (2)			
8.2.1.3		MAIN NG		CLEAR <=>	OFF <=> ON
8.2.1.4		TEMPERATURE			
8.2.1.5		HOUR METER			
8.2.1.6		HDMI SIGNAL INFO 1			
8.2.1.7		HDMI SIGNAL INFO 2			
8.2.1.8		VDEC SIGNAL INFO			
8.2.2 PANEL FACTORY (+)					
8.2.2.1		PANEL INFORMATION			
8.2.2.2		PANEL WORKS			
8.2.2.3		POWER DOWN			
8.2.2.4		SHUT DOWN			
8.2.2.5		PANEL-1 ADJ (+)		X-SUS B <=>	120 to 136 Equivalent to XSB
				Y-SUS B <=>	120 to 136 Equivalent to YSB
				Y-SUSTAIL T1 <=>	120 to 136 Equivalent to YTG
				Y-SUSTAIL T2 <=>	120 to 136 Equivalent to YTB
				Y-SUSTAIL W <=>	120 to 136 Equivalent to YTW
				XY-RST W1 <=>	120 to 136 Equivalent to RSW
				XY-RST W2 <=>	120 to 136 Equivalent to RYW
				VOL SUS <=>	000 to 255 Equivalent to VSU
				VOL OFFSET <=>	000 to 255 Equivalent to VOF
				VOL RST P <=>	000 to 255 Equivalent to VRP
				SUS FREQ. <=>	MODE 1 to MODE 8 Equivalent to SFR
8.2.2.6		PANEL-2 ADJ (+)		R-HIGH <=>	000 to 511 Equivalent to PRH
				G-HIGH <=>	000 to 511 Equivalent to PGH
				B-HIGH <=>	000 to 511 Equivalent to PBH
				R-LOW <=>	000 to 999 Equivalent to PRL
				G-LOW <=>	000 to 999 Equivalent to PGL
				B-LOW <=>	000 to 999 Equivalent to PBL
				ABL <=>	000 to 255 Equivalent to ABL
8.2.2.7		PANEL REVISE (+)		R-LEVEL <=>	LV-0 to LV-7 Equivalent to RRL
				G-LEVEL <=>	LV-0 to LV-7 Equivalent to RGL
				B-LEVEL <=>	LV-0 to LV-7 Equivalent to RBL
8.2.2.8		ETC. (+)		BACKUP DATA <=>	NO OPRT <=> TRANSFER or ERR Equivalent to BCP
				DIGITAL EEPROM <=>	NO OPRT <=> DELETE/REPAIR Equivalent to FAJ/UAJ
				PD INFO. <=>	NO OPRT <=> CLEAR Equivalent to CPD
				SD INFO. <=>	NO OPRT <=> CLEAR Equivalent to CSD
				HR-MTR INFO. <=>	NO OPRT <=> CLEAR Equivalent to CHM
				PMB1-B5 <=>	NO OPRT <=> CLEAR Equivalent to CPM
				P COUNT INFO. <=>	NO OPRT <=> CLEAR Equivalent to CPC
				MAX TEMP. <=>	NO OPRT <=> CLEAR Equivalent to CMT
8.2.2.9		RASTER MASK SETUP (+)		MASK OFF	Equivalent to MKS+S00
				RST MASK 01 <=>	<=> 48V <=> 50V <=> 60V <=> Equivalent to MKS+S51
				...	60P <=> 70P <=> 72V <=> 75V <=> ...
				RST MASK 24 <=>	Equivalent to MKS+S74
8.2.2.10		PATTEN MASK SETUP (+)		MASK OFF	Equivalent to MKS+S00
				PTN MASK 01 <=>	<=> 48V <=> 50V <=> 60V <=> Equivalent to MKS+S01
				...	60P <=> 70P <=> 72V <=> 75V <=> ...
				PTN MASK 39 <=>	Equivalent to MKS+S39
8.2.2.11		COMBI MASK SETUP (+)		MASK OFF	Equivalent to MKC+S00
				CMB MASK 01 <=>	<=> 48V <=> 50V <=> 60V <=> Equivalent to MKC+S01
				...	60P <=> 70P <=> 72V <=> 75V <=> ...
				CMB MASK 10 <=>	Equivalent to MKC+S10
8.2.3 OPTION					
8.2.3.1		EDID WRITE MODE <=>			Exclusively used for production line
8.2.3.2		CH PRESET <=>			
8.2.4 INITIALIZE					
8.2.4.1		SYNC DET (+)			for the technical analysis
8.2.4.2		SG MODE <=>			SG OFF <=> ...
8.2.4.3		SG PATTERN <=>			SG PATTERN <=> COLOR BAR 1 ...
8.2.4.4		SIDE MASK LEVEL (+)		R MASK LEVEL <=>	000 to 255
				G MASK LEVEL <=>	000 to 255
				B MASK LEVEL <=>	000 to 255
8.2.4.5		FINAL SETUP (+)		DATA RESET <=>	OFF <=> ON
8.2.4.6		CVT AUTO <=>			
8.2.4.7		HDMI INTR POSITION (+)		INTR-POS1 (0x75) <=>	000 to 255
				INTR-POS2 (0x76) <=>	000 to 255
				INTR-POS3 (0x77) <=>	000 to 255
				INTR-POS4 (0x78) <=>	000 to 255

8.1.6 INDICATIONS IN SERVICE FACTORY MODE

A

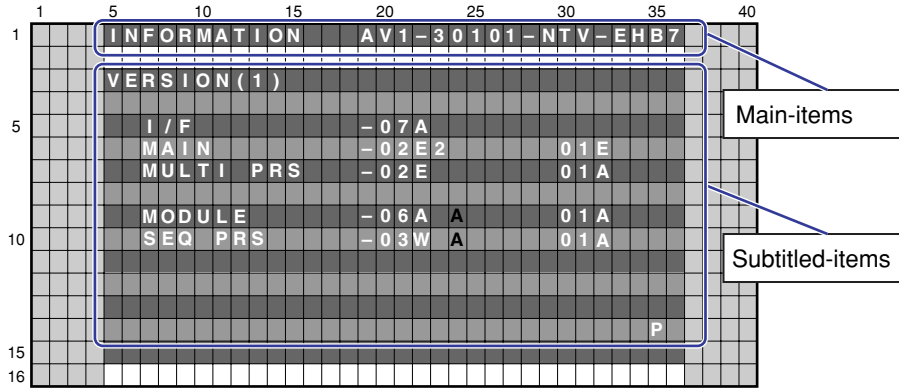

Main-item indications



① Input function

Input Functions	OSD
AV 1 to 4	AV 1 to 4
AV 5 (Step-up model only)	AV5
Terrestrial Analog Wave	AIR
Terrestrial Digital Wave	ARD
Cable	CBL
PC (Step-up model only)	PC

② SIG mode and Screen size

Note: See SIG-Mode Tables. (See next page.)

③ Color system and Signal type

Color System and Signal Type	OSD1	OSD2
NTSC	NTV	NTS
PAL	PLV	PLS
PAL M	PMV	PMS
PAL N	PNV	PNS
SECAM	SCV	SCS
4.43 NTSC	4NV	4NS
BLACK/WHITE	BWV	BWS
Y/CB/CR		CBR
Y/PB/PR		PBR
RGB		RGB
Digital Video signal		DIG

Note: OSD1 (Composite input), OSD2 (S-Connector input)

④ Option (Destination, Panel Generation, etc.)

Options	OSD
Step-up D system	EHB7
Step-up A system	ESB7
Regular D system	ETB7
Regular A system	ERB7

② SIG Mode and Screen size (by User is displayed)

1st and 2nd characters : Resolutin of the input signal

3rd and 4th characters : Refresh rate of the input signal

5th character : Selection of the screen size

■ Input signal mode table for video signals (resolutions and V frequencies)

1st to 4th Character		Signal Type	Fv (Hz)	Fh (kHz)
10	50	SDTV*525i	60.000	15.750
	60	SDTV*525i	60.000	15.750
20	50	SDTV*625p	60.000	31.500
	60	SDTV*525p	60.000	31.500
30	50	HDTV*1125i	60.000	33.750
	60	HDTV*1125i	60.000	33.750
40	50	HDTV*750p	60.000	45.000
	60	HDTV*750p	60.000	45.000
50	24	HDTV*1125p	24.000	27.000

Fv: Vertical Frequency, Fh: Horizontal Frequency

■ Input signal mode table for PC signals (resolutions and V frequencies)

1st to 4th Character		Signal Type	Fv (Hz)	Fh (kHz)
C1	70	720 x 400	70.087	31.469
	60	640 x 480	59.940	31.469
C2	72		72.809	37.861
	75		75.000	37.500
C4	56	800 x 600	56.250	35.1556
	60		60.317	37.879
	72		72.188	48.077
	75		75.000	46.875
C7	60	1024 x 768	60.004	48.363
	70		70.069	56.476
	75		75.029	60.023
C9	60	1360 x 768	60.015	47.712

Fv: Vertical Frequency, Fh: Horizontal Frequency

■ Current selection of the screen size

5th Character	GUI Notation	VIDEO	PC	Remarks
0	DOT BY DOT	–	●	
1	4:3	●	●	
2	FULL (FULL1)	●	●	
3	ZOOM	●	–	
4	CINEMA	●	–	
5	WIDE	●	–	
6	FULL 14:9	●	–	
7	CINEMA 14:9	●	–	
8	FULL2	–	●	

●: supported, –: unsupported

8.2 FACTORY MENU

8.2.1 INFORMATION

● Operation items

No.	Function/Display	Context	RS-232C Command
1	VERSION (1)	The software versions for each microcomputer are displayed. (Common part)	QS1
2	VERSION (2)	The Flash memory versions for each device are displayed. (Individual part)	QS6
3	MAIN NG	The Shutdown Message ID/Event Times in Main Microcomputer are displayed.	QNG
4	TEMPERATURE	The Temperature/FAN rotating status in Main Microcomputer are displayed.	QMT
5	HOUR METER	The HOUR METER/P-COUNT information are displayed.	QIP
6	HDMI SIGNAL INFO 1	The Information of HDMI information files are displayed.	-
7	HDMI SIGNAL INFO 2		
8	VDEC SIGNAL INFO	Display the Signal Information on VDEC.	-

8.2.1.1 VERSION (1)

	1	5	10	15	20	25	30	35	40	
1	INFORMATION AV1-30101-NTV-EHB7									
	VERSION (1)									
5	I / F				- 07 A					
	MAIN				- 02 E 2		01 E			
	MULTI PRS				- 02 E		01 A			
10	MODULE				- 06 A A		01 A			
	SEQ PRS				- 03 W A		01 A			
15										
16										

Microcomputer	Item Name	Display Example (Execution program block)	Display Example (Boot block)
I/F microcomputer	I/F	-07A	-
Main microcomputer	MAIN	-02E2	01E
Multi processor	MULTI PRG	-02E2	01A
Module microcomputer	MODULE	-06A_A	01A
Sequence processor	SEQ PRS	-03W_A	01A

Note: In the 29-32 rows, the Boot version information on each device is displayed.

In the 19-24 rows, the version of the execution program is displayed.

At the position "14x35", The Past/Highly effective panel distinction information is displayed.

8.2.1.2 VERSION (2)

1	5	10	15	20	25	30	35	40
1	INFORMATION				AV1-30601-NTV-EHB7			
	VERSION (2)							
5	DTB		20D					
	TEXT		SUB V3.01					
10	PASSWORD 1234							
15								
16								

Step-up D / Regular D

Flash Device	Item Name	Display Example
Digital Tuner	DTB	20D
TeleTEXT	TEXT	SUB V3.01
User Password	PASSWORD	1234

1	5	10	15	20	25	30	35	40
1	INFORMATION				AV1-30601-NTV-ETB7			
	VERSION (2)							
5	TEXT		SUB V3.01					
10	PASSWORD 1234							
15								
16								

Step-up A / Regular A

Flash Device	Item Name	Display Example
TeleTEXT	TEXT	SUB V3.01
User Password	PASSWORD	1234

8.2.1.3 MAIN NG

1	5	10	15	20	25	30	35	40
1	INFORMATION			AV1-30601-NTV-EHB7				
	MAIN NG							
	MAIN		SUB		00151H21M			
5	1	MA-IIC	FE1	00031H50M				
	2	MA-IIC	AV-SW	00013H03M				
	3	MA-SRL	D-SEL	00002H52M				
	4	MAIN	----	00001H58M				
10	5	TEMP2	----	00000H07M				
	6							
	7							
	8							
15								
16								

MTB side's Shutdown NG information

OSD: MAIN	OSD: SUB	Cause of Shutdown
AUDIO	----	
MODULE	----	Failure of communication to Module microcomputer.
MA-SRL		3-wire Serial Communication of Main microcomputer.
	IF	Communication failure of IF microcomputer
	MULTI1	Multi Processor communication failure (MULTI1)
	I/P	Multi Processor communication failure (I/P)
	D-SEL	Multi Processor communication failure (D-SEL)
MA-IIC		IIC Communication failure of Main microcomputer
	FE1	Analog Tuner 1 (Front End 1)
	MPX	MPX
	AUDIO	
	AV-SW	AV Switch
	RGB-SW	RGB Switch
	M-VDEC	Main VDEC
	S-VDEC	Sub VDEC
	ADC	AD/PLL
	HDMI	HDMI
	TX-COM	TX communication failure
	TX-BSY	TX Busy
	MA-EEP	64k EEPROM
MAIN		Communication failure of Main microcomputer &Unknown Error
FAN		Fan stopped
TEMP2		Abnormally high temperature at MTB.
DTUNER		Failure of Digital Tuner
	PS/RST	Failure to DTB Starting
	RETRY	DTB communication failure.
MA-PWR	M-DCDC	Abnormally in RST2 of MTB. (power decrease of DC-DC converter)
	RELAY	Relay Power Supply

	1	5	10	15	20	25	30	35	40	
1		I N F O R M A T I O N				A V 1 - 3 0 6 0 1 - N T V - E H B 7				
		M A I N N G								
5										
10										
15		C L E A R < = >			: N O					
16										

Operation:

Even if [←] key or [→] key is pressed, "CLEAR ⇔ YES" ⇔ "CLEAR ⇔ NO" is repeated.
 If the [ENTER] key is kept on pressing for 5 second when the status of this menu is <YES>, clear process will begin.

8.2.1.4 TEMPERATURE

A present temperature and the FAN rotation are displayed.

If either [←] key or [→] key is pressed, the display data is refreshed.

1	5	10	15	20	25	30	35	40
1	INFORMATION			AV1-30101-NTV-EHB7				
	TEMPERATURE							
5	TEMP1 : +40.2 (C)							
10	TEMP2 : +40.2 (C)				130 (A/D)			
	FAN		: LOW					
15								
16								

• Display/Meaning

TEMP1 : The temperature of the sensor on the panel side is displayed by the centigrade.

TEMP2 : The temperature conversion display is done with 10bit the A/D input value of Main uCON 76 pin (AN0). It is displayed by both the centigrade (C) and 8bit A/D value.

(Remark:When temperature (C) of the sensor becomes more than a specified temperature, the shutdown start of processing.)

FAN : The value of the Fan rotating state is displayed.

STOP : stopped, LOW: slow speed, HIGH: high speed.

8.2.1.5 HOUR METER

1	5	10	15	20	25	30	35	40
1	INFORMATION			AV1-30101-NTV-EHB7				
	HOUR METER							
5	PANEL		00151H 21M					
	PANEL COUNT/SERIAL							
10	P-COUNT		0000095				TIMES	
	SERIAL							
15								
16								

• Display/Meaning

Meaning	Item Name	Display Example	Corresponding RS-232C Command
HOUR METER (PANEL)	PANEL	00151H 21M	QIP
POWER ON COUNTER	P-COUNT	0000095 TIMES	QIP
SYSTEM SERIAL	SERIAL		QIP

Note 1: The SYSTEM SERIAL displays only FHD. It corresponds by sticking the seal in G7 model.

Note 2: The PANEL-side's HOUR METER/P-COUNT acquires information from the PANEL-side.

8.2.1.6 HDMI SIGNAL INFO (1)

1	5	10	15	20	25	30	35	40																											
1	I N F O R M A T I O N															A V 1 - 1 0 6 0 1 - N T V - E H B 7																			
	H D M I S I G N A L I N F O 1																																		
5	0 x 6 0										- 4 E : 8 0					0 x 6 8										- 4 6 : 0 0									
											- 4 F : 0 7															- 4 7 : 0 5									
											- 5 0 : 1 c															- 4 8 : 0 0									
											- 5 1 : 0 2															- 8 4 : 0 0									
											- 5 5 : 0 7															- 8 7 : 0 0									
10	0 x 6 8										- 2 A : 0 0															- 8 8 : 0 0									
											- 3 0 : 0 2					0 x 6 0										- 3 A : 9 8									
											- 3 1 : 0 a															- 3 B : 0 8									
											- 4 4 : 5 1															- 3 C : 3 3									
											- 4 5 : 9 8															- 3 D : 0 2									
15																																			
16																																			

Displays the input signal information of HDMI terminal

Device	SA	Context
0x60	-4E:	Video information: valid horizontal pixel numbers (low order bit)
	-4F:	Video information: valid horizontal pixel numbers (high order bit)
	-50:	Video information: valid vertical line numbers (low order bit)
	-51:	Video information: valid vertical line numbers (high order bit)
	-55:	Video information: interlace/non-interlace, sink polarity
0x68	-2A:	Audio information: PCM/non PCM, copyright protected or not
	-30:	Audio information: sampling frequency
	-31:	Audio information: sampling bit rate
	-44:	Audio information: color space
	-45:	Video information: aspect ratio
	-46:	Video information: scaling
	-47:	Video information: video format
	-48:	Video information: pixel count
	-84:	Audio information: channel count
	-85:	Audio information: not used (zero at all times)
0x60	-3A:	Video information: valid horizontal pixel numbers (low order bit)
	-3B:	Video information: valid horizontal pixel numbers (high order bit)
	-3C:	Video information: valid vertical line numbers (low order bit)
	-3D:	Video information: valid vertical line numbers (high order bit)
	-86:	Audio information: not used (zero at all times)
	-87:	Audio information: speaker allocation
	-88:	Audio information (down mix prohibit flag)

8.2.1.8 VDEC SIGNAL INFO

	1	5	10	15	20	25	30	35	40	
1		INFORMATION				AV1-30601-NTV-EHB7				
		VDEC SIGNAL INFO								
5		MVDEC - 00 : 00				MVDEC - 1D : 00				
		- 01 : 00				SVDEC - 88 : 00				
		- 02 : 00				- 89 : 00				
		- 15 : 00				- 8A : 00				
10		- 16 : 00				- 8B : 00				
		- 17 : 00				- 8C : 00				
		- 18 : 00								
		- 19 : 00								
		- 1A : 00								
15										
16										

Step-up

	1	5	10	15	20	25	30	35	40	
1		INFORMATION				AV1-30601-NTV-ESB7				
		VDEC SIGNAL INFO								
5		MVDEC - 00 : 00				MVDEC - 1D : 00				
		- 01 : 00								
		- 02 : 00								
		- 15 : 00								
10		- 16 : 00								
		- 17 : 00								
		- 18 : 00								
		- 19 : 00								
		- 1A : 00								
15										
16										

Regular

Displays input signal status of VDEC terminal.

Device	SA	Context
MVDEC	00h	Signal distinction result 1
	01h	Signal distinction result 2
	02h	Flag detection output
	15h	Noise level distinction 1
	16h	Noise level distinction 2
	17h	Non-standard signal detection
	18h	Subcarrier signal detection
	19h	ACC data output
	1Ah	ACC information output
	1Dh	Input signal mode
SVDEC	88h	Status register 1 (TV/VCR status)
	89h	Status register 2 (Macrovision detection, etc.)
	8Ah	Status register 3 (Front-end AGC gain value)
	8Bh	Status register 4 (Subcarrier to horizontal (SCH) phase)
	8Ch	Status register 5 (Signal distinction)

Displays digital broadcast signal information and status upon receiving digital signal.

1 2 3 4

8.2.2 PANEL FACTORY

A

■ Operation Items

This is the menu screen for the adjustment of the panel. Data acquisition and value adjustment can be performed for the following items:

No.	Indication	Description of functions
8.2.2.1	PANEL INFORMATION	Data, such as the version of the microcomputer of the panel, product serial number, and statuses of memories for adjustment values for the main unit and for backup, are displayed.
8.2.2.2	PANEL WORKS	Operation data, such as accumulated pulse-meter count, accumulated hour-meter count, accumulated power-on count, and the temperature detected by the sensor, are displayed.
8.2.2.3	POWER DOWN	The power-down history is displayed, with the hour-meter values that indicate the hour values when power-downs occurred.
8.2.2.4	SHUT DOWN	The shutdown history is displayed, with the hour-meter values that indicate the hour values when shutdowns occurred.
8.2.2.5	PANEL-1 ADJ (+)	Settings of the driving pulse timing and driving voltage can be performed.
8.2.2.6	PANEL-2 ADJ (+)	White balance and ABL (power consumption) for the panel can be set.
8.2.2.7	PANEL REVISE (+)	The level for correction of panel degradation can be set.
8.2.2.8	ETC. (+)	Copying of backup data and clearance of various data can be performed.
8.2.2.9	RASTER MASK SETUP (+)	The mask indication (RASTER) can be set and indicated.
8.2.2.10	PATTEN MASK SETUP (+)	The mask indication (PATTERN) can be set and indicated.
8.2.2.11	COMBI MASK SETUP (+)	The mask indication (COMBI) can be set and indicated.

B

D

E

F

128

1 2 3 4

PDP-427XD

■ Details of indications in each layer

- In the following examples, GUI images for a 50-inch model are indicated. Although the display areas for the menu for 42-inch and 50-inch models are different, the items to be displayed are the same.

8.2.2.1 PANEL INFORMATION

- Data, such as the version of the microcomputer of the panel, product serial number, and statuses of memories for adjustment values for the main unit and for backup, are displayed. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32	
1		PANEL FACT.		AV1-30602-RGB-EHB7					
AREA 1	PANEL INFORMATION								
2									
3		MODULE	-01A	M		01A			
4		SEQ-PRG	-01Y			02A			
5		VD-SEQ	520Y						
6		PC-SEQ	520Y						
7									
8		SERIAL							
9									
A		DIG.EEP	ADJUSTED						
B		BACKUP	NO DATA!						
C									
D									
E									

← Display area for 42-inch model (rows 3-6)
 ← Display area for 50-inch model (rows 3-8)

■ Key operation

- <DOWN> : Shifting to PANEL WORKS
- <UP> : Shifting to COMBI MASK SETUP (+)
- <L/R> : Updating displayed information

■ Display items:

- MODULE : The version of data written in the Module microcomputer (IC3151) is indicated.
- SEQ-PRG : The version of data written in the Sequence Program Storage Memory (IC3301) is indicated.
- VD-SEQ : The Drive Sequence version for Video mode is indicated.
- PC-SEQ : The Drive Sequence version for PC mode is indicated.
- SERIAL : The serial number of the module is indicated.
- DIG.EEP : The adjusted status of the EEPROM that is mounted on the DIGITAL Assy is indicated.
- BACKUP : The adjusted status of the EEPROM for backup that is mounted on the SENSOR Assy is indicated.

8.2.2.2 PANEL WORKS

- Data on operations, such as the accumulated pulse-meter counts, hour-meter count, power-on count, and temperature detected by the sensor, are sent back. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32
1		PANEL FACT.		AV1-30602-RGB-EHB7				
AREA 1	PANEL WORKS							
2								
3		PM-B1	00000715	M				
4		PM-B2	00000607	M				
5		PM-B3	00000852	M				
6		PM-B4	00000668	M				
7		PM-B5	00000733	M				
8								
9		HR-MTR	000025H	20M				
A		P-COUNT	00000095	TIMES				
B		TEMP1	+27.4	/	+70.8			
C								
D								
E								

■ Key operation

- <DOWN> : Shifting to POWER DOWN
- <UP> : Shifting to PANEL INFORMATION
- <L/R> : Updating displayed information

← Temperature unit is " °C (Centigrade) ".

■ Contents of the Display item

- PM-B1 to B5: The accumulated pulse-meter counts for the 5 blocks on the screen are indicated. (the lowest-order digit represents millions of pulses.)
- HR-MTR: The hour-meter value (accumulated power-on hours) is indicated.
- P-COUNT: The accumulated power-on count is indicated.
- TEMP1: The current panel temperature and the historical maximum temperature recorded in memory are indicated. The range of temperature indication is from -50.0 to +99.9. (The temperature unit is " °C (Centigrade) ".)

8.2.2.3 POWER DOWN

- The power-down history is displayed. The last most 8 power-down histories are displayed with the hour-meter values that indicate the hours when power-downs occurred. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32
1	PANEL	FACT.		AV1-30602-RGB-EHB7				
AREA 1	POWER	DOWN						
2	1ST		2ND		000124H	23M		
3								
4	1 X-DRV				000124H	21M		
5	2 Y-SUS		SQ-NON		000115H	05M		
6	3 SCAN				000107H	53M		
7	4 POWER		SCAN		000098H	47M		
8	5 ADRS				000051H	30M		
9	6 SCN5V		X-DCDC		000022H	21M		
A	7 Y-DCDC				000000H	57M		
B	8					H	M	
C								
D								
E								

Key operation

- <DOWN> : Shifting to SHUT DOWN
- <UP> : Shifting to PANEL WORKS
- <L/R> : Updating displayed information

<Causes of power-down and corresponding OSD indications>

Cause of power-down	OSD Indication	Cause of power-down	OSD Indication
POWER SUPPLY Unit	P-PWR	ADDRESS Assy	ADRS
SCAN Assy	SCAN	X DRIVE Assy	XDRV
5V power for SCAN Assy	SCAN5V	DC/DC converter for X drive	X-DCDC
Y DRIVE Assy	YDRV	X-drive SUS circuit	X-SUS
DC/DC converter for Y drive	Y-DCDC	Specification inability	UNKNOWN
Y-drive SUS circuit	Y-SUS		

* When power-down is confirmed, the factor is displayed as "1st", "2nd", according to the accuracy order.

* The power-down history is not recorded when the power-down occurred at the same place and same time.

8.2.2.4 SHUT DOWN

- The shutdown history is displayed. The last most 8 shutdown histories are displayed with the hour-meter values that indicate the hours when shutdowns occurred. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32
1	PANEL	FACT.		AV1-30602-RGB-EHB7				
AREA 1	SHUT	DOWN						
2	MAIN		SUB		000124H	23M		
3								
4	1 TMP-NG		TEMP1		000124H	21M		
5	2 SQ-IC		SQNO/L		000115H	05M		
6	3 MD-IIC		EEPROM		000107H	53M		
7	4 SQ-IC		VER-LR		000098H	47M		
8	5 MD-IIC		BACKUP		000051H	30M		
9	6 SQ-IC		SEP-IC		000012H	07M		
A	7					H	M	
B	8					H	M	
C								
D								
E								

Key operation

- <DOWN> : Shifting to PANEL-1 ADJ (+)
- <UP> : Shifting to POWER DOWN
- <L/R> : Updating displayed information

* When there is detail information when shutdown occurred, the possible defective part is displayed as Sub information.

<Cause of shut-down and corresponding OSD Indication >

Cause of shut-down (MAIN)		Cause of shut-down (SUB)	
Item	OSD Indication	Item	OSD Indication
Drive Processing IC	SQ-IC	Communication Error	RTRY
		Drive Stop	SQNO
		Communication Busy	BUSY
		Incoherent Version	VER-HS
MDU-IIC	MD-IIC	MAIN EEPROM	EEPROM
		Communication Error	
		BACKUP EEPROM	BACKUP
		Communication Error	
High temperature of the panel	TMP-NG	DAC Communication Error	DAC
		Temperature NG	TEMP

8.2.2.5 PANEL-1 ADJ (+)

- Timing and voltage for the driving pulse are set. At third line of the screen, the WB (White Balance) table and frequency table indicating operation status are displayed, and at fifteenth line of the screen, the item for the upper nested layer (PANEL-1 ADJ [+]) is displayed. Pressing the SET key shifts the screen to the next nested layer below for item selection.

	1	5	10	15	20	25	30	32	
1		PANEL	FACT.		AV1-30602	-RGB	-EHB7		
	AREA	1					[TBL1/60VS]		
2									
3									
4									
5									
6									
7									
8									
9									
A									
B									
C									
15	D	PANEL-1	ADJ	(+)					
16	E								

Key operation

- <DOWN> : Shifting to PANEL-2 ADJ (+)
- <UP> : Shifting to SHUT DOWN
- <SET> : Shifting to the next nested layer

- When the screen is shifted to the next nested layer below, the item of the layer above is indicated at third line of the screen, and the item of the layer below is indicated at fifteenth line.
- The configuration of the menu screen is the same for any adjustment item that has lower layers.

	1	5	10	15	20	25	30	32	
1		PANEL	FACT.		AV1-30602	-RGB	-EHB7		
	AREA	1	PANEL-1	ADJ			[----/60VS]		
2									
3									
4									
5									
6									
7									
8									
9									
A									
B									
C									
15	D	VOL	OFFSET	<=>			: 128		
16	E								

Key operation

- <DOWN> : Shifting to the next item
- <UP> : Shifting to the previous item
- <RIGHT> : Adding by one to the adjustment/setting value
- <LEFT> : Subtracting by one from the adjustment/setting value
- <VOL+> : Adding by 10 to the adjustment/setting value
- <VOL-> : Subtracting by 10 from the adjustment/setting value
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

A 8.2.2.6 PANEL-2 ADJ (+)

- White balance can be adjusted by adjusting R, G, and B gain. Pressing the SET key shifts the screen to the next nested layer below for item selection.

		1	5	10	15	20	25	30	32
1		PANEL FACT.				AV1-30602-RGB-EHB7			
	AREA 1					[TBL1/60VS]			
	2								
5	3								
	4								
	5								
	6								
B	7								
10	8								
	9								
	A								
	B								
	C								
15	D	PANEL-2 ADJ (+)							
16	E								

■ Key operation

- <DOWN> : Shifting to PANEL REVISE (+)
- <UP> : Shifting to PANEL-1 ADJ (+)
- <SET> : Shifting to the next nested layer

C

		1	5	10	15	20	25	30	32
1		PANEL FACT.				AV1-30602-RGB-EHB7			
	AREA 1	PANEL-2 ADJ				[TBL1/60VS]			
	2								
5	3								
	4								
	5								
	6								
	7								
10	8								
	9								
	A								
	B								
	C								
D	D	R-HIGH <=>				: 2 5 6			
16	E								

■ Key operation

- <DOWN> : Shifting to the next item
- <UP> : Shifting to the previous item
- <RIGHT> : Adding by one to the adjustment/setting value
- <LEFT> : Subtracting by one from the adjustment/setting value
- <VOL+> : Adding by 10 to the adjustment/setting value
- <VOL-> : Subtracting by 10 from the adjustment/setting value
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

E

F

8.2.2.7 PANEL REVISE (+)

- A setting for panel degradation correction can be made. Pressing the SET key shifts the screen to the next nested layer below for item selection.

		1	5	10	15	20	25	30	32	
1		PANEL FACT.				AV1-30602-RGB-EHB7				
	AREA 1									[TBL1/60VS]
	2									
5	3									
	4									
	5									
	6									
	7									
10	8									
	9									
	A									
	B									
	C									
15	D	PANEL REVISE (+)								
16	E									

■ Key operation

- <DOWN> : Shifting to ETC.(+)
- <UP> : Shifting to PANEL-2 ADJ (+)
- <SET> : Shifting to the next nested layer

		1	5	10	15	20	25	30	32	
1		PANEL FACT.				AV1-30602-RGB-EHB7				
	AREA 1	PANEL REVISE								[TBL1/60VS]
	2									
5	3									
	4									
	5									
	6									
	7									
10	8									
	9									
	A									
	B									
	C									
15	D	R-LEVEL <=>								: LV-0
16	E									

■ Key operation

- <DOWN> : Shifting to the next item
- <UP> : Shifting to the previous item
- <RIGHT> : Adding by one to the adjustment/setting value
- <LEFT> : Subtracting by one from the adjustment/setting value
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

A 8.2.2.8 ETC. (+)

- The setting about the backup of panel adjusting value and various data on panel operational information can be cleared. Pressing the SET key shifts the screen to the next nested layer below for item selection.

		1	5	10	15	20	25	30	32
1		PANEL FACT.			AV1-30602-RGB-EHB7				
	AREA 1	[TBL1/60VS]							
	2								
	3								
5	4								
	5								
	6								
	7								
B	8								
	9								
	A								
	B								
	C								
15	D	ETC. (+)							
16	E								

- **Key operation**
- <DOWN> : Shifting to RASTER MASK SETUP (+)
 - <UP> : Shifting to PANEL REVISE (+)
 - <SET> : Shifting to the next nested layer

B

		1	5	10	15	20	25	30	32
1		PANEL FACT.			AV1-30602-RGB-EHB7				
	AREA 1	ETC. [TBL1/60VS]							
	2								
	3								
5	4								
	5								
	6								
	7								
10	8								
	9								
	A								
	B								
	C								
15	D	BACKUP DATA <=> : NO OPRT							
16	E								

- **Key operation**
- <DOWN> : Shifting to the next item
 - <UP> : Shifting to the previous item
 - <RIGHT> : Adding by one to the adjustment/setting value
 - <LEFT> : Subtracting by one from the adjustment/setting value
 - <SET> : Determining the adjustment/setting value and shifting to the upper layer

C

D

E

F

8.2.2.9 RASTER MASK SETUP (+)

- This menu set the RASTER MASK and the drive sequence at RASTER MASK state. Pressing the SET key shifts the screen to the next nested layer below for item selection.

	1	5	10	15	20	25	30	32
1		PANEL	FACT.		AV1-30602-RGB-EHB7			
	AREA 1				[TBL1/60VS]			
2								
3								
4								
5								
6								
7								
8								
9								
A								
B								
C								
15		DRASTER	MASK	SETUP	(+)			
16								
E								

■ Key operation

- <DOWN> : Shifting to PATTEN MASK SETUP (+)
- <UP> : Shifting to ETC. (+)
- <SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1		PANEL	FACT.		AV1-30602-RGB-EHB7			
	AREA 1	RASTER	MASK	SETUP	[TBL1/60VS]			
2								
3								
4								
5								
6								
7								
8								
9								
A								
B								
C								
15		DRST	MASK	01	: 60V			
16								
E								

■ Key operation

- <DOWN> : Shifting to the next MASK
- <UP> : Shifting to the previous MASK
- <RIGHT> : Changing MASK sequence (+)
- <LEFT> : Changing MASK sequence (-)
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

- The MASK indication sequence can be changed among 48V, 50V, 60V, 72V, 75V, 60P, and 70P, using the Right or Left key. The selected sequence and the ABL/WB table are retained until the mask is turned off.
- 48 V and 60 P are deleted from the sequence, and represented by 50 V and 60 V, respectively. The ABL/WB table is changed to the PC table.

A 8.2.2.10 PATTEN MASK SETUP (+)

• This menu set the PATTEN MASK and the drive sequence at PATTEN MASK state.

		1	5	10	15	20	25	30	32		
1		PANEL FACT.			AV1-30602-RGB-EHB7						
		AREA 1			[TBL1/60VS]						
	2										
	3										
	4										
	5										
	6										
	7										
	8										
	9										
	A										
	B										
	C										
	D	PATTEN MASK SETUP (+)									
	E										

■ Key operation

- <DOWN> : Shifting to COMBI MASK SETUP (+)
- <UP> : Shifting to RASTER MASK SETUP (+)
- <SET> : Shifting to the next nested layer

B

C

		1	5	10	15	20	25	30	32		
1		PANEL FACT.			AV1-30602-RGB-EHB7						
		AREA 1			PATTEN MASK SETUP			[TBL1/60VS]			
	2										
	3										
	4										
	5										
	6										
	7										
	8										
	9										
	A										
	B										
	C										
	D	PTN MASK 01			: 60V						
	E										

■ Key operation

- <DOWN> : Shifting to the next MASK
- <UP> : Shifting to the previous MASK
- <RIGHT> : Changing MASK sequence (+)
- <LEFT> : Changing MASK sequence (-)
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

D

- The MASK indication sequence can be changed among 48V, 50V, 60V, 72V, 75V, 60P, and 70P, using the Right or Left key. The selected sequence and the ABL/WB table are retained until the mask is turned off.
- 48 V and 60 P are deleted from the sequence, and represented by 50 V and 60 V, respectively. The ABL/WB table is changed to the PC table.

E

F

8.2.2.11 COMBI MASK SETUP (+)

- This menu set the COMBI MASK and the drive sequence at COMBI MASK state.

	1	5	10	15	20	25	30	32
1	PANEL FACT. AV1-30602-RGB-EHB7							
AREA 1	[TBL1/60VS]							
2								
3								
4								
5								
6								
7								
8								
9								
A								
B								
C								
D	COMBI MASK SETUP (+)							
E								

Key operation

- <DOWN> : Shifting to PANEL INFORMATION
- <UP> : Shifting to PATTEN MASK SETUP (+)
- <SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1	PANEL FACT. AV1-30602-RGB-EHB7							
AREA 1	COMBI MASK SETUP [TBL1/60VS]							
2								
3								
4								
5								
6								
7								
8								
9								
A								
B								
C								
D	CMB MASK 01 : 60V							
E								

Key operation

- <DOWN> : Shifting to the next MASK
- <UP> : Shifting to the previous MASK
- <RIGHT> : Changing MASK sequence (+)
- <LEFT> : Changing MASK sequence (-)
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

- The MASK indication sequence can be changed among 48V, 50V, 60V, 72V, 75V, 60P, and 70P, using the Right or Left key. The selected sequence and the ABL/WB table are retained until the mask is turned off.
- 48 V and 60 P are deleted from the sequence, and represented by 50 V and 60 V, respectively. The ABL/WB table is changed to the PC table.

8.2.3 OPTION

Operation item

No.	Function	Content	RS2-32C
1	EDID WRITE MODE ⇔	DISABLE ⇔ ENABLE	---
2	CH PRESET ⇔	USER ⇔ FACTORY	---

8.2.3.1 EDID WRITE MODE

Exclusively used for production line.

8.2.3.2 CH PRESET

Exclusively used for production line.

8.2.4 INITIALIZE

Operation item

No.	Function	Content	RS2-32C
1	SYNC DET (+)	Exclusively used for technical analysis.	---
2	SG MODE ⇔	Paired SG_MODE with SG_PATTERN. Select SG Route.	---
3	SG PATTERN ⇔	Paired SG_MODE with SG_PATTERN. Select SG Pattern.	---
4	SIDE MASK LEVEL (+)	Configure the color of the side mask.	BSL, GSL, RSL
5	FINAL SETUP (+)	Initialize flash memories on virgin product status	FST
6	CVT AUTO ⇔	Exclusively used for technical analysis.	---
7	HDMI INTR POSITION (+)	Exclusively used for technical analysis.	---

8.2.4.1 SYNC DET (+)

Exclusively used for technical analysis (details omitted).

8.2.4.2 SG MODE

SG MODE (SG's route selection) / SG PATTERN (signal pattern selection) are used as pair.

In SG MODE, select the SG route and then select the SG pattern to be sent by the selected route.


In SG MODE, make sure to select the route first.

	1	5	10	15	20	25	30	35	40	
1	INITIALIZE				AV1-30601-NTV-EHB7					
5										
10										
15	SG MODE <=>				ANA-MVDEC-Y					
16										

Operation item

No.	Display	Content
1	SG OFF	SG Mode is OFF.
2	DIG MVDEC YBCR	MAIN VDEC: YCbCr (Digital output mode)
3	ANA MVDEC Y	MAIN VDEC: Y (Analog output mode: SG VDEC return setting)
4	ANA MVDEC RGB	MAIN VDEC:RGB
5	ANA SVDEC Y	SUB VDEC:Y
6	ANA AD YBCR	AD: YcbCr (Analog output to the RGB SW)
7	ANA AD RGB	AD: RGB (Analog output to the RGB SW)

8.2.4.3 SG PATTERN

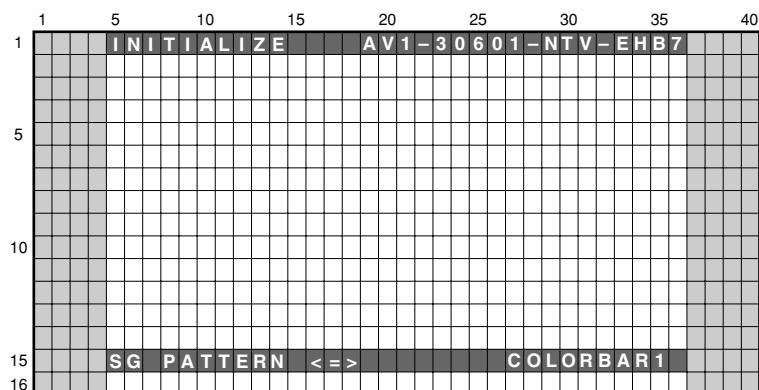

Operation item


No.	Display	SG Pattern (Brightness IRE Level/Color)	No.	Display	SG Pattern (Brightness IRE Level/Color)
1	COLOR BAR1	Colorbar (75%)	11	RASTER4	Raster (75% Green)
2	COLOR BAR2	Colorbar (100%)	12	RASTER5	Raster (75% Magenta)
3	RAMP1	Ramp (100% white)	13	RASTER6	Raster (75% Red)
4	RAMP2	Ramp (100% Yellow)	14	RASTER7	Raster (75% Blue)
5	RAMP3	Ramp (75% Green)	15	RASTER8	Raster (- % Black)
6	RAMP4	Ramp (75% Red)	16	10STEP1	10STEP (100% white)
7	RAMP5	Ramp (75% Blue)	17	10STEP2	10STEP (100% Yellow)
8	RASTER1	Raster (100% White)	18	10STEP3	10STEP (75% Green)
9	RASTER2	Raster (75% Yellow)	19	10STEP4	10STEP (75% Red)
10	RASTER3	Raster (75% Cyanide)	20	10STEP5	10STEP (75% Blue)

■ Notes when using SG MODE/SG PATTERN

- During factory mode, choose the correct route when changing.
- Basically, during VDEC SG output, make sure to connect SG output's Y or G to the AVI input terminal of VDEC.
- During SG MODE, turn off the blanking 50IRE setup function.
- During VDEC SG output, set the YC separation setting to NTSC.
- It is possible to use ANALOG OUT MODE together during DIGITAL OUT MODE.
The Main VDEC can output digital color difference, in which colors will appear.
But the route to VDEC input cannot be analysed therefore care should be taken when using.
Depending on the situation, please use the proper analog/digital output.
- The SG MODE outputs color difference and RGB only. Therefore, in the case of CVBS, only the Y input is used resulting in no color.
This is not a damage result nor error.
- The SG MODE's ANA AD RGB (route to input 525i to AD by RGB) as a set's route, the setting does not exist. For this account the latter part from MVDEC does not have set values, resulting in having funny colors in colorbar, the brightness changes after switching, etc.
This is not a damage result nor error.
- Depending on MVDEC's part version, ANA_MVDEC_YCBCR may not display colors.

A

8.2.4.4 SIDE MASK LEVEL

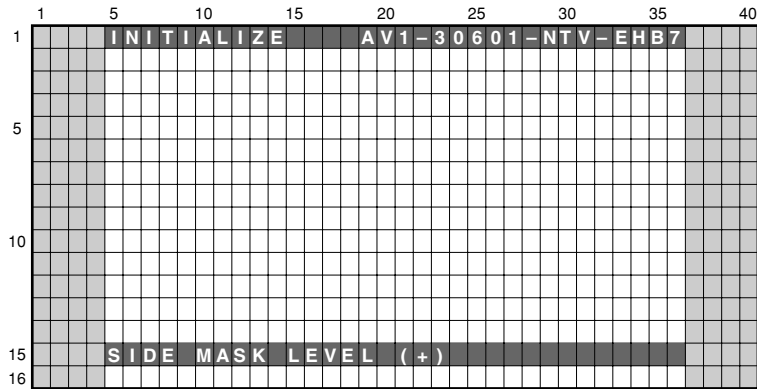


To configure sidemask's R, G, B level (To adjust the values, input signal is required).

No.	Display	Content	RS-232C
1	R MASK LEVEL ⇔	Adjust Side Mask R (Adjustable range: 000 to 255)	RSL
2	G MASK LEVEL ⇔	Adjust Side Mask G (Adjustable range: 000 to 255)	GSL
3	B MASK LEVEL ⇔	Adjust Side Mask B (Adjustable range: 000 to 255)	BSL

C

8.2.4.5 FINAL SETUP

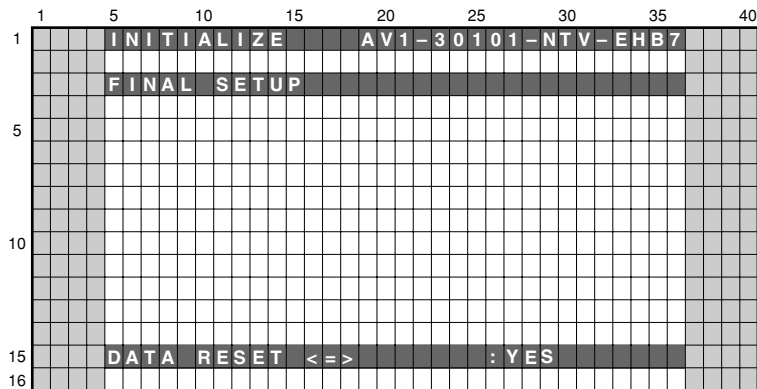

D

- To reset each memory value sto factory default values. Factory command is "FST".
- When the configuration is set to <NO> and the [SET] key is pressed, no action is taken and the menu returns to previous screen.
- When the configuration is set to <YES> and the [SET] key is pressed for 5 seconds, the reset action executes.

E

8.2.4.6 CVT AUTO

Exclusively used for technical analysis (details omitted).

8.2.4.7 HDMI INTR POSITION (+)

Exclusively used for technical analysis (details omitted).

F

9. RS-232C

9.1 OUTLINE OF RS-232C COMMAND

9.1.1 PREPARED TOOLS

It is necessary to prepare the following one to use 232C command.


- PC
- Application for control
- 232C cable (straight)
- * It is likely not to move correctly in Win 98 faction/Me and Win for foreign countries.
- * The setting of the Com port cannot be communicated if it doesn't do correctly.
(Please follow a set explanation of PC in the Com port)

9.1.2 USING RS-232C COMMANDS

For the PDP-4270XD, PDP-4270XA, PDP-427XD and PDP-427XA series Plasma Displays, the circuitry is structured as shown in the diagram below to support the SR+ system. Controlling with either the SR+ system or RS-232C commands can be selected.

As the SR+ system is selected at shipment, to control with RS-232C commands in servicing it is necessary to switch the paths. After servicing, be sure to return the setting to the SR+ system.

■ Rough diagram of switching between SR+ and RS-232C (STEP-UP Model Only)

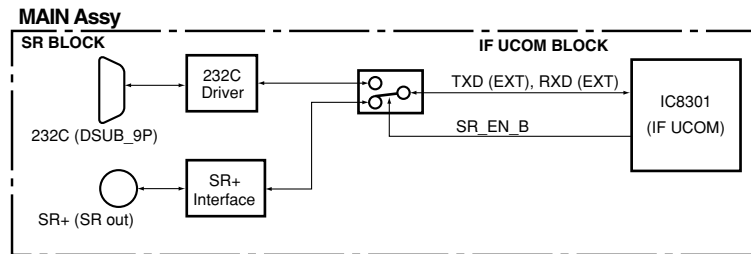


■ How to switch SR+/RS-232C (STEP-UP Model Only)

There are "How to switch SR+/RS-232C by remote control in the Standby Mode" and "How to switch SR+/RS-232C by remote control in the INTEGRATOR MENU" as a Method

- ① To select SR+/RS-232C by remote control in Standby Mode.
 - During Standby mode, hold the keys other than the [POWER] key on the remote control, the following operation is done within 10 seconds.

To select from SR+ to RS-232C/To select from RS-232C to SR+.

 - During standby mode, hold the [VOLUME+ (or -)] key on the remote control unit pressed for 3 to 10 seconds.
→Then within 3 seconds after the key is released, hold the [2-screen] key released, use the [SET (ENTER)] key on the remote control unit to set to RS-232C (the baud rate last selected is chosen) or the [HOME MENU] key to set to SR+.
 - During IF Standby mode (once 10 seconds or more has passed after the LED goes dark during communication), the first keypress may not be accepted. In such a case, for a key operation, first press any key other than the [POWER] key and [CH] keys, then the desired key.
 - At the switch SR+/RS-232C, the LED will be blinked on the fixed time.
- ② To select SR+/RS-232C in the INTEGRATOR MENU.
 - How to enter INTEGRATOR MENU.
During standby mode, press the [Home Menu] key, and then press the [POWER] key within 3 seconds. During factory mode, hold the [INTEGRATOR] key.
 - In INTEGRATOR MENU, there is a OSD where SR+ (or RS-232C) is turned on/off, and it switches on the screen.

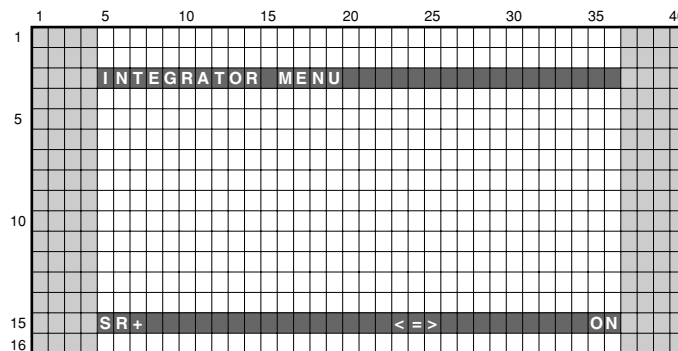

9.1.3 COMMAND PROTOCOL

■ Communication protocol : Asynchronous serial communication by RS-232C

Start bit length : 1 bit
 Data width : 8 bit (ASCII codes/There is no distinction between the capital letter and the small letter)
 Parity : None
 Stop bit length : 1 bit
 Baud rate : 9600 bps (Fixed)

■ Regulating function

Direct numerical value effective: The adjustment value can be set directly by transmitting the figure to the mark of the command.

■ Data format

The control signal format sent from the user side controller is as follows. When the transmission data is completed STX (02 (Hex)), the command of ETX (03 (Hex)) is arranged when beginning to communicate. And, ID, the command, and the parameter are arranged between those. Data is assumed to be ASCII form alphanumeric character. Neither the capital letter nor the small letter are distinguished.

• Only for the command

STX	ID	Command	ETX
0x02	**	□□□	0x03

• When you accompany setting/adjustment data

STX	ID	Command	Parameter	ETX
0x02	**	□□□	△△△	0x03

■ Command processing

When the command is input, the command processing begins processing.

ID is assumed to be 2 asterisk "**".

■ Reception confirmation

The module microcomputer judges right or wrong for the command received from the main side.

If it is an effective command, processing is executed. And, the reply of the received command is done when entering the following state of the command standby after processing is completed.

The replying data replies data that deletes the ID code from the reception command by the capital letter.

• When you accompany setting/adjustment data

Send data to PC

STX	ID	Command	Parameter	ETX
0x02	**	□□□	△△△	0x03

Receive data

STX	Command	Parameter	ETX
0x02	□□□	△△△	0x03

• Only for the command

Send data to PC

STX	ID	Command	ETX
0x02	**	□□□	0x03

Receive data

STX	Command	ETX
0x02	□□□	0x03

In this case, "ERR" replies if it is a command of the uncorrespondence.

The command replies "XXX" when processing on status cannot be executed even if it is effective.

• For an Invalid command

Send data to PDP system

STX	ID	Command	ETX
0x02	**	□□□	0x03

Receive data

STX	Command	ETX
0x02	ERR	0x03

• For the command that cannot be executed on status

Send data to PDP system

STX	ID	Command	ETX
0x02	**	□□□	0x03

Receive data

STX	Command	ETX
0x02	XXX	0x03

■ Processing in the case of an error


When the communication error occurs from STX between ETX, the processing of a pertinent command is discontinued, and the reception buffer is cleared. When STX is received, the command reception processing keeps storing the transmitted character string in the register.

And, the character string placed by the ETX reception between STX-ETX is interpreted as a command.

9.1.4 COMMAND DEFINITION


Single functional command

The command to which operation is concluded only by command. The command parts are 3 characters.



Adjustment command and adjustment value


- The command to which value of parameter is changed attended with adjustment value. The command parts are 3 characters.
- The adjustment value is the numeric character data of the decimal number 3 characters. It is made the range of 000-999. The range that can be adjusted is different according to the function to adjust (It is noted that then, it is not uniformly to 999).



- * When the received command exceeds the range where the adjustment value can be adjusted, "XXX" is transmitted.
- * When the same adjustment value is continuously transmitted two times or more, "XXX" doesn't reply, though it is an invalid command. It's overwritten, and ACK that deletes ID replies.

Set command and Set value


- The command to which set value of parameter is changed attended with set value. The command parts are 3 characters.
- Set values are three characters. The first character is fixed to "S".
2 remainder characters are assumed to be assumption S00-S99 as the decimal number.



- * When the received command doesn't exist as a set value, "XXX" is transmitted.
- * When the same set value is continuously transmitted two times or more, "XXX" doesn't reply, though it is an invalid command. It's overwritten, and ACK that deletes ID replies.

State acquisition command

- The command that reports on state of operation and set value, etc. to system side.
- The content that corresponds by the kind of the command is read from the memory, when the command is received from the system side and it replies.
- The command parts are three characters. The first character is fixed to "Q". It sets since the second character according to the content of information.
- The reply data is transmitted adding various data that converts the received command and ASCII code and the checksum of the data. Because the content of the reply changes according to the kind of the "QUEST command", the data length follows an individual, individual specification.



A ■ **Adjustment assistance command**

The Adjustment Assistance Command is combined and used with the Adjustment Command.

- The Adjustment Command + Adjustment Assistance Command ⇒ It addition/subtracts it from a present adjustment value.

Note: When the received command exceeds the range of the adjustment value, it changes to MAX/MIN.

- The adjustment command immediately before is made efficacy when only the adjustment command (addition/subtraction command) is received alone after the adjustment command receptions completed, and it makes it to the value addition/subtracted from a present adjustment value. However, it applies to the command when other commands are received.

- Kind of Adjustment Assistance Command (addition/subtraction command)

UP1 to UP9, UP0, UPF: 1 to 10 is added to a setting value.

UPF: It makes it to the maximum value ("VOL" command).

DW1 to DW9, DW0, DWF: 1 to 10 is subtracted a setting value.

DWF: It makes it to the minimum value ("VOL" command).

FWD: One Preset CH is previously advanced ("CHN" command).

REV: One Preset CH is returned in the front ("CHN" Command).

B

Send data to PDP system

STX	ID	Command	Subcommand	ETX
0x02	**	VOL	UP1	0x03



Receive data

STX	Command	Subcommand	ETX
0x02	VOL	UP1	0x03

C

D

E

F

9.2 LIST OF RS-232C COMMANDS

RS-232C commands can be used in Service Factory mode. Before using RS-232C commands, it is necessary to change the factory presetting. See "9.1 OUTLINE OF THE RS-232C".

[Note ; If you want to see version information (ex. QS1, QS6, Factory, Menu), Please see 10 seconds after starting.]

RS-232C command list

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
A							
ABL	***	Adjusting the upper limit of the power	●		Mod	●	
AMT	SD0	Audio mute OFF		●			
	SD1	Audio mute ON		●			
APW	S00	WB correction interlocked with APL: OFF	●			●	
	S01	WB correction interlocked with APL: ON	●			●	
B							
			MDU	MTB			
BCP		Copying the backup data in the EEPROM	●			●	
BHI	***	User white balance : BLUE highlight	●				
BLW	***	User white balance : BLUE lowlight	●				
BRT	***	User brightness	●				
BSM	S00	After image/Burning safe mode: OFF	●				
	S01	After image/Burning safe mode: ON	●				
BSL		Adjusting Side Mask Level BLUE		●			
•••							
C							
			MDU	MTB			
CBU		Clearing backup data of EEPROM	●			●	
CHM		Clearing data of the hour meter	●			●	
CHN	FWD	Changing tuner preset channel (1 step forward)		●			
	REV	Changing tuner preset channel (1 step reverse)		●			
CHR		Clearing data of the hour meter of MTB side		●		●	
CNT	***	User contrast	●				
CMT		Clearing data of the maximum temperature	●			●	
CPC		Clearing power-on count data	●			●	
CPD		Clearing power-down history	●			●	
CPM		Clearing data of the pulse meter	●			●	
CSD		Clearing shutdown history	●			●	
CTM		Clearing working log	●			●	
D							
			MDU	MTB			
DRV	S00	Main power off	●				
	S01	Main power on	●				
DW*		To subtract *** to the adjustment value (** = 000 to 999, designated by a function command)		●			
E							
			MDU	MTB			
ESV	S00	Setting Power Consumption mode to normal sequence & normal curve	●				
	S01	Setting Power Consumption mode to silent sequence & normal curve	●				
	S02	Setting Power Consumption mode to silent sequence & power-saving curve	●				
	•••						
	•••						
•••							
F							
			MDU	MTB			
FAJ		Determining the flag of the DIGITAL Assy adjustment in "adjustment is completed"	●			●	
FAN		Factory mode off	●	●		●	
FAY		Factory mode on	●	●			
FST		Set each memory setting of MTB side to the shipment state.		●			
G							
			MDU	MTB			
GHI	***	User white balance : GREEN highlight	●				
GLW	***	User white balance : GREEN lowlight	●				
GSL		Green side mask level adjustment		●		●	

A

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
I							
INA	...						
	...						
	***	Switching the terrestrial analog signal		●			
INB							
INC	***	Switching the terrestrial digital signal (EUC is Step-upD and RegularD only, and IBD is AU only)		●			
IND							
INE							
INF							
ING							
INH							
INP	S01	Input switch: INPUT 1		●			
	S02	Input switch: INPUT 2		●			
	S03	Input switch: INPUT 3		●			
	S04	Input switch: INPUT 4		●			
	S05	Input switch: INPUT 5 (Step-up Only)		●			
	S06	Input switch: INPUT 6 (PC. Step-up Only)		●			
K MDU MTB							
KDD							
M MDU MTB							
MKC	S00	MASK off	●		Mod	●	
	S01	H ramp (slant 1) M	●		Mod	●	
	S02	H ramp (slant 4) M	●		Mod	●	
	S03	Slanting ramp M	●		Mod	●	
	S04	30 for aging	●		Mod	●	
	S05	05 for aging	●		Mod	●	
	S06	Erasing afterimage 1	●		Mod	●	
	S07	Erasing afterimage 2 (RGB: zigzag, V: reverse)	●		Mod	●	
	S08	White (change in luminance level)	●		Mod	●	
	S09	PEAK SEEK RASTER	●		Mod	●	
MKS	S10	For engineering use	●		Mod	●	
	S00	MASK off	●		Mod		
	S01	H ramp (slant 1)	●		Mod	●	
	S02	H ramp (slant 4)	●		Mod	●	
	S03	V ramp (slant 1)	●		Mod	●	
	S04	Slanting ramp	●		Mod	●	
	S05	Window (Hi= 870, Lo= 102)	●		Mod	●	
	S06	Window (Hi= 1023, Lo= 102)	●		Mod	●	
	S07	Window (Hi= 1023)	●		Mod	●	
	S08	Window (Hi= 1023) 4 %	●		Mod	●	
	S09	Window (Hi= 1023) 1.25 %	●		Mod	●	
	S10	Window (1/7 LINE)	●		Mod	●	
	S11	STRIPE (MGT/GRN)	●		Mod	●	
	S12	STRIPE (GRN/MGT)	●		Mod	●	
S13	B & W, checker (1 line)	●		Mod	●		
S14	B & W, checker (2 lines)	●		Mod	●		

Command Name	Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
		MDU	MTB			
M						
MKS	S15	B & W, checker (4 lines)	●		Mod	●
	S16	B & W, checker (8 lines)	●		Mod	●
	S17	COLOR BAR	●		Mod	●
	S18	Slanting lines	●		Mod	●
	S19	Red & black, checker (1 line)	●		Mod	●
	S20	Red & black, checker (2 lines)	●		Mod	●
	S21	Red & black, checker (4 ines)	●		Mod	●
	S22	Red & black, checker (8 lines)	●		Mod	●
	S23	RGB zigzag, V reverse	●		Mod	●
	S24	SUS 2000 pulses (black raster)	●		Mod	●
	S25	Window (Hi= 870, Lo= 102) Pattern 3	●		Mod	●
	S26	Window (Hi= 1023, Lo= 102) Pattern 3	●		Mod	●
	S27	Window (Hi= 1023) Pattern 3	●		Mod	●
	S28	Window (Hi= 1023) 4 % Pattern 3	●		Mod	●
	S29	Window (Hi= 1023) 1.25 % Pattern 3	●		Mod	●
	S30	Window (1/7 LINE) Pattern 3	●		Mod	●
	S31	Noise ON - White	●		Mod	●
	S32	Noise ON - Red	●		Mod	●
	S33	Noise ON - Green	●		Mod	●
	S34	Noise ON - Blue	●		Mod	●
	S35	Noise ON - Black	●		Mod	●
	S36	For engineering use	●		Mod	●
	S37	For engineering use	●		Mod	●
	S38	For engineering use	●		Mod	●
	S39	For engineering use	●		Mod	●
	S51	Raster - White	●		Mod	●
	S52	Raster - Red	●		Mod	●
	S53	Raster - Green	●		Mod	●
	S54	Raster - Blue	●		Mod	●
	S55	Raster - Black	●		Mod	●
	S56	Raster - Cyan	●		Mod	●
	S57	Raster - Magenta	●		Mod	●
	S58	Raster - Yellow	●		Mod	●
	S59	RASTER09: Red 588	●		Mod	●
	S60	RASTER10: Cyan 460	●		Mod	●
	S61	RASTER11: Green 774	●		Mod	●
	S62	RASTER12: Gray 313	●		Mod	●
	S63	RASTER13: Gray 912	●		Mod	●
	S64	RASTER14: Magenta1023	●		Mod	●
	S65	RASTER15: Pale orange	●		Mod	●
	S66	RASTER16: Sky color	●		Mod	●
	S67	RASTER17: Pale purple	●		Mod	●
	S68	RASTER18: Magenta 54	●		Mod	●
	S69	RASTER19: Red 1023+	●		Mod	●
	S70	RASTER20: Green 1023+	●		Mod	●
	S71	RASTER21: Blue 1023+	●		Mod	●
	S72	RASTER22: Red 588+	●		Mod	●
	S73	RASTER23: Green 588+	●		Mod	●
	S74	RASTER24: Blue 588+	●		Mod	●

A

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
M							
MST	S00	Display one screen		●			
	S01	PsideP (Main size : normal)		●			
	S02	PinP (Right_down)		●			
	S03	PinP (Right_up)		●			
	S04	PinP (Left_up)		●			
	S05	PinP (Left_down)		●			
	S06	PsideP (Main size : center)		●			
	S07	PsideP (Main size : large)		●			
	S08	SWAP (Exchanging sub-screen)		●			
O							
OSD	S00	Turning OSD setting to off		●			
	S01	Turning OSD setting to on		●			
P							
PAV	S**	Switching panel functions interlocked with the AV selection	●				
PBH	***	Panel white balance adjustment - Blue highlight	●		Mod	●	
PBL	***	Panel white balance adjustment - Blue low light	●		Mod	●	
PDM	S00	Passing PD signals to the Power SUPPLY Unit => Power-down	●				
	S01	Not passing PD signals to the Power SUPPLY Unit => No power-down	●				
PFN		Factory mode: off	●			●	
PFS		Setup at shipment	●			●	
PFY		Factory mode: on	●			●	
PGH	***	Panel white balance adjustment - Green highlight	●		Mod	●	
PGL	***	Panel white balance adjustment - Green low light	●		Mod	●	
PGM	S**	Setting of the gamma table	●				
PMT	S00	Canceling panel muting	●				
	S01	Panel muting	●				
POF		Power off	●	●	Main		
PON		Power on	●	●	Main		
PPT	S00	Panel protection: off	●			●	
	S01	Panel protection: on	●			●	
PRH	***	Panel white balance adjustment - Red highlight	●		Mod	●	
PRL	***	Panel white balance adjustment - Red low light	●		Mod	●	
PUC	S00	Pure cinema: off	●	●		●	
	S01	Pure cinema: standard	●	●		●	
	S02	Pure cinema: advanced	●	●		●	
Q							
QAJ		Acquiring various adjustment values	●				
QIP		Acquiring various input signal data	●				
QMT		Acquiring temperature of MTB side and Fan speed		●			
QNG		Acquiring shut-down information of MTB side		●			
QPD		Acquiring logs of power-down points	●				
QPM		Acquiring data of the pulse meter	●				
QPW		Acquiring panel white balance adjustment values	●				
QS1		Acquiring unit data, such as the software version common to all models, regardless of destination	●	●			
QS2		Acquiring data on the status of the unit, such as temperature	●				
QS6		Acquiring unit data, such as the software version common to all models, regardless of destination		●			
QSD		Acquiring data on shutdown	●				

E

F

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
Q							
QSI		Acquiring data related with signals	●				
R							
RBL	S**	Setting of blue level for panel degradation correction	●		Mod	●	
RGL	S**	Setting of green level for panel degradation correction	●		Mod	●	
RHI	***	User white balance - Red highlight	●				
RLW	***	User white balance - Red low light	●				
RRL	S**	Setting of red level for panel degradation correction	●		Mod	●	
RSL	***	Adjustment of the Red side mask level		●		●	
RSW	***	Adjustment of the width of XY reset pulse 1	●		Mod	●	
RYW	***	Adjustment of the width of XY reset pulse 2	●		Mod	●	
S							
SDM	S00	Shutdown enabled	●				
	S01	Shutdown prohibited	●				
SFR	S01	Measures against AM radio noise - Pattern 1	●		Mod	●	
	S02	Measures against AM radio noise - Pattern 2	●		Mod	●	
	S03	Measures against AM radio noise - Pattern 3	●		Mod	●	
	S04	Measures against AM radio noise - Pattern 4	●		Mod	●	
	S05	Measures against AM radio noise - Pattern 5	●		Mod	●	
	S06	Measures against AM radio noise - Pattern 6	●		Mod	●	
	S07	Measures against AM radio noise - Pattern 7	●		Mod	●	
	S08	Measures against AM radio noise - Pattern 8	●		Mod	●	
SMM	S**	Setting of the effective area during streaking correction	●			●	
SN0	***	Setting of the serial No. 0 (panel)	●		Mod	●	
SN1	***	Setting of the serial No. 1 (panel)	●		Mod	●	
SN2	***	Setting of the serial No. 2 (panel)	●		Mod	●	
SN3	***	Setting of the serial No. 3 (panel)	●		Mod	●	
SN4	***	Setting of the serial No. 4 (panel)	●		Mod	●	
SZM	S00	Setting the screen size to Dot by Dot or PARTIAL		●			
	S01	Setting the screen size to 4 :3		●			
	S02	Setting the screen size to FULL or FULL1080i		●			
	S03	Setting the screen size to ZOOM		●			
	S04	Setting the screen size to CINEMA		●			
	S05	Setting the screen size to WIDE		●			
	S06	Setting the screen size to FULL 14 : 9		●			
	S07	Setting the screen size to CINEMA 14 : 9		●			
S08	Setting the screen size to FULL1035		●				
T							
-		-					
U							
UAJ		Determining the flag for the DIGITAL Assy adjustment in "not adjusted"	●				
UP*		To add *** to the adjustment value (***) = 000 to 999, designated by a function command)		●			

A

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
V							
VFQ	S01	Setting the frequency in Mask mode to VD-48 Hz	●		Mod	●	
	S02	Setting the frequency in Mask mode to VD-50 Hz	●		Mod	●	
	S03	Setting the frequency in Mask mode to VD-60 Hz	●		Mod	●	
	S05	Setting the frequency in Mask mode to VD-72 Hz	●		Mod	●	
	S06	Setting the frequency in Mask mode to VD-75 Hz	●		Mod	●	
	S13	Setting the frequency in Mask mode to PC-60 Hz	●		Mod	●	
	S14	Setting the frequency in Mask mode to PC-70 Hz	●		Mod	●	
	S22	Setting the frequency in Mask mode to VD-50 Hz (nonstandard)	●		Mod	●	
	S23	Setting the frequency in Mask mode to VD-60 Hz (nonstandard)	●		Mod	●	
	S25	Setting the frequency in Mask mode to VD-72 Hz (nonstandard)	●		Mod	●	
	S26	Setting the frequency in Mask mode to VD-75 Hz (nonstandard)	●		Mod	●	
	VOF	***	Adjustment of the reference value of Vofs voltage	●			●
VOL	UP*, DW*, ***	To adjust the volume (to be used in combination with UP*/DW*)		●			
VRP	***	Adjustment of the reference value of Vrst-p voltage	●			●	
VSU	***	Adjustment of the reference value of Vsus voltage	●			●	
W							
WBI	S00	Panel WB standard output mode: off	●			●	
WBI	S01	Panel WB standard output mode: on	●			●	
X							
XSB	***		●		Mod	●	
Y							
YSB	***	Y-SUS-B ADJ	●		Mod	●	
YTB	***	Y-SUSTAIL T2 ADJ	●		Mod	●	
YTG	***	Y-SUSTAIL T1 ADJ	●		Mod	●	
YTW	***	Y-SUSTAIL W ADJ	●		Mod	●	
Z							
ZDT							
ZME		Initializing the video EEPROM data		●		●	
ZPR		Initializing the setting data to which no adjustment command is provided	●			●	

E

F

9.3 OUTLINE OF EACH COMMANDS

9.3.1 ACQUISITION OF PANEL STATUS ••• [QS1]

Model information and version information are returned.

Command Format	Effective Operation Modes	Function	Remarks
[QS1]	Every Time	Output of status	Return data: 105 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QS1 (Fixed)
1	Display information 1 (Resolution/inch size)	1 byte	F
2	Display information 2 (Panel Generation)	1 byte	7: G7
3	Display information 3 (Destination)	1 byte	A: USA
4	Display information 4 (System Type)	1 byte	*
5	Display information 5 (Panel Product Form)	1 byte	B
6	MDUcom-Boot	3 byte	01A
7	MDUcom-Prg	8 byte	
8	Seq Prs-Boot	3 byte	01A
9	Seq Prs-Prg	8 byte	
10	SQ-VIDEO	4 byte	
11	SQ-PC	4 byte	
12	Panel Type	1 byte	P/F
13	Reserved (*)	7 byte	*****
14	, (comma)	1 byte	
15	MTB information 1 (Generation)	1 byte	7: G7
16	MTB information 2 (Regional model)	1 byte	A: USA
17	MTB information 3 (Grade)	1 byte	H: Elite
18	MTB information 4 (System Type)	1 byte	B
19	Common version for IF microcomputer	4 byte	
20	Common version for Main microcomputer	8 byte	
21	Boot version of Main microcomputer	4 byte	
22	Common version for Multi-processor	8 byte	
23	Boot version of Multi-processor	4 byte	
24	Reserved (*)	24 byte	
25	Check Sum	2 byte	FF

1: Resolution/Inch size	
3	1024*768/42
4	1024*768/43
5	1280*768/50
6	1365*768/50
7	1365*768/60
F	1920*1080/50

2: Panel Generation	
6	G6
7	G7
8	G8
9	G9
0	G10

3: Destination	
*	Commonness
A	US (Reserved)
E	EU (Reserved)
J	Japan (Reserved)

4: System Type	
*	Commonness
Z	Evaluation

5: Panel Product Form	
S	System model
B	All-in-one design TV
M	Monitor
D	Standard module
E	Simple module

12: Panel Type	
P	The past
F	High-effective

15: MTB/MB Generation	
6	G6
7	G7
8	G8
9	G9
0	G10

16: Regional Model	
J	JP
A	US
E	EU
G	GE
C	CH
U	AU

17: MTB/MB Grade	
H	Elite/DXA/Step-upD
T	Step-upA/XG/TXC/Regular (US)
B	Not used (For Future)
S	RegularD
R	RegularA

18: MTB/MB Product Form	
S	System model
B	One body model (SX)
M	Monitor (FHD)

19 to 23: MTB/MB-side's information	
IF uCON	Common version of IF microcomputer
Main uCON	Common version of Main microcomputer
Main uCON-Boot	Boot version of Main microcomputer
Multi-prs	Common version of Multi-processor program
Multi Prs-Boot	Boot version of Multi-processor program

9.3.2 ACQUISITION OF PANEL OPERATION DATA ••• [QS2]

The command QS2 is for acquiring data on the panel's operational information.

Command Format	Effective Operation Modes	Function	Remarks
[QS2]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+23(DATA)+2(CS)= 28 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QS2
1	Notification of mode shifting to STB	1 byte	1
2	Flag for adjustment of the main unit	1 byte	0
3	Flag for adjustment-data backup	1 byte	0
4	"1st PD" data	1 byte	0
5	"2nd PD" data	1 byte	0
6	Still picture detection	1 byte	0
7	Reserved	2 byte	**
8	Temperature data (TEMP 1)	3 byte	128 (*1)
9	SD main data	1 byte	0
10	SD sub data	1 byte	0
11	Operation status induced by SD	1 byte	0
12	Data from the hour meter	8 byte	00000259 (*2)
13	MASK indication	1 byte	0
CS		2 byte	4A

Note : (*1) The unit scale is centigrade. The data is A/D value from the thermal sensor.

(*2) "00000259" of "Data from the hour meter" means 2 hours 59 minuts.

6: Still picture detection	
0	Normal screen
1	Still picture

9: SD main data	
0	No SD
1	SQ-IC
2	MDU-IIC
3	RST2
4	TEMP

10-1: SD-Sub (SQ-IC)	
0	No SD-Sub data
1	Communication error
2	Drive stop
3	BUSY
6	Version mismatching

10-2: SD-Sub (IIC)	
0	No SD-Sub data
1	EEPROM
2	BACKUP
3	DAC

10-3: SD-Sub (TEMP)	
0	No SD-Sub data
1	TEMP1
2	Reserved

11: Operation status induced by SD	
0	Normal
1	Relay-off completed
2	During warning indication

13: MASK indication	
0	MASK-OFF
1	MASK-ON

1: Notification of mode shifting to Standby	
0	Entering Standby mode failed
1	Entering Standby mode succeeded

2: Adjustment of the main unit	
0	Adjustment completed
1	Adjustment not completed

3: Adjustment-data backup	
0	With backup data
1	No data (default)

4, 5: PD data	
0	No PD data
1	Not used
2	POWER
3	SCAN
4	SCN-5V
5	Y-DRV
6	Y-DCDC
7	Y-SUS
8	ADRS
9	X-DRV
A	X-DCDC
B	X-SUS
C	Not used
D	Not used
E	Not used
F	UNKNOWN

9.3.3 ACQUISITION OF OTHER DATA ON THE PANEL ••• [QIP]

The command QIP is for acquiring data on operational information of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QIP]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+58(DATA)+2(CS)= 63 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QIP
1	SERIAL	15 byte	-----
2	HOUR METER	8 byte	00000000
3	TOTAL HOUR METER	8 byte	00000000
4	PON COUNTER	8 byte	00000000
5	TEMP1 acquisition (Temperature value)	5 byte	+23.5 (*1)
6	TEMP0 acquisition (Temperature value)	5 byte	+28.7 (*1)
7	MAX-TEMP1 acquisition (Temperature value)	5 byte	+78.3 (*1)
8	Reserved	4 byte	****
CS		2 byte	94

Note
(*1) : Centigrade scale

9.3.4 ACQUISITION OF PANEL ADJUSTMENT DATA (COMMON DATA) ••• [QAJ]

The command QAJ is for acquiring the panel's factory-preset data.

Command Format	Effective Operation Modes	Function	Remarks
[QAJ]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+41(DATA)+2(CS)= 46 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QAJ
1	V-SUS adjustment value	3 byte	128
2	V-OFT adjustment value	3 byte	128
3	V-RST-P adjustment value	3 byte	128
4	Reserved	3 byte	***
5	XSB adjustment value	3 byte	128
6	YSB adjustment value	3 byte	128
7	YTG adjustment value	3 byte	128
8	YTW adjustment value	3 byte	128
9	RSW adjustment value	3 byte	128
10	YTB adjustment value	3 byte	128
11	RYW adjustment value	3 byte	128
12	R-REVICE setting value	1 byte	0
13	G-REVICE setting value	1 byte	0
14	B-REVICE setting value	1 byte	0
CS		2 byte	B7

• For each REVICE setting value, the level set for RRL, RGL, or RBL is transmitted as one character.

9.3.5 ACQUISITION OF ABL/WB ADJUSTMENT DATA ••• [QPW]

The command QPW is for acquiring the factory-preset data about the video of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QPW]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+35(DATA)+2(CS)= 40 Byte

Data Arrangement	Data Length	Output Example	1: Drive sequence	12, 15: Setting for Items 12 and 15
ECO	3 byte	QPW	48V Video 48 Hz	0 OFF
1 Drive sequence	3 byte	60V	50V Video 50 Hz	1 ON
2 Standard/nonstandard	1 byte	S	60V Video 60 Hz	
3 Type of ABL/WB tables	2 byte	T2	72V Video 72 Hz	13: Peripheral luminance correction
4 ABL adjustment value	3 byte	128	75V Video 75 Hz	0 OFF
5 R-HIGH adjustment value	3 byte	256	60P PC 60 Hz	2 ON (interlocked with APL)
6 G-HIGH adjustment value	3 byte	256	70P PC 70 Hz	
7 B-HIGH adjustment value	3 byte	256		16: Transition of brightness by protective operations
8 R-LOW adjustment value	3 byte	512	2: Standard/nonstandard	0 Upper limit state for brightness
9 G-LOW adjustment value	3 byte	512	S Standard	1 Brightness being reduced
10 B-LOW adjustment value	3 byte	512	N Nonstandard	2 Lower limit state for brightness
11 Gamma setting	1 byte	A		3 Brightness being increased
12 Streaking correction	1 byte	1	3: Type of ABL/WB tables	
13 Peripheral luminance correction	1 byte	0	Tn n: 1 to 4	
14 Reserved	1 byte	*		
15 WB interlocked with APL	1 byte	0	11: Gamma setting	
16 Transition of protective operations	1 byte	0	n 0 to F	
17 Reserved	2 byte	**		
CS	2 byte	37		

9.3.6 ACQUISITION OF PULSE METER VALUE ••• [QPM]

The command QPM is for acquiring the accumulated number of pulses of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QPM]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+40(DATA)+2(CS)= 45 Byte

Data Arrangement	Data Length	Output Example
ECO	3 byte	QPM
1 Pulse meter B 1	8 byte	00000000
2 Pulse meter B 2	8 byte	00000000
3 Pulse meter B 3	8 byte	00000000
4 Pulse meter B 4	8 byte	00000000
5 Pulse meter B 5	8 byte	00000000
CS	2 byte	E7

5 6 7 8
9.3.7 ACQUISITION OF PD LOGS ••• [QPD]

The command QPD is for acquiring data from the 8 latest power-down (PD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QPD]	All operations	To acquire data on the power-down logs	Return data: 3 (ECO)+80(DATA)+2(CS)= 85 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QPD
1	Latest "1st PD" data	1 byte	A
2	Latest "2nd PD" data	1 byte	2
3	Data from the hour meter for the latest PD	8 byte	00010020
4	Second latest "1st PD" data	1 byte	E
5	Second latest "2nd PD" data	1 byte	9
6	Data from the hour meter for the second latest PD	8 byte	00008523
7	Third latest "1st PD" data	1 byte	4
8	Third latest "2nd PD" data	1 byte	3
9	Data from the hour meter for the third latest PD	8 byte	00004335
10	Fourth latest "1st PD" data	1 byte	2
11	Fourth latest "2nd PD" data	1 byte	0
12	Data from the hour meter for the fourth latest PD	8 byte	00000945
13	Fifth latest "1st PD" data	1 byte	4
14	Fifth latest "2nd PD" data	1 byte	0
15	Data from the hour meter for the fifth latest PD	8 byte	00000715
16	Sixth latest "1st PD" data	1 byte	A
17	Sixth latest "2nd PD" data	1 byte	2
18	Data from the hour meter for the sixth latest PD	8 byte	00000552
19	Seventh latest "1st PD" data	1 byte	A
20	Seventh latest "2nd PD" data	1 byte	0
21	Data from the hour meter for the seventh latest PD	8 byte	00000213
22	Eighth latest "1st PD" data	1 byte	D
23	Eighth latest "2nd PD" data	1 byte	0
24	Data from the hour meter for the eighth latest PD	8 byte	000001A7
CS		2 byte	27

1, 2, 4, 5: PD data	
0	No PD
1	Not used
2	P-POWER
3	SCAN
4	SCN-5V
5	Y-DRIVE
6	Y-DCDC
7	Y-SUS
8	Address
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	Not used
D	Not used
E	Not used
F	UNKNOWN

9.3.8 ACQUISITION OF SD LOGS ••• [QSD]

The command QSD is for acquiring the data from the 8 latest shutdown (SD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QSD]	All operations	To acquire data on the shutdown logs	Return data: 3 (ECO)+80(DATA)+2(CS)= 85 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QSD
1	Latest SD data	1 byte	1
2	Latest SD subcategory data	1 byte	0
3	Data from the hour meter for the latest SD	8 byte	00752013
4	Second latest SD data	1 byte	5
5	Second latest SD subcategory data	1 byte	0
6	Data from the hour meter for the second latest SD	8 byte	00495204
7	Third latest SD data	1 byte	2
8	Third latest SD subcategory data	1 byte	3
9	Data from the hour meter for the third latest SD	8 byte	00100355
10	Fourth latest SD data	1 byte	2
11	Fourth latest SD subcategory data	1 byte	5
12	Data from the hour meter for the fourth latest SD	8 byte	00075620
13	Fifth latest SD data	1 byte	1
14	Fifth latest SD subcategory data	1 byte	0
15	Data from the hour meter for the fifth latest SD	8 byte	00000852
16	Sixth latest SD data	1 byte	2
17	Sixth latest SD subcategory data	1 byte	5
18	Data from the hour meter for the sixth latest SD	8 byte	000000451
19	Seventh latest SD data	1 byte	0
20	Seventh latest SD subcategory data	1 byte	0
21	Data from the hour meter for the seventh latest SD	8 byte	00000000
22	Eighth latest SD data	1 byte	0
23	Eighth latest SD subcategory data	1 byte	0
24	Data from the hour meter for the eighth latest SD	8 byte	00000000
CS		2 Byte	7D

● SD data	
0	No SD
1	SQ-IC
2	MDU-IIC
3	RST2
4	TEMP

● SD subcategory (SQ-IC)	
0	No SD-Sub data
1	Communication error
2	Drive stop
3	BUSY
6	Version mismatching

● SD subcategory (MDU-IIC)	
0	No SD-Sub data
1	EEPROM
2	BACKUP
3	DAC

● SD subcategory (TEMP)	
0	No SD-Sub data
1	TEMP1
2	Reserved

9.3.9 QS6

Induce it peculiar, individual information is acquired.

Command Format	Effective Operation Modes	Function	Remarks
[QS6]	Every time	Output of status	

Order	Part	Data Arrangement	Data Length	Remarks
00	–	Received Command name	3 byte	QS6
01		DTB version	4 byte	
02		Reserved	8 byte	
03		TELE-TEXT version	60 byte	
04		USER PASSWORD	4 byte	
05	–	Check Sum	2 byte	

9.3.10 QMT

Temperature information (TEMP2) / FAN rotation state information on the MTB side is returned.

Command Format	Effective Operation Modes	Function	Remarks
[QMT]	Every time	Output of status	MTB-side's temperature/FAN rotating status

Order	Part	Data Arrangement	Data Length	Remarks
0	–	Received Command name	3 byte	QMT
01	MTB	MTB-side Temperature (TEMP2)	3 byte	
02		MTB-side FAN rotating speed	1 byte	0: STOP 1: LOW, 5: HIGH, 3: MIDDLE (FHD only)

9.3.11 QNG

A MTB/MB side's shutdown information is acquired.

Command Format	Effective Operation Modes	Function	Remarks
[QNG]	Every time	Output of status	

Order	Part	Data Arrangement	Data Length	Remarks
00	-	Received Command name	3 byte	QNG
01	MTB	1st latest NG No.	1 byte	
02		Subcategory No. for the 1st latest NG.	1 byte	
03		MTB hour meter for the 1st latest NG.	7 byte	
04		Temperature for the 1st latest NG.	3 byte	
05		2nd latest NG No.	1 byte	
06		Subcategory No. for the 2nd latest NG.	1 byte	
07		MTB hour meter for the 2nd latest NG.	7 byte	
08		Temperature for the 2nd latest NG.	3 byte	
09		3rd latest NG No.	1 byte	
10		Subcategory No. for the 3rd latest NG.	1 byte	
11		MTB hour meter for the 3rd latest NG.	7 byte	
12		Temperature for the 3rd latest NG.	3 byte	
:		:	:	
29		8th latest NG No.	1 byte	
30		Subcategory No. for the 8th latest NG.	1 byte	
31		MTB hour meter for the 8th latest NG.	7 byte	
32	Temperature for the 8th latest NG.	3 byte		
33	-	Check Sum	2 byte	

D < SD Information No. >

Value	Shutdown Factor	Remarks (Operation)
0	Normal	
1	Failure of communication to Module microcomputer	MODULE (immediately Shutdown)
2	3-wire serial communication of Main microcomputer	Go to No. 1 Subcategory Information
3	IIC communication failure of Main microcomputer and Unknown error	Go to No. 2 Subcategory Information
4	Communication failure of Main microcomputer	MAIN (immediately Power Supply OFF)
5	FAN stopped	FAN (immediately Power Supply OFF)
6	Abnormally high temperature at MTB	TEMP2 (After 30 seconds warning, turn the power supply off)
7	Failure of Digital Tuner	Go to No. 3 Subcategory Information
8	Failure of Power Supply	Go to No. 4 Subcategory Information
B	Speaker short-circuit	

< No. 1 Subcategory Information on "Failure in 3-wire serial communication of Main microcomputer" >

Value	Shutdown Factor	Remarks (Operation)
0	Non subcategory	
1	IF microcomputer communication failure	IF (immediately Power Supply OFF)
2	MANTA communication failure (MULTI)	MULTI1 (immediately Power Supply OFF)
4	MANTA communication	I/P
5	MANTA communication	D-SEL

< No. 2 Subcategory Information on "Failure in IIC communication of Main microcomputer" >

Value	Shutdown Factor	Remarks (Operation)
0	Non subcategory	
1	Analog tuner1 (Front end 1)	FE1 (immediately Power Supply OFF)
3	MPX	MPX (After 3 times reset action, turn Power Supply off (except for us))
4	AV switch	AV-SW (immediately Power Supply OFF)
5	RGB switch	RGB-SW (immediately Power Supply OFF)
8	Main VDEC	M-VDEC (immediately Power Supply OFF)
9	Sub VDEC	S-VDEC (immediately Power Supply OFF)
A	AD/PLL	ADC (immediately Power Supply OFF)
B	HDMI	HDMI (immediately Power Supply OFF)
E	M2 communication	TX-COM (After 3 times reset action, turn Power Supply off)
F	M2 busy	TX-BSY (After 3 times reset action, turn Power Supply off)
G	64k EEPROM	MA-EEP (immediately Power Supply OFF)
H	AUDIO IC	

< No. 3 Subcategory Information on "Digital tuner" >

Value	Shutdown Factor	Remarks (Operation)
0	Non subcategory	
1	DTV starting failure	PS/RST (The history is left, and intercepts it the communication)
2	DTV communication failure	RETRY (The history is left, and intercepts it the communication)

< No. 4 Subcategory Information on "POWER" >

Value	Shutdown Factor	Remarks (Operation)
1	DCDC Converter heden	M-DCDC (immediately Power Supply OFF)
2	Relay Power supply heden	RELAY (immediately Power Supply OFF)

9.3.12 DRV

Drive ON/OFF: ON/OFF control for only the large-power system

Command Format	Effective Operation Modes	Function	Remarks
[DRV+S00]	Every time	DRIVE OFF	At standby mode, when 10 seconds passed after issuing [DRV+S00], command becomes invalid.
[DRV+S01]	Every time	DRIVE ON	

1

2

3

4

9.3.13 OTHER COMMANDS

• **SETTING FOR FACTORY MODE PERMISSION / PROHIBITION** ○ ○ ○ [FAY / FAN]

A The commands FAY/FAN are for prohibiting/permitting panel-adjustment commands.

Command Format	Operation		Remarks
	Effective Operation Modes	Control	
[FAY]	Normal operation mode while the power is on	Adjust command is valid.	Mask indications will be forcibly turned off.
[FAN]	During FAY	Adjust command is invalid.	

B

• **BACKUP FUNCTION FOR ADJUSTMENT VALUE FOR THE MAIN UNIT** ○ ○ ○ [FAJ / UAJ / CBU / BCP]

When the DIGITAL Assy is to be replaced, adjustment values can be copied from the backup EEPROM to the EEPROM of the Assy for service.

C

Command Format	Operation		Remarks	
	Effective Operation Modes	Control		
[FAJ]	During FAY	To make the flag setting that indicating that adjustment of the panel unit has been completed	Writing 00 to the 4 k byte ROM and copying to the 2 k byte ROM	This takes at least 350 ms.
[UAJ]		To make the flag setting that indicating that adjustment of the main unit has not been completed	Writing F0 to the 4 k byte ROM	
[CBU]		To make the flag setting that indicating that backup data have not been copied	Writing F0 to the 2 k byte ROM	The backup ROM is initialized.
[BCP]		To copy Digital backup data to EEPROM	Copying backup data	

D

E

F

160

1

2


3

4

PDP-427XD

10. GENERAL INFORMATION


10.1 POWER ON SEQUENCE

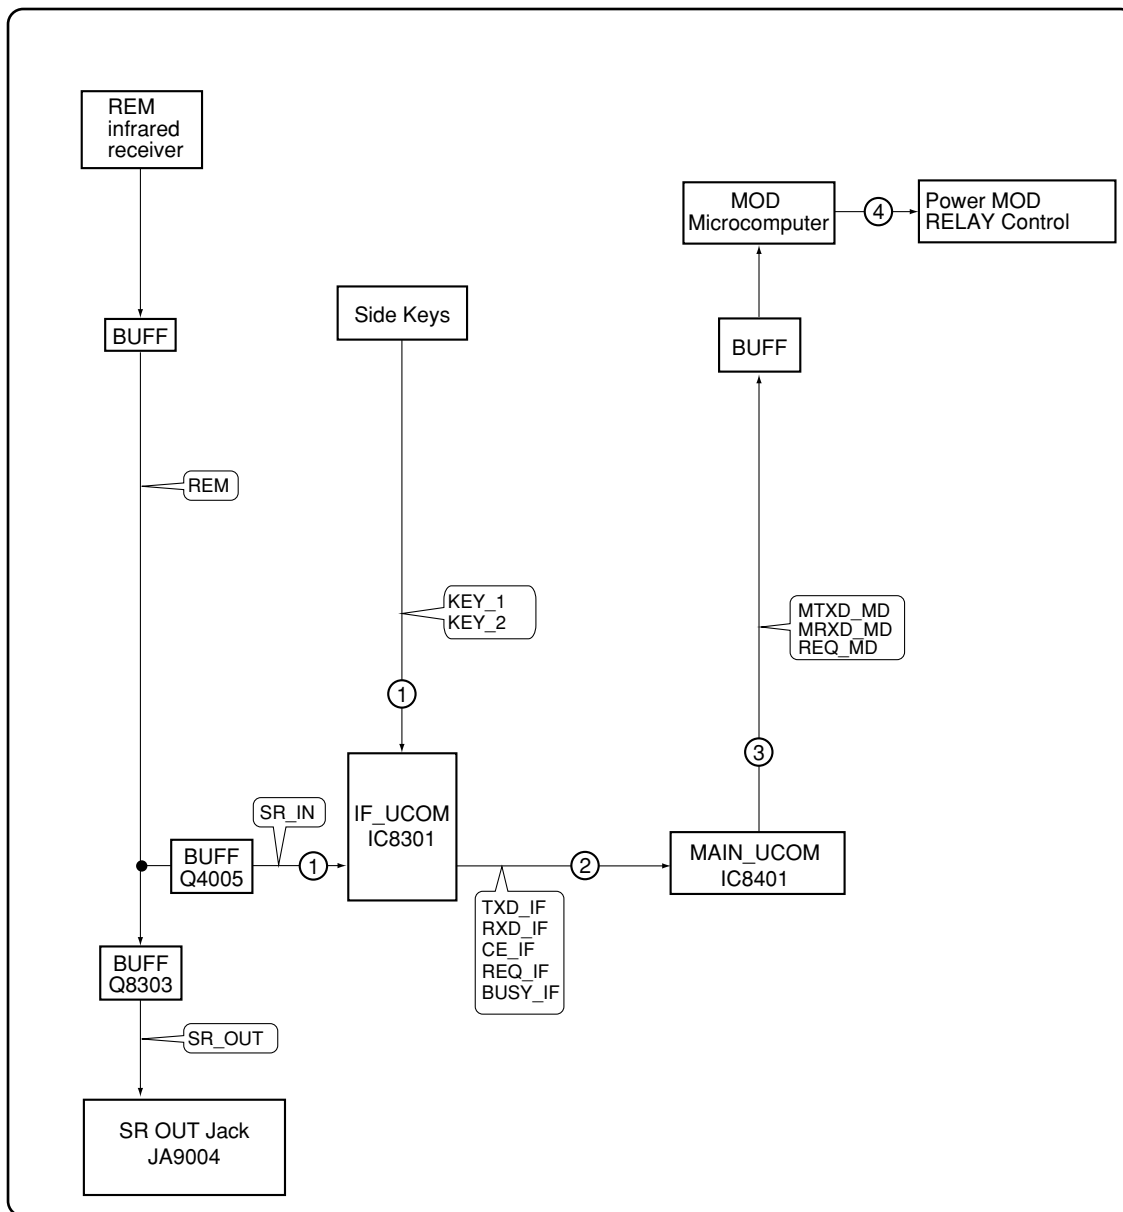

- ① : The remote control (or KEY) signal is input to the IF microcomputer.
- ② : The IF microcomputer sends the operation data to the main microcomputer.
- ③ : The main microcomputer issues a startup command to the MOD microcomputer.
- ④ : The MOD microcomputer controls the relay of the power MOD of the PDP to startup the power of the PDP.

A

Power supply status - ON

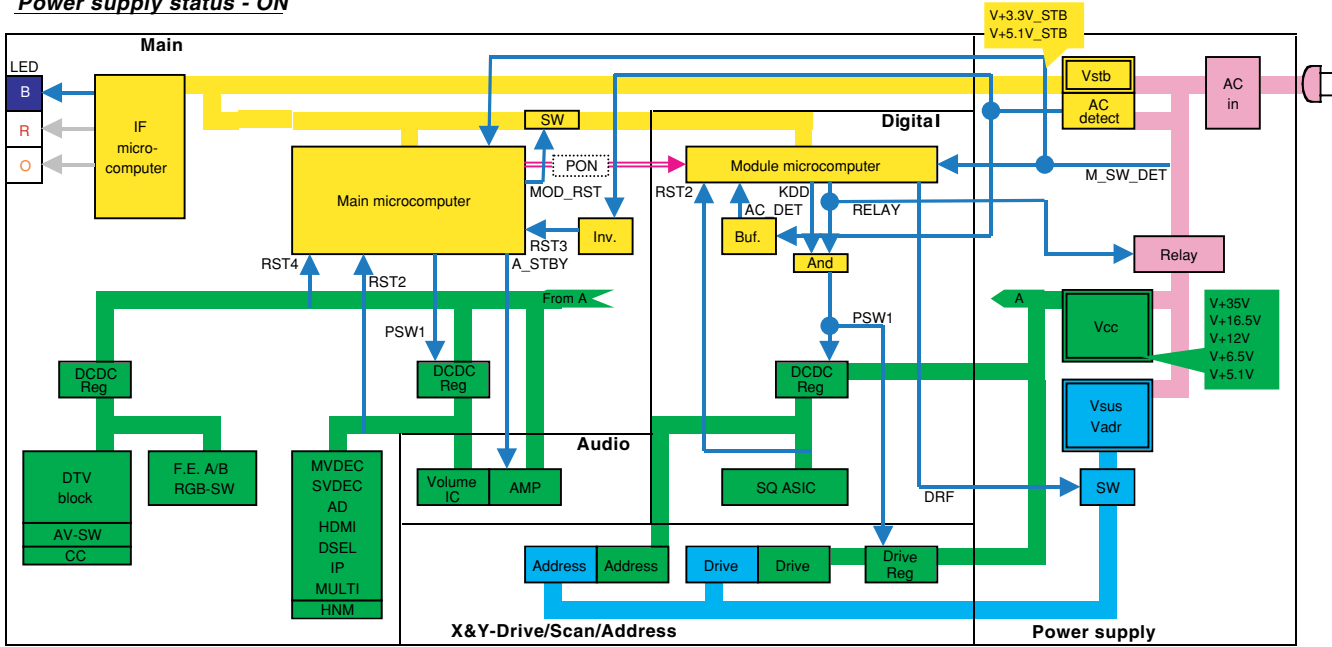


B

C

D


Power supply status - Standby

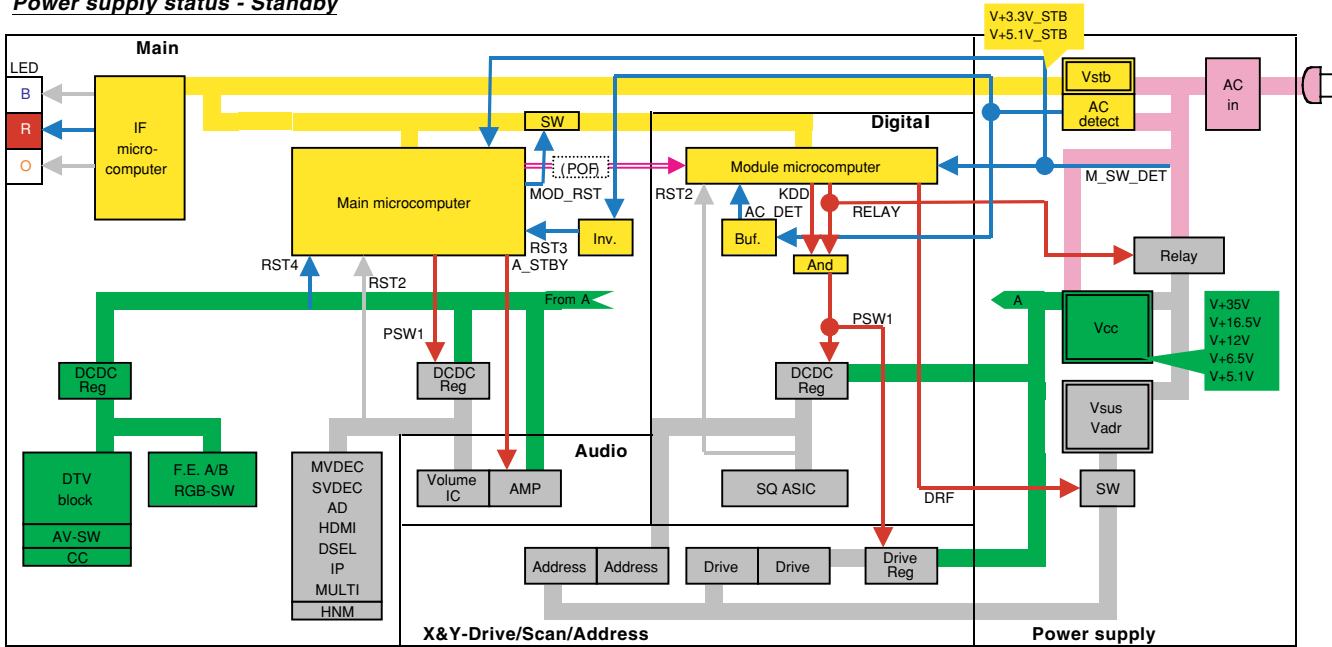

E


F

Power supply status - POWER button off

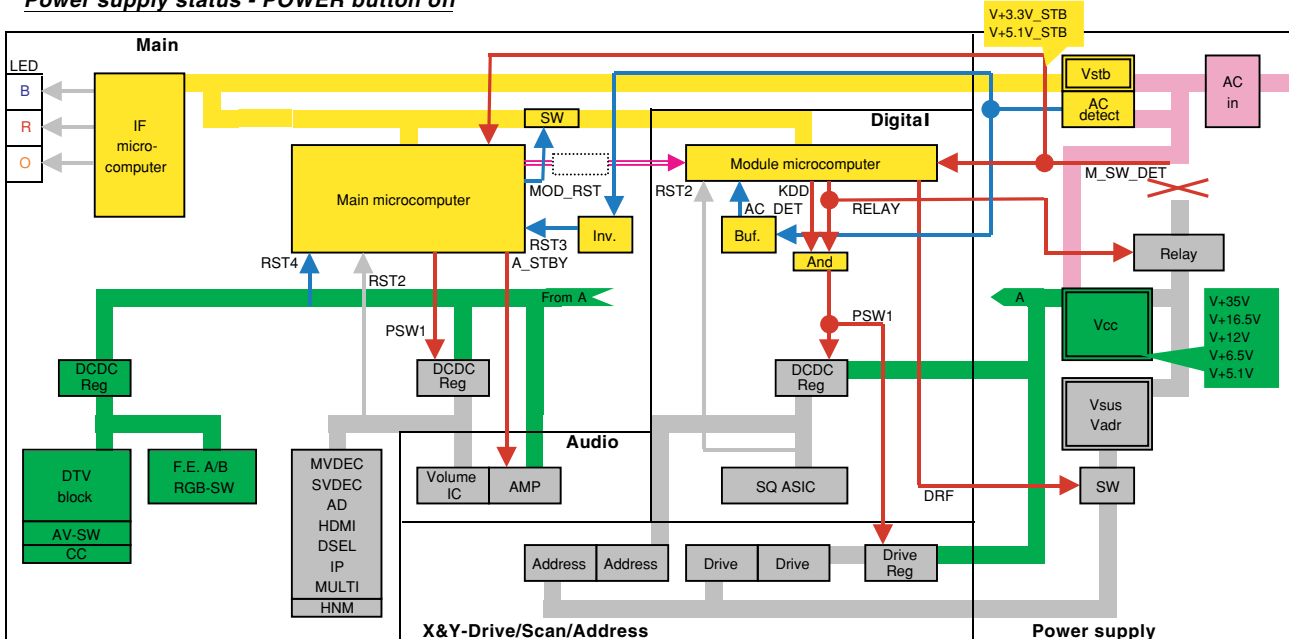

This state of the power supply is the same as the Standby mode.
 However, all LED is turned off, and the operation by the user is not effective.


Power supply status - AC off

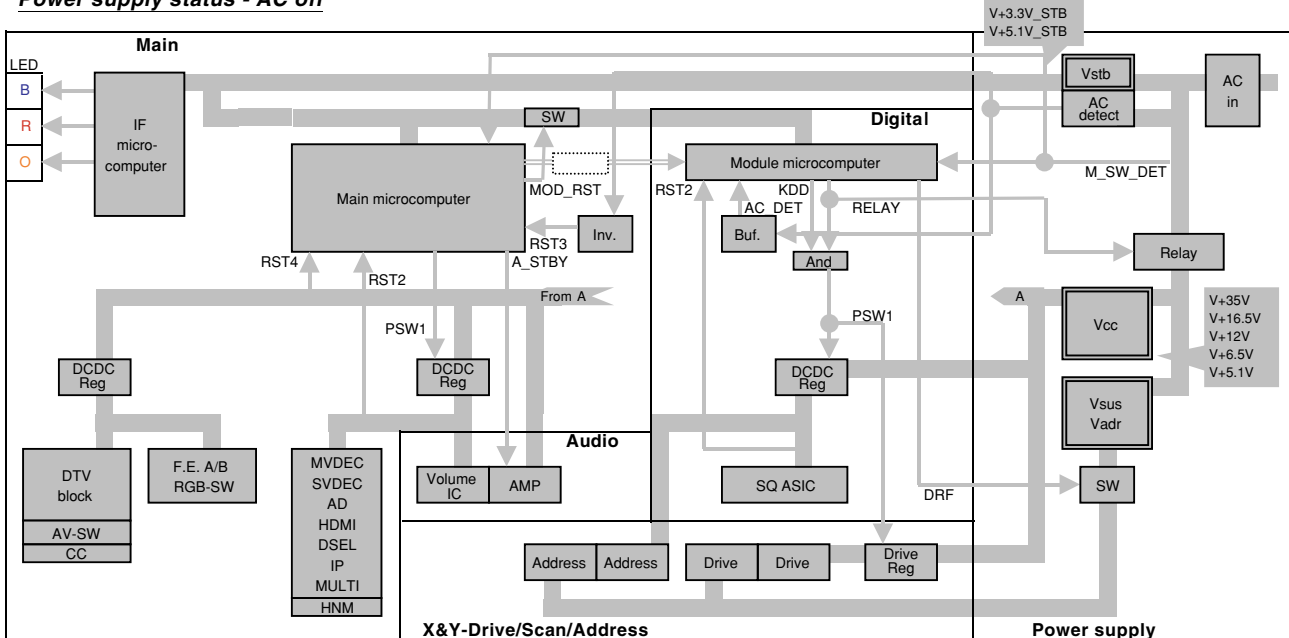

10.2 POWER SUPPLY TRANSITION STATUS

A B C D E F

	AC-OFF	IF Active	Main Active	MTB Active	Fully Active
Power LED	OFF	Standby (red LED)			Power ON (blue LED)
PSW1	OFF				ON (PDP indication & VDEC & ASIC_ON)
RELAY	OFF				ON (DTV+AV_ON)
Main microcomputer	OFF				ON (main microcomputer ON)
IF microcomputer	OFF				ON (IF microcomputer ON)

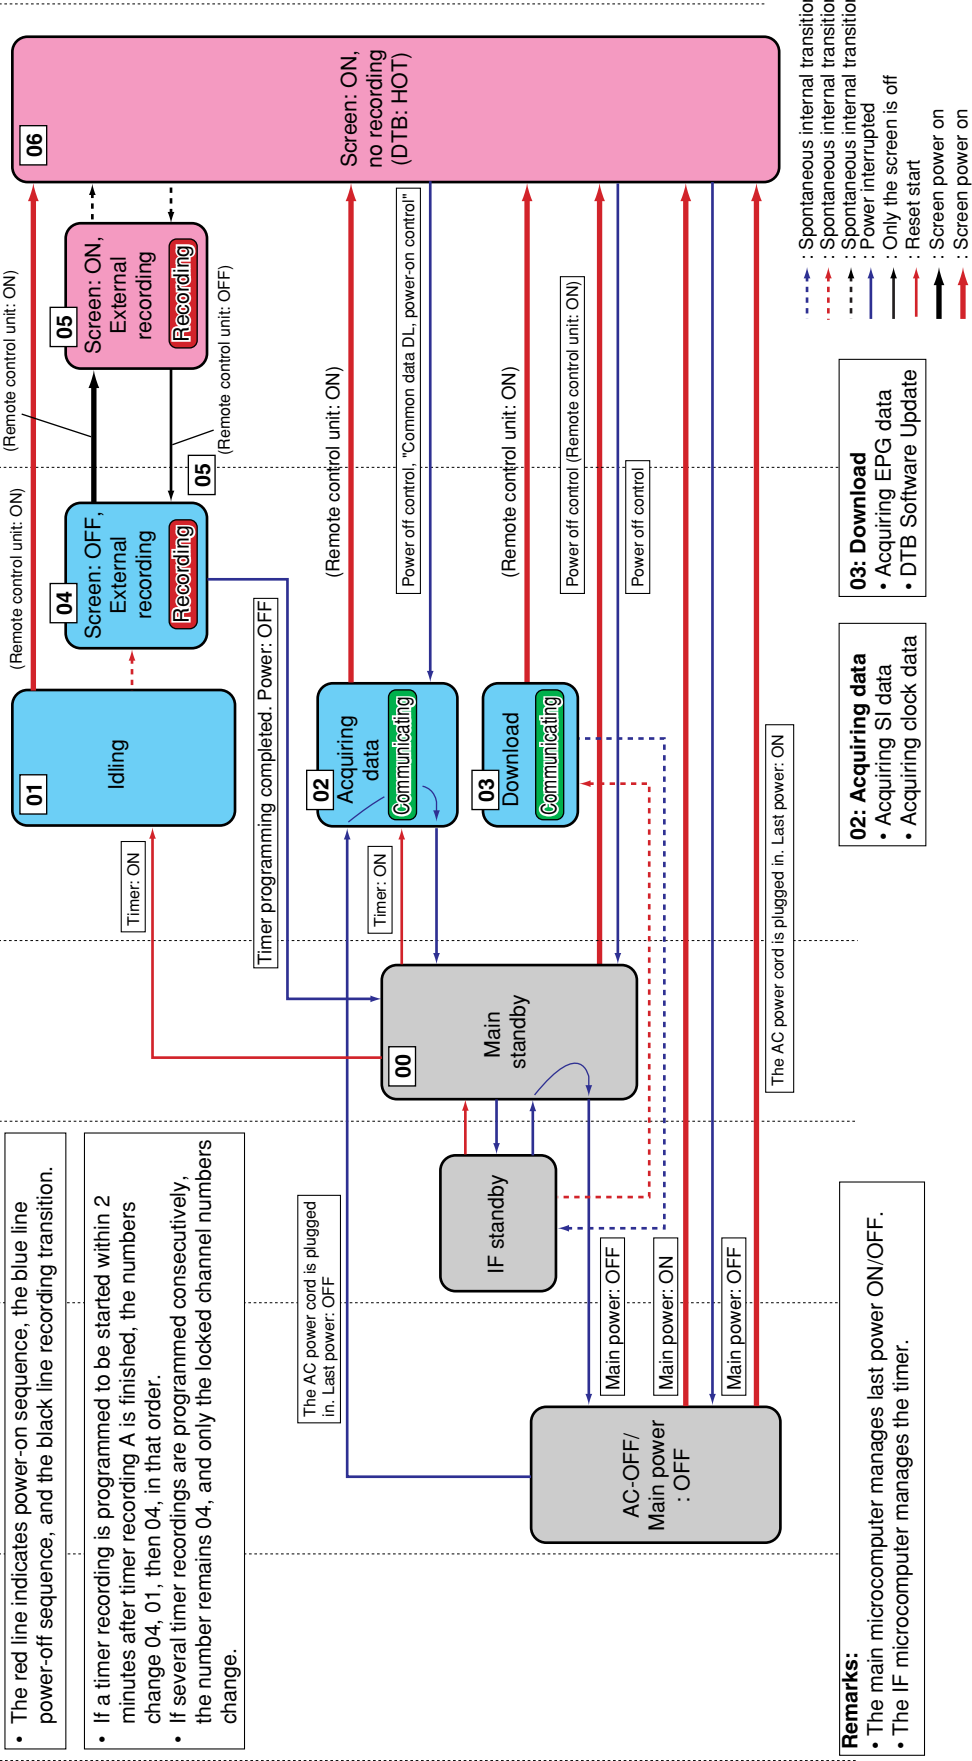

10.3 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM

Function:

It is an operational mode where the digital signal processing performs circuit operation but the power is not supplied to the panel driving system (large signal system) in order to avoid a power down.

Application:


1. When it is necessary to check whether the signal output is correctly reaching the drive system in a repairing activity etc.
2. In the case of a PD, to determine whether the problem is with the large signal system power supply or with the small signal system power supply.

Method:

1. Make shorting between the specified location (refer to the illustration below) of the PCB surface of the DIGITAL ASSY and the nearby pattern.
2. Execute [DRV S00] by RS232C command. ([DRV S01] for release)

Supplemental explanation:

- When the large signal system power supply is in OFF state, there will be no PD, except PS_PD, as the PD signal has been muted.
- If the clip is removed in the OFF state of the large signal system power supply, PD will take place at the instance of clip removal. Therefore, be sure to remove the clip after turning the power OFF.
- Under RS-232C command control, [DRVS01] (release) is possible during power ON. However, there is a possibility of damaging the set. Therefore, make this operation only after turning the power OFF.
- Command [DRVS00/S01] is effective even during standby. When the main power is turned OFF, however, [DRVS01] (release) will be effective.

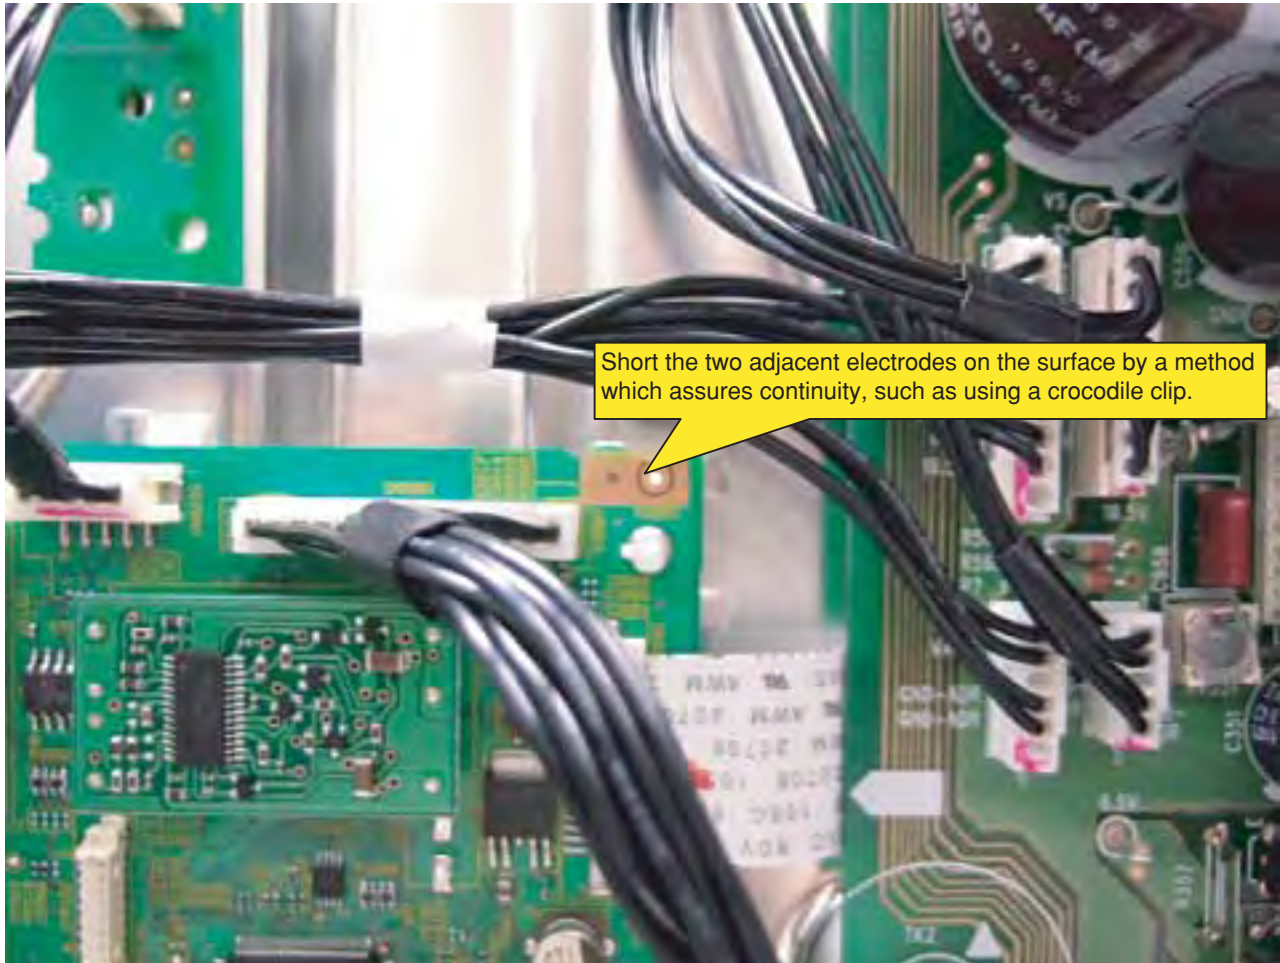

10.4 LED INFORMATION



State	LED Pattern	
AC OFF or Main power switch OFF	Blue Red Orange	
Standby power management	Blue Red Orange	
Power ON	Blue Red Orange	
Power-down	Blue Red Orange	Once 500 msec Twice n times 2.5 sec Once
Shutdown	Blue Red Orange	Once 500 msec Twice n times 2.5 sec Once
No digital adjustment data copied for backup	Blue Red Orange	200 msec
In the process of rewriting the program of the microcomputer	Blue Red Orange	100 msec 100 msec
During reservation video recordings (Unit: Standby)	Blue Red Orange	PDP-4270XD and PDP-427XD only
During factory operation During reservation video recordings (Unit: ON) *1 During sleep timer operation (*2)	Blue Red Orange	
RS-232C <=> SR+ switch	Blue Red Orange	200 msec


*1: PDP-4270XD and PDP-427XD types

*2: PDP-4270XA and PDP-427XA types

10.5 SPECIFICATION ABOUT THE THERMAL PROTECTION

* The change of HI / LO have hysteresis curve below.

Reading Value of the Sensor and FAN Drive

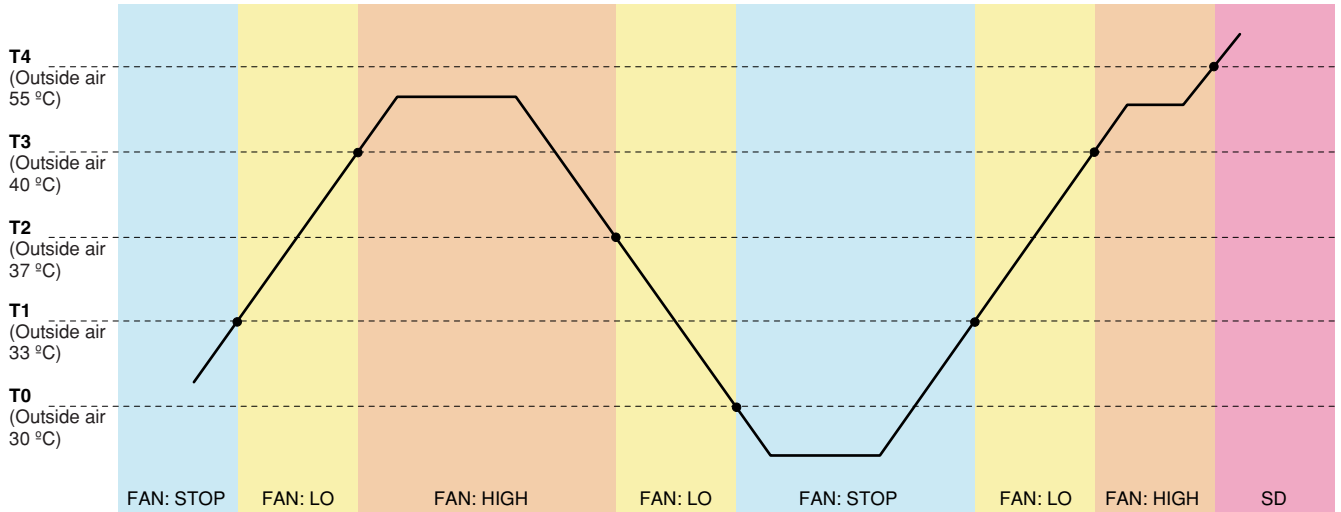


Assign			AD Value 10 bit	Aims (Sensor Position)	Aims (Outside Air)
Pin 76	TEMP2	T4 setting	440	55 °C	55 °C
		T3 setting	568	40 °C	40 °C
		T2 setting	592	37 °C	37 °C
		T1 setting	627	33 °C	33 °C
		T0 setting	653	30 °C	30 °C

Assign	FAN: HIGH	FAN: LO	STOP
Pin 149 (FAN_CONT)	H	H	L
Pin 17 (FAN_CONT_POW)	H	L	-

Unit State and Fan Drive

POWER	PSW1	State	Control	FAN Operation
ON	ON	ON	According to the reading value of above table sensor.	HIGH or LO
ON	ON	DT_REC	According to the reading value of above table sensor.	HIGH or LO
OFF	-	STB	FAN_CONT: "L"	OFF

[System block diagram]

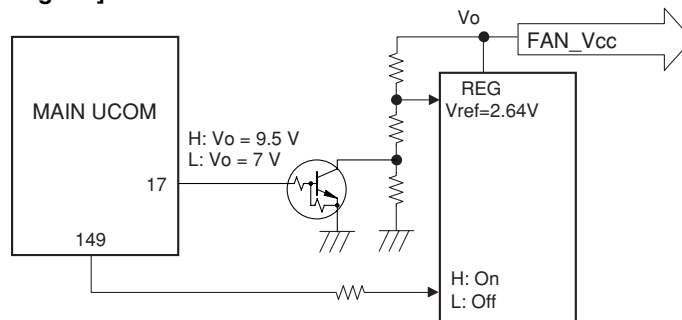


Operation when executing FAN control command

When executing [FCNS00], [FCNS01], [FCNS02] command, detect the FAN_NG signal. When NG is detected, it becomes shutdown. When [FCNS03] command is executed, FAN_NG detection is not operated.

10.6 PROCESSING IN ABNORMALITY

Speaker short-circuit

● Circuit diagram

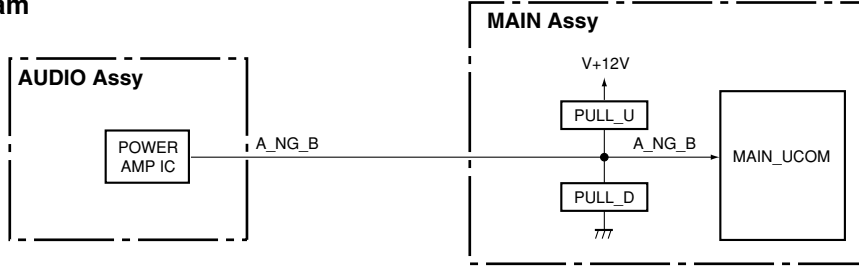


● Specifications for port monitoring

Port Name	SD/PD Indication	Assigned Pin	Active
A_NG_B	AUDIO		Shutdown with L

Power supply and DC-DC converter

● Circuit diagram

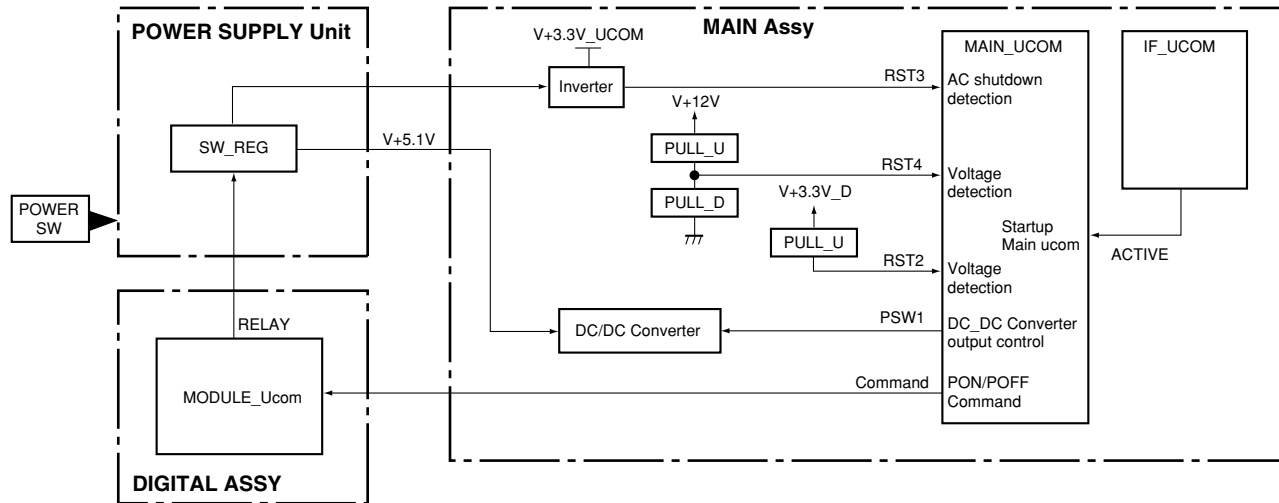


● Specifications for port monitoring

Port Name	SD/PD Indication	Assigned Pin	Active
RST2	ASIC power		Shutdown with L
RST3	AC power		AC_OFF with H
RST4	MAIN power		Shutdown with L

Fan and temperature sensor

● Circuit diagram

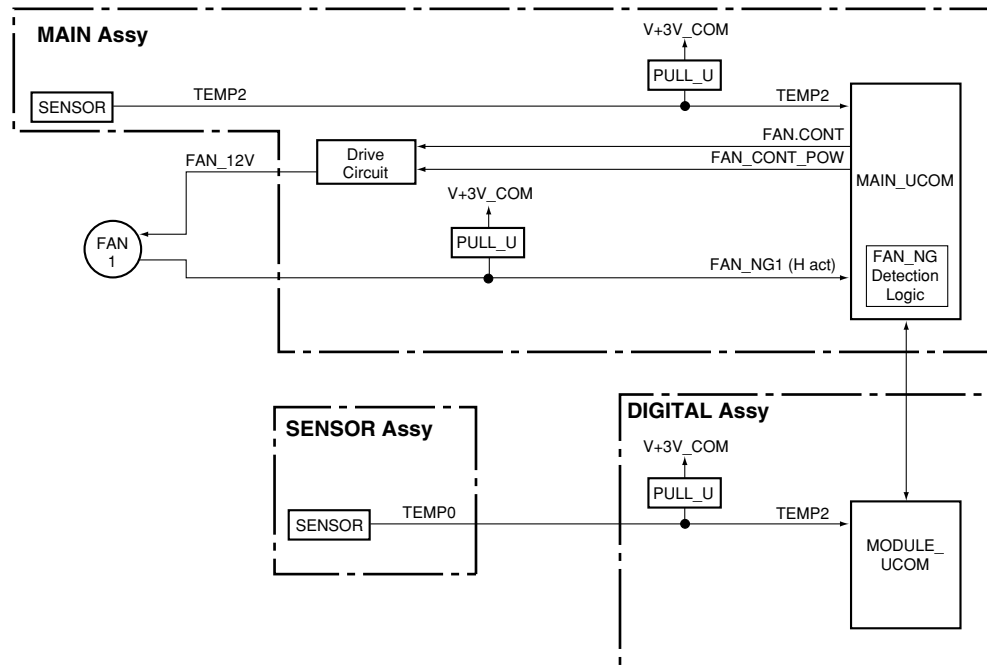


● Specifications for port monitoring

Port Name	SD/PD Indication	Assigned Pin	Active
FAN_NG 1	FAN		Shutdown with H
TEMP2	Abnormally high temperature in the MR		Shutdown when the value exceeds the predetermined value
TEMP0	Abnormally high temperature in the Drive circuit		Shutdown when the value exceeds the predetermined value

DTB antenna power supply

● Circuit diagram

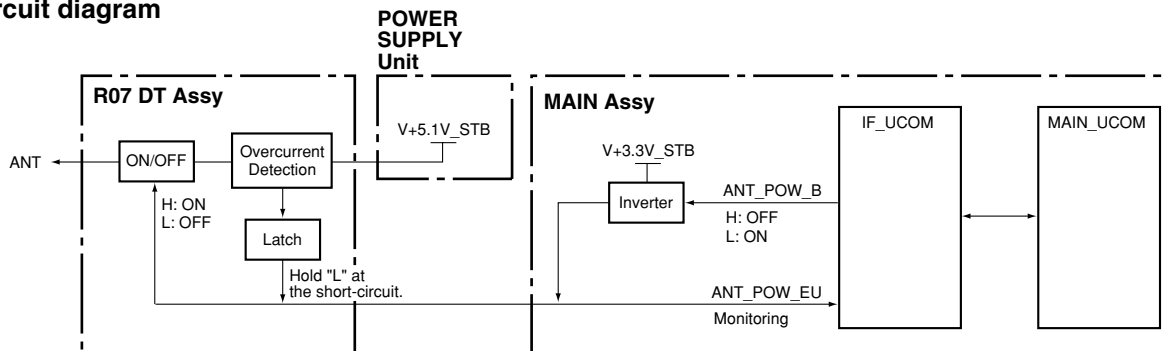

● Specifications for port monitoring

Port Name	SD/PD Indication	Assigned Pin	Active
ANT_POW_EU	DTB antenna short	IF_37	Warning with L

11. SPECIFICATIONS

11.1 SPECIFICATIONS


Item 42" Plasma Television, model: PDP-427XD, PDP-4270XD, PDP-427XA, PDP4270XA				
Number of pixels		1024 x 768 pixels		
Audio amplifier		13 W + 13 W (1 kHz, 10 %, 8 Ω)		
Speakers		Woofer: 4.8 cm x 13 cm cone type Tweeter: 2.5 cm semidome type		
Surround System		SRS/FOCUS/TruBass		
Power Requirements		220 V to 240 V AC, 50 Hz/60 Hz, 291 W (0,7 W Standby) : PDP-427XD, Only 220 V to 240 V AC, 50 Hz/60 Hz, 287 W (0,3 W Standby) : PDP-427XA, Only		
Dimensions		1040 mm (W) x 679 mm (H) x 115 mm (D)		
Weight		32.1 kg (70.8 lbs.): PDP-4270XD, 29.6 kg (65.3 lbs.): PDP-427XD 31.5 kg (69.5 lbs.): PDP-4270XA, 29.0 kg (64.0 lbs.): PDP-427XA		
B	Colour System	Analogue	PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60	
		Digital	PAL/SECAM	
TV Function (Analogue)	Receiving System	B/G, D/K, I, L/L'		
	Tuner	VHF/UHF	E2-E69 ch, F2-F10 ch, I21-I69 ch, IR A-IR J ch	
		CATV	Hyper-band, S1-S41 ch	
	Auto Channel Preset	99 ch, Auto Preset, Auto Label, Auto Sort		
	STEREO	NICAM/A2		
TV Function (Digital)	Receiving System	DVB-T (2 K / 8 K COFDM)		
	Tuner	VHF/UHF	VHF Band III (170 MHz to 230 MHz) and UHF Band IV, V (470 MHz to 862 MHz)	
	Auto Channel Preset	999 ch, Auto Preset, Auto Label, Auto Sort		
	STEREO	MPEG layer I/II, Dolby Digital		
C	Terminals	Rear	INPUT 1	SCART (AV in, RGB in, TV out)
			INPUT 2	SCART (AV in/out, S-VIDEO in, AV link *1), Component Video in
			INPUT 3	SCART (AV in/out, S-VIDEO in, RGB in, AV link *1), HDMI in *2
			INPUT 4	HDMI in *2 (PDP-427XD, PDP-427XA only)
			CONTROL OUT	1 (PDP-427XD, PDP-427XA only)
		Antenna	75 Ω Din Type for VHF/UHF in (Analogue)	
			75 Ω Din Type for VHF/UHF in (Digital)	
			75 Ω Din Type for VHF/UHF out (Digital)	
		PC	Analogue RGB in PC INPUT (AUDIO) (PDP-427XD, PDP-427XA only)	
		Side	INPUT 4	S-VIDEO, AV in (PDP-4270XD, PDP-4270XA only)
Side	INPUT 5	S-VIDEO, AV in (PDP-427XD, PDP-427XA only)		
AUDIO OUTPUT terminal	(Rear)	AUDIO out (Fixed)		
SUB WOOFER OUTPUT terminal	(Rear)	Variable (PDP-427XD, PDP-427XA only)		
PHONES OUTPUT terminal	(Side)	16 Ω to 32 Ω recommended		
DIGITAL OUT terminal	(Rear)	Digital audio output (Optical)		
COMMON INTERFACE	(Rear)	CA module		

*1 Switchable from menu.

*2 This conforms to HDMI1.1 and HDCP1.1. HDMI (High Definition Multimedia Interface) is a digital interface that handles both video and audio using a single cable. HDCP (High-bandwidth Digital Content Protection) is a technology used to protect copyrighted digital contents that use the Digital Visual Interface (DVI).

Design and specifications are subject to change without notice.

Trademarks

- FOCUS, WOW, SRS and  symbol are trademarks of SRS Labs, Inc.
- FOCUS and SRS technologies are incorporated under license from SRS Labs, Inc.
- This product includes FontAvenue® fonts licensed by NEC Corporation.
- FontAvenue is a registered trademark of NEC Corporation.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- The names of companies or institutions are trademarks or registered trademarks of the respective companies or institutions.


11.2 ACCESSORIES

<p>Power cord (2 m) (ADG1214)</p> <p>(For Europe, except UK and Eire) (For UK and Eire)</p> <p>Only the power cord that is appropriate in your country or region is supplied.</p>		<p>Cleaning cloth (AED1285)</p>	<p>AA size battery x 2 (VEM1031)</p>
<p>Speed clamp x 3 Bead band x 3</p> <p>Binder Assy (AEC1908)</p>		<p>Cable tie Ferrite core</p> <p>Ferrite core (ATX1039)</p>	<p>Warranty card</p>
<p>Remote control unit (AXD1515: PDP-4270XD/WYVIXK5) (AXD1532: PDP-427XD/WYVIXK5) (AXD1541: PDP-4270XA/WYVIXK5, WYV5) (AXD1540: PDP-427XA/WYVIXK5, WYV5)</p>		<p>Hexagonal wrench (Diagonal size : 6 mm) (AEF1029)</p> <p>PDP-4270XD and PDP-4270XA only</p>	<p>Two operating instructions PDP-4270XA One operating instructions Only.</p>

11.3 PANEL FACILITIES

11.3.1 PDP-427XD, PDP-4270XD

• Front/side view

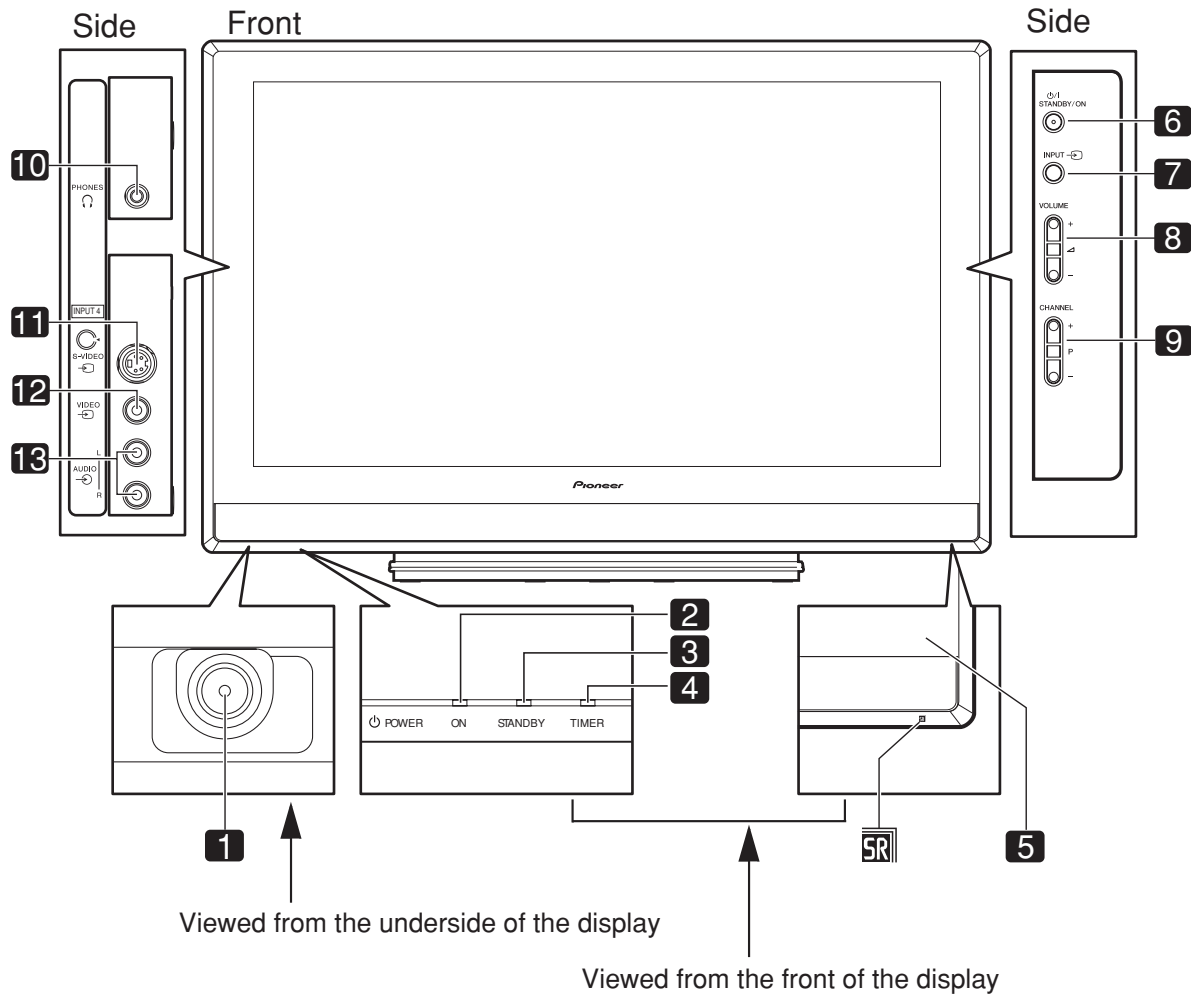

Viewed from the underside of the display

Viewed from the front of the display


• For PDP-4270XD

- 1 **POWER** button
- 2 **POWER ON** indicator
- 3 **STANDBY** indicator
- 4 **TIMER** indicator
- 5 Remote control sensor
- 6 **STANDBY/ON** button
- 7 **INPUT** button
- 8 **VOLUME +/-** buttons
- 9 **CHANNEL +/-** buttons
- 10 **PHONES** output terminal
- 11 **INPUT 4** terminal (S-VIDEO)
- 12 **INPUT 4** terminal (VIDEO)
- 13 **INPUT 4** terminal (AUDIO)

• For PDP-427XD

- 1 **POWER** button
- 2 **POWER ON** indicator
- 3 **STANDBY** indicator
- 4 **TIMER** indicator
- 5 Remote control sensor
- 6 **STANDBY/ON** button
- 7 **INPUT** button
- 8 **VOLUME +/-** buttons
- 9 **CHANNEL +/-** buttons
- 10 **PHONES** output terminal
- 11 **INPUT 5** terminal (S-VIDEO)
- 12 **INPUT 5** terminal (VIDEO)
- 13 **INPUT 5** terminal (AUDIO)

• Rear view (PDP-4270XD)

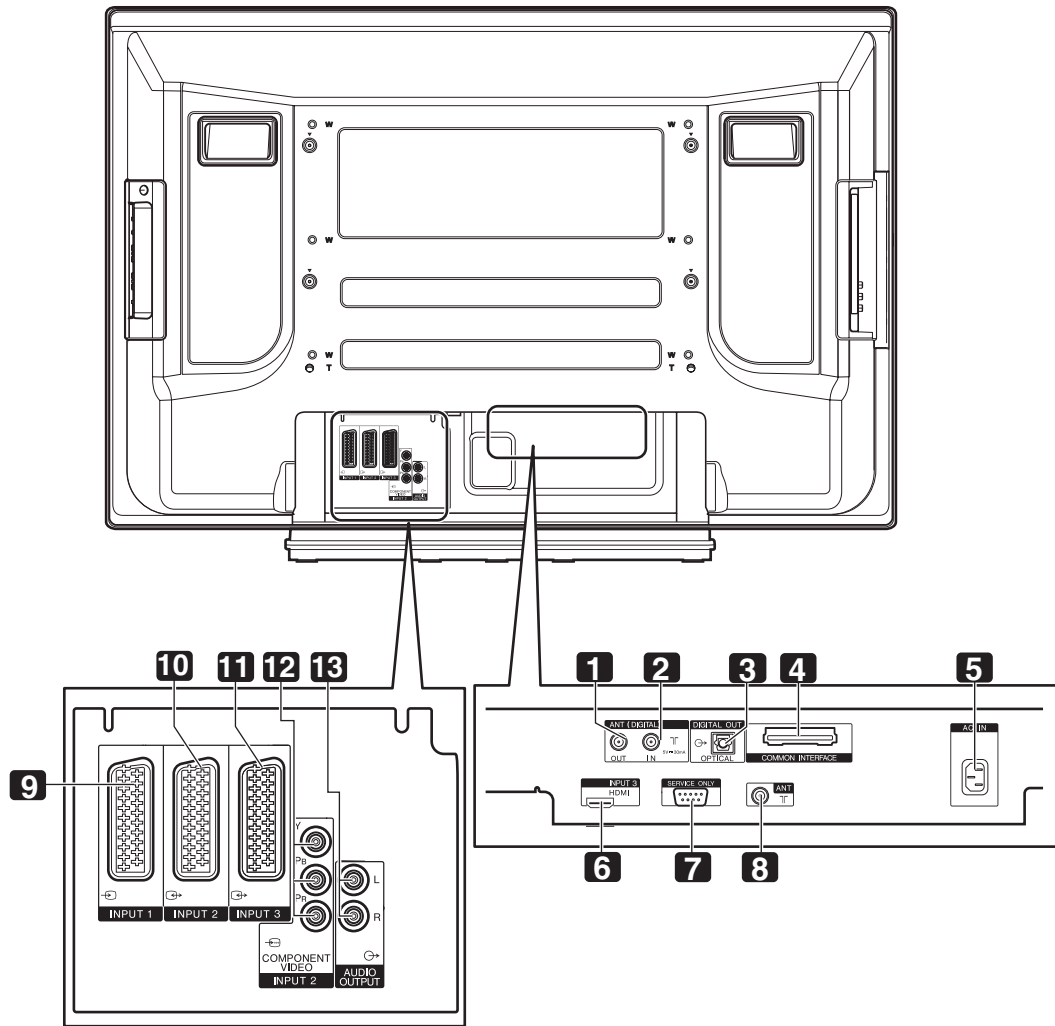

- | | | | |
|---|--|----|--|
| 1 | ANT OUT terminal (Antenna through out) | 8 | ANT (Antenna) input terminal |
| 2 | ANT IN terminal (Antenna in for DTV)
Power can be supplied through this terminal. | 9 | INPUT 1 terminal (SCART) |
| 3 | DIGITAL OUT terminal (OPTICAL) | 10 | INPUT 2 terminal (SCART) |
| 4 | COMMON INTERFACE slot
For a CA module with smart card. | 11 | INPUT 3 terminal (SCART) |
| 5 | AC IN terminal | 12 | INPUT 2 terminal
(COMPONENT VIDEO: Y, PB, PR) |
| 6 | INPUT 3 terminal (HDMI) | 13 | AUDIO OUTPUT terminals |
| 7 | RS-232C terminal (used for factory setup) | | |


A

• Rear view (PDP-427XD)

B

C

D

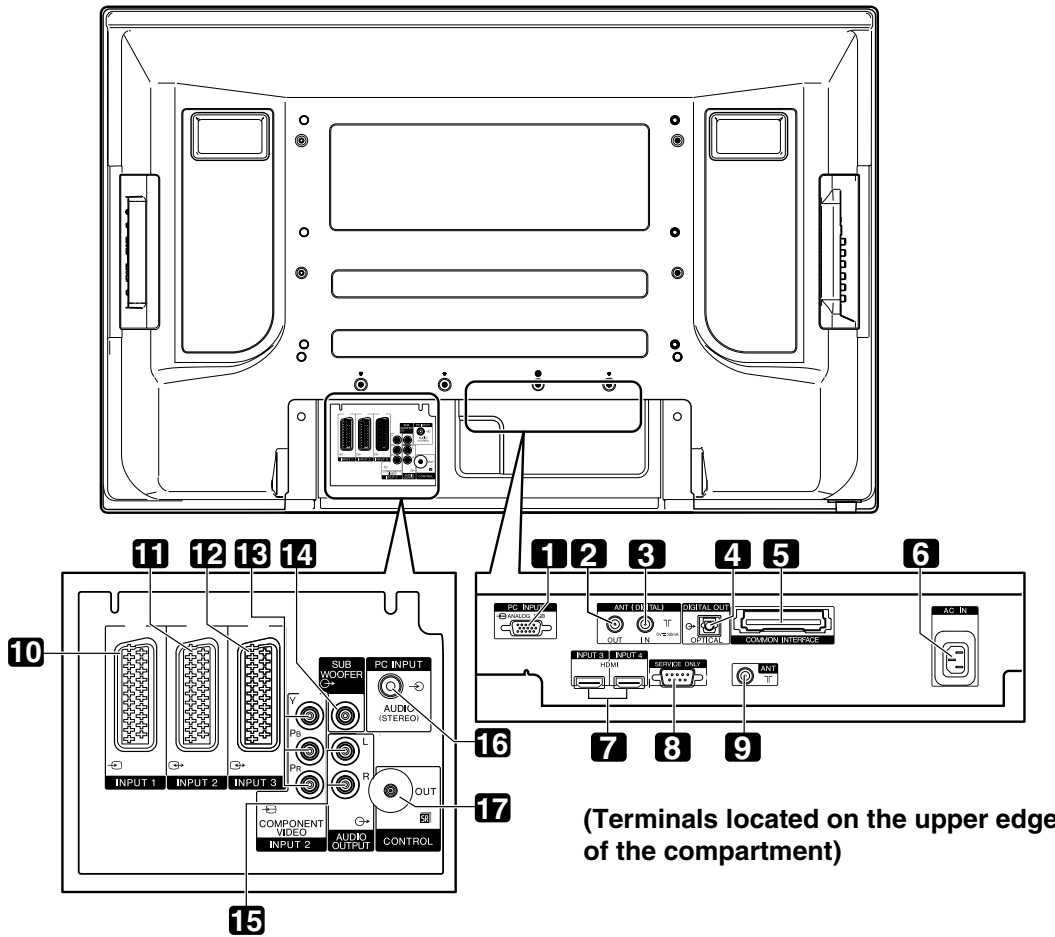

(Terminals located on the upper edge of the compartment)


E

- 1 PC INPUT terminal (ANALOG RGB)
- 2 ANT OUT terminal (Antenna through out)
- 3 ANT IN terminal (Antenna in for DTV)
Power can be supplied through this terminal.
- 4 DIGITAL OUT terminal (OPTICAL)
- 5 COMMON INTERFACE slot
For a CA module with a smart card.
- 6 AC IN terminal
- 7 INPUT 3/INPUT 4 terminals (HDMI)
- 8 RS-232C terminal (used for factory setup)
- 9 ANT (Antenna) input terminal
- 10 INPUT 1 terminal (SCART)
- 11 INPUT 2 terminal (SCART)
- 12 INPUT 3 terminal (SCART)
- 13 INPUT 2 terminal
(COMPONENT VIDEO: Y, PB, PR)
- 14 SUB WOOFER OUTPUT terminal
- 15 AUDIO OUTPUT terminals
- 16 PC INPUT terminal (AUDIO)
- 17 CONTROL OUT terminal

F

• Remote control unit (PDP-4270XD)

Point the remote control at the plasma television to operate.

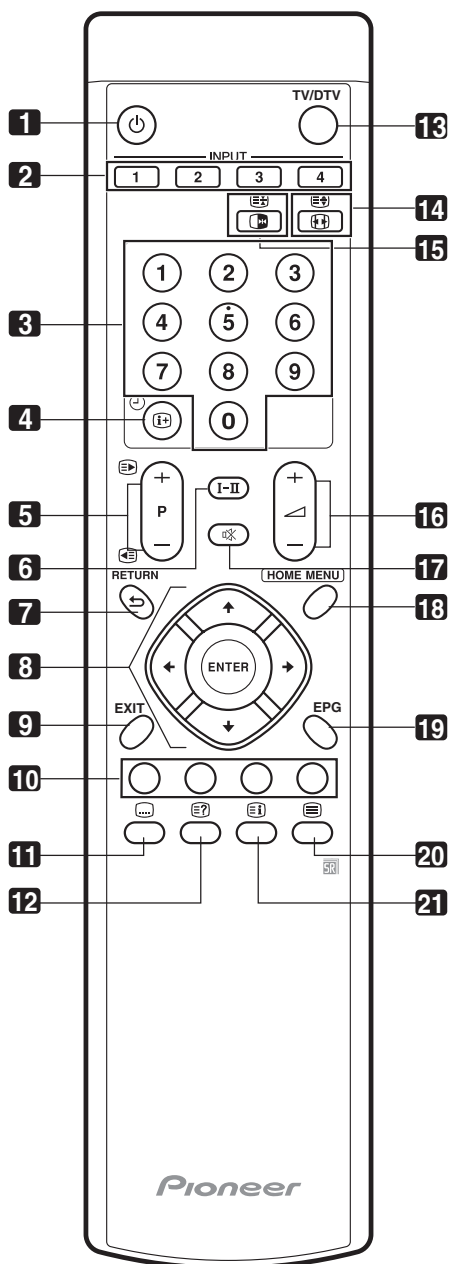


- 1 Turns on the power to the plasma television or places it into the standby mode.
- 2 **INPUT**
Selects an input source of the plasma television. (INPUT 1, INPUT 2, INPUT 3, INPUT 4)
- 3 **0 - 9**
TV/External input mode: Selects a channel.
TELETEXT mode: Selects a page.
- 4 TV/External input mode: Displays the channel information.
DTV input mode: Displays the banner information.

- 5 **P+/P-**
TV/External input mode: Selects a channel.
 / TELETEXT mode: Selects a page.
- 6 **I-II**
Sets the sound multiplex mode.
- 7 **RETURN**
Restores the previous menu screen.
- 8 Selects a desired item on the setting screen.
ENTER
Executes a command.
- 9 **EXIT**
Returns to the normal screen in one step.
- 10 **Colour (RED/GREEN/YELLOW/BLUE)**
TELETEXT mode: Selects a page.
- 11 TV/External input mode: Jumps to the Teletext subtitle page.
DTV input mode: Turns subtitle on and off.
- 12 Displays hidden characters.
- 13 **TV/DTV**
Switches between the TV and DTV input modes.
- 14 TV/External input mode: Selects the screen size.
 TELETEXT mode: Switches Teletext images. (full/upper half/lower half)
- 15 TV/External input mode: Freezes a frame from a moving image. Press again to cancel the function.
 TELETEXT mode: Stops updating Teletext pages. Press again to release the hold mode.
- 16 Sets the volume.
- 17 Mutes the sound.
- 18 **HOME MENU**
TV/External Input mode: Displays the Menu screen.
- 19 **EPG**
Displays the Electronic Programme Guide.
- 20 Selects the TELETEXT mode (all TV image, all TEXT image, TV/TEXT image).
- 21 TELETEXT mode: Displays an Index page for the CEEFAX/FLOF format. Displays a TOP Over View page for the TOP format.

A • Remote control unit (PDP-427XD)

This section describes the functions of the buttons available when the TV mode has been selected using the **SELECT** button.

For the buttons for controlling other equipment, see "Controlling other equipment using the supplied remote control unit".

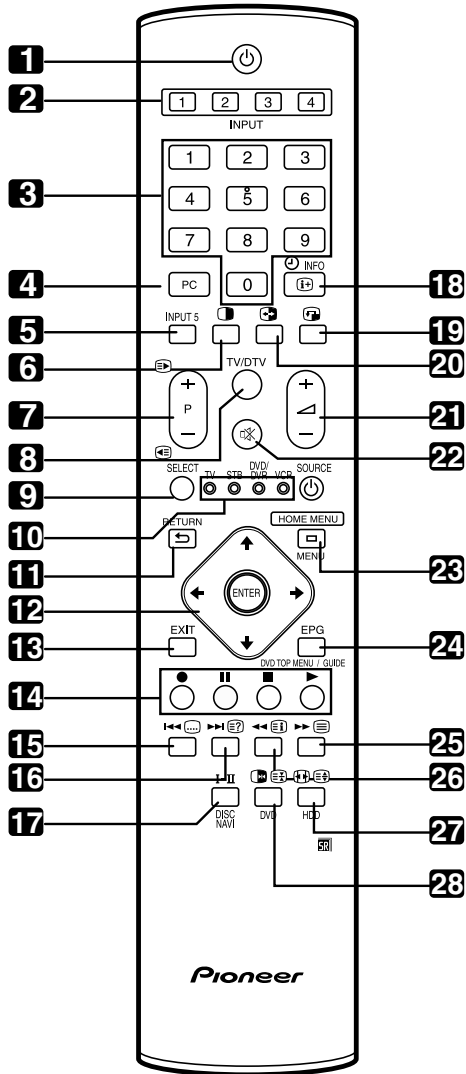

- E 1 Turns on the power to the Plasma Television or places it into the standby mode.
- 2 **INPUT**
Selects an input source of the Plasma Television. (INPUT 1, INPUT 2, INPUT 3, INPUT 4)
- 3 **0 - 9**
TV/External input mode: Selects a channel.
TELETEXT mode: Selects a page.
- 4 **PC**
Selects the PC terminal as an input source.
- 5 **INPUT 5**
Selects INPUT 5 as the input source of the Plasma Television.
- F 6 Switches the screen mode among 2-screen, picture-in-picture, and single-screen.
- 7 **P +/P -**
TV/External input mode: Selects a channel.



TELETEXT mode: Selects a page.

8 **TV/DTV**

Switches between the TV and DTV input modes.

9 **SELECT**

Switches the selection among TV, STB, DVD/DVR, and VCR, so that you can control other equipment in connection, using the supplied remote control unit.

10 **TV, STB, DVD/DVR, VCR**

These indicators show the current selection and status when you control other equipment in connection using the supplied remote control unit.

11 **RETURN**

Restores the previous menu screen.

12

Selects a desired item on the setting screen.

ENTER

Executes a command.

13 **EXIT**

Returns to the normal screen in one step.

14 **Colour (RED/GREEN/YELLOW/BLUE)**

TELETEXT mode: Selects a page.

15

TV/External input mode: Jumps to the Teletext subtitle page.
DTV input mode: Turns subtitle on and off.

16

TELETEXT mode: Displays hidden characters.

17 **I-II**

Sets the sound multiplex mode.

18 **INFO**

TV/External input mode: Displays the channel information.
DTV input mode: Displays the banner information.

19

Moves the location of the small screen when in the picture-in-picture mode.

20

Switches between the two screens when in the 2-screen or picture-in-picture mode.

21

Sets the volume.

22

Mutes the sound.

23 **HOME MENU**

TV/External Input mode: Displays the Menu screen.

24 **EPG**

Display the Electronic Programme Guide.

25

Selects the TELETEXT mode. (all TV image, all TEXT image, TV/TEXT image)

26

TELETEXT mode: Displays an Index page for the CEEFAX/FLOF format. Displays a TOP Over View page for the TOP format.

27

TV/External input mode: Selects the screen size.

TELETEXT mode: Switches Teletext images. (full/upper half/lower half)

28

TV/External input mode: Freezes a frame from a moving image. Press again to cancel the function.


TELETEXT mode: Stops updating Teletext pages. Press again to release the hold mode.

NOTE

• When using the remote control unit, point it at the Plasma Television.

• Front / Rear (PDP-427XA)

Front view
(PDP-427XA)

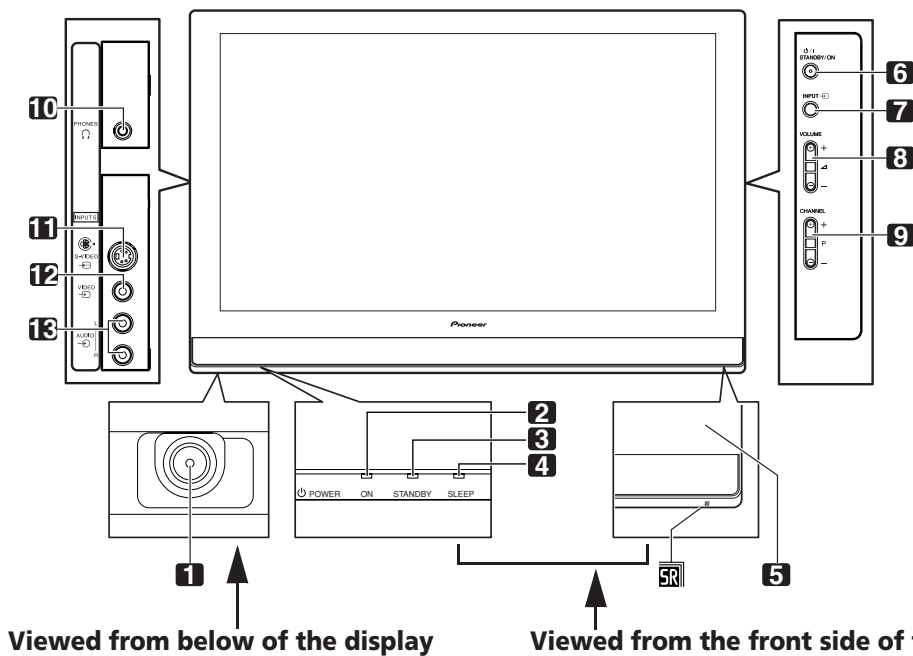


- 1 POWER button
- 2 POWER ON indicator
- 3 STANDBY indicator
- 4 SLEEP indicator
- 5 Remote control sensor

- (Side view)
- 6 STANDBY/ON button
 - 7 INPUT button
 - 8 VOLUME +/- buttons
 - 9 CHANNEL +/- buttons

- 10 PHONES output terminal
- 11 INPUT 5 terminal (S-VIDEO)
- 12 INPUT 5 terminal (VIDEO)
- 13 INPUT 5 terminals (AUDIO)

Rear view
(PDP-427XA)

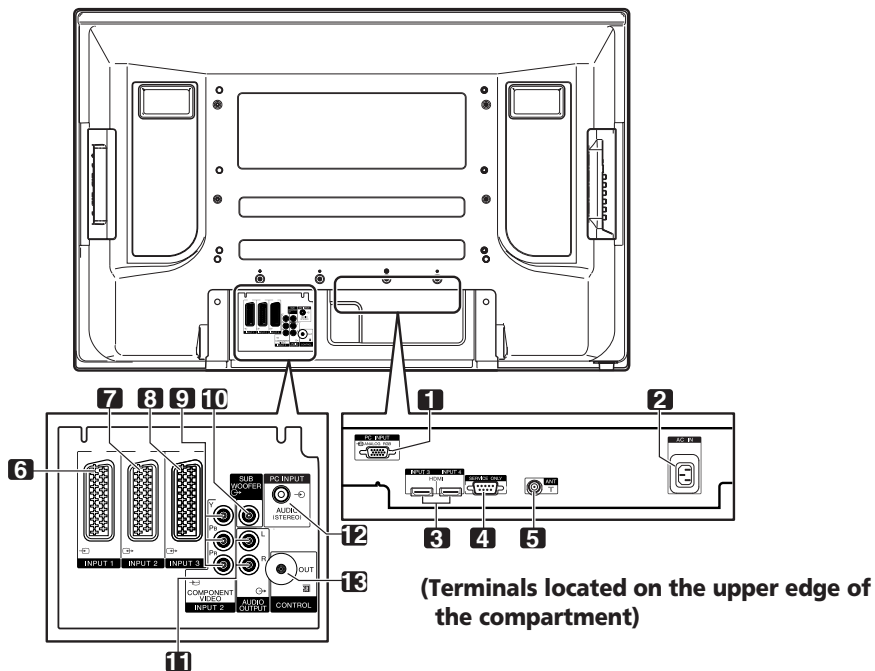

- 1 PC INPUT terminal (ANALOG RGB)
- 2 AC IN terminal
- 3 INPUT 3/INPUT 4 terminals (HDMI)
- 4 RS-232C terminal (used for factory setup)
- 5 ANT (Antenna) input terminal
- 6 INPUT 1 terminal (SCART)
- 7 INPUT 2 terminal (SCART)


- 8 INPUT 3 terminal (SCART)
- 9 INPUT 2 terminal (COMPONENT VIDEO: Y, Pb, Pr)
- 10 SUB WOOFER OUTPUT terminal
- 11 AUDIO OUTPUT terminals
- 12 PC INPUT terminal (AUDIO)
- 13 CONTROL OUT terminal

• PDP-427XA (Remote control unit)

Remote control unit

This section describes the functions of the buttons available when the TV mode has been selected using the **SELECT** button.

For the buttons for controlling other equipment, see "Controlling other equipment using the supplied remote control unit" starting .

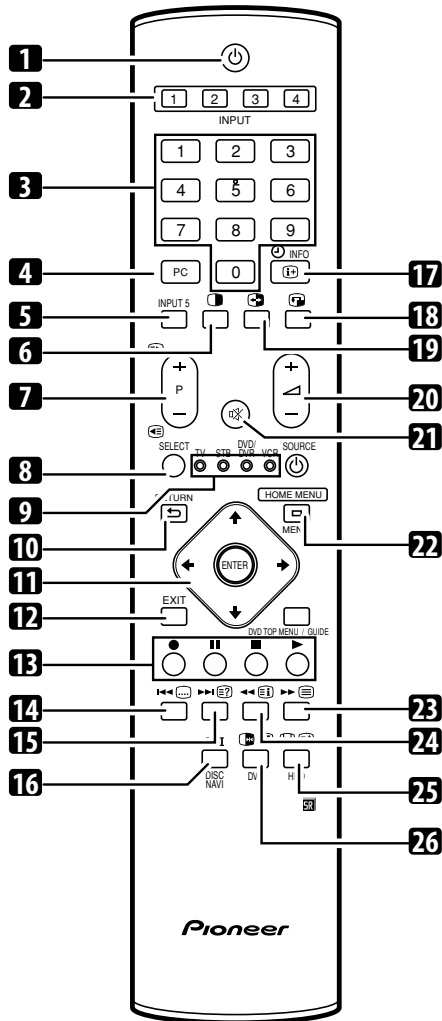

- 1 Turns on the power to the Plasma Television or places it into the standby mode.
- 2 **INPUT**
Selects an input source of the Plasma Television. (INPUT 1, INPUT 2, INPUT 3, INPUT 4)
- 3 **0 - 9**
TV/External input mode: Selects a channel.
TELETEXT mode: Selects a page.
- 4 **PC**
Selects the PC terminal as an input source.
- 5 **INPUT 5**
Selects INPUT 5 as the input source of the Plasma Television.
- 6 Switches the screen mode among 2-screen, picture-in-picture, and single-screen.
- 7 **P+/P-**
TV/External input mode: Selects a channel.
 /
TELETEXT mode: Selects a page.

8 **SELECT**

Switches the selection among TV, STB, DVD/DVR, and VCR, so that you can control other equipment in connection, using the supplied remote control unit.

9 **TV, STB, DVD/DVR, VCR**

These indicators show the current selection and status when you control other equipment in connection using the supplied remote control unit.

10 **RETURN**

Restores the previous menu screen.

11

Selects a desired item on the setting screen.

ENTER

Executes a command.

12 **EXIT**

Returns to the normal screen in one step.

13 **Colour (RED/GREEN/YELLOW/BLUE)**

TELETEXT mode: Selects a page.

14

TV/External input mode: Jumps to the Teletext subtitle page.

15

TELETEXT mode: Displays hidden characters.

16 **I-II**

Sets the sound multiplex mode.

17 **INFO**

TV/External input mode: Displays the channel information.

18

Moves the location of the small screen when in the picture-in-picture mode.

19

Switches between the two screens when in the 2-screen or picture-in-picture mode.

20

Sets the volume.

21

Mutes the sound.

22 **HOME MENU**

TV/External Input mode: Displays the Menu screen.

23

Selects the **TELETEXT mode**.
(all TV image, all TEXT image, TV/TEXT image)

24

TELETEXT mode: Displays an Index page for the CEEFAX/FLOF format. Displays a TOP Over View page for the TOP format.

25

TV/External input mode: Selects the screen size.

TELETEXT mode: Switches Teletext images. (full/upper half/lower half)

26

TV/External input mode: Freezes a frame from a moving image. Press again to cancel the function.


TELETEXT mode: Stops updating Teletext pages. Press again to release the hold mode.

NOTE

When using the remote control unit, point it at the Plasma Television.

• Front (PDP-4270XA)

Plasma television (front)

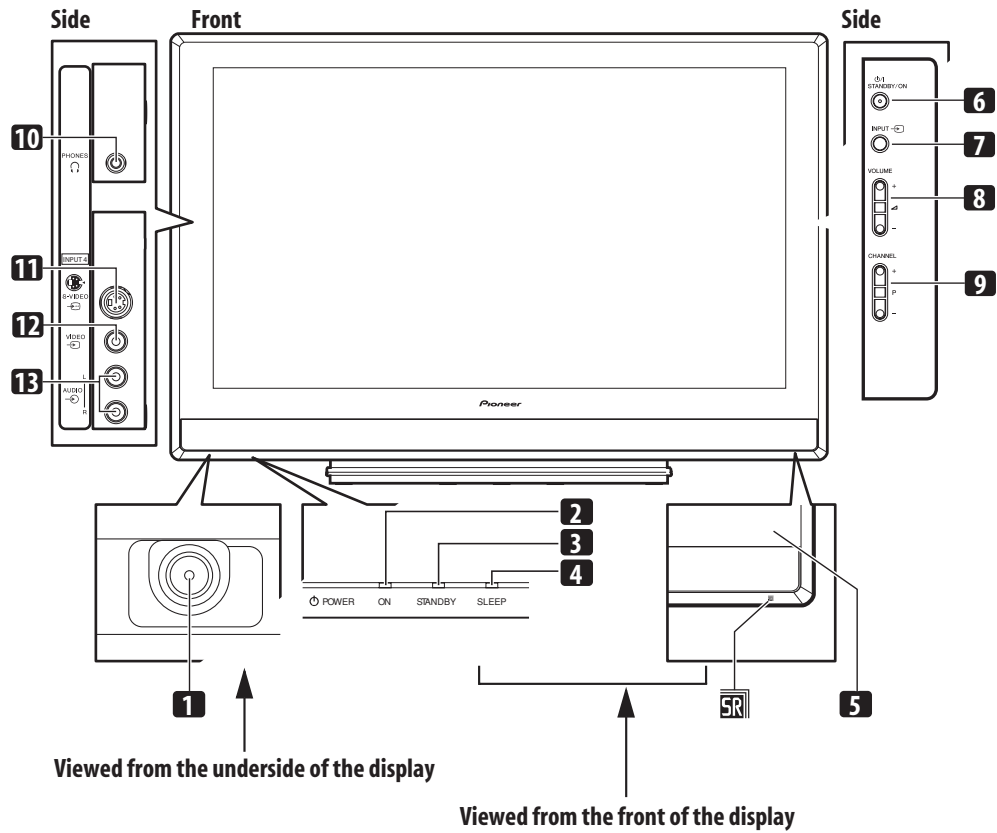


- 1 **POWER** button
- 2 POWER ON indicator
- 3 STANDBY indicator
- 4 SLEEP indicator
- 5 Remote control sensor
- 6 **STANDBY/ON** button
- 7 **INPUT** button
- 8 **VOLUME +/-** buttons
- 9 **CHANNEL +/-** buttons
- 10 PHONES output terminal
- 11 INPUT 4 terminal (S-VIDEO)
- 12 INPUT 4 terminal (VIDEO)
- 13 INPUT 4 terminal (AUDIO)

A • Rear view (PDP-4270XA)

Plasma television (rear)

Rear

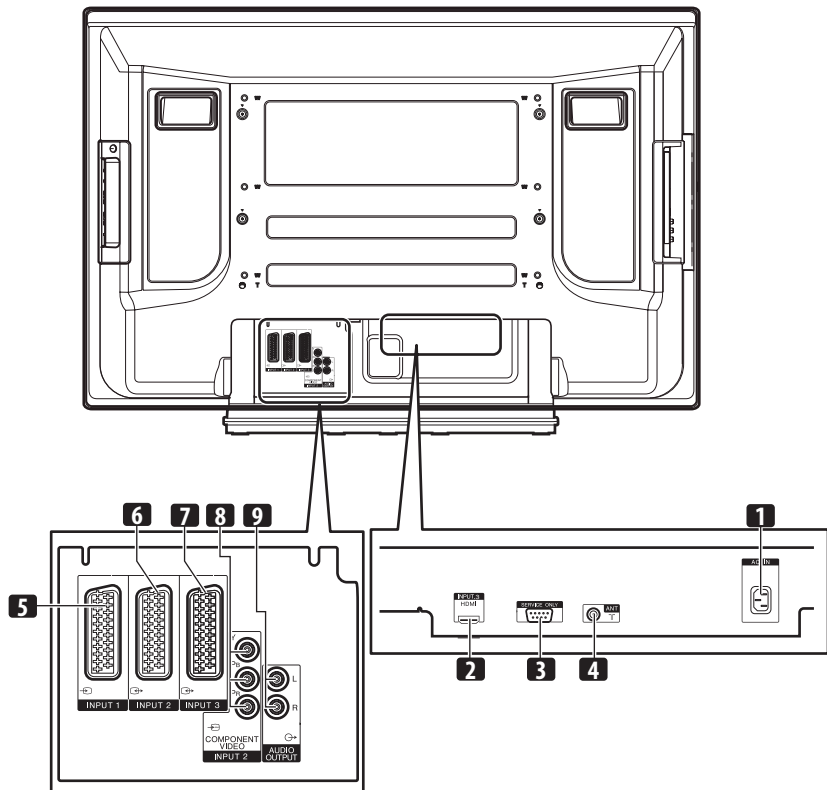


- 1 AC IN terminal
- 2 INPUT 3 terminal (HDMI)
- 3 RS-232C terminal (used for factory setup)
- 4 ANT (Antenna) input terminal
- 5 INPUT 1 terminal (SCART)
- 6 INPUT 2 terminal (SCART)
- 7 INPUT 3 terminal (SCART)
- 8 INPUT 2 terminal (COMPONENT VIDEO: Y, PB, PR)
- 9 AUDIO OUTPUT terminals

• Remote control unit (PDP-4270XA)

Remote control unit

Point the remote control at the plasma television to operate.

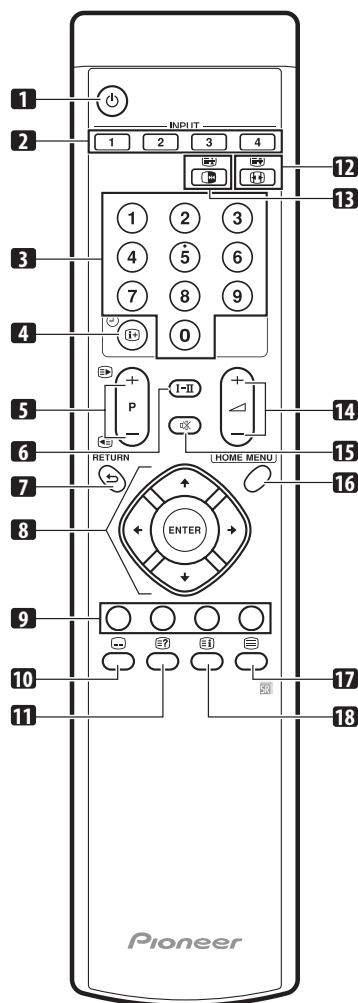

- 1 Turns on the power to the plasma television or places it into the standby mode.
- 2 **INPUT**
Selects an input source of the plasma television. (INPUT 1, INPUT 2, INPUT 3, INPUT 4)
- 3 **0-9**
TV/External input mode: Selects a channel.
TELETEXT mode: Selects a page.
- 4
TV/External input mode: Displays the channel information.

- 5 **P+/P-**
TV/External input mode: Selects a channel.
 /
TELETEXT mode: Selects a page.
- 6 **I-II**
Sets the sound multiplex mode.
- 7 **RETURN**
Restores the previous menu screen.
- 8 / / /
Selects a desired item on the setting screen.
ENTER
Executes a command.
- 9 **Colour (RED/GREEN/YELLOW/BLUE)**
TELETEXT mode: Selects a page.
- 10
TV/External input mode: Jumps to the Teletext subtitle page.
- 11
Displays hidden characters.
- 12 / /
TV/External input mode: Selects the screen size.
 / /
TELETEXT mode: Switches Teletext images. (full/upper half/lower half)
- 13
TV/External input mode: Freezes a frame from a moving image. Press again to cancel the function.

TELETEXT mode: Stops updating Teletext pages. Press again to release the hold mode.
- 14
Sets the volume.
- 15
Mutes the sound.
- 16 **HOME MENU**
TV/External Input mode: Displays the Menu screen.
- 17
Selects the TELETEXT mode (all TV image, all TEXT image, TV/TEXT image).
- 18
TELETEXT mode: Displays an Index page for the CEEFAX/FLOF format. Displays a TOP Over View page for the TOP format.

12. IC INFORMATION

The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


List of IC

SN755870KPZT, PEE002A, R2S11002AFT, R2S11001FT, UPD64015AGM-UEU, AD9985KSTZ-110, SII9023CTU, LTC3414EFE, LTC3412EFE, S-1170B25UC-OTA, S-1170B15UC-OTK, NJU26901E2


SN755870KPZT (42 SCAN A ASSY: IC2701 to IC2706) (42 SCAN B ASSY: IC2801 to IC2806)

• Plasma Display Panel IC

Pin Arrangement (Top view)

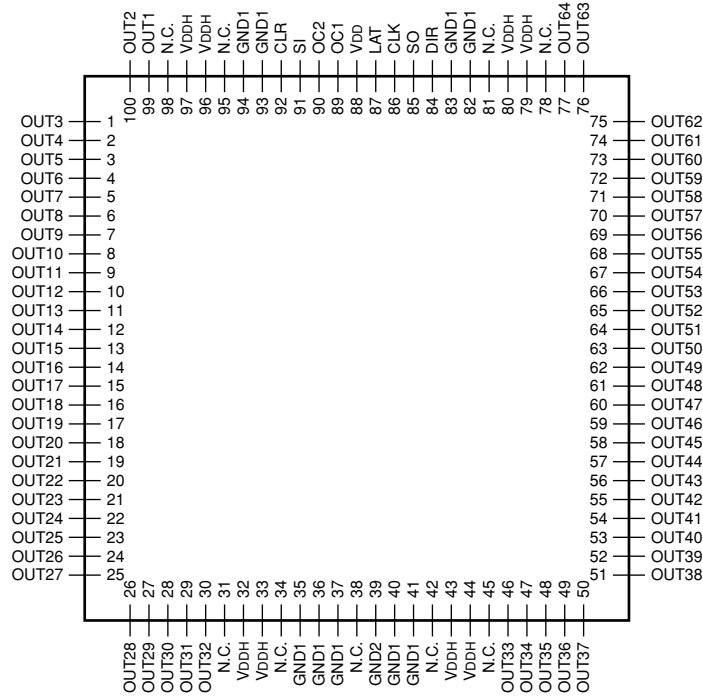

Block Diagram

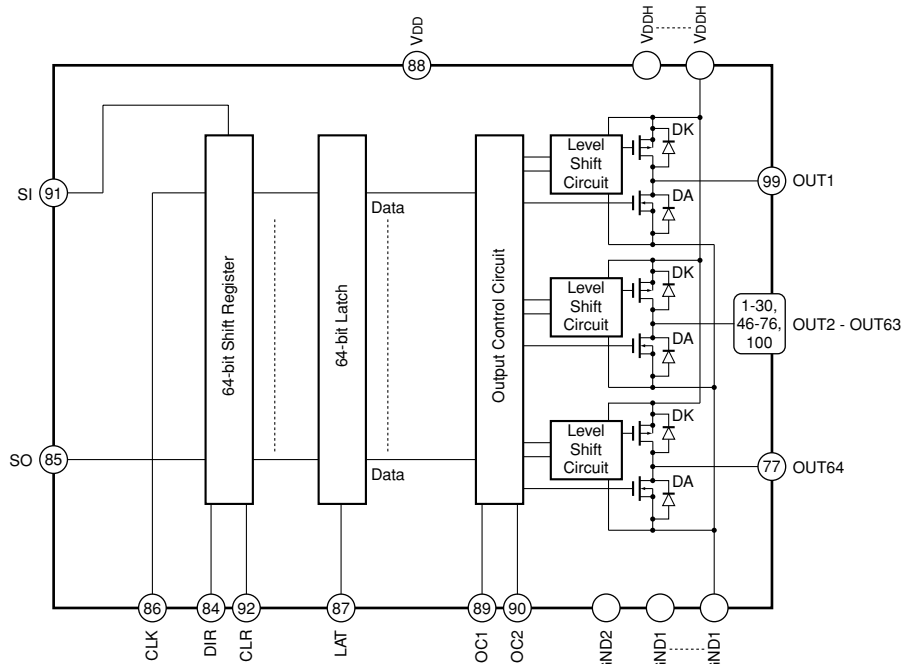

● Pin Function


No.	Pin Name	I/O	Pin Function															
1 - 30	OUT3 - OUT32	O	High-voltage push-pull output															
31	N.C.	–	Not used															
32 - 33	V _{DDH}	–	Power for High-voltage circuit															
34	N.C.	–	Not used															
35 - 37	GND1	–	GND															
38	N.C.	–	Not used															
39	GND2	–	GND															
40 - 41	GND1	–	GND															
42	N.C.	–	Not used															
43 - 44	V _{DDH}	–	Power for High-voltage circuit															
45	N.C.	–	Not used															
46 - 77	OUT33 - OUT64	O	High-voltage push-pull output															
78	N.C.	–	Not used															
79 - 80	V _{DDH}	–	Power for High-voltage circuit															
81	N.C.	–	Not used															
82 - 83	GND1	–	GND															
84	DIR	I	Setting the shift direction of shift-register L : reverse side shift (SO→SI), H : forward side shift (SI→SO)															
85	SO	I/O	Serial data In/Out															
86	CLK	I	Serial clock Input Down-side edge trigger															
87	LAT	I	LAT data Input L : The data of shiftregister is transferred to ouput latch. H : The ouput data of latch is holded.															
88	V _{DD}	–	Power for Logic circuit															
89	OC1	I	Output control Output is controlled by truth table right side.															
90	OC2	I																
<table border="1"> <thead> <tr> <th>OC1</th> <th>OC2</th> <th>OUT</th> </tr> </thead> <tbody> <tr> <td>L</td> <td>L</td> <td>ALL Hi-Z</td> </tr> <tr> <td>L</td> <td>H</td> <td>DATA</td> </tr> <tr> <td>H</td> <td>L</td> <td>ALL L</td> </tr> <tr> <td>H</td> <td>H</td> <td>ALL H</td> </tr> </tbody> </table>				OC1	OC2	OUT	L	L	ALL Hi-Z	L	H	DATA	H	L	ALL L	H	H	ALL H
OC1	OC2	OUT																
L	L	ALL Hi-Z																
L	H	DATA																
H	L	ALL L																
H	H	ALL H																
91	SI	I/O	Serial data In/Out															
92	CLR	I	All output reset CLR terminal : L → normal operation, CLR terminal : H → All output "H"															
93 - 94	GND1	–	GND															
95	N.C.	–	Not used															
96 - 97	V _{DDH}	–	Power for High-voltage circuit															
98	N.C.	–	Not used															
99 - 100	OUT1 - OUT2	O	High-voltage push-pull output															

A

PEE002A (42 ADDRESS ASSY: IC1501)

• LVDS Receiver

● Pin Arrangement (Top view)

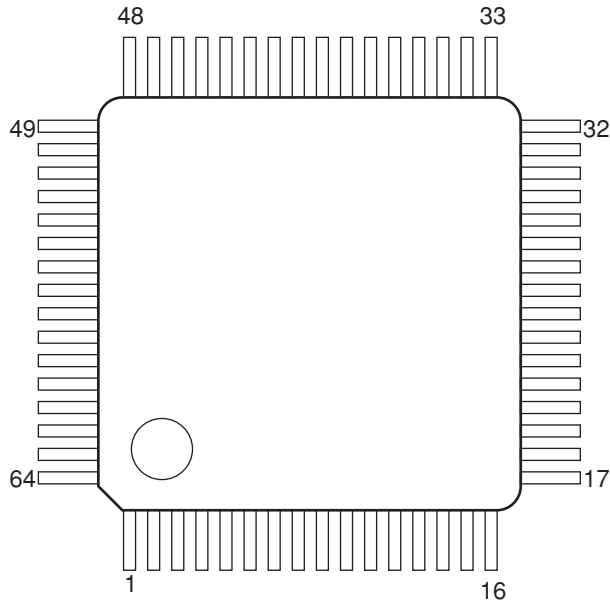

B

C

● Pin Function

No.	I/O Type	Signal	No.	I/O Type	Signal	No.	I/O Type	Signal
1	LRGND		23	VDD		45	SOT4L	HZ
2	bb_silcdhsip_7c19a	RAMP1	24	VDD		46	SOT4L	R_C
3	bb_silcdhsip_7c19a	RAPP1	25	SOT4L	R_E	47	SOT4L	G_C
4	bb_silcdhsip_7c19a	RBMP1	26	SOT4L	G_E	48	SOT4L	B_C
5	bb_silcdhsip_7c19a	RBPP1	27	SOT4L	B_E	49	VDD	
6	LRVDD		28	GND		50	SOT4L	ADRSV2
7	bb_silcdhsip_7c19a	RCMP1	29	SOT4L	ADRSV3	51	SOT4L	R_B
8	bb_silcdhsip_7c19a	RCP1	30	SOT4L	R_D	52	GND	
9	bb_silcdhsip_7c19a	RCLKMP1	31	SOT4L	G_D	53	SOT4L	G_B
10	bb_silcdhsip_7c19a	RCLKPP1	32	SOT4L	B_D	54	SOT4L	B_B
11	bb_silcdhsip_7c19a	RDMP1	33	VDD		55	GND	
12	bb_silcdhsip_7c19a	RDPP1	34	SOT8FL	LE	56	VDD	
13	LRGND		35	GND		57	SOT4L	ADRSV1
14	LPGND		36	SOT12FL	CLKOUT	58	VDD	
15	LPVDD		37	VDD		59	SOT4L	R_A
16	SIBTD	TEST0	38	SOT4L	ADR_B	60	SOT4L	G_A
17	SIBTD	TEST1	39	SOT4L	ADR_D	61	GND	
18	SIBTD	PHSSEL1	40	SOT4L	ADR_U1	62	SOT4L	B_A
19	SIBTD	PHSSEL0	41	SOT4L	ADR_G	63	SOT4L	ADRSV0
20	SIBTD	DIV0	42	SOT4L	LBLK	64	SISTD	OE
21	SIBTD	DIV1	43	SOT4L	HBLK			
22	GND		44	GND				


D

E

F

■ R2S11002AFT (MAIN ASSY: IC4701)
 • AV SW

● **Block Diagram**

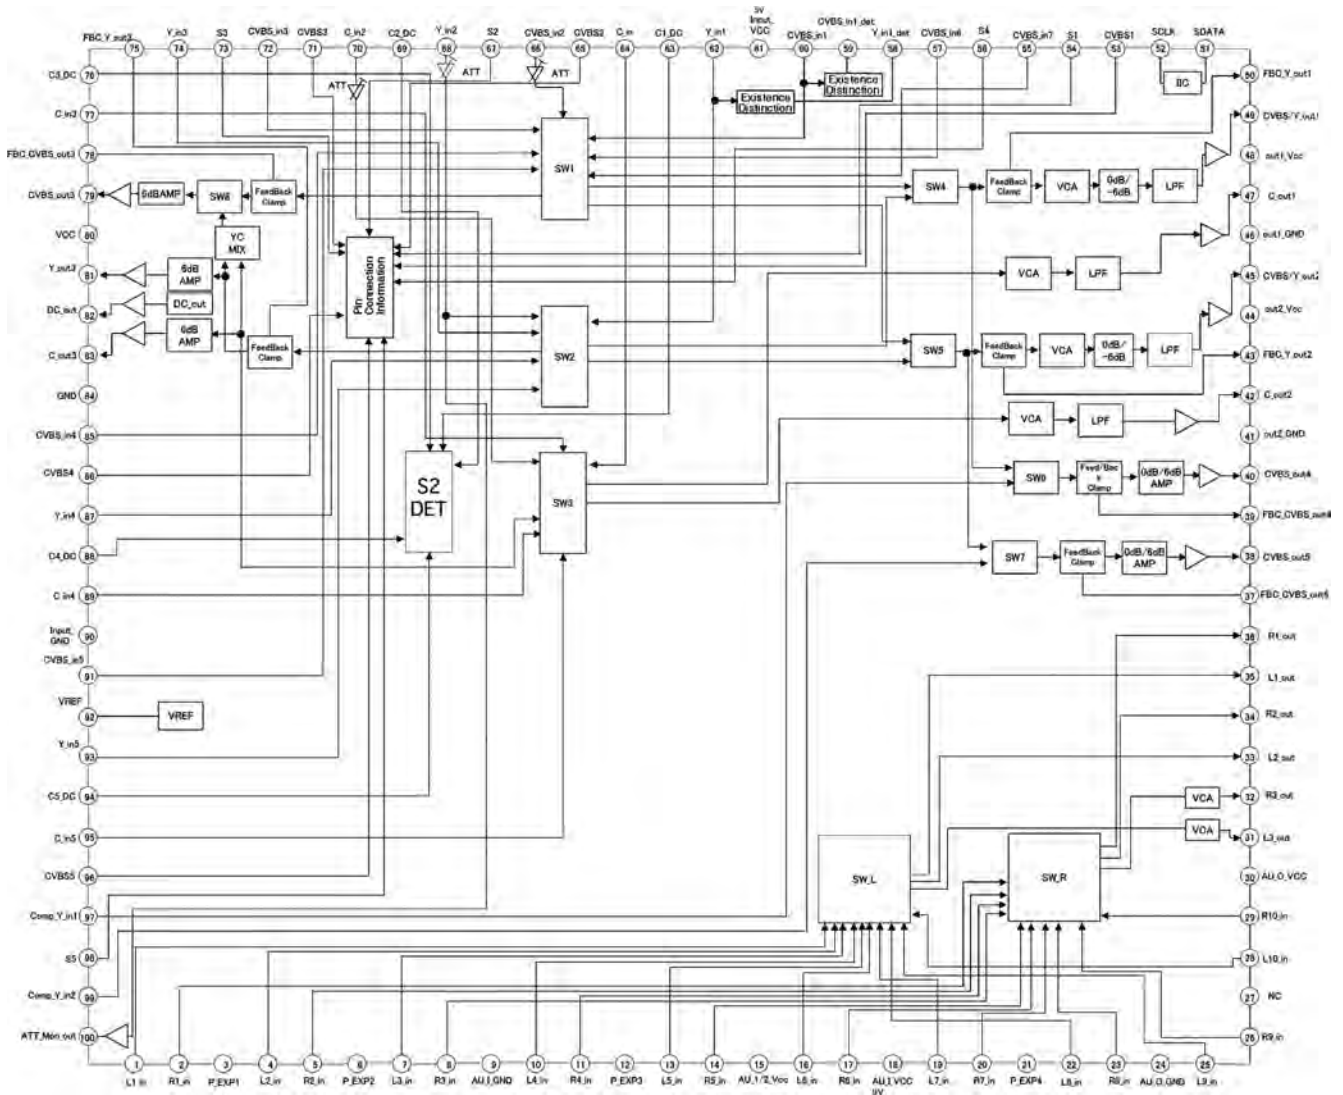

A

R2S11001FT (MAIN ASSY: IC4901)

• Component SW IC

● Block Diagram


B

C


D

E

F

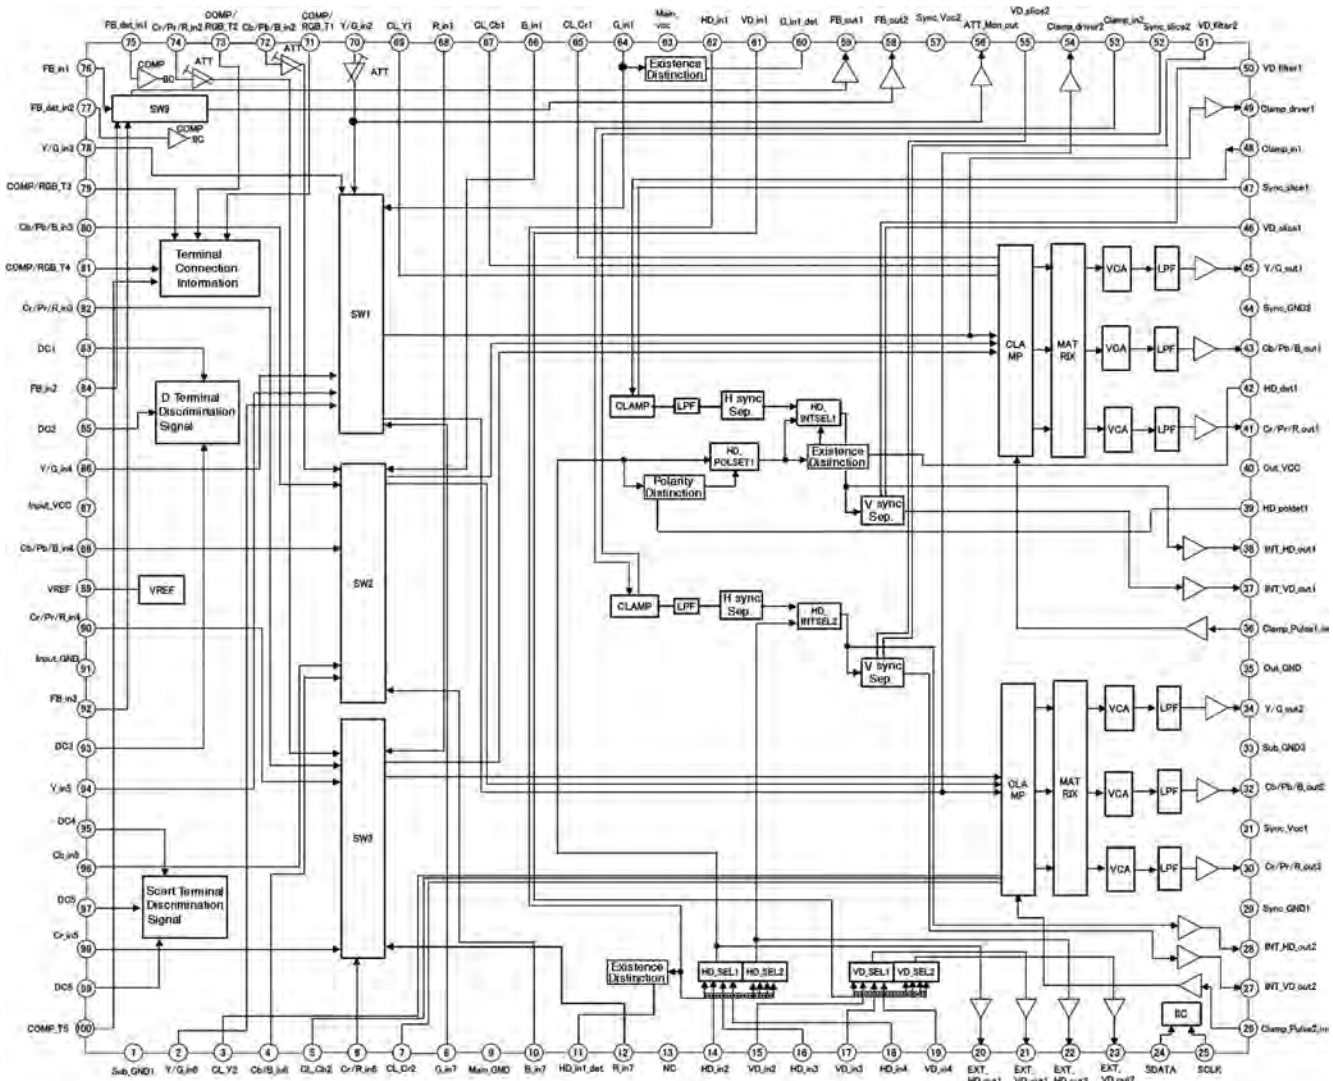

● Block Diagram

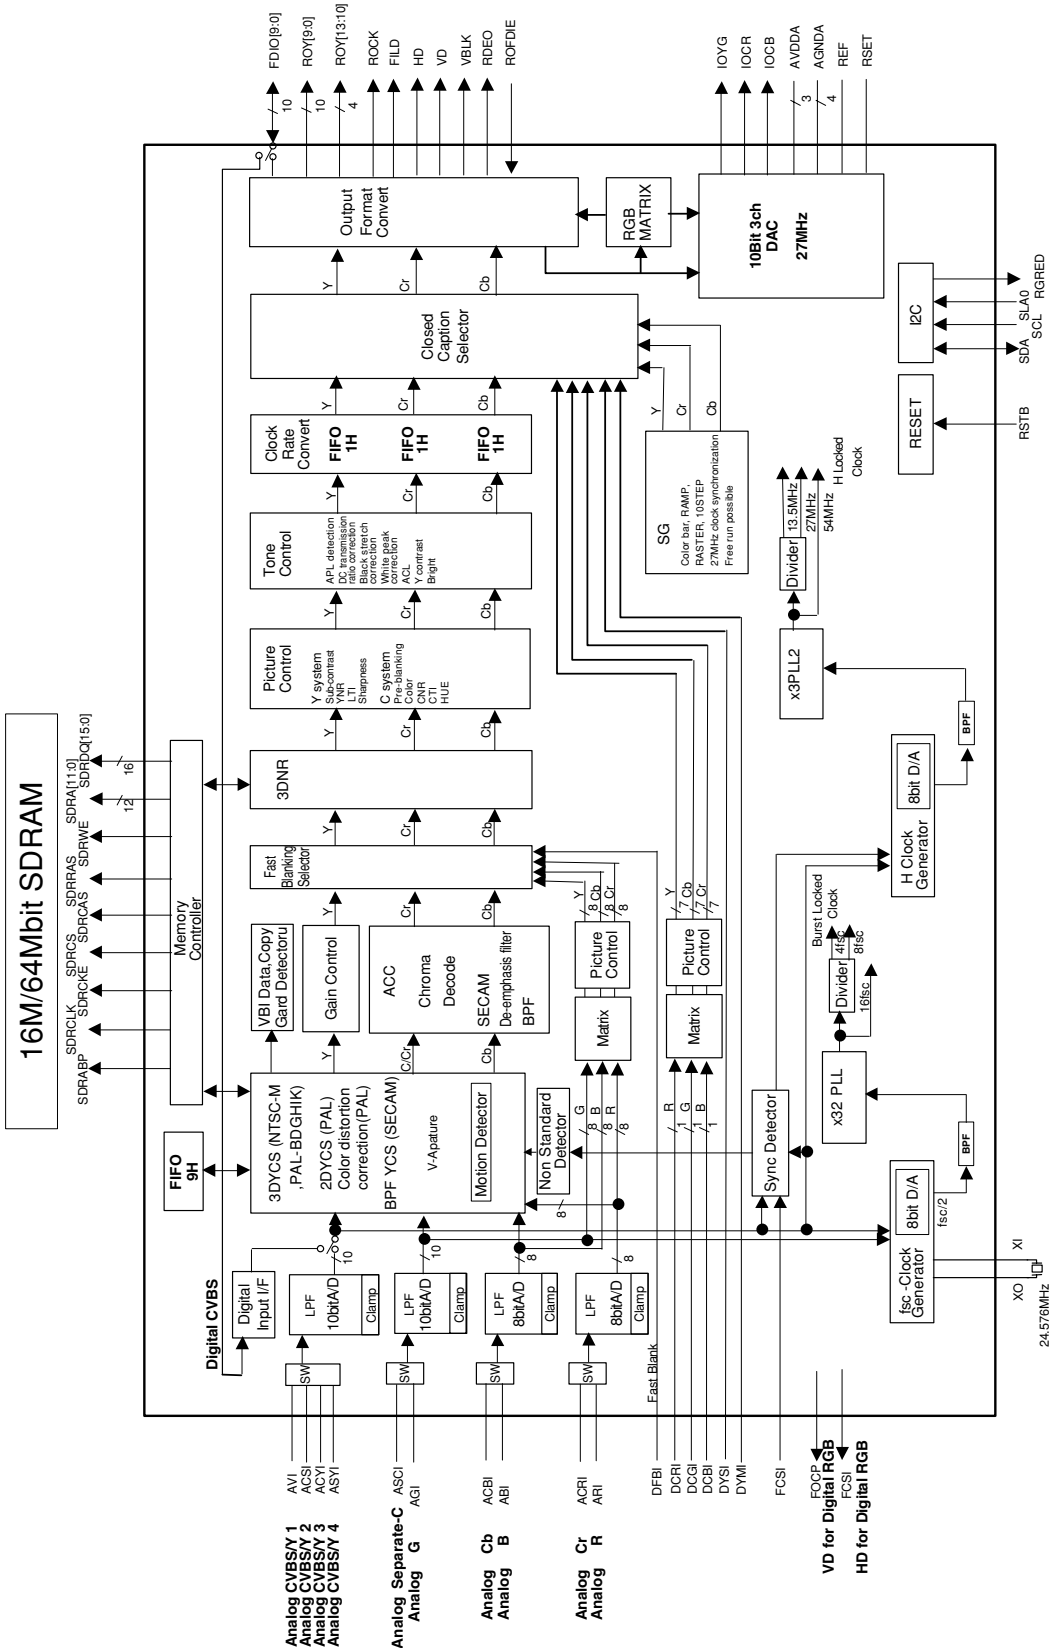

● Pin Function

2.1 Power supply/ground terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
AVDD1	138	–	–	–	Analog 1.5V power supply Connect to the 1.5V power supply. Separate it from the other terminals via a filter.
AVDD3	141	–	–	–	Analog 3.3V power supply Connect to the 3.3V power supply. Separate it from the other terminals via a filter.
	155,156,167,168	–	–	–	Analog 3.3V power supply for ADC. Connect to the 3.3V power supply. Separate it from the other power lines via a filter.
AVDDA	61,64,67	–	–	–	Analog 3.3V power supply for DAC. Connect to the 3.3V power supply. Separate it from the other power lines via a filter.
AGND	143,144,145,175,176	–	–	–	Analog ground
AGNDA	58,63,66,69	–	–	–	Analog ground (for DAC)
DVDD1	16,23,27,32,39,48, 57,70,76,81,92,103, 115,125,133	–	–	–	Digital 1.5V power supply Connect to the 1.5V power supply.
DVDD3	1,11,26,44,53,88,98, 109,120,132	–	–	–	Digital 3.3V power supply Connect to the 3.3V power supply.
DGND	17,24,33,38,45,56, 80,89,93,104,114, 126	–	–	–	Digital ground

2.2 System reset terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
RSTB	74	I	Schmitt	–	System reset input (Active-Low)

A

● Pin Function

2.3 I2C bus interface terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
RGRED	75	O	LVTTTL N-ch open drain	6 mA	I ² C register lead flag output (Active-Low)
SCL	71	I	LVTTTL	Fail-safe	I ² C bus clock input Connect to the SCL line of the system.
SDA	72	I/O	LVTTTL N-ch open drain	Fail-safe 6 mA	I ² C bus data input/output Connect to the SDA line of the system.
SLA0	73	I	LVTTTL	–	I ² C bus slave address selection input (L : B8h/B9h, H : BAh/BBh) Connect to GND when set to low level and to DVDD3 (3.3V) when set to high level.

C

2.4 Terminal for test

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
SCKSET	2	I	LVTTTL	–	Test mode selection (L: normal, H: test mode)
TEST	3	I	LVTTTL	–	Test setting (L: normal, H: test mode)
FCKM	77	I	LVTTTL	–	FCLK8 test mode selection (L: normal, H: test mode)
BCKM	111	I	LVTTTL	–	Test mode selection of BCLK8 terminal. (L: normal, H: test mode)
ATS1	139	I	Analog	–	Analog test input Connect to GND normally.
ATS2	140	I	Analog	–	Analog test input Connect to GND normally.
ATS3	142	I	Analog	–	Analog test input Connect to GND normally.
VLPF1	149	O	Analog	–	Analog test output Connect to GND via a 0.1μF capacitor.
VLPF2	171	O	Analog	–	Analog test output Connect to GND via a 0.1μF capacitor.

Caution: Connect these terminals for test to GND unless otherwise instructed.

F

● Pin Function

2.5 Clock generator terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
XI	55	I	Analog	–	Reference clock input Connect 24.576MHz crystal oscillator.
XO	54	O	Analog	–	Reference clock output Connect 24.576MHz crystal oscillator.
BCLK8	102	I/O	LVTTL 3-state	6 mA	Subsequent stage line lock clock monitor input/output It will become Hi-Z when BCK8OUT (SA1Fh, D5)=0. Normally, set to BCK8OUT=0 and leave it open.

2.6 Terminal for μ PD64031A and μ PD64032 digital connection

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
FCLK8	78	I/O	LVTTL 3-state	6 mA	Front stage burst lock clock input/output It will become Hi-Z when FCK8S[2:0] (SA21h, D6-D4)=000b. Normally, set to FCK8S[2:0]=0 and leave it open.
FCKQ	127	I/O	LVTTL 3-state	3 mA	Sampling clock output for μ PD64031A and μ PD64032 digital connection. It will become Hi-Z when FCKQS[2:0] (SA21h, D2-D0)=000b. Normally, set to FCKQS[2:0]=0 and leave it open.
FOCP	128	I/O	LVTTL 3-state	3 mA	Clamp pulse output for μ PD64031A and μ PD64032 digital connection/timing output (VD) for digital RGB input. It will become Hi-Z when FOCPS[2:0] (SA23h, D2-D0)=000b. Normally, set to FOCPS[2:0]=0 and leave it open.

2.7 Terminal for RGB input

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
DFBI	130	I	LVTTL	–	Fast Blanking signal input for analog RGB input.
DYSI	131	I	LVTTL	–	YS signal input for digital RGB input.
DYMI	134	I	LVTTL	–	YM signal input for digital RGB input.
DCGI	135	I	LVTTL	–	Digital RGB/G signal input
DCBI	136	I	LVTTL	–	Digital RGB/B signal input
DCRI	137	I	LVTTL	–	Digital RGB/R signal input
FCSI	129	I/O	LVTTL 3-state	3 mA	Sync separation signal input/timing output (HD) for RGB input. It will become Hi-Z when FCSIS[2:0] (SA22h, D2-D0)=000b. Normally, set to FCSIS[2:0]=0 and leave it open.

A

● Pin Function

2.8 ADC1 section terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
AVI	148	I	Analog	–	ADC1 composite/Y signal input Input the image signal by cutting the capacity.
ASYI	150	I	Analog	–	ADC1 composite/Y signal input Input the image signal by cutting the capacity.
ACYI	152	I	Analog	–	ADC1 composite/Y signal input Input the image signal by cutting the capacity.
ACSI	154	I	Analog	–	ADC1 composite/Y signal input Input the image signal by cutting the capacity.
VCLY	146	O	Analog	–	ADC1 clamp electric potential Connect to GND via 0.1μF and 10μF capacitors.
VCOM1	147	I	Analog	–	ADC1 in-phase reference voltage Connect to GND via a 0.1μF capacitor.
VRB1	151	I	Analog	–	ADC1 bottom reference voltage Connect to GND via a 0.1μF capacitor.
VRT1	153	I	Analog	–	ADC1 top reference voltage Connect to GND via a 0.1μF capacitor.

2.9 ADC2 section terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
ASCI	158	I	Analog	–	ADC2 separate C signal input Input the image signal by cutting the capacity.
AGI	160	I	Analog	–	ADC2 RGB component G signal input Input the image signal by cutting the capacity.
VRT2	157	I	Analog	–	ADC2 top reference voltage Connect to GND via a 0.1μF capacitor.
VRB2	159	I	Analog	–	ADC2 bottom reference voltage Connect to GND via a 0.1μF capacitor.
VCOM2	161	I	Analog	–	ADC2 in-phase reference voltage Connect to GND via a 0.1μF capacitor.

F

● Pin Function

2.10 ACD3 section terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
ACBI	162	I	Analog	–	ADC3 color difference component Cb signal input Input the image signal by cutting the capacity.
ABI	164	I	Analog	–	ADC3 RGB component B signal input Input the image signal by cutting the capacity.
VRT3	163	I	Analog	–	ADC3 top reference voltage Connect to GND via a 0.1μF capacitor.
VRB3	165	I	Analog	–	ADC3 bottom reference voltage Connect to GND via a 0.1μF capacitor.
VCOM3	166	I	Analog	–	ADC3 in-phase reference voltage Connect to GND via a 0.1μF capacitor.

2.9 ACD4 section terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
ACRI	170	I	Analog	–	ADC4 color difference component Cr signal input Input the image signal by cutting the capacity.
ARI	172	I	Analog	–	ADC3 RGB component R signal input Input the image signal by cutting the capacity.
VCOM4	169	I	Analog	–	ADC4 in-phase reference voltage Connect to GND via a 0.1μF capacitor.
VRB4	173	I	Analog	–	ADC4 bottom reference voltage Connect to GND via a 0.1μF capacitor.
VRT4	174	I	Analog	–	ADC4 top reference voltage Connect to GND via a 0.1μF capacitor.

2.12 DAC section terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
IO-YG	62	O	Analog	–	Color difference component Y/RGB component G output signal. Connect to AGNDA via a 200Ω load resistance.
IO-CR	68	O	Analog	–	Color difference component Cr/RGB component R output signal. Connect to AGNDA via a 200Ω load resistance.
IO-CB	65	O	Analog	–	Color difference component Cb/RGB component B output signal. Connect to AGNDA via a 200Ω load resistance.
REF	59	I	Analog	–	External reference input pin. Supply 1.0V. And, connect to AGNDA via a 0.1μF capacitor.
RSET	60	O	Analog	–	Connect to AGNDA via a 620Ω resistor for external adjustment.

A

● Pin Function

2.13 Digital image input/output terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
FDIO0-FDIO9	112,113,116, 117,118,119, 121,122,123, 124	I/O	LVTTTL 3-state	6 mA	Digital 8/10 bit Cb, Cr output/input at the time of μ PD64031A digital connection. It will become Hi-Z when FDIOS[2:0] (SA22h, D6-D4)=000b. Leave it open when not in use.
ROCK	101	O	LVTTTL 3-state	6 mA	Clock for digital ITU-R BT.656/component output.
ROY0-ROY13	100,99,97,96, 95,94,91,90, 87,86,85,84, 83,82	O	LVTTTL 3-state	6 mA	Digital ITU-R BT.656/component output. Digital RGB component (8 bit) output
ROFDIE	79	I	LVTTTL	—	Image input/output terminal output enable. The state of ROY[13:0], ROCK, HD, VD, VBLK, FILD and RDEO terminals is controlled. L: Output terminal Hi-Z, H: Output enable Normally, pull up to 3.3V.

2.14 timing output terminal

Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
HD	105	O	LVTTTL 3-state	3 mA	Horizontal sync signal output
VD	106	O	LVTTTL 3-state	3 mA	Vertical sync signal output
VBLK	107	O	LVTTTL 3-state	3 mA	V blanking output
FILD	108	O	LVTTTL 3-state	3 mA	Field output
RDEO	110	O	LVTTTL 3-state	3 mA	Effective pixel range output

F

● Pin Function

2.15 Memory interface terminal


Acronyms	Terminal number	I/O	Level	Buffer type PU/PD [kΩ]	Functions
SDRABP	4	O	LVTTTL 3-state	3 mA	All bank pre-charge output for external memory (Active-High)
SDRCLK	25	O	LVTTTL 3-state	9 mA	Clock output for external memory
SDRCKE	21	O	LVTTTL 3-state	3 mA	Clock enable output for external memory (Active-High)
SDRCS	20	O	LVTTTL 3-state	3 mA	Chip select output for external memory (Active-Low)
SDRCAS	28	O	LVTTTL 3-state	3 mA	Column address strobe output for external memory (Active-Low)
SDRRAS	22	O	LVTTTL 3-state	3 mA	Low address strobe output for external memory (Active-Low)
SDRWE	29	O	LVTTTL 3-state	3 mA	Write enable output for external memory (Active-Low)
SDRA0 -SDRA11	19,18,15,14, 13,12,10,9,8, 7,6,5	O	LVTTTL 3-state	3 mA	Address output for external memory Insert a damping resistor of approximately 100Ω, and connect to the SDRAM address terminal.
SDRDQ0 -SDRDQ15	51,49,46,42, 40,36,34,30, 31,35,37,41, 43,47,50,52	I/O	LVTTTL 3-state	6 mA	Data input/output for external memory.

A

AD9985KSTZ-110 (MAIN ASSY: IC5301)

• ADC

• Pin Arrangement (Top view)

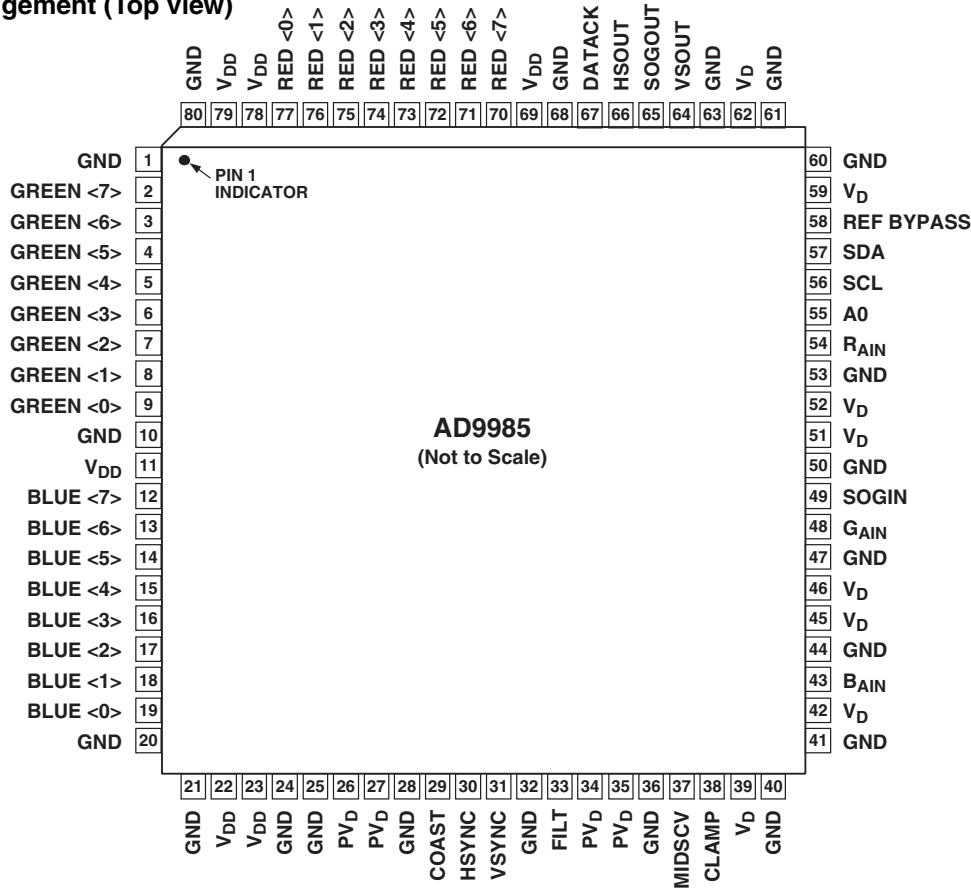


B

C

D

• Block Diagram

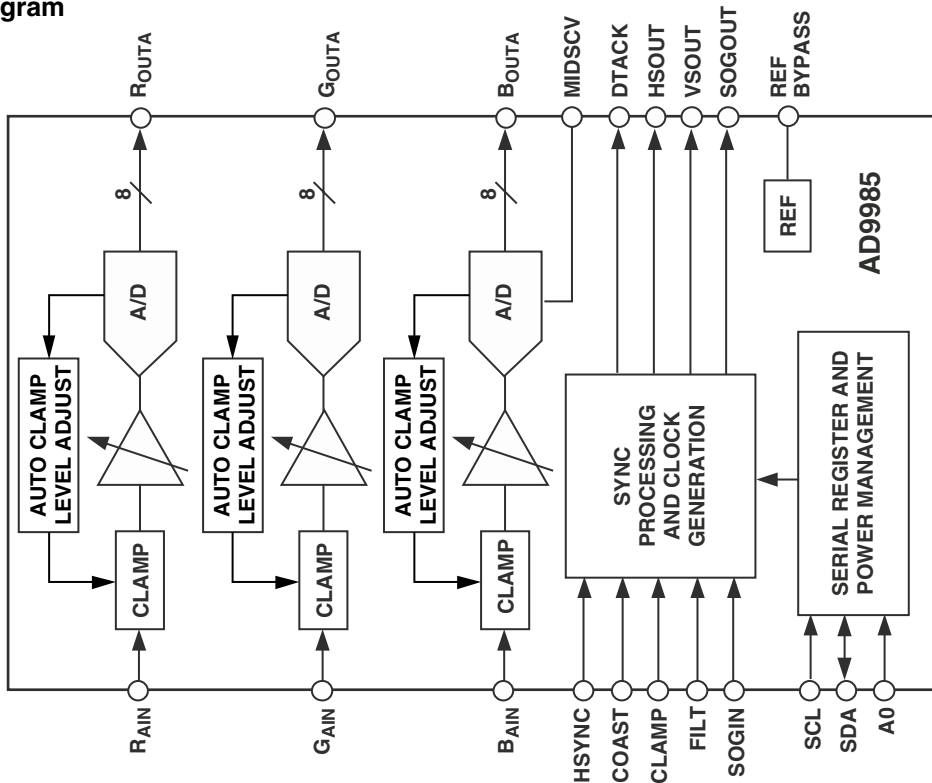

E

F

● Pin Function

Pin Type	Mnemonic	Function	Value	Pin No.
Inputs	R _{AIN}	Analog Input for Converter R	0.0 V to 1.0V	54
	G _{AIN}	Analog Input for Converter G	0.0 V to 1.0V	48
	B _{AIN}	Analog Input for Converter B	0.0 V to 1.0V	43
	HSYNC	Horizontal SYNC Input	3.3 V CMOS	30
	VSYNC	Vertical SYNC Input	3.3 V CMOS	31
	SOGIN	Input for Sync-on-Green	0.0 V to 1.0 V	49
	CLAMP	Clamp Input (External CLAMP Signal)	3.3 V CMOS	38
	COAST	PLL COAST Signal Input	3.3 V CMOS	29
Outputs	Red [7:0]	Outputs of Converter Red, Bit 7 is the MSB	3.3 V CMOS	70–77
	Green [7:0]	Outputs of Converter Green, Bit 7 is the BSB	3.3 V CMOS	2–9
	Blue [7:0]	Outputs of Converter Blue, Bit 7 is the BSB	3.3 V CMOS	12–19
	DATAACK	Data Output Clock	3.3 V CMOS	67
	HSOUT	HSYNC Output (Phase-Aligned with DATAACK)	3.3 V CMOS	66
	VSOUT	VSYNC Output (Phase-Aligned with DATAACK)	3.3 V CMOS	64
	SOGOUT	Sync-on-Green Slicer Output	3.3 V CMOS	65
References	REF BYPASS	Internal Reference Bypass	1.25 V	58
	MIDSCV	Internal Midscale Voltage Bypass		37
	FILT	Connection for External Filter Components for Internal PLL		33
Power Supply	V _D	Analog Power Supply	3.3 V	39, 42, 45, 46, 51, 52, 59, 62
	V _{DD}	Output Power Supply	3.3 V	11, 22, 23, 69, 78, 79
	PV _D	PLL Power Supply	3.3 V	26, 27, 34, 35
	GND	Ground	0 V	1, 10, 20, 21, 24, 25, 28, 32, 36, 40, 41, 44, 47, 50, 53, 60, 61, 63, 68, 80
Control	SDA	Serial Port Data I/O	3.3 V CMOS	57
	SCL	Serial Port Data Clock (100 kHz Maximum)	3.3 V CMOS	56
	A0	Serial Port Address Input 1	3.3 V CMOS	55

A

● Pin Function

Pin Name	Function
OUTPUTS	
HSOUT	Horizontal Sync Output A reconstructed and phase-aligned version of the Hsync input. Both the polarity and duration of this output can be programmed via serial bus registers. By maintaining alignment with DATAACK and Data, data timing with respect to horizontal sync can always be determined.
VSOUT	Vertical Sync Output A reconstructed and phase-aligned version of the video Vsync. The polarity of this output can be controlled via a serial bus bit. The placement and duration in all modes is set by the graphics transmitter.
SOGOUT	Sync-On-Green Slicer Output This pin outputs either the signal from the Sync-on-Green slicer comparator or an unprocessed but delayed version of the Hsync input. See the Sync Processing Block Diagram to view how this pin is connected. (Note: Besides slicing off SOG, the output from this pin gets no other additional processing on the AD9985. Vsync separation is performed via the sync separator.)
SERIAL PORT (2-Wire)	
SDA	Serial Port Data I/O
SCL	Serial Port Data Clock
A0	Serial Port Address Input 1
For a full description of the 2-wire serial register and how it works, refer to the 2-wire serial control port section.	
DATA OUTPUTS	
RED	Data Output, Red Channel
GREEN	Data Output, Green Channel
BLUE	Data Output, Blue Channel
The main data outputs. Bit 7 is the MSB. The delay from pixel sampling time to output is fixed. When the sampling time is changed by adjusting the PHASE register, the output timing is shifted as well. The DATAACK and HSOUT outputs are also moved, so the timing relationship among the signals is maintained. For exact timing information.	
DATA CLOCK OUTPUT	
DATAACK	Data Output Clock The main clock output signal used to strobe the output data and HSOUT into external logic. It is produced by the internal clock generator and is synchronous with the internal pixel sampling clock. When the sampling time is changed by adjusting the PHASE register, the output timing is shifted as well. The Data, DATAACK, and HSOUT outputs are all moved, so the timing relationship among the signals is maintained.
INPUTS	
R _{AIN}	Analog Input for Red Channel
G _{AIN}	Analog Input for Green Channel
B _{AIN}	Analog Input for Blue Channel
High impedance inputs that accept the Red, Green, and Blue channel graphics signals, respectively. (The three channels are identical, and can be used for any colors, but colors are assigned for convenient reference.) They accommodate input signals ranging from 0.5 V to 1.0 V full scale. Signals should be ac-coupled to these pins to support clamp operation.	
HSYNC	Horizontal Sync Input This input receives a logic signal that establishes the horizontal timing reference and provides the frequency reference for pixel clock generation. The logic sense of this pin is controlled by serial Register 0EH Bit 6 (Hsync Polarity). Only the leading edge of Hsync is active; the trailing edge is ignored. When Hsync Polarity = 0, the falling edge of Hsync is used. When Hsync Polarity = 1, the rising edge is active. The input includes a Schmitt trigger for noise immunity, with a nominal input threshold of 1.5 V.
VSYNC	Vertical Sync Input The input for vertical sync.

F


● Pin Function

Pin Name	Function
SOGIN	<p>Sync-on-Green Input</p> <p>This input is provided to assist with processing signals with embedded sync, typically on the Green channel. The pin is connected to a high speed comparator with an internally generated threshold. The threshold level can be programmed in 10 mV steps to any voltage between 10 mV and 330 mV above the negative peak of the input signal. The default voltage threshold is 150 mV. When connected to an ac-coupled graphics signal with embedded sync, it will produce a noninverting digital output on SOGOUT. (This is usually a composite sync signal, containing both vertical and horizontal sync information that must be separated before passing the horizontal sync signal to Hsync.) When not used, this input should be left unconnected. For more details on this function and how it should be configured, refer to the Sync-on-Green section.</p>
CLAMP	<p>External Clamp Input</p> <p>This logic input may be used to define the time during which the input signal is clamped to ground. It should be exercised when the reference dc level is known to be present on the analog input channels, typically during the back porch of the graphics signal. The CLAMP pin is enabled by setting control bit Clamp Function to 1 (Register 0FH, Bit 7, default is 0). When disabled, this pin is ignored and the clamp timing is determined internally by counting a delay and duration from the trailing edge of the Hsync input. The logic sense of this pin is controlled by Clamp Polarity Register 0FH, Bit 6. When not used, this pin must be grounded and Clamp Function programmed to 0.</p>
COAST	<p>Clock Generator Coast Input (Optional)</p> <p>This input may be used to cause the pixel clock generator to stop synchronizing with Hsync and continue producing a clock at its current frequency and phase. This is useful when processing signals from sources that fail to produce horizontal sync pulses during the vertical interval. The COAST signal is generally not required for PC-generated signals. The logic sense of this pin is controlled by Coast Polarity (Register 0FH, Bit 3). When not used, this pin may be grounded and Coast Polarity programmed to 1, or tied HIGH (to V_D through a 10 k resistor) and Coast Polarity programmed to 0. Coast Polarity defaults to 1 at power-up.</p>
REF BYPASS	<p>Internal Reference BYPASS</p> <p>Bypass for the internal 1.25 V band gap reference. It should be connected to ground through a 0.1 μF capacitor. The absolute accuracy of this reference is $\pm 4\%$, and the temperature coefficient is ± 50 ppm, which is adequate for most AD9985 applications. If higher accuracy is required, an external reference may be employed instead.</p>
MIDSCV	<p>Midscale Voltage Reference BYPASS</p> <p>Bypass for the internal midscale voltage reference. It should be connected to ground through a 0.1 μF capacitor. The exact voltage varies with the gain setting of the Blue channel.</p>
FILT	<p>External Filter Connection</p> <p>For proper operation, the pixel clock generator PLL requires an external filter. Connect the filter shown in Figure to this pin. For optimal performance, minimize noise and parasitics on this node.</p>
POWER SUPPLY	
V_D	<p>Main Power Supply</p> <p>These pins supply power to the main elements of the circuit. They should be filtered and as quiet as possible.</p>
V_{DD}	<p>Digital Output Power Supply</p> <p>A large number of output pins (up to 25) switching at high speed (up to 110 MHz) generates a lot of power supply transients (noise). These supply pins are identified separately from the V_D pins so special care can be taken to minimize output noise transferred into the sensitive analog circuitry. If the AD9985 is interfacing with lower voltage logic, V_{DD} may be connected to a lower supply voltage (as low as 2.5 V) for compatibility.</p>
PV_D	<p>Clock Generator Power Supply</p> <p>The most sensitive portion of the AD9985 is the clock generation circuitry. These pins provide power to the clock PLL and help the user design for optimal performance. The designer should provide quiet, noise-free power to these pins.</p>
GND	<p>Ground</p> <p>The ground return for all circuitry on-chip. It is recommended that the AD9985 be assembled on a single solid ground plane, with careful attention given to ground current paths.</p>


SiI9023CTU (MAIN ASSY: IC5401)

• HDMI Rx

• Pin Arrangement (Top view)

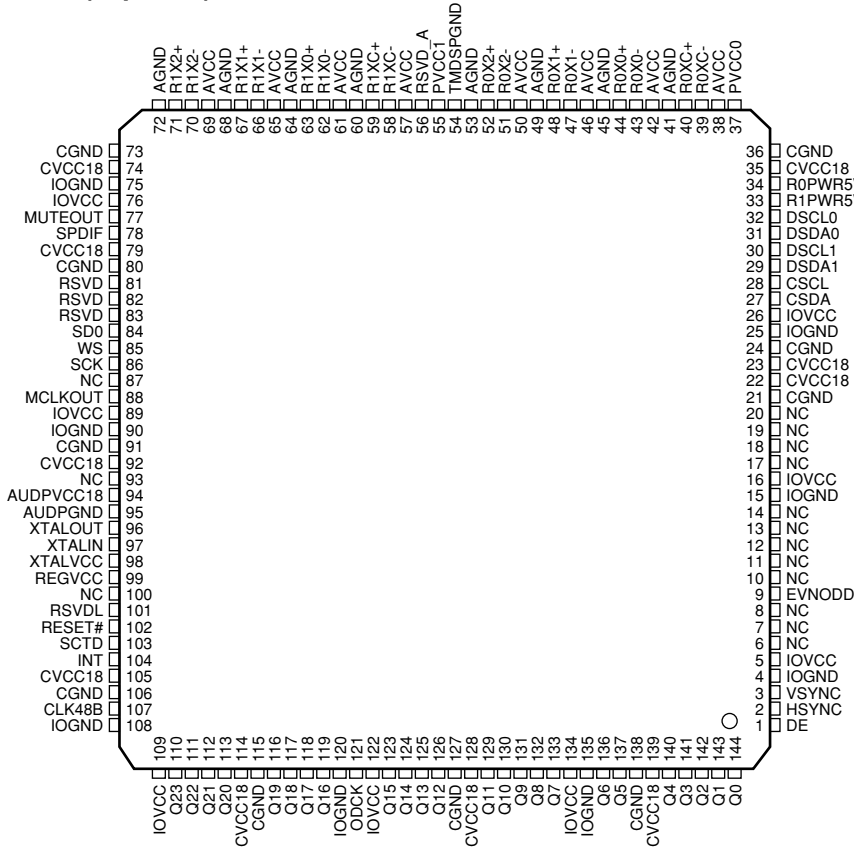

• Block Diagram

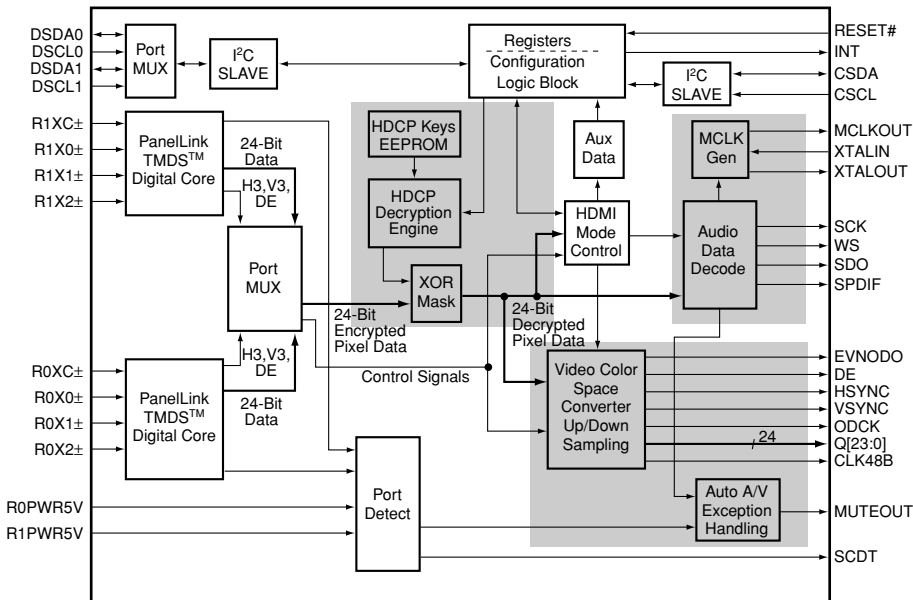

● Pin Function

No.	Pin Name	I/O	Pin Function
1	DE	O	Data enable
2	HSYNC	O	H. sync. output control
3	VSYSNC	O	V. sync. output control
4	IOGND	–	I/O GND
5	IOVCC	–	I/O VCC
6	NC	–	Non connection
7	NC	–	Non connection
8	NC	–	Non connection
9	EVNODD	O	EVEN/ODD field indicator
10	NC	–	Non connection
11	NC	–	Non connection
12	NC	–	Non connection
13	NC	–	Non connection
14	NC	–	Non connection
15	IOGND	–	I/O GND
16	IOVCC	–	I/O VCC
17	NC	–	Non connection
18	NC	–	Non connection
19	NC	–	Non connection
20	NC	–	Non connection
21	CGND	–	Digital logic GND
22	CVCC18	–	Digital logic VCC (1.8 V)
23	CVCC18	–	Digital logic VCC (1.8 V)
24	CGND	–	Digital logic GND
25	IOGND	–	I/O GND
26	IOVCC	–	I/O VCC
27	CSDA	I/O	Configuration I2C data
28	CSCL	I	Configuration I2C clock
29	DSDA1	I/O	DDC I2C data for port 1
30	DSCL1	I	DDC I2C clock for port 1
31	DSDA0	I/O	DDC I2C data for port 0
32	DSCL0	I	DDC I2C clock for port 0
33	R1PWR5V	I	Port 1 transfer detection
34	R0PWR5V	I	Port 0 transfer detection
35	CVCC18	–	Digital logic VCC (1.8 V)
36	CGND	–	Digital logic GND
37	PVCC0	–	TMDS port 0 PLL VCC
38	AVCC	–	TMDS analog VCC
39	R0XC-	I	TMDS input clock
40	R0XC+	I	TMDS input clock
41	AGND	–	TMDS analog GND
42	AVCC	–	TMDS analog VCC
43	R0X0-	I	TMDS input data
44	R0X0+	I	TMDS input data
45	AGND	–	TMDS analog GND
46	AVCC	–	TMDS analog VCC
47	R0X1-	I	TMDS input data
48	R0X1+	I	TMDS input data
49	AGND	–	TMDS analog GND
50	AVCC	–	TMDS analog VCC

A

● Pin Function


No.	Pin Name	I/O	Pin Function
51	R0X2-	I	TMDS input data
52	R0X2+	I	TMDS input data
53	AGND	-	TMDS analog GND
54	TMDSPGND	-	TMDS PLL GND
55	PVCC1	-	TMDS port 1 PLL VCC
56	RSVD_A	-	Reserved
57	AVCC	-	TMDS analog VCC
58	R1XC-	I	TMDS input clock
59	R1XC+	I	TMDS input clock
60	AGND	-	TMDS analog GND
61	AVCC	-	TMDS analog VCC
62	R1X0-	I	TMDS input data
63	R1X0+	I	TMDS input data
64	AGND	-	TMDS analog GND
65	AVCC	-	TMDS analog VCC
66	R1X1-	I	TMDS input data
67	R1X1+	I	TMDS input data
68	AGND	-	TMDS analog GND
69	AVCC	-	TMDS analog VCC
70	R1X2-	I	TMDS input data
71	R1X2+	I	TMDS input data
72	AGND	-	TMDS analog GND
73	CGND	-	Digital logic GND
74	CVCC18	-	Digital logic VCC (1.8 V)
75	IOGND	-	I/O GND
76	IOVCC	-	I/O VCC
77	MUTEOUT	O	Audio output mute
78	SPDIF	O	S/PDIF audio output
79	CVCC18	-	Digital logic VCC (1.8 V)
80	CGND	-	Digital logic GND
81	RSVD	O	-
82	RSVD	O	-
83	RSVD	O	-
84	SD0	O	I2C serial data output
85	WS	O	I2C word select output
86	SCK	O	I2C serial clock output
87	NC	-	Non connection
88	MCLKOUT	O	Audio master clock output
89	IOVCC	-	I/O VCC
90	IOGND	-	I/O GND
91	CGND	-	Digital logic GND
92	CVCC18	-	Digital logic VCC (1.8 V)
93	NC	-	Non connection
94	AUDPVCC18	-	ACR PLL VCC
95	AUDPGND	-	ACR PLL GND
96	XTALOUT	O	Crystal clock output
97	XTALIN	I	Crystal clock input
98	XTALVCC	-	ACR PLL crystal input VCC
99	REGVCC	-	ACR PLL regulator VCC
100	NC	-	Non connection

● Pin Function


No.	Pin Name	I/O	Pin Function
101	RSVDL	I	Reserved, Low fixing
102	RESET#	I	Reset, active Low
103	SCTD	O	Display active video with the HDMI input port
104	INT	O	Interruption output
105	CVCC18	–	Digital logic VCC (1.8 V)
106	CGND	–	Digital logic GND
107	CLK48B	I/O	Data bus latch enable
108	IOGND	–	I/O GND
109	IOVCC	–	I/O VCC
110	Q23	O	24-bit output, pixel data bus
111	Q22	O	24-bit output, pixel data bus
112	Q21	O	24-bit output, pixel data bus
113	Q20	O	24-bit output, pixel data bus
114	CVCC18	–	Digital logic VCC (1.8 V)
115	CGND	–	Digital logic GND
116	Q19	O	24-bit output, pixel data bus
117	Q18	O	24-bit output, pixel data bus
118	Q17	O	24-bit output, pixel data bus
119	Q16	O	24-bit output, pixel data bus
120	IOGND	–	I/O GND
121	ODCK	O	Output data clock
122	IOVCC	–	I/O VCC
123	Q15	O	24-bit output, pixel data bus
124	Q14	O	24-bit output, pixel data bus
125	Q13	O	24-bit output, pixel data bus
126	Q12	O	24-bit output, pixel data bus
127	CGND	–	Digital logic GND
128	CVCC18	–	Digital logic VCC (1.8 V)
129	Q11	O	24-bit output, pixel data bus
130	Q10	O	24-bit output, pixel data bus
131	Q9	O	24-bit output, pixel data bus
132	Q8	O	24-bit output, pixel data bus
133	Q7	O	24-bit output, pixel data bus
134	IOVCC	–	I/O VCC
135	IOGND	–	I/O GND
136	Q6	O	24-bit output, pixel data bus
137	Q5	O	24-bit output, pixel data bus
138	CGND	–	Digital logic GND
139	CVCC18	–	Digital logic VCC (1.8 V)
140	Q4	O	24-bit output, pixel data bus
141	Q3	O	24-bit output, pixel data bus
142	Q2	O	24-bit output, pixel data bus
143	Q1	O	24-bit output, pixel data bus
144	Q0	O	24-bit output, pixel data bus

LTC3414EFE (MAIN ASSY: IC4102)
• Regulator IC

● **Pin Arrangement (Top view)**

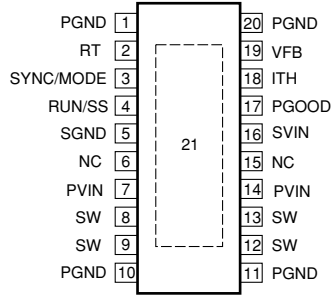

● **Block Diagram**

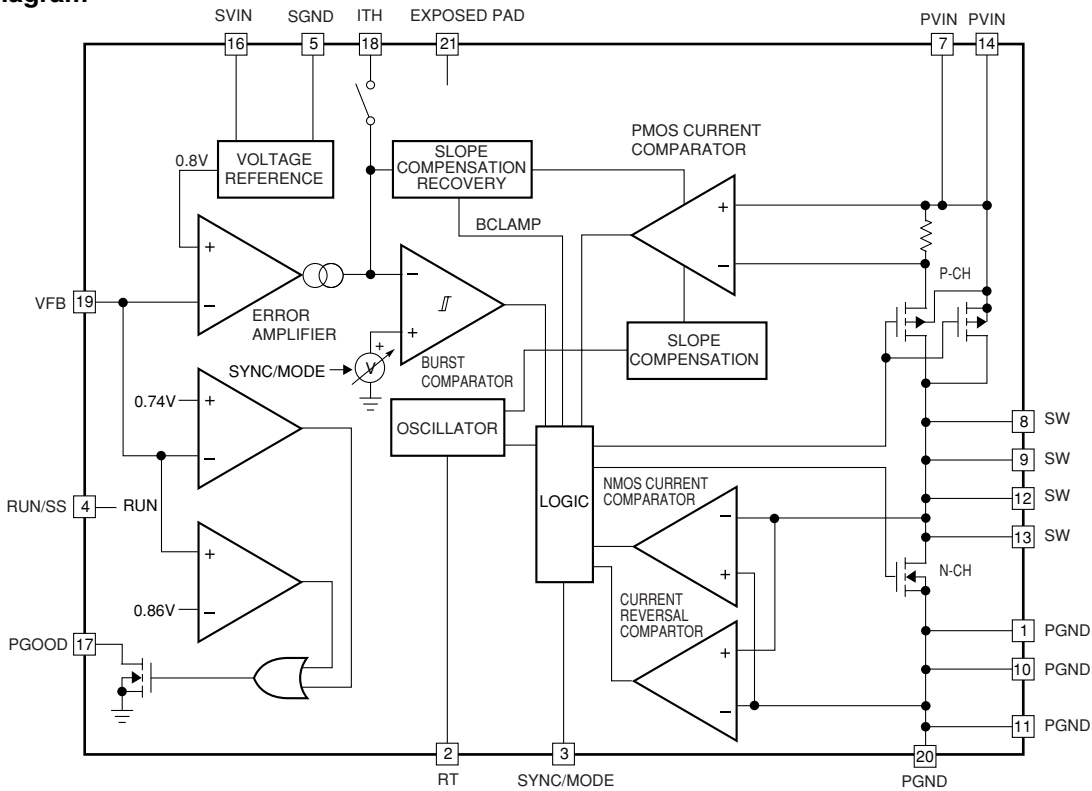


● **Pin Function**

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	PGND	-	Power Ground.	12	SW	-	Switch Node Connection to Inductor.
2	RT	I	Oscillator Resistor Input.	13	SW	-	Switch Node Connection to Inductor.
3	SYNC/MODE	I	Mode Select and External Clock Synchronization Input.	14	PVIN	-	Power Input Supply.
4	RUN/SS	I	Run Control and Soft-Start Input.	15	NC	-	Open. No internal connection.
5	SGND	-	Signal Ground.	16	SVIN	I	Signal Input Supply.
6	NC	-	Open. No internal connection.	17	PGOOD	O	Power Good Output.
7	PVIN	-	Power Input Supply	18	ITH	-	Error Amplifier Compensation Point.
8	SW	-	Switch Node Connection to Inductor.	19	VFB	I	Feedback Pin.
9	SW	-	Switch Node Connection to Inductor.	20	PGND	-	Power Ground.
10	PGND	-	Power Ground.	21	Exposed Pad	-	Should be connected to SGND and soldered to the PCB.
11	PGND	-	Power Ground.				


■ LTC3412EFE (MAIN ASSY: IC4103)

• Regulator IC

● Pin Arrangement (Top view)

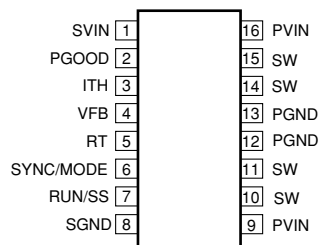

● Block Diagram

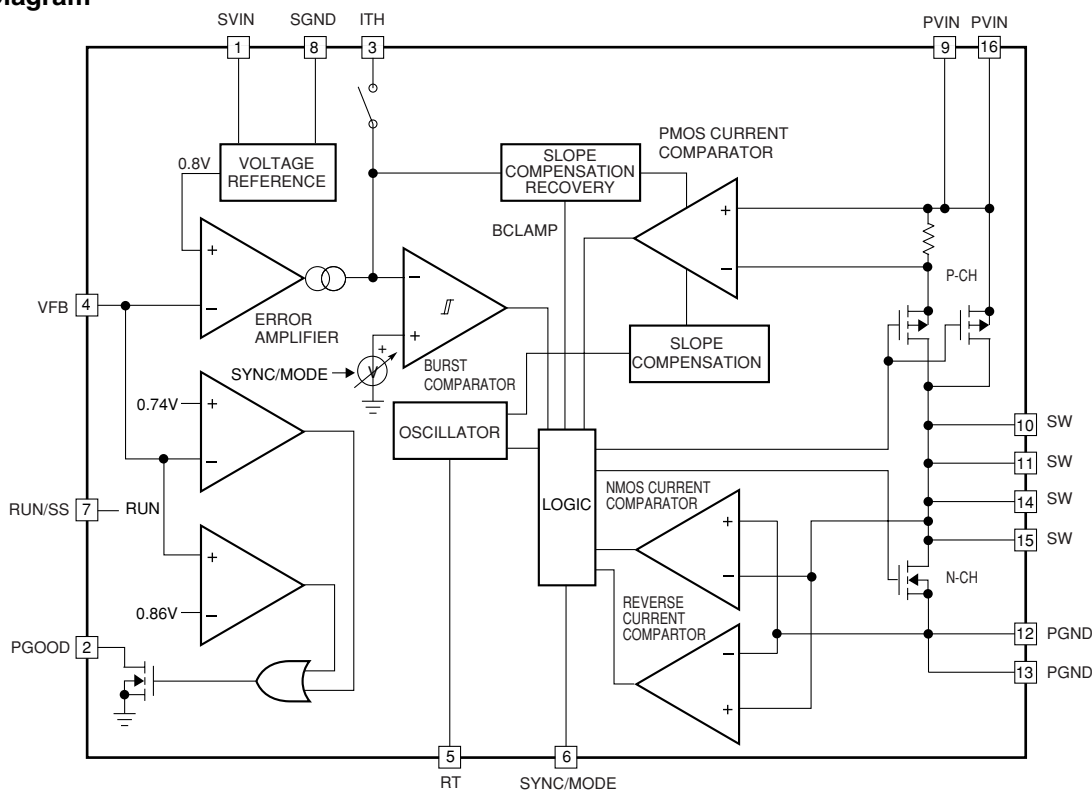


● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	SVIN	I	Signal Input Supply.	9	PVIN	I	Power Input Supply
2	PGOOD	O	Power Good Output.	10	SW	–	Switch Node Connection to the Inductor.
3	ITH	–	Error Amplifier Compensation Point.	11	SW	–	Switch Node Connection to the Inductor.
4	VFB	I	Feedback Pin.	12	PGND	–	Power Ground
5	RT	I	Oscillator Resistor Input.	13	PGND	–	Power Ground
6	SYNC/MODE	I	Mode Select and External Clock Synchronization Input.	14	SW:	–	Switch Node Connection to the Inductor.
7	RUN/SS	I	Run Control and Soft-Start Input.	15	SW	–	Switch Node Connection to the Inductor.
8	SGND	–	Signal Ground.	16	PVIN	I	Power Input Supply

S1170B25UC-OTA (MAIN ASSY : IC4105)
S1170B15UC-OTA (MAIN ASSY : IC4106)
 • Regulator IC


● Pin Arrangement (Top view)

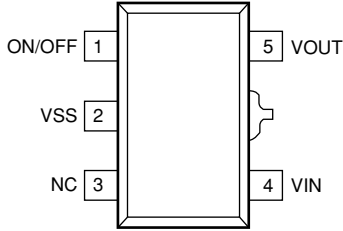

● Pin Function


No.	Pin Name	I/O	Pin Function
1	ON/OFF	I	Power OFF pin
2	VSS	-	Ground
3	NC	-	Non connection
4	VIN	I	Voltage input
5	VOUT	O	Voltage output

● Block Diagram

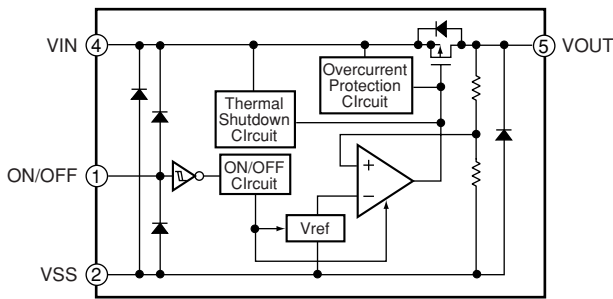

NJU26901E2 (MAIN ASSY : IC4704)
 • Audio Delay IC

● Pin Arrangement (Top view)

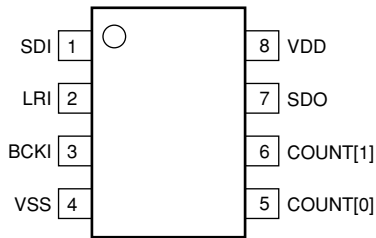

● Pin Function

No.	Pin Name	I/O	Pin Function
1	SDI	I	Serial audio data input
2	LRI	I	LR clock input
3	BCKI	I	Serial clock input
4	VSS	-	Ground
5	COUNT[0]	I	Delay time setting 0
6	COUNT[1]	I	Delay time setting 1
7	SDO	O	Serial audio data output
8	VDD	-	Power supply (+2.5V)

● Block Diagram

